HITACHI
Inspire the Next

Hitachi Command Suite
Audit Log Reference Guide

FASTFIND LINKS

Document Organization

Product Version

Getting Help

Contents

Hitachi Data Systems

MK-92HC213-11

© 2014, 2016 Hitachi, Ltd. All rights reserved.

No part of this publication may be reproduced or transmitted in any form or by any means, electronic or mechanical, including copying and recording, or stored in a database or retrieval system for commercial purposes without the express written permission of Hitachi, Ltd., or Hitachi Data Systems Corporation (collectively "Hitachi"). Licensee may make copies of the Materials provided that any such copy is: (i) created as an essential step in utilization of the Software as licensed and is used in no other manner; or (ii) used for archival purposes. Licensee may not make any other copies of the Materials. "Materials" mean text, data, photographs, graphics, audio, video and documents.

Hitachi reserves the right to make changes to this Material at any time without notice and assumes no responsibility for its use. The Materials contain the most current information available at the time of publication.

Some of the features described in the Materials might not be currently available. Refer to the most recent product announcement for information about feature and product availability, or contact Hitachi Data Systems Corporation at https://support.hds.com/en_us/contact-us.html.

Notice: Hitachi products and services can be ordered only under the terms and conditions of the applicable Hitachi agreements. The use of Hitachi products is governed by the terms of your agreements with Hitachi Data Systems Corporation.

By using this software, you agree that you are responsible for:

1) Acquiring the relevant consents as may be required under local privacy laws or otherwise from authorized employees and other individuals to access relevant data; and

2) Verifying that data continues to be held, retrieved, deleted, or otherwise processed in accordance with relevant laws.

Notice on Export Controls. The technical data and technology inherent in this Document may be subject to U.S. export control laws, including the U.S. Export Administration Act and its associated regulations, and may be subject to export or import regulations in other countries. Reader agrees to comply strictly with all such regulations and acknowledges that Reader has the responsibility to obtain licenses to export, re-export, or import the Document and any Compliant Products.

Hitachi is a registered trademark of Hitachi, Ltd., in the United States and other countries.

AIX, AS/400e, DB2, Domino, DS6000, DS8000, Enterprise Storage Server, eServer, FICON, FlashCopy, IBM, Lotus, MVS, OS/390, PowerPC, RS/6000, S/390, System z9, System z10, Tivoli, z/OS, z9, z10, z13, z/VM, and z/VSE are registered trademarks or trademarks of International Business Machines Corporation.

Active Directory, ActiveX, Bing, Excel, Hyper-V, Internet Explorer, the Internet Explorer logo, Microsoft, the Microsoft Corporate Logo, MS-DOS, Outlook, PowerPoint, SharePoint, Silverlight, SmartScreen, SQL Server, Visual Basic, Visual C++, Visual Studio, Windows, the Windows logo, Windows Azure, Windows PowerShell, Windows Server, the Windows start button, and Windows Vista are registered trademarks or trademarks of Microsoft Corporation. Microsoft product screen shots are reprinted with permission from Microsoft Corporation.

All other trademarks, service marks, and company names in this document or website are properties of their respective owners.

Contents

Preface..... xxvii
Intended audience.....xxviii
Product version..... xxviii
Release notes.....xxviii
Document organization..... xxviii
Related documents..... xxx
Document conventions..... xxxi
Conventions for storage capacity values.....xxxii
Accessing product documentation.....xxxiii
Getting help..... xxxiii
Comments..... xxxiii

1 Hitachi Command Suite audit logs.....1-1
Generating audit log files.....1-2
Information included in audit logs.....1-3
Editing the audit log environment settings file.....1-14
Checking audit log data..... 1-17
Message text output in the message portion of audit log data..... 1-20
Message text for Common Component processing.....1-20
Message text for Device Manager server processing..... 1-20
Message text for Device Manager GUI processing..... 1-21
Message text output when related products are started.....1-22
Message text for Device Manager server processing using CIM.....1-24
Message text for Tiered Storage Manager processing..... 1-25
Message details output in the message portion of audit log data..... 1-32
Commands in message details..... 1-33
Targets in message details..... 1-33
Options in message details..... 1-38
Parameters in message details.....1-42
Correlation between user operations and Tiered Storage Manager CLI audit log data. 1-64

2 VSP G1000 audit logs.....2-1
Overview.....2-2
Features..... 2-2
Audit Log file description..... 2-3

Audit log file format....2-4
Log output formats for different versions....2-10
Syslog file format....2-12
Syslog file format (RFC3164-compliant)....2-12
Syslog file format (RFC5424-compliant)....2-16

3 Using VSP G1000 audit logs....3-1
Starting Device Manager - Storage Navigator by logging in to Hitachi Command Suite. 3-2
Downloading audit log files....3-3
Downloading syslog files....3-4
Automatically transferring audit log files to FTP servers....3-4
Completing SIM generated when FTP transfer of audit log files failed....3-6
Manually transferring audit log files to FTP servers....3-6
Transferring audit log to syslog servers....3-7

4 VSP G1000 audit logs quick reference....4-1
Audit Log Functions....4-2
Device Manager - Storage Navigator and SVP operation....4-2
Encryption Key operation....4-15
Command sent from the host....4-17
PIN Deletion Tool operation....4-17
Audit log reproduced output....4-17
Audit log lost output....4-17

5 VSP G1000 audit log examples....5-1
Audit Log Descriptions....5-3
[AuditLog] Create File....5-3
[AuditLog] DKCAuditLog was lost....5-3
[AuditLog] Over MaxLine....5-3
[AuditLog] Over Threshold....5-4
[AuditLog] Send Test Message....5-4
[AuditLog] Set FTP Server....5-4
[AuditLog] Set Syslog Server....5-5
[AuditLog] SIM Complete....5-6
ACM Descriptions....5-7
[ACM] Add Users....5-7
[ACM] Assign Resource Grps....5-7
[ACM] Assign Roles....5-8
[ACM] Change Password....5-9
[ACM] Create User....5-9
[ACM] Create User Grp....5-10
[ACM] Delete User Grps....5-10
[ACM] Delete Users....5-11
[ACM] Edit User....5-11
[ACM] Edit User Grp....5-12
[ACM] Release Lockout....5-12
[ACM] Remove Users....5-12
[ACM] Set Login Message....5-13
[ACM] Setup Server....5-13
BASE Descriptions....5-19

[BASE] Advanced Settings....5-19
[BASE] Certificate Update....5-19
[BASE] ControlPanel Backup....5-20
[BASE] ControlPanel Restore....5-20
[BASE] Create Conf Report....5-21
[BASE] Delete CVAE Info....5-21
[BASE] Delete Reports....5-21
[BASE] Delete Tasks....5-22
[BASE] Disable Auto Delete....5-22
[BASE] Edit Alert Setting....5-23
[BASE] Edit High TEMP Mode....5-23
[BASE] Edit SIM Syslog Serv....5-24
[BASE] Edit Storage System....5-25
[BASE] Enable Auto Delete....5-25
[BASE] Entry Tasks....5-26
[BASE] Environment Setting....5-26
[BASE] HCSSO Authentication....5-27
[BASE] HCSSO SetOneTimeKey....5-27
[BASE] Login....5-28
[BASE] Logout....5-29
[BASE] Release HTTP Block....5-29
[BASE] Resume Tasks....5-29
[BASE] Set CVAE Info....5-30
[BASE] Set Up HTTP Block....5-30
[BASE] Suspend Tasks....5-31
[BASE] Unlock Forcibly....5-31
[BASE] Update HCS Crt....5-32
[BASE] Update SMIS CrtFiles....5-32
[BASE] Upload SMIS ConfFile....5-32
Compatible PAV Descriptions....5-33
[CPAV] Add Alias....5-33
[CPAV] Delete Alias....5-33
E-Mail Descriptions....5-34
[E-Mail] MailAddress Write....5-34
[E-Mail] Valid Flag Update....5-35
Information Descriptions....5-35
[Information] Delete Log....5-35
[Information] ORM Value....5-36
[Information] SIM Complete....5-38
[Information] SIM Reporting Option....5-38
[Information] Threshold Value....5-39
Install Descriptions....5-41
[Install] Add Host Group....5-41
[Install] Add LU Path....5-41
[Install] Add WWN....5-42
[Install] All Config....5-42
[Install] Backup Config....5-43
[Install] Change Host Group....5-43
[Install] Change WWN....5-44
[Install] DCR Prestaging....5-44
[Install] Define Config....5-44
[Install] Delete DKC WWN....5-44

[Install] Delete Host Group.....5-45
[Install] Delete LU Path.....5-45
[Install] Delete WWN.....5-46
[Install] Dku Emulation.....5-46
[Install] Embedded OSS.....5-47
[Install] FlashDrive ORM Value.....5-47
[Install] Force Reset.....5-48
[Install] Format.....5-48
[Install] Format Stop.....5-48
[Install] Initialize ORM Value.....5-49
[Install] Install.....5-49
[Install] Install CV.....5-56
[Install] Machine Install Date.....5-57
[Install] Make Volume.....5-58
[Install] Micro Program.....5-59
[Install] MP Install.....5-59
[Install] M/F DCR.....5-60
[Install] Open DCR.....5-60
[Install] Remove.....5-61
[Install] Restore Config.....5-66
[Install] Set Battery Life.....5-66
[Install] Set Channel Speed.....5-67
[Install] Set CommandDev.....5-67
[Install] Set CommandDevSec.....5-68
[Install] Set DevGrpDef.....5-68
[Install] Set Fibre Address.....5-69
[Install] Set Fibre Topology.....5-69
[Install] Set Host Mode.....5-70
[Install] Set IP Address.....5-70
[Install] Set Security Switch.....5-71
[Install] Set Subsystem Time.....5-72
[Install] Set UserAuth.....5-73
[Install] System Option.....5-74
[Install] System Tuning.....5-75
[Install] Update Config.....5-76
[Install] Volume to Space.....5-76
Local Replication Descriptions.....5-77
[Local Replication] Assign S-VOLs.....5-77
[Local Replication] Create Pairs.....5-78
[Local Replication] Delete Pairs.....5-79
[Local Replication] Edit Options.....5-80
[Local Replication] Initialize.....5-82
[Local Replication] Release Reserved CTG.....5-82
[Local Replication] Remove S-VOLs.....5-83
[Local Replication] Reserve CTG.....5-83
[Local Replication] Resync Pairs.....5-84
[Local Replication] Split Pairs.....5-85
[Local Replication] Suspend Pairs.....5-86
Maintenance Descriptions.....5-87
[Maintenance] Blockade.....5-87
[Maintenance] Correction Copy.....5-88
[Maintenance] DMA Restore.....5-88

[Maintenance] Drive Interrupt..... 5-88
[Maintenance] DRR Restore.....5-89
[Maintenance] Format.....5-89
[Maintenance] Format Stop..... 5-89
[Maintenance] MP Restore.....5-90
[Maintenance] PCB Restore..... 5-90
[Maintenance] Pre QuickFormat Stop..... 5-91
[Maintenance] Quick Format.....5-91
[Maintenance] Replace.....5-92
[Maintenance] Restore..... 5-93
[Maintenance] Restore Data..... 5-94
[Maintenance] Set Battery Life.....5-94
[Maintenance] Size Change..... 5-95
[Maintenance] Spare Disk.....5-95
[Maintenance] Switch SVP.....5-95
[Maintenance] Transfer Config.....5-95
[Maintenance] Type Change.....5-96
[Maintenance] Verify.....5-96
[Maintenance] Verify Stop..... 5-97
Monitor Descriptions.....5-97
[Monitor] Threshold..... 5-97
Performance Monitor Descriptions..... 5-98
[PFM] DCR Prestaging.....5-98
[PFM] Delete M/F DCR..... 5-98
[PFM] Delete Open DCR..... 5-99
[PFM] Delete Unused WWNs.....5-99
[PFM] Edit CU Monitor Mode.....5-100
[PFM] Edit Monitoring SW.....5-100
[PFM] Edit WWN.....5-100
[PFM] Edit WWN MonitorMode.....5-101
[PFM] Set M/F DCR..... 5-101
[PFM] Set Open DCR.....5-102
Program Product Key (PP KEY) Descriptions.....5-103
[PP KEY] PP Apply.....5-103
[PP KEY] PP Disable chk..... 5-104
[PP KEY] PP Enable chk..... 5-104
[PP KEY] PP Install chk.....5-105
[PP KEY] PP Install File chk.....5-105
[PP KEY] PP Removal chk..... 5-106
[PP KEY] Update License..... 5-106
Provisioning Descriptions..... 5-107
[PROV] Add Hosts.....5-107
[PROV] Add LUN Paths.....5-107
[PROV] Assign MP Blade.....5-108
[PROV] Block LDEVs.....5-108
[PROV] CalculateTieringMonitorData.....5-109
[PROV] Complete SIMs.....5-109
[PROV] Create Host Groups..... 5-110
[PROV] Create LDEVs.....5-110
[PROV] Create Resource Grps.....5-113
[PROV] Create VDKC-Box..... 5-113
[PROV] Create/Expand Pools..... 5-114

[PROV] CreateAlus..... 5-117
[PROV] CreateiScsiName..... 5-117
[PROV] CreateiScsiPath..... 5-118
[PROV] CreateiScsiTarget..... 5-119
[PROV] CreateRemoteChapUser..... 5-120
[PROV] CreateSlus..... 5-121
[PROV] CreateTiPairsWithSlu..... 5-122
[PROV] CreateTiVolumes..... 5-123
[PROV] Delete Host Groups..... 5-123
[PROV] Delete LDEVs..... 5-124
[PROV] Delete Login WWNs..... 5-125
[PROV] Delete LUN Paths..... 5-126
[PROV] Delete Resource Grps..... 5-126
[PROV] Delete VDKC-Box..... 5-127
[PROV] DeleteAlus..... 5-127
[PROV] DeleteiScsiInitiatorUser..... 5-128
[PROV] DeleteiScsiName..... 5-128
[PROV] DeleteiScsiPath..... 5-129
[PROV] DeleteiScsiTarget..... 5-130
[PROV] DeleteLoginiScsiName..... 5-130
[PROV] DeleteRemoteChapUser..... 5-131
[PROV] DeleteSlus..... 5-131
[PROV] DeleteTargetChapUser..... 5-132
[PROV] DeleteTiVolumes..... 5-132
[PROV] DRU Expiration-Lock..... 5-133
[PROV] Edit Cmd Dev(Auth)..... 5-133
[PROV] Edit Cmd Dev(DevGrp)..... 5-134
[PROV] Edit Cmd Dev(Sec)..... 5-134
[PROV] Edit Command Devices..... 5-134
[PROV] Edit DRU Attribute..... 5-135
[PROV] Edit Full Allocation..... 5-136
[PROV] Edit Host..... 5-136
[PROV] Edit Host Grps(Mode)..... 5-137
[PROV] Edit Host Grps(Name)..... 5-140
[PROV] Edit LDEVs(tier)..... 5-141
[PROV] Edit LDEV Tier Rank..... 5-141
[PROV] Edit MP Blades..... 5-142
[PROV] Edit Ports(Address)..... 5-142
[PROV] Edit Ports(Attr)..... 5-144
[PROV] Edit Ports(Security)..... 5-144
[PROV] Edit Ports(Speed)..... 5-145
[PROV] Edit Ports(Topology)..... 5-145
[PROV] Edit Resource Grp..... 5-146
[PROV] Edit SCP Time..... 5-146
[PROV] Edit Tiering Policy..... 5-147
[PROV] Edit VR Attribute..... 5-148
[PROV] Edit V-VOL Option..... 5-148
[PROV] Edit/Delete Pools..... 5-149
[PROV] Edit/Delete UUIDs..... 5-151
[PROV] EditiScsiInitiatorUser..... 5-152
[PROV] EditiScsiName..... 5-152
[PROV] EditiScsiNickName..... 5-153

[PROV] EditiScsiTarget..... 5-154
[PROV] EditiSNS..... 5-154
[PROV] EditPortInfo..... 5-155
[PROV] EditRemoteChapUser..... 5-157
[PROV] EditRemoteTargetUser..... 5-157
[PROV] EditT10piMode..... 5-159
[PROV] EditTargetChapUser..... 5-159
[PROV] ExecBindingOperation..... 5-160
[PROV] Expand V-VOLs..... 5-161
[PROV] ExpandSlus..... 5-161
[PROV] Force Del MF V-VOLs..... 5-162
[PROV] Format LDEVs..... 5-162
[PROV] Format LDEVs(H)..... 5-163
[PROV] Format LDEVs(Q)..... 5-163
[PROV] Initialize Pools..... 5-164
[PROV] LDEV Name..... 5-164
[PROV] MapSecondaryVolumeWithSlu..... 5-164
[PROV] Monitor Pools..... 5-165
[PROV] Move Resources..... 5-166
[PROV] OperateSiPairsWithSlu..... 5-167
[PROV] OperateTiPairsWithSlu..... 5-168
[PROV] Pool Name..... 5-169
[PROV] Reclaim Zero Pages..... 5-169
[PROV] Release HostReserved..... 5-170
[PROV] Relocate Pool..... 5-170
[PROV] Remove Hosts..... 5-171
[PROV] Restore LDEVs..... 5-171
[PROV] Restore Pools..... 5-171
[PROV] RevertTiPairsWithSlu..... 5-172
[PROV] Set FCSP Host..... 5-173
[PROV] Set FCSP Port Info..... 5-173
[PROV] Set FCSP Port Switch..... 5-174
[PROV] Set FCSP Target..... 5-174
[PROV] Set PageTieringLevel..... 5-175
[PROV] Set SSID..... 5-176
[PROV] Set Virtual LDEV..... 5-176
[PROV] Shrink Pool..... 5-177
[PROV] Stop Monitoring..... 5-178
[PROV] Stop Reclm ZeroPages..... 5-178
[PROV] Stop Relocating..... 5-179
[PROV] Stop Shrinking Pool..... 5-179
[PROV] UnmapSecondaryVolumeWithSlu..... 5-180
[PROV] UpdateAluaMode..... 5-180
[PROV] UpdateAsymmetricAccessStatePerHG..... 5-181
[PROV] UpdateParityGroupSettings..... 5-182
[PROV] VTOC..... 5-182
[PROV] UpdatePoolDeduplication..... 5-183
[PROV] UpdateDataSavingOptions..... 5-183
Remote Maintenance Descriptions..... 5-184
[Remote Maintenance] PS Control..... 5-184
[Remote Maintenance] Reboot MP..... 5-184
[Remote Maintenance] Reboot Port..... 5-184

[Remote Maintenance] Reboot SVP..... 5-185
[Remote Maintenance] StartVerify..... 5-185
[Remote Maintenance] StopVerify..... 5-185
[Remote Maintenance] Switch SVP..... 5-185
[Remote Maintenance] Transfer Config..... 5-186
Remote Replication Descriptions..... 5-186
[Remote Replication] Add Path..... 5-186
[Remote Replication] Add Quorum Disk ID..... 5-187
[Remote Replication] Add RCU..... 5-188
[Remote Replication] Change JNL Option..... 5-190
[Remote Replication] Change Mirror Option..... 5-191
[Remote Replication] Change RCU Option..... 5-192
[Remote Replication] Clear SIM..... 5-194
[Remote Replication] Create Pairs..... 5-194
[Remote Replication] Delete Cmd.Dev..... 5-200
[Remote Replication] Delete Pairs..... 5-200
[Remote Replication] Delete Path..... 5-204
[Remote Replication] Del Quorum Disk ID..... 5-206
[Remote Replication] Delete RCU..... 5-207
[Remote Replication] Edit EXCTG..... 5-208
[Remote Replication] Edit Options..... 5-209
[Remote Replication] Edit Pair Options..... 5-213
[Remote Replication] Journal Owner..... 5-216
[Remote Replication] Journal Vol..... 5-216
[Remote Replication] R-Cmd.Dev..... 5-220
[Remote Replication] Resync Pairs..... 5-221
[Remote Replication] Split Pairs..... 5-227
[Remote Replication] Suspend Pairs..... 5-230
[Remote Replication] UpdateQuorumDisks..... 5-232
SNMP Descriptions..... 5-232
[SNMP] Edit SNMP Agent..... 5-232
[SNMP] UpdateSnmpSetting..... 5-233
Server Priority Manager Descriptions..... 5-236
[SPM] Change SPMGrp..... 5-236
[SPM] Clear SPM Info..... 5-237
[SPM] Default Set..... 5-237
[SPM] Set All Prio Port..... 5-237
[SPM] Set All Prio WWN..... 5-238
[SPM] Set Ctrl Kind..... 5-238
[SPM] Set Prio Port..... 5-239
[SPM] Set Prio WWN..... 5-239
[SPM] SPMGrp Del/Chg..... 5-240
[SPM] Update Port WWN..... 5-241
[SPM] Update SPMGrp..... 5-241
[SPM] Update WWN..... 5-242
Spreadsheet Descriptions..... 5-243
[Spreadsheet] CflSet End..... 5-243
[Spreadsheet] CflSet Start..... 5-243
Universal Volume Manager Descriptions..... 5-244
[UVM] Add External Volumes..... 5-244
[UVM] Assign MP Blade..... 5-246
[UVM] Delete ES VOLs..... 5-247

[UVM] Disconnect ES Paths..... 5-247
[UVM] Disconnect ES VOLs..... 5-248
[UVM] Edit ES Path Config..... 5-249
[UVM] Edit ES VOLs..... 5-250
[UVM] Edit External WWNs / iSCSI Targets..... 5-252
[UVM] Merge ES Path Grps..... 5-253
[UVM] ProfileUpgrade..... 5-254
[UVM] Reconnect ES Paths..... 5-254
[UVM] Reconnect ES VOLs..... 5-255
[UVM] Split ES Path Grp..... 5-255
Volume Migration Descriptions..... 5-256
[VM] Delete All Histories..... 5-256
[VM] Del Migration Plans..... 5-256
[VM] Migrate Volumes..... 5-257
Virtual Partition Manager Descriptions..... 5-258
[VPM] Edit CLPR..... 5-258
Volume Shredder Descriptions..... 5-259
[VS] Abort Shredding..... 5-259
[VS] End Shredding..... 5-259
[VS] Shred LDEVs..... 5-260
Compatible XRC Descriptions..... 5-261
[XRC] Set XRC Option..... 5-261

6 VSP G1000 audit log examples of encryption key operations..... 6-1
ENC Descriptions..... 6-2
[ENC] Add keys to DKC..... 6-2
[ENC] Backup Keys..... 6-2
[ENC] Backup Keys to File..... 6-2
[ENC] Backup Keys to Serv..... 6-2
[ENC] Change CEK Status..... 6-3
[ENC] Change DEK Status..... 6-4
[ENC] Clear Keys..... 6-4
[ENC] Create KEK Dynamic..... 6-4
[ENC] Create Keys..... 6-5
[ENC] Create Keys..... 6-5
[ENC] Create Keys On Serv..... 6-6
[ENC] DEK assign SpareDisk..... 6-7
[ENC] DEK delete..... 6-7
[ENC] Delete KEK Dynamic..... 6-7
[ENC] Delete Keys..... 6-8
[ENC] Delete Keys..... 6-8
[ENC] Delete Keys on Serv..... 6-8
[ENC] Edit Encryption..... 6-9
[ENC] Edit ENC Settings..... 6-10
[ENC] Edit Password Policy..... 6-10
[ENC] Register KEK Dynamic..... 6-11
[ENC] Rekey CEK..... 6-11
[ENC] Rekey KEK Dynamic..... 6-12
[ENC] Restore Keys..... 6-12
[ENC] Restore Keys fr File..... 6-12
[ENC] Restore Keys fr Serv..... 6-12
[ENC] Retry KEK Dynamic..... 6-13

[ENC] Set Up Key Mng Serv....6-13
[ENC] Use Keys for CEK/KEK....6-14
KEK Acquisition Descriptions....6-15
[KEK Acquisition] Acquisition Key....6-15
[KEK Acquisition] Set Key....6-15

7 Audit log examples of commands received by VSP G1000 7-1
Config Command (Open system)....7-2
Add CHAP User....7-2
Add Copy Group....7-3
Add Device Group....7-3
Add Device Group(Name)....7-4
Add DP Pool....7-4
Add External Group....7-5
Add External iSCSI Name/Modify External CHAP User....7-6
Add HBA iSCSI....7-6
Add Host Group....7-7
Add Host Group(iSCSI)....7-7
Add Journal(Ldev)....7-8
Add Ldev....7-9
Add Ldev(Dynamic Provisioning)....7-10
Add Ldev(Snapshot)....7-11
Add LUN....7-12
Add Path....7-13
Add RCU....7-13
Add RCU iSCSI Port....7-14
Add RCU Path....7-15
Add Resource(Group)....7-15
Add Resource(Resource Name)....7-16
Add Resource/Delete Resource....7-16
Add Snap Pool....7-17
Add Snapshot....7-17
Add SPM Group....7-18
Add SPM Host Group....7-19
Add SPM WWN....7-19
Add SSID....7-20
Add WWN....7-20
Check External Storage Group....7-21
Check External Storage Path....7-21
CTQM....7-22
Delete CHAP User....7-22
Delete Copy Group....7-23
Delete Device Group....7-24
Delete External Group....7-24
Delete External iSCSI Name....7-25
Delete HBA iSCSI....7-25
Delete Host Group....7-26
Delete Journal....7-26
Delete Journal(Ldev)....7-26
Delete Ldev....7-27
Delete LUN....7-27
Delete Path....7-28

Delete Pool....7-28
Delete Pool(Ldev).... 7-29
Delete RCU....7-29
Delete RCU iSCSI Port....7-30
Delete RCU Path....7-30
Delete Resource(Group)....7-31
Delete Snapshot.... 7-31
Delete Snapshot(Tree).... 7-32
Delete SPM Group....7-32
Delete SPM Host Group....7-32
Delete SPM WWN.... 7-33
Delete SPM WWN(Nickname)....7-33
Delete SSID....7-34
Delete WWN....7-34
Disconnect External Group.... 7-35
Disconnect Path....7-35
Extend Ldev.... 7-35
Initialize Ldev(Format).... 7-36
Initialize Ldev(Shredding)....7-37
Initialize Ldev(Stop Shredding).... 7-37
Initialize Pool....7-38
Map Resource(LDEV).... 7-38
Map Resource(Port).... 7-39
Map Snapshot....7-39
Modify CLPR....7-40
Modify External Group(ALUA Switch)....7-40
Modify External Group(Cache Inflow).... 7-41
Modify External Group(Cache Mode).... 7-41
Modify External Group(Load Balance Mode)....7-41
Modify External Group(MP Blade)....7-42
Modify Host Group(Access Priority).... 7-42
Modify Host Group(Host Mode)....7-43
Modify Host Group(Host Mode Option).... 7-44
Modify Initiator CHAP User.... 7-45
Modify Journal....7-45
Modify Journal(MP Blade)....7-46
Modify Ldev(ALUA).... 7-46
Modify Ldev(Blocked)....7-47
Modify Ldev(Capacity Saving).... 7-47
Modify Ldev(CLPR)....7-48
Modify Ldev(Command Device)....7-48
Modify Ldev(Discard Zero Page)....7-49
Modify Ldev(Full Allocation)....7-49
Modify Ldev(MP Blade)....7-49
Modify Ldev(Nickname)....7-50
Modify Ldev(Quorum Disable)....7-50
Modify Ldev(Quorum Enable)....7-51
Modify Ldev(Restore)....7-51
Modify Ldev(SSID)....7-51
Modify Ldev(Tier).... 7-52
Modify Local Replica Opt.... 7-52
Modify LUN(Asymmetric Access).... 7-53

Modify Parity Group..... 7-54
Modify Pool Attribute.....7-54
Modify Pool(Data Direct Mapping).....7-55
Modify Pool(Deduplication).....7-55
Modify Pool(Restore).....7-56
Modify Pool(Threshold)..... 7-56
Modify Pool(TierOpt).....7-57
Modify Port.....7-58
Modify Port(Attribute)..... 7-59
Modify Port(iSCSI)..... 7-59
Modify Port(T10PI)..... 7-61
Modify Quorum.....7-62
Modify RCU..... 7-62
Modify Snapshot(Clone)..... 7-63
Modify Snapshot(Restore)..... 7-64
Modify Snapshot(Resync)..... 7-64
Modify Snapshot(Split)..... 7-65
Modify SPM Group..... 7-65
Modify SPM Host Group.....7-66
Modify SPM WWN.....7-67
Modify SPM WWN(Nickname)..... 7-67
Monitor Pool.....7-68
Paircreate.....7-68
Paircreate(LocalCopy)..... 7-69
Paircreate(RemoteCopy).....7-71
Pairresync..... 7-73
Pairresync(LocalCopy).....7-74
Pairresync(RemoteCopy)..... 7-75
Pairsplit.....7-77
Pairsplit(LocalCopy)..... 7-78
Pairsplit(RemoteCopy).....7-80
Pairsplit-S.....7-81
Pairsplit-S(LocalCopy)..... 7-83
Pairsplit-S(RemoteCopy).....7-83
Raidvchkset(Data Retention Utility) 7-85
Reallocate Pool(Start)..... 7-85
Reallocate Pool(Stop).....7-86
Rename Pool.....7-86
Replace Snapshot..... 7-87
Reset CHAP User..... 7-87
Reset Command Status.....7-88
Reset Ldev Priority.....7-88
Reset WWN.....7-90
Set CHAP User.....7-90
Set HBA iSCSI.....7-91
Set Ldev Priority..... 7-92
Set WWN..... 7-93
Stop Monitor Pool..... 7-94
Unmap Resource(LDEV)..... 7-94
Unmap Resource(Port).....7-95
Unmap Snapshot..... 7-95
Config Command (Mainframe system)..... 7-96

Business Continuity Manager..... 7-96
Add CTG..... 7-96
Add Pair..... 7-97
Add RCU..... 7-100
At-time Split..... 7-101
Build Command Device..... 7-102
Change Tier Option..... 7-103
Delete Command Device..... 7-104
Delete CTG..... 7-104
Delete Pair..... 7-105
Delete RCU..... 7-106
EXCTG..... 7-107
FREEZE..... 7-108
Remote DKC Control..... 7-108
Resume Pair..... 7-109
RUN..... 7-112
Set Interface..... 7-113
Start Calculation(Pair Sync)..... 7-113
Suspend Pair..... 7-114
Suspend Pairs..... 7-117
M Series..... 7-118
DEL PATH..... 7-118
EST PAIR..... 7-118
EST PATH..... 7-121
SPLIT PAIRS..... 7-122
SUSP PAIR..... 7-122
TERM PAIR..... 7-124
FC-SP..... 7-124
User Auth..... 7-125
[User Auth] Login..... 7-125
[User Auth] Logout..... 7-125

8 VSP G1000 audit log examples of PIN Deletion Tool operation..... 8-1
[PINDeletion] Delete..... 8-2

9 VSP Gx00 models, VSP Fx00 models audit logs..... 9-1
Outline..... 9-2
Acquisition/reference of audit logs..... 9-2

10 VSP Gx00 models, VSP Fx00 models audit log file format..... 10-1
Audit log header format (RFC3164-compliant)..... 10-2
Audit log header format (RFC5424-compliant)..... 10-6
Audit log information format (Basic information)..... 10-9
Audit log information format (Detailed information)..... 10-11
Description of log examples in this manual..... 10-13
Format of audit log files when audit log files are transferred to the syslog server..... 10-14

11 VSP Gx00 models, VSP Fx00 models audit logs quick reference..... 11-1
Audit Log Functions..... 11-2
Device Manager - Storage Navigator and Maintenance PC operation..... 11-2

Encryption Key operations....11-13
Command received from hosts....11-15
PIN Deletion Tool operation....11-15
Reproducing/losing Audit log....11-16

12 VSP Gx00 models, VSP Fx00 models audit log examples....12-1
Audit Log Descriptions....12-3
[AuditLog] Create File....12-3
[AuditLog] DKCAuditLog was lost....12-3
[AuditLog] Send Test Message....12-3
[AuditLog] Set Up Syslog Serv....12-3
ACM Descriptions....12-5
[ACM] AddUsersToUserGroup....12-5
[ACM] CreateUser....12-5
[ACM] CreateUserGroup....12-6
[ACM] DeleteUsers....12-6
[ACM] DeleteUserGroups....12-7
[ACM] DisableUsers....12-7
[ACM] EnableUsers....12-7
[ACM] RemoveUsersFromUserGroup....12-8
[ACM] Set Login Message....12-8
[ACM] UpdatePassword....12-9
[ACM] UpdateUserAuthentication....12-9
[ACM] UpdateUserGroupAllResourceGrp....12-9
[ACM] UpdateUserGroupName....12-10
[ACM] UpdateUserGroupResourceGrpBmp....12-10
[ACM] UpdateUserGroupRole....12-10
BASE Descriptions....12-11
[BASE] Advanced Settings....12-11
[BASE] Create Conf Report....12-11
[BASE] Delete CVAE Info....12-12
[BASE] Delete Reports....12-12
[BASE] Delete Tasks....12-13
[BASE] Disable Auto Delete....12-13
[BASE] Edit Storage System....12-14
[BASE] Enable Auto Delete....12-14
[BASE] Entry Tasks....12-15
[BASE] HCSSO Authentication....12-15
[BASE] HCSSO SetOneTimeKey....12-15
[BASE] Login....12-16
[BASE] Logout....12-16
[BASE] Resume Tasks....12-16
[BASE] Set CVAE Info....12-16
[BASE] Start Maintenance....12-17
[BASE] Suspend Tasks....12-17
[BASE] Unlock Forcibly....12-18
Information Descriptions....12-18
[Information] Delete Log....12-18
[Information] ORM Value....12-18
[Information] Threshold Value....12-20
Install Descriptions....12-22
[Install] All Config....12-22

[Install] Backup Config..... 12-22
[Install] FlashDrive ORM Value..... 12-22
[Install] Initialize ORM Value..... 12-23
[Install] Machine Install Date..... 12-23
[Install] NEW Installation..... 12-23
[Install] Remove..... 12-24
[Install] System Option..... 12-25
[Install] System Tuning..... 12-26
Local Replication Descriptions..... 12-26
[Local Replication] Assign S-VOLs..... 12-26
[Local Replication] Create Pairs..... 12-27
[Local Replication] Delete Pairs..... 12-28
[Local Replication] Edit Options..... 12-29
[Local Replication] Initialize..... 12-30
[Local Replication] Remove S-VOLs..... 12-30
[Local Replication] Resync Pairs..... 12-31
[Local Replication] Split Pairs..... 12-32
[Local Replication] Suspend Pairs..... 12-33
Maintenance Descriptions..... 12-34
[Maintenance] Block..... 12-34
[Maintenance] Block(Type Change)..... 12-37
[Maintenance] Blockade..... 12-38
[Maintenance] Boot System SafeMode..... 12-38
[Maintenance] Change SFP Type..... 12-39
[Maintenance] Check Remove..... 12-39
[Maintenance] Correction Copy..... 12-39
[Maintenance] Create User..... 12-39
[Maintenance] Delete Users..... 12-40
[Maintenance] Disable Licenses..... 12-40
[Maintenance] Edit Hypervisor Mode..... 12-41
[Maintenance] Edit Login Message..... 12-41
[Maintenance] Edit ReplacingNotice..... 12-41
[Maintenance] Edit System Param..... 12-42
[Maintenance] Edit UPS Mode..... 12-42
[Maintenance] Edit User..... 12-43
[Maintenance] Enable Licenses..... 12-43
[Maintenance] Export Audit Logs..... 12-43
[Maintenance] Force Rls SysLock..... 12-44
[Maintenance] Install..... 12-44
[Maintenance] Install NAS Firm..... 12-46
[Maintenance] License Key Install..... 12-47
[Maintenance] License Key Remove..... 12-48
[Maintenance] MP Restore..... 12-48
[Maintenance] Power Off Storage..... 12-49
[Maintenance] Power On Storage..... 12-49
[Maintenance] Reboot GUM..... 12-49
[Maintenance] Remove..... 12-49
[Maintenance] Remove NAS Firm..... 12-52
[Maintenance] Reset DurationOfUse..... 12-52
[Maintenance] Reset HUB..... 12-52
[Maintenance] Reset Hypervisor..... 12-52
[Maintenance] Reset Hypervisor NW..... 12-52

[Maintenance] Reset NASFW..... 12-53
[Maintenance] Restore..... 12-53
[Maintenance] Restore(Type Change)..... 12-55
[Maintenance] Restore Data..... 12-56
[Maintenance] Select Cipher Suite..... 12-56
[Maintenance] Select Login Window..... 12-57
[Maintenance] Set Up Alert..... 12-57
[Maintenance] Set Up Date & Time..... 12-65
[Maintenance] Set Up Email..... 12-66
[Maintenance] Set Up Network Perm..... 12-67
[Maintenance] Set Up Network Set..... 12-67
[Maintenance] Set Up SNMP..... 12-68
[Maintenance] Set Up Syslog..... 12-70
[Maintenance] Set Up System Info..... 12-71
[Maintenance] Stop Copy..... 12-72
[Maintenance] Turn Off Locate LEDs..... 12-72
[Maintenance] Turn On Locate LEDs..... 12-72
[Maintenance] Update Cert Files..... 12-73
[Maintenance] Update Firmware..... 12-73
[Maintenance] UserAccount Backup..... 12-74
[Maintenance] UserAccount Restore..... 12-74
Monitor Descriptions..... 12-74
[Monitor] Monitoring Switch..... 12-74
Performance Monitor Descriptions..... 12-74
[PFM] Delete Unused WWNs..... 12-74
[PFM] Edit CU Monitor Mode..... 12-74
[PFM] Edit Monitoring SW..... 12-75
[PFM] Edit WWN..... 12-75
[PFM] Edit WWN MonitorMode..... 12-76
Provisioning Descriptions..... 12-76
[PROV] Add Hosts..... 12-76
[PROV] Add LUN Paths..... 12-77
[PROV] Assign MP Unit..... 12-77
[PROV] Block LDEVs..... 12-78
[PROV] CalculateTieringMonitorData..... 12-78
[PROV] Create Host Groups..... 12-79
[PROV] Create LDEVs..... 12-79
[PROV] Create Resource Grps..... 12-81
[PROV] Create VDKC-Box..... 12-81
[PROV] Create/Expand Pools..... 12-82
[PROV] CreateAlus..... 12-84
[PROV] CreateiScsiName..... 12-85
[PROV] CreateiScsiPath..... 12-86
[PROV] CreateiScsiTarget..... 12-87
[PROV] CreateLdev..... 12-88
[PROV] CreateParityGroups..... 12-88
[PROV] CreateRemoteChapUser..... 12-90
[PROV] CreateSlus..... 12-91
[PROV] CreateTiPairsWithSlu..... 12-92
[PROV] CreateTiVolumes..... 12-93
[PROV] Delete Host Groups..... 12-93
[PROV] Delete LDEVs..... 12-94

[PROV] Delete Login WWNs....12-94
[PROV] Delete LUN Paths.... 12-95
[PROV] Delete Resource Grps.... 12-95
[PROV] Delete VDKC-Box.... 12-96
[PROV] DeleteAlus.... 12-96
[PROV] DeleteiScsiInitiatorUser....12-97
[PROV] DeleteiScsiName.... 12-97
[PROV] DeleteiScsiPath.... 12-98
[PROV] DeleteiScsiTarget.... 12-99
[PROV] DeleteLdev.... 12-99
[PROV] DeleteLoginiScsiName....12-100
[PROV] DeleteParityGroups....12-100
[PROV] DeleteRemoteChapUser.... 12-100
[PROV] DeleteSlus....12-101
[PROV] DeleteTargetChapUser....12-101
[PROV] DeleteTiVolumes.... 12-102
[PROV] DRU Expiration Lock....12-102
[PROV] Edit Cmd Dev(Auth)....12-103
[PROV] Edit Cmd Dev(DevGrp)....12-103
[PROV] Edit Cmd Dev(Sec).... 12-103
[PROV] Edit Command Devices.... 12-104
[PROV] Edit DRU Attribute....12-104
[PROV] Edit Full Allocation....12-105
[PROV] Edit Host....12-106
[PROV] Edit Host Grps(Mode).... 12-106
Host mode option and output contents of Option.... 12-107
[PROV] Edit Host Grps(Name)....12-109
[PROV] Edit LDEVs(tier)....12-110
[PROV] Edit LDEV Tier Rank....12-110
[PROV] Edit MP Units.... 12-111
[PROV] Edit Ports(Address)....12-112
[PROV] Edit Ports(Security)....12-113
[PROV] Edit Ports(Speed).... 12-113
[PROV] Edit Ports(Topology)....12-114
[PROV] Edit Resource Grp....12-114
[PROV] Edit Tiering Policy....12-115
[PROV] Edit V-VOL Option.... 12-116
[PROV] Edit/Delete Pools....12-117
[PROV] Edit/Delete UUIDs.... 12-119
[PROV] EditiScsiInitiatorUser....12-119
[PROV] EditiScsiName.... 12-120
[PROV] EditiScsiNickName.... 12-121
[PROV] EditiScsiTarget.... 12-121
[PROV] EditiSNS....12-122
[PROV] EditPortInfo.... 12-123
[PROV] EditRemoteChapUser....12-125
[PROV] EditRemoteTargetUser....12-125
[PROV] EditT10piMode.... 12-126
[PROV] EditTargetChapUser....12-127
[PROV] ExecBindingOperation....12-127
[PROV] Expand V-VOLs.... 12-128
[PROV] ExpandSlus.... 12-129

[PROV] Format LDEVs..... 12-129
[PROV] Format LDEVs(Q)..... 12-130
[PROV] Initialize Pools..... 12-130
[PROV] LDEV Name..... 12-130
[PROV] LdevForceRestore..... 12-131
[PROV] MapSecondaryVolumeWithSlu..... 12-131
[PROV] Monitor Pools..... 12-132
[PROV] Move Resources..... 12-132
[PROV] OperateSiPairsWithSlu..... 12-134
[PROV] OperateTiPairsWithSlu..... 12-135
[PROV] Pool Name..... 12-135
[PROV] Reclaim Zero Pages..... 12-136
[PROV] Release HostReserved..... 12-136
[PROV] Relocate Pool..... 12-137
[PROV] Remove Hosts..... 12-137
[PROV] Restore LDEVs..... 12-138
[PROV] Restore Pools..... 12-138
[PROV] RevertTiPairsWithSlu..... 12-139
[PROV] Set FCSP Host..... 12-139
[PROV] Set FCSP Port Info..... 12-140
[PROV] Set FCSP Port Switch..... 12-140
[PROV] Set FCSP Target..... 12-141
[PROV] Set PageTieringLevel..... 12-142
[PROV] Set Virtual LDEV..... 12-142
[PROV] Shrink Pool..... 12-143
[PROV] StartParityGroupsFormat..... 12-144
[PROV] StartVerify..... 12-144
[PROV] Stop Monitoring..... 12-145
[PROV] Stop Reclm ZeroPages..... 12-145
[PROV] Stop Relocating..... 12-146
[PROV] Stop Shrinking Pool..... 12-146
[PROV] StopFormat..... 12-147
[PROV] StopVerify..... 12-147
[PROV] UnmapSecondaryVolumeWithSlu..... 12-147
[PROV] UpdateAluaMode..... 12-147
[PROV] UpdateAsymmetricAccessStatePerHG..... 12-148
[PROV] UpdateCopybackMode..... 12-149
[PROV] UpdateParityGroupSettings..... 12-149
[PROV] UpdateSpareDrives..... 12-149
[PROV] UpdatePoolDeduplication..... 12-150
[PROV] UpdateDataSavingOptions..... 12-150
Remote Maintenance Descriptions..... 12-151
[Remote Maintenance] PS Control..... 12-151
[Remote Maintenance] Reboot MP..... 12-151
[Remote Maintenance] Reboot Port..... 12-152
Remote Replication Descriptions..... 12-152
[Remote Replication] Add Path..... 12-152
[Remote Replication] Add Quorum Disk ID..... 12-153
[Remote Replication] Add RCU..... 12-153
[Remote Replication] Change JNL Option..... 12-154
[Remote Replication] Change Mirror Option..... 12-155
[Remote Replication] Change RCU Option..... 12-156

[Remote Replication] Create Pairs..... 12-157
[Remote Replication] Delete Pairs..... 12-160
[Remote Replication] Delete Path..... 12-163
[Remote Replication] Del Quorum Disk ID..... 12-164
[Remote Replication] Delete RCU..... 12-165
[Remote Replication] Edit Options..... 12-165
[Remote Replication] Edit Pair Options..... 12-168
[Remote Replication] Journal Owner..... 12-169
[Remote Replication] Journal Vol..... 12-170
[Remote Replication] R-Cmd.Dev..... 12-172
[Remote Replication] Resync Pairs..... 12-172
[Remote Replication] Split Pairs..... 12-175
[Remote Replication] Suspend Pairs..... 12-177
[Remote Replication] UpdateQuorumDisks..... 12-178
Server Priority Manager Descriptions..... 12-179
[SPM] Change SPMGrp..... 12-179
[SPM] Clear SPM Info..... 12-180
[SPM] Default Set..... 12-180
[SPM] Set All Prio Port..... 12-180
[SPM] Set All Prio WWN..... 12-181
[SPM] Set Ctrl Kind..... 12-181
[SPM] Set Prio Port..... 12-182
[SPM] Set Prio WWN..... 12-182
[SPM] SPMGrp Del/Chg..... 12-183
[SPM] Update Port WWN..... 12-184
[SPM] Update SPMGrp..... 12-184
[SPM] Update WWN..... 12-185
Universal Volume Manager Descriptions..... 12-186
[UVM] Add External Volumes..... 12-186
[UVM] Assign MP Unit..... 12-189
[UVM] Delete ES VOLs..... 12-189
[UVM] Disconnect ES Paths..... 12-190
[UVM] Disconnect ES VOLs..... 12-190
[UVM] Edit ES Path Config..... 12-191
[UVM] Edit ES VOLs..... 12-192
[UVM] Edit External WWNs / iSCSI Targets..... 12-194
[UVM] Reconnect ES Paths..... 12-195
[UVM] Reconnect ES VOLs..... 12-196
Volume Migration Descriptions..... 12-196
[VM] Del Migration Plans..... 12-196
[VM] Migrate Volumes..... 12-197
Virtual Partition Manager Descriptions..... 12-198
[VPM] Edit CLPR..... 12-198
Volume Shredder Descriptions..... 12-199
[VS] Abort Shredding..... 12-199
[VS] End Shredding..... 12-199
[VS] Shred LDEVs..... 12-200

13 VSP Gx00 models, VSP Fx00 models audit log examples of encryption key operations..... 13-1
ENC Descriptions..... 13-2
[ENC] Add keys to DKC..... 13-2

[ENC] Backup Keys 13-2
[ENC] Backup Keys to File..... 13-2
[ENC] Backup Keys to Serv..... 13-2
[ENC] Change CEK Status..... 13-3
[ENC] Change DEK Status..... 13-3
[ENC] Clear Keys..... 13-3
[ENC] Create KEK Dynamic..... 13-4
[ENC] Create Keys..... 13-4
[ENC] Create Keys..... 13-5
[ENC] Create Keys On Serv..... 13-5
[ENC] DEK assign SpareDisk..... 13-6
[ENC] DEK delete..... 13-6
[ENC] Delete KEK Dynamic..... 13-6
[ENC] Delete Keys..... 13-7
[ENC] Delete Keys..... 13-7
[ENC] Delete Keys on Serv..... 13-7
[ENC] Edit Encryption..... 13-8
[ENC] Edit ENC Settings..... 13-8
[ENC] Edit Password Policy..... 13-9
[ENC] Register KEK Dynamic..... 13-10
[ENC] Rekey CEK..... 13-10
[ENC] Rekey KEK Dynamic 13-11
[ENC] Restore Keys 13-11
[ENC] Restore Keys fr File..... 13-11
[ENC] Restore Keys fr Serv..... 13-11
[ENC] Retry KEK Dynamic 13-12
[ENC] Set Up Key Mng Serv..... 13-12
[ENC] Use Keys for CEK/KEK..... 13-13
KEK Acquisition Descriptions..... 13-13
[KEK Acquisition] Acquisition Key..... 13-13
[KEK Acquisition] Set Key..... 13-14

14 Audit log examples of commands received by VSP Gx00 models, VSP Fx00 models..... 14-1
Config Command..... 14-2
Add CHAP User..... 14-2
Add Copy Group..... 14-3
Add Device Group..... 14-3
Add Device Group(Name)..... 14-4
Add DP Pool..... 14-4
Add External Group..... 14-5
Add External iSCSI Name/Modify External CHAP User..... 14-5
Add HBA iSCSI..... 14-6
Add Host Group..... 14-7
Add Host Group(iSCSI)..... 14-7
Add Journal(Ldev)..... 14-8
Add Ldev..... 14-8
Add Ldev(Dynamic Provisioning)..... 14-9
Add Ldev(Snapshot)..... 14-11
Add License..... 14-11
Add LUN..... 14-12
Add Parity Group..... 14-13

Add Path..... 14-14
Add RCU..... 14-14
Add RCU iSCSI Port..... 14-15
Add RCU Path..... 14-15
Add Resource(Group)..... 14-16
Add Resource(Resource Name)..... 14-17
Add Resource/Delete Resource..... 14-17
Add Snap Pool..... 14-18
Add Snapshot..... 14-18
Add SPM Group..... 14-19
Add SPM Host Group..... 14-19
Add SPM WWN..... 14-20
Add WWN..... 14-20
Check External Storage Group..... 14-21
Check External Storage Path..... 14-21
CTQM..... 14-21
Delete CHAP User..... 14-22
Delete Copy Group..... 14-23
Delete Device Group..... 14-23
Delete External Group..... 14-24
Delete External iSCSI Name..... 14-24
Delete HBA iSCSI..... 14-24
Delete Host Group..... 14-25
Delete Journal..... 14-25
Delete Journal(Ldev)..... 14-26
Delete Ldev..... 14-26
Delete License..... 14-26
Delete LUN..... 14-27
Delete Parity Group..... 14-28
Delete Path..... 14-28
Delete Pool..... 14-28
Delete Pool(Ldev)..... 14-29
Delete RCU..... 14-29
Delete RCU iSCSI Port..... 14-30
Delete RCU Path..... 14-30
Delete Resource(Group)..... 14-31
Delete Snapshot..... 14-31
Delete SPM Group..... 14-31
Delete SPM Host Group..... 14-32
Delete SPM WWN..... 14-32
Delete SPM WWN(Nickname)..... 14-32
Delete WWN..... 14-33
Disconnect External Group..... 14-33
Disconnect Path..... 14-34
Extend Ldev..... 14-34
Initialize Ldev(Format)..... 14-35
Initialize Ldev(Shredding)..... 14-35
Initialize Ldev(Stop Shredding)..... 14-36
Initialize Parity Group..... 14-36
Initialize Pool..... 14-36
Map Resource(LDEV)..... 14-37
Map Resource(Port)..... 14-37

Map Snapshot....14-37
Modify CLPR....14-38
Modify Drive....14-38
Modify External Group(ALUA Switch)....14-39
Modify External Group(Cache Inflow)....14-39
Modify External Group(Cache Mode)....14-40
Modify External Group(Load Balance Mode)....14-40
Modify External Group(MP Blade)....14-40
Modify Host Group(Host Mode)....14-41
Modify Host Group(Host Mode Option)....14-42
Modify Initiator CHAP User....14-42
Modify Journal....14-43
Modify Journal(MP Blade)....14-44
Modify Ldev(ALUA)....14-44
Modify Ldev(Blocked)....14-44
Modify Ldev(Capacity Saving)....14-45
Modify Ldev(CLPR)....14-45
Modify Ldev(Command Device)....14-46
Modify Ldev(Discard Zero Page)....14-46
Modify Ldev(Full Allocation)....14-46
Modify Ldev(MP Blade)....14-47
Modify Ldev(Nickname)....14-47
Modify Ldev(Quorum Disable)....14-48
Modify Ldev(Quorum Enable)....14-48
Modify Ldev(Restore)....14-48
Modify Ldev(Tier)....14-49
Modify License(Disable)....14-49
Modify License(Enable)....14-50
Modify Local Replica Opt....14-50
Modify LUN(Asymmetric Access)....14-50
Modify Parity Group....14-51
Modify Pool Attribute....14-51
Modify Pool(Data Direct Mapping)....14-52
Modify Pool(Deduplication)....14-52
Modify Pool(Monitor Mode)....14-53
Modify Pool(Restore)....14-53
Modify Pool(Threshold)....14-54
Modify Pool(TierOpt)....14-55
Modify Port....14-55
Modify Port(Attribute)....14-56
Modify Port(iSCSI)....14-56
Modify Port(T10PI)....14-58
Modify Quorum....14-59
Modify RCU....14-59
Modify Snapshot(Restore)....14-60
Modify Snapshot(Resync)....14-60
Modify Snapshot(Split)....14-61
Modify SPM Group....14-61
Modify SPM Host Group....14-62
Modify SPM WWN....14-63
Modify SPM WWN(Nickname)....14-63
Monitor Pool....14-64

Paircreate....14-64
Paircreate(LocalCopy)....14-65
Paircreate(RemoteCopy)....14-66
Pairresync....14-68
Pairresync(LocalCopy)....14-69
Pairresync(RemoteCopy)....14-70
Pairsplit....14-72
Pairsplit(LocalCopy)....14-73
Pairsplit(RemoteCopy)....14-75
Pairsplit-S....14-76
Pairsplit-S(LocalCopy)....14-77
Pairsplit-S(RemoteCopy)....14-78
Raidvchkset(Data Retention Utility) 14-79
Reallocate Pool(Start)....14-80
Reallocate Pool(Stop)....14-80
Rename Pool....14-80
Replace Snapshot....14-81
Reset CHAP User....14-81
Reset Command Status....14-82
Reset Ldev Priority....14-82
Reset WWN....14-83
Set CHAP User....14-84
Set HBA iSCSI....14-85
Set Ldev Priority....14-85
Set WWN....14-87
Stop Monitor Pool....14-87
Switch Source Storage....14-87
Switch Source Storage(Revert)....14-88
Unmap Resource(LDEV)....14-88
Unmap Resource(Port)....14-89
Unmap Snapshot....14-89
FC-SP....14-90
User Auth....14-90

15 VSP Gx00 models, VSP Fx00 models audit log examples of PIN Deletion Tool operation....15-1
[PINDeletion] Delete....15-2

A Hitachi Device Manager - Storage Navigator audit log GUI reference....A-1
Audit Log Properties window....A-2
Edit Audit Log Settings wizard....A-2
Edit Audit Log Settings window....A-3
Confirm window....A-8

B VSP G1000 audit log user operations....B-1
Logging in or out....B-2
Using Maintenance menu....B-2
Using Actions menu....B-3
Using Reports menu....B-18
Using Settings menu....B-21

Using Resource Lock menu....B-25
Using External API....B-25
When executing single sign-on from Hitachi Command Suite....B-26

C VSP Gx00 models, VSP Fx00 models audit log user operations....C-1
Logging in or out....C-2
Using Maintenance menu....C-2
Using Actions menu....C-2
Using Component submenu....C-3
Using Logical Device submenu....C-3
Using Port/Host Group submenu....C-5
Using Pool submenu....C-8
Using Parity Group submenu....C-9
Using External Storage submenu....C-10
Using Local Replication submenu....C-11
Using Remote Replication submenu....C-12
Using Journal submenu....C-13
Using Remote Connection submenu....C-14
Using Other function submenu....C-15
Using Reports menu....C-15
Using Task Management submenu....C-16
Using Configuration Report submenu....C-16
Using Performance Monitor submenu....C-16
Using Settings menu....C-18
Using User Management submenu....C-18
Using Resource Management submenu....C-19
Using Security submenu....C-20
Using Environmental Setting submenu....C-21
Using Maintenance Utility....C-22
Using Maintenance Utility window....C-22
Operation Lock....C-27
When executing single sign-on from Hitachi Command Suite....C-28

D Audit log SVP operations....D-1
Logging in to or out from SVP....D-2
Using Maintenance button....D-2
Using Install button....D-3
Using Information button....D-5
Using Monitor button....D-6

E Audit log Maintenance PC operations....E-1
Logging in to or out from Maintenance PC....E-2
Using Login button....E-2
Using Maintenance button....E-2
Using Install button....E-2
Using Information button....E-3
Using Monitor button....E-3

Index

Preface

This manual explains the settings that are necessary for collecting audit log data for Hitachi Device Manager (abbreviated hereafter as Device Manager), Hitachi Tiered Storage Manager (abbreviated hereafter as Tiered Storage Manager), the Hitachi Virtual Storage Platform G1000 storage system, the Hitachi Virtual Storage Platform Gx00 models storage systems, and the Hitachi Virtual Storage Platform Fx00 models storage systems. The manual also explains the information that you can check in the audit log data.

- ☐ Intended audience
- ☐ Product version
- ☐ Release notes
- ☐ Document organization
- ☐ Related documents
- ☐ Document conventions
- ☐ Conventions for storage capacity values
- ☐ Accessing product documentation
- ☐ Getting help
- ☐ Comments

Intended audience

This document is intended for storage administrators who use Device Manager and Tiered Storage Manager to operate and manage storage systems, and assumes that readers have:

- Basic knowledge about Storage Area Networks (SANs)
- Basic knowledge about supported OSs
- Basic knowledge about Hitachi Virtual Storage Platform G1000, G1500
- Basic knowledge about Hitachi Virtual Storage Platform F1500
- Basic knowledge about Hitachi Virtual Storage Platform Gx00 models
- Basic knowledge about Hitachi Virtual Storage Platform Fx00 models

Product version

This document revision applies to the following:

- Hitachi Device Manager and Hitachi Tiered Storage Manager v8.5 or later.
- Hitachi Virtual Storage Platform G1000, G1500
- Hitachi Virtual Storage Platform F1500
- Hitachi Virtual Storage Platform Gx00 models
- Hitachi Virtual Storage Platform Fx00 models

Release notes

Read the release notes before installing and using this product. They may contain requirements or restrictions that are not fully described in this document or updates or corrections to this document. Release notes are available on Hitachi Data Systems Support Connect: https://knowledge.hds.com/Documents.

Document organization

The following table provides an overview of the contents and organization of this document. Click the chapter title in the left column to go to that chapter. The first page of each chapter provides links to the sections in that chapter. For details on the audit logs of Hitachi Command Suite, see Chapter 1. For details on the audit logs of Hitachi Virtual Storage Platform G1000, G1500, and Hitachi Virtual Storage Platform F1500, see Chapters 2 to 8, and Appendixes A to C. For details on the audit logs of Hitachi Virtual Storage Platform Gx00 models or Hitachi Virtual Storage Platform Fx00 models, see Chapters 9 to 15, and Appendixes D to E. For details on the audit logs of storage systems except Hitachi Virtual Storage Platform G1000, G1500, and Hitachi Virtual Storage Platform F1500, Hitachi Virtual Storage Platform Gx00 models, and Hitachi Virtual Storage Platform Fx00 models, see the manual of each storage system.

Chapter/Appendix	Description
Chapter 1, Hitachi Command Suite audit logs on page 1-1	This chapter describes the settings that are necessary for collecting audit log data for Device Manager and Tiered Storage Manager, and the information that you can check in the audit log data.
Chapter 2, VSP G1000 audit logs on page 2-1	Introduces the audit logs created by Device Manager - Storage Navigator or the SVP (Service Processor) on the storage system. Users can access the audit logs that are output by the SVP, but the SVP itself is accessible only by HDS personnel.
Chapter 3, Using VSP G1000 audit logs on page 3-1	Describes the two types of audit log files and the items included in the files.
Chapter 4, VSP G1000 audit logs quick reference on page 4-1	Describes the relationship (in a table) between the audit log functions, operations, and option names in the audit log file. Functions are listed in alphabetical order.
Chapter 5, VSP G1000 audit log examples on page 5-1	Includes sample audit logs for each function and operation that can be performed with the Device Manager - Storage Navigator. The logs are listed alphabetically by function name and operation name.
Chapter 6, VSP G1000 audit log examples of encryption key operations on page 6-1	Provides sample audit log for the operation of the key used for data encryption.
Chapter 7, Audit log examples of commands received by VSP G1000 on page 7-1	Provides sample audit logs for the commands issued from the host
Chapter 8, VSP G1000 audit log examples of PIN Deletion Tool operation on page 8-1	Provides sample audit log for the operation of the PIN deletion tool.
Chapter 9, VSP Gx00 models, VSP Fx00 models audit logs on page 9-1	Provides the role of audit logs for Virtual Storage Platform Gx00 models and Virtual Storage Platform Fx00 models storage systems, and acquisition and reference of audit logs.
Chapter 10, VSP Gx00 models, VSP Fx00 models audit log file format on page 10-1	Describes two types of the audit log format by explaining the audit log header, audit log information (Basic information), and audit log information (Detailed information).
Chapter 11, VSP Gx00 models, VSP Fx00 models audit logs quick reference on page 11-1	Describes the relationship (in a table) between the audit log functions, operations, and option names in the audit log file. Functions are listed in alphabetical order.
Chapter 12, VSP Gx00 models, VSP Fx00 models audit log examples on page 12-1	Includes sample audit logs for each function and operation that can be performed with the Device Manager - Storage Navigator. The logs are listed alphabetically by function name and operation name.
Chapter 13, VSP Gx00 models, VSP Fx00 models audit log	Provides sample audit log for the operation of the key used for data encryption.

Chapter/Appendix	Description
examples of encryption key operations on page 13-1	
Chapter 14, Audit log examples of commands received by VSP Gx00 models, VSP Fx00 models on page 14-1	Provides sample audit logs for the commands issued from the host.
Chapter 15, VSP Gx00 models, VSP Fx00 models audit log examples of PIN Deletion Tool operation on page 15-1	Provides sample audit log for the operation of the PIN deletion tool.
Appendix A, Hitachi Device Manager - Storage Navigator audit log GUI reference on page A-1	Describes the audit log features in the Device Manager - Storage Navigator GUI.
Appendix B, VSP G1000 audit log user operations on page B-1	Describes user operations and the operation name that is output to the audit log file.
Appendix C, VSP Gx00 models, VSP Fx00 models audit log user operations on page C-1	Describes user operations and the operation name that is output to the audit log file.
Appendix D, Audit log SVP operations on page D-1	Describes SVP operations and the operation name that is output to the audit log file.
Appendix E, Audit log Maintenance PC operations on page E-1	Describes Maintenance PC operations and the operation name that is output to the audit log file.

Related documents

The following related Hitachi Command Suite, Hitachi Virtual Storage Platform G1000, G1500, Hitachi Virtual Storage Platform F1500, Hitachi Virtual Storage Platform Gx00 models, and Hitachi Virtual Storage Platform Fx00 models documents are available on Hitachi Data Systems Support Connect: (https://knowledge.hds.com/Documents):

- *Hitachi Command Suite User Guide*, MK-90HC172
- *Hitachi Command Suite Installation and Configuration Guide*, MK-90HC173
- *Hitachi Command Suite Administrator Guide*, MK-90HC175
- *Hitachi Command Suite CLI Reference Guide*, MK-90HC176
- *Hitachi Command Suite Tiered Storage Manager CLI Reference Guide*, MK-90HC177
- *Hitachi Command Suite Messages*, MK-90HC178
- *Hitachi Command Suite Mainframe Agent Installation and Configuration Guide*, MK-96HC130
- *Hitachi Command Suite System Requirements*, MK-92HC209
- *Hardware Guide Hitachi Virtual Storage Platform G1000 and G1500 Hitachi Virtual Storage Platform F1500*, MK-92RD8007

- *Provisioning Guide for Open Systems Hitachi Virtual Storage Platform G1000 and G1500 Hitachi Virtual Storage Platform F1500* , MK-92RD8014
- *Provisioning Guide for Mainframe Systems Hitachi Virtual Storage Platform G1000 and G1500 Hitachi Virtual Storage Platform F1500*, MK-92RD8013
- *System Administrator Guide Hitachi Virtual Storage Platform G1000 and G1500 Hitachi Virtual Storage Platform F1500*, MK-92RD8016
- *Provisioning Guide Hitachi Virtual Storage Platform G200, G400, G600, G800 Hitachi Virtual Storage Platform F400, F600, F800* , MK-94HM8014

Document conventions

This document uses the following typographic conventions:

Convention	Description
Bold	• Indicates text in a window, including window titles, menus, menu options, buttons, fields, and labels. Example: Click **OK**. • Indicates a emphasized words in list items.
Italic	• Indicates a document title or emphasized words in text. • Indicates a variable, which is a placeholder for actual text provided by the user or for output by the system. Example: `pairdisplay -g` *`group`* (For exceptions to this convention for variables, see the entry for angle brackets.)
`Monospace`	Indicates text that is displayed on screen or entered by the user. Example: `pairdisplay -g oradb`
< > angled brackets	Indicates a variable in the following scenarios: • Variables are not clearly separated from the surrounding text or from other variables. Example: `Status-<report-name><file-version>.csv` • Variables in headings.
[ ] square brackets	Indicates optional values. Example: [a | b] indicates that you can choose a, b, or nothing.
{ } braces	Indicates required or expected values. Example: { a | b } indicates that you must choose either a or b.
| vertical bar	Indicates that you have a choice between two or more options or arguments. Examples: [a | b] indicates that you can choose a, b, or nothing. { a | b } indicates that you must choose either a or b.

This document uses the following icons to draw attention to information:

Icon	Label	Description
	Note	Calls attention to important or additional information.
	Tip	Provides helpful information, guidelines, or suggestions for performing tasks more effectively.
	Caution	Warns the user of adverse conditions or consequences (for example, disruptive operations).
	WARNING	Warns the user of severe conditions or consequences (for example, destructive operations).

Conventions for storage capacity values

Physical storage capacity values (for example, disk drive capacity) are calculated based on the following values:

Physical capacity unit	Value
1 kilobyte (KB)	1,000 (10^3) bytes
1 megabyte (MB)	1,000 KB or $1{,}000^2$ bytes
1 gigabyte (GB)	1,000 MB or $1{,}000^3$ bytes
1 terabyte (TB)	1,000 GB or $1{,}000^4$ bytes
1 petabyte (PB)	1,000 TB or $1{,}000^5$ bytes
1 exabyte (EB)	1,000 PB or $1{,}000^6$ bytes

Logical storage capacity values (for example, logical device capacity) are calculated based on the following values:

Logical capacity unit	Value
1 block	512 bytes
1 cylinder	Mainframe: 870 KB Open-systems: • OPEN-V: 960 KB • Others: 720 KB
1 KB	1,024 (2^{10}) bytes
1 MB	1,024 KB or $1{,}024^2$ bytes
1 GB	1,024 MB or $1{,}024^3$ bytes
1 TB	1,024 GB or $1{,}024^4$ bytes

Logical capacity unit	Value
1 PB	1,024 TB or $1,024^5$ bytes
1 EB	1,024 PB or $1,024^6$ bytes

Accessing product documentation

Product documentation is available on Hitachi Data Systems Support Connect: https://knowledge.hds.com/Documents. Check this site for the most current documentation, including important updates that may have been made after the release of the product.

Getting help

Hitachi Data Systems Support Connect is the destination for technical support of products and solutions sold by Hitachi Data Systems. To contact technical support, log on to Hitachi Data Systems Support Connect for contact information: https://support.hds.com/en_us/contact-us.html.

Hitachi Data Systems Community is a global online community for HDS customers, partners, independent software vendors, employees, and prospects. It is the destination to get answers, discover insights, and make connections. **Join the conversation today!** Go to community.hds.com, register, and complete your profile.

Comments

Please send us your comments on this document: doc.comments@hds.com. Include the document title and number, including the revision level (for example, -07), and refer to specific sections and paragraphs whenever possible.

Thank you!

1

Hitachi Command Suite audit logs

This chapter describes the settings that are necessary for collecting audit log data for Device Manager and Tiered Storage Manager, and the information that you can check in the audit log data.

- Generating audit log files
- Checking audit log data
- Message text output in the message portion of audit log data
- Message details output in the message portion of audit log data
- Correlation between user operations and Tiered Storage Manager CLI audit log data

Generating audit log files

In the Hitachi Command Suite products, user operations can be recorded in audit logs to retain proof for auditors and evaluators of compliance with regulations, security evaluation standards, and other business standards. To generate audit log data, you must edit the environment settings file (`auditlog.conf`). For details on this file, see Editing the audit log environment settings file on page 1-14.

For Windows, the audit log data is output to the event log files (application log files). For Linux, the data is output to the `syslog` file.

The following table lists and describes the categories of audit log data that can be generated from Hitachi storage-related products.

Table 1-1 Categories and descriptions

Categories	Description
`StartStop`	Events indicating starting or stopping of hardware or software: • Starting or shutting down an OS • Starting or stopping a hardware component (including micro components) • Starting or stopping software on a storage system or SVP, and Hitachi Command Suite products
`Failure`	Events indicating hardware or software failures: • Hardware failures • Software failures (memory error, etc.)
`LinkStatus`	Events indicating link status among devices: • Whether a link is up or down
`ExternalService`	Events indicating communication results between Hitachi storage-related products and external services: • Communication with an external server, such as NTP or DNS • Communication with a management server (SNMP)
`Authentication`	Events indicating that a device, administrator, or end user succeeded or failed in connection or authentication: • Fibre Channel login • Device authentication (Fibre Channel - Security Protocol authentication, iSCSI login authentication, SSL server/client authentication) • Administrator or end user authentication
`AccessControl`	Events indicating that a device, administrator, or end user succeeded or failed in gaining access to resources: • Access control for devices • Access control for the administrator or end users
`ContentAccess`	Events indicating that attempts to access important data succeeded or failed:

Categories	Description
	• Access to important files on NAS or to contents when HTTP is supported • Access to audit log files
ConfigurationAccess	Events indicating that the administrator succeeded or failed in performing an allowed operation: • Reference or update of the configuration information • Update of account settings including addition or deletion of accounts • Security configuration • Reference or update of audit log settings
Maintenance	Events indicating that a performed maintenance operation succeeded or failed: • Addition or deletion of hardware components • Addition or deletion of software components
AnomalyEvent	Events indicating that an anomaly, such as a threshold being exceeded, occurred: • A network traffic threshold was exceeded • A CPU load threshold was exceeded • Pre-notification that a limit is being reached or a wraparound occurred for audit log data temporarily saved internally
	Events indicating that abnormal communication occurred: • SYN flood attacks to a regularly used port, or protocol violations • Access to an unused port (port scanning, etc.)

Different products generate different types of audit log data.

For details on the contents of the output audit log data, see Checking audit log data on page 1-17.

Information included in audit logs

In Device Manager and Tiered Storage Manager, the following categories of audit events are output to audit logs:

- StartStop
- Authentication
- ConfigurationAccess
- AccessControl
- ExternalService

Each audit event is assigned a severity level. You can filter audit log data to be output according to the severity levels of events.

Table 1-2 Audit events that are output to audit logs (when the category is StartStop) on page 1-4 to Table 1-6 Audit events that are output to audit

logs (when the category is ExternalService) on page 1-13 describe the audit log data that can be generated by Device Manager and Tiered Storage Manager. For details on the audit log data generated by other Hitachi Command Suite products, see the manuals for the relevant products.

Table 1-2 Audit events that are output to audit logs (when the category is StartStop)

Event type	Audit event	Severity	Message ID
Starting and stopping software	Successfully started the SSO server	6	KAPM00090-I
	Failed to start the SSO server	3	KAPM00091-E
	Stopped the SSO server	6	KAPM00092-I

Table 1-3 Audit events that are output to audit logs (when the category is Authentication)

Event type	Audit event	Severity	Message ID
Authenticating administrators or end users	Successfully logged in	6	KAPM01124-I
	Successfully logged in (to the external authentication server)	6	KAPM02450-I
	Failed to log in (wrong user ID or password)	4	KAPM02291-W
	Failed to log in (attempted to log in as a user whose account has been locked)	4	KAPM02291-W
	Failed to log in (attempted to log in as a non-existing user)	4	KAPM02291-W
	Failed to log in (no permission)	4	KAPM01095-E
	Failed to log in (authentication failure)	4	KAPM01125-E
	Failed to log in (to the external authentication server)	4	KAPM02451-W
	Successfully logged out	6	KAPM08009-I
	Failed to log out	4	KAPM01126-W
Automatically locking accounts	Automatically locked the account (after multiple authentication failures or the expiration of the account)	4	KAPM02292-W
Authenticating users when SNMP v3 traps are received	Successfully authenticated the user	6	KAIC52000-I
	Failed to authenticate the user	3	KAIC52100-E

Table 1-4 Audit events that are output to audit logs (when the category is ConfigurationAccess)

Event type	Audit event	Severity	Message ID
Registering users (GUI)	Successfully registered a user	6	KAPM07230-I
	Failed to register a user	3	KAPM07240-E
Deleting users (GUI)	Successfully deleted a user	6	KAPM07231-I
	Failed to delete a user	3	KAPM07240-E
	Successfully deleted multiple users	6	KAPM07231-I
	Failed to delete multiple users	3	KAPM07240-E
Changing a password (from the administrator's window)	Successfully changed a password from the administrator's window	6	KAPM07232-I
	Failed to change a password from the administrator's window	3	KAPM07240-E
Changing a password (from the user's own window)	Failed to perform authentication to verify an old password	3	KAPM07239-E
	Successfully changed the password of the logged-in user (from the user's own window)	6	KAPM07232-I
	Failed to change the password of the logged-in user (from the user's own window)	3	KAPM07240-E
Changing a profile	Successfully changed a profile	6	KAPM07233-I
	Failed to change a profile	3	KAPM07240-E
Changing permissions	Successfully changed permissions	6	KAPM02280-I
	Failed to change permissions	3	KAPM07240-E
Locking an account	Successfully locked an account[#1]	6	KAPM07235-I
	Failed to lock an account	3	KAPM07240-E
Releasing a locked account	Successfully released a locked account[#2]	6	KAPM07236-I
	Failed to release a locked account	3	KAPM07240-E
	Successfully released a locked account by using the `hcmds64unlockaccount` command	6	KAPM07236-I
	Failed to release a locked account lock by using the `hcmds64unlockaccount` command	3	KAPM07240-E
Changing the authentication method	Successfully changed the authentication method	6	KAPM02452-I
	Failed to change the authentication method	3	KAPM02453-E

Event type	Audit event	Severity	Message ID
Adding an authorization group (GUI)	Successfully added an authorization group	6	KAPM07247-I
	Failed to add an authorization group	3	KAPM07248-E
Deleting an authorization group (GUI)	Successfully deleted an authorization group	6	KAPM07249-I
	Failed to delete an authorization group	3	KAPM07248-E
	Successfully deleted multiple authorization groups	6	KAPM07249-I
	Failed to delete multiple authorization groups	3	KAPM07248-E
Changing the permissions of an authorization group (GUI)	Successfully changed the permissions of an authorization group	6	KAPM07250-I
	Failed to change the permissions of an authorization group	3	KAPM07248-E
Registering users (GUI and CLI)	Successfully registered a user	6	KAPM07241-I
	Failed to register a user	3	KAPM07242-E
Updating user information (GUI and CLI)	Successfully updated user information	6	KAPM07243-I
	Failed to update user information	3	KAPM07244-E
Deleting users (GUI and CLI)	Successfully deleted a user	6	KAPM07245-I
	Failed to delete a user	3	KAPM07246-E
Registering an authorization group (GUI and CLI)	Successfully registered an authorization group	6	KAPM07251-I
	Failed to register an authorization group	3	KAPM07252-E
Deleting an authorization group (GUI and CLI)	Successfully deleted an authorization group	6	KAPM07253-I
	Failed to delete an authorization group	3	KAPM07254-E
Changing the permissions of an authorization group (GUI and CLI)	Successfully changed the permissions of an authorization group	6	KAPM07255-I
	Failed to change the permissions of an authorization group	3	KAPM07256-E
Registering a user group (CLI)	Successfully registered a user group	6	KAPM07263-I
	Failed to register a user group	3	KAPM07264-E
Deleting a user group (CLI)	Successfully deleted a user group	6	KAPM07265-I
	Failed to delete a user group	3	KAPM07266-E

Event type	Audit event	Severity	Message ID
Updating a user group (CLI)	Successfully updated a user group	6	KAPM07267-I
	Failed to update a user group	3	KAPM07268-E
Registering a role (CLI)	Successfully registered a role	6	KAPM07269-I
	Failed to register a role	3	KAPM07270-E
Deleting a role (CLI)	Successfully deleted a role	6	KAPM07271-I
	Failed to delete a role	3	KAPM07272-E
Updating a role (CLI)	Successfully updated a role	6	KAPM07273-I
	Failed to update a role	3	KAPM07274-E
Assigning a user account to a user group (CLI)	Successfully assigned a user account to a user group	6	KAPM07275-I
	Failed to assign a user account to a user group	3	KAPM07276-E
Assigning permissions to a role (CLI)	Successfully assigned permissions to a role	6	KAPM07277-I
	Failed to assign permissions to a role	3	KAPM07278-E
Assigning the following three types of items (CLI): • User group and authorizatio n group • Resource group • Role	Successfully assigned the following three types of items: • User group and authorization group • Resource group • Role	6	KAPM07279-I
	Failed to assign the following three types of items: • User group and authorization group • Resource group • Role	3	KAPM07280-E
Backing up and restoring databases	Successfully performed backup by using the `hcmds64backups` command or the `hcmds64db` command	6	KAPM05561-I
	Failed to perform backup by using the `hcmds64backups` command or the `hcmds64db` command	3	KAPM05562-E
	Successfully performed a full restoration by using the `hcmds64db` command	6	KAPM05563-I
	Failed to perform a full restoration by using the `hcmds64db` command	3	KAPM05564-E
	Successfully performed a partial restoration by using the `hcmds64db` command	6	KAPM05565-I

Event type	Audit event	Severity	Message ID
	Failed to perform a partial restoration by using the `hcmds64db` command	3	KAPM05566-E
Exporting and importing databases	Successfully exported the database	6	KAPM06543-I
	Failed to export the database	3	KAPM06544-E
	Successfully imported the database	6	KAPM06545-I
	Failed to import the database	3	KAPM06546-E
Creating and deleting database areas	Successfully created a database area	6	KAPM06348-I
	Failed to create a database area	3	KAPM06349-E
	Successfully deleted a database area	6	KAPM06350-I
	Failed to delete a database area	3	KAPM06351-E
Inputting and outputting authentication data	Successfully output data by using the `hcmds64authmove` command	6	KAPM05832-I
	Failed to output data by using the `hcmds64authmove` command	3	KAPM05833-E
	Successfully input data by using the `hcmds64authmove` command	6	KAPM05834-I
	Failed to input data by using the `hcmds64authmove` command	3	KAPM05835-E
Device Manager server processing	Received a request (normal)	6	KAIC51000-I KAIC51200-I KAIC51201-I
	Received a request (common/abnormal)	3	KAIC51400-E
	Transmitted a request (normal)	6	KAIC51100-I KAIC51300-I KAIC51301-I KAIC51302-I
	Transmitted a request (abnormal)	3	KAIC51500-E KAIC51700-E KAIC51701-E
Task operations (GUI)	Successfully performed a task operation	6	KAIC15984-I
	Failed to perform a task operation	3	KAIC15985-E
Changing the configuration of the storage system (GUI)	Successfully changed the configuration of the storage system	6	KAIC15986-I
	Failed to change the configuration of the storage system	3	KAIC15987-E
Starting (launching) related products	Received a request (normal)	6	KAIC53000-I
	Received a request (abnormal)	3	KAIC53200-E

Event type	Audit event	Severity	Message ID
	Transmitted a response (normal)	6	KAIC53100-I
	Transmitted a response (abnormal)	3	KAIC53300-E
Device Manager server processing (via CIM)	Received a request (normal)	6	KAIC54000-I KAIC54200-I
	Received a request (abnormal)	3	KAIC54400-E KAIC54600-E
	Transmitted a response (normal)	6	KAIC54100-I KAIC54300-I
	Transmitted a response (abnormal)	3	KAIC54500-E KAIC54700-E
Acquiring information about storage domains[#3]	Successfully acquired information about all storage domains	6	KATS90000-I
	Failed to acquire information about all storage domains	4	KATS90001-W
	Successfully acquired information about storage domains	6	KATS90000-I
	Failed to acquire information about storage domains	4	KATS90001-W
	Successfully acquired summary information about all storage domains	6	KATS90000-I
	Failed to acquire summary information about all storage domains	4	KATS90001-W
	Successfully acquired summary information about storage domains	6	KATS90000-I
	Failed to acquire summary information about storage domains	4	KATS90001-W
	Successfully acquired the storage domain refresh status	6	KATS90000-I
	Failed to acquire the storage domain refresh status	4	KATS90001-W
Acquiring information about migration groups[#3]	Successfully acquired information about all migration groups	6	KATS90000-I
	Failed to acquire information about all migration groups	4	KATS90001-W
	Successfully acquired information about migration groups	6	KATS90000-I
	Failed to acquire information about migration groups	4	KATS90001-W
Acquiring information about storage systems[#3]	Successfully acquired information about storage systems	6	KATS90000-I

Event type	Audit event	Severity	Message ID
	Failed to acquire information about storage systems	4	KATS90001-W
Acquiring task information[#3]	Successfully acquired information about all tasks	6	KATS90000-I
	Failed to acquire information about all tasks	4	KATS90001-W
	Successfully acquired information about tasks	6	KATS90000-I
	Failed to acquire information about tasks	4	KATS90001-W
Acquiring information about storage tiers[#3]	Successfully acquired information about all storage tiers	6	KATS90000-I
	Failed to acquire information about all storage tiers	4	KATS90001-W
	Successfully acquired information about storage tiers	6	KATS90000-I
	Failed to acquire information about storage tiers	4	KATS90001-W
Acquiring pool information[#3]	Successfully acquired pool information	6	KATS90000-I
	Failed to acquire pool information	4	KATS90001-W
	Successfully acquired the number of pools returned by a search	6	KATS90000-I
	Failed to acquire the number of pools returned by a search	4	KATS90001-W
Acquiring information about a keystore file[#3]	Successfully acquired information about a keystore file	6	KATS90000-I
	Failed to acquire information about a keystore file	4	KATS90001-W
Acquiring volume information[#3]	Successfully acquired volume information	6	KATS90000-I
	Failed to acquire volume information	4	KATS90001-W
	Successfully acquired the number of volumes returned by a search	6	KATS90000-I
	Failed to acquire the number of volumes returned by a search	4	KATS90001-W
Acquiring information about the unused capacity of parity groups[#3]	Successfully acquired information about parity groups	6	KATS90000-I
	Failed to acquire information about parity groups	4	KATS90001-W
	Successfully acquired the number of parity groups returned by a search	6	KATS90000-I
	Failed to acquire the number of parity groups returned by a search	4	KATS90001-W

Event type	Audit event	Severity	Message ID
Storage domain operations[#3]	Failed to register a storage domain	4	KATS90001-W
	Failed to delete a storage domain	4	KATS90001-W
	Successfully updated information about storage domains	6	KATS90000-I
	Failed to update information about storage domains	4	KATS90001-W
	Successfully updated a storage domain	6	KATS90000-I
	Failed to update a storage domain	4	KATS90001-W
Migration group operations[#3]	Successfully added a volume to a migration group	6	KATS90000-I
	Failed to add a volume to a migration group	4	KATS90001-W
	Successfully registered a migration group	6	KATS90000-I
	Failed to register a migration group	4	KATS90001-W
	Successfully deleted a migration group	6	KATS90000-I
	Failed to delete a migration group	4	KATS90001-W
	Successfully updated information about migration groups	6	KATS90000-I
	Failed to update information about migration groups	4	KATS90001-W
	Successfully created a migration plan	6	KATS90000-I
	Failed to create a migration plan	4	KATS90001-W
	Successfully deleted a migration plan	6	KATS90000-I
	Failed to delete of a migration plan	4	KATS90001-W
Task operations[#3]	Successfully canceled a task	6	KATS90000-I
	Failed to cancel a task	4	KATS90001-W
	Successfully changed the status of a task	6	KATS90000-I
	Failed to change the status of a task	4	KATS90001-W
	Successfully registered a migration task	6	KATS90000-I
	Failed to register a migration task	4	KATS90001-W
	Successfully registered a task	6	KATS90000-I
	Failed to register a task	4	KATS90001-W
	Successfully deleted a task	6	KATS90000-I
	Failed to delete a task	4	KATS90001-W
	Successfully executed a task	6	KATS90000-I
	Failed to execute a task	4	KATS90001-W

Event type	Audit event	Severity	Message ID
	Successfully updated task information	6	KATS90000-I
	Failed to update task information	4	KATS90001-W
Storage tier operations[#3]	Successfully registered a storage tier	6	KATS90000-I
	Failed to register a storage tier	4	KATS90001-W
	Successfully deleted a storage tier	6	KATS90000-I
	Failed to delete a storage tier	4	KATS90001-W
	Successfully updated information about storage tiers	6	KATS90000-I
	Failed to update information about storage tiers	4	KATS90001-W

#1:

If an account is locked because the authentication method was changed for a user whose password is not set, this information is not recorded in the audit log.

#2:

If an account is unlocked because a password was set for a user, this information is not recorded in the audit log.

#3:

This information is output only by operations from the Tiered Storage Manager CLI.

Table 1-5 Audit events that are output to audit logs (when the category is AccessControl)

Event type	Audit event	Severity	Message ID
Storage domain operation failure	No permission to change a storage domain	4	KATS90010-W
	No permission to refresh a storage domain	4	KATS90010-W
Storage tier operation failure	No permission to create a storage tier	4	KATS90010-W
	No permission to delete a storage tier	4	KATS90010-W
	No permission to change a storage tier	4	KATS90010-W
Migration group operation failure	No permission to create a migration group	4	KATS90010-W
	No permission to delete a migration group	4	KATS90010-W
	No permission to change a migration group	4	KATS90010-W
	No permission to add volumes to a migration group	4	KATS90010-W

Event type	Audit event	Severity	Message ID
	No permission to delete volumes from a migration group	4	KATS90010-W
Task operation failure	No permission to create a task	4	KATS90010-W
	No permission to delete a task	4	KATS90010-W
	No permission to change a task	4	KATS90010-W
	No permission to execute a task	4	KATS90010-W
	No permission to cancel a task	4	KATS90010-W
	No permission to stop a task	4	KATS90010-W
Note: This information is output only by operations from the Tiered Storage Manager CLI.			

Table 1-6 Audit events that are output to audit logs (when the category is ExternalService)

Event type	Audit event	Severity	Message ID
Communicating with an external authentication server	Successfully communicated with the LDAP directory server	6	KAPM10116-I
	Failed to communicate with the LDAP directory server	3	KAPM10117-E
	Successfully communicated with the RADIUS server	6	KAPM10118-I
	Failed to communicate with the RADIUS server (no response)	3	KAPM10119-E
	Successfully communicated with the Kerberos server	6	KAPM10120-I
	Failed to communicate with the Kerberos server (no response)	3	KAPM10121-E
	Successfully communicated with the DNS server	6	KAPM10122-I
	Failed to communicate with the DNS server (no response)	3	KAPM10123-E
Performing authentication with an external authentication server	Successfully performed TLS negotiation with the LDAP directory server	6	KAPM10124-I
	Failed to perform TLS negotiation with the LDAP directory server	3	KAPM10125-E
	Successfully authenticated a user to search for information on the LDAP directory server	6	KAPM10126-I
	Failed to authenticate a user to search for information on the LDAP directory server	3	KAPM10127-W

Event type	Audit event	Severity	Message ID
Authenticating users by using an external authentication server	Successfully authenticated a user by using the LDAP directory server	6	KAPM10128-I
	User not found on the LDAP directory server	4	KAPM10129-W
	Failed to authenticate a user by using the LDAP directory server	4	KAPM10130-W
	Successfully authenticated a user by using the RADIUS server	6	KAPM10131-I
	Failed to authenticate a user by using the RADIUS server	4	KAPM10132-W
	Successfully authenticated a user by using the Kerberos server	6	KAPM10133-I
	Failed to authenticate a user by using the Kerberos server	4	KAPM10134-W
Acquiring information from an external authentication server	Successfully acquired user information from the LDAP directory server	6	KAPM10135-I
	Failed to acquire user information from the LDAP directory server	3	KAPM10136-E
	Successfully acquired an SRV record from the DNS server	6	KAPM10137-I
	Failed to acquire an SRV record from the DNS server	3	KAPM10138-E

For details about the output format of message text, see Message text output in the message portion of audit log data on page 1-20.

For details about the message text corresponding to each message ID, see the *Hitachi Command Suite Messages*.

Editing the audit log environment settings file

To acquire Hitachi Command Suite product audit log data, you must edit the environment settings file (`auditlog.conf`). The audit log data can be generated by setting audit event categories, in `Log.Event.Category` of the environment settings file.

To apply the changes to the environment settings file for the audit log, you need to restart the services of the Hitachi Command Suite products. For details about how to restart the services of the Hitachi Command Suite products, see the *Hitachi Command Suite Administrator Guide*.

Caution: A large volume of audit log data might be output. Change the log file size and back up or archive the generated log files accordingly.

The `auditlog.conf` file is stored in the following location:

- In Windows:

installation-folder-for-Hitachi-Command-Suite\Base64\conf\sec\auditlog.conf

- In Linux:
  installation-directory-for-Hitachi-Command-Suite/Base64/conf/sec/auditlog.conf

The following table shows the items you can set in the `auditlog.conf` file.

Table 1-7 Items set in auditlog.conf file

Item	Description
`Log.Facility`	Specify (by using a number) the facility to be used when the audit log messages are output to the `syslog` file. `Log.Facility` is used in combination with the severity levels set for each audit event for filtering the output to the `syslog` file. For details about the severity levels output to the audit log, see Table 1-2 Audit events that are output to audit logs (when the category is StartStop) on page 1-4 to Table 1-6 Audit events that are output to audit logs (when the category is ExternalService) on page 1-13. For details about the values that can be specified for `Log.Facility`, see Table 1-8 Log.facility values and the corresponding values in syslog.conf on page 1-16. For details about the correspondence between the severity levels set for audit events and those set in the `syslog.conf` file, see Table 1-9 Correspondence between the severity levels of audit events, the severity levels in syslog.conf, and the types of event log data on page 1-17. `Log.Facility` has an effect in Linux only. `Log.Facility` is ignored in Windows, even if it is specified. Also, if an invalid value or a non-numeric character is specified, the default value is used. Default value: 1
`Log.Event.Category`	Specify the audit event categories to be generated. When specifying multiple categories, use commas (,) to separate them. In this case, do not insert spaces between categories and commas. If `Log.Event.Category` is not specified, audit log data is not output. For information about the available categories, see Table 1-2 Audit events that are output to audit logs (when the category is StartStop) on page 1-4 to Table 1-6 Audit events that are output to audit logs (when the category is ExternalService) on page 1-13. `Log.Event.Category` is not case-sensitive. If an invalid category name is specified, the specified file name is ignored. Default value: (not specified)
`Log.Level`	Specify the severity level of audit events to be generated. Events with the specified severity level or lower will be output to the event log file. For information about the audit events that are output from Hitachi Command Suite products and their severity levels, see Table 1-2 Audit events that are output to audit logs (when the category is StartStop) on page 1-4 to Table 1-6 Audit events that are output to audit logs (when the

Item	Description
	category is ExternalService) on page 1-13. For details about the correspondence between the severity levels of audit events and the types of event log data, see Table 1-9 Correspondence between the severity levels of audit events, the severity levels in syslog.conf, and the types of event log data on page 1-17. `Log.Level` has an effect in Windows only. `Log.Level` is ignored in Linux, even if it is specified. Also, if an invalid value or a non-numeric character is specified, the default value is used. Specifiable values: 0 to 7 (severity level) Default value: 6

The table below shows the values that can be set for `Log.Facility` and the corresponding values specified in the `syslog.conf` file.

Table 1-8 Log.facility values and the corresponding values in syslog.conf

Facility	Corresponding values in syslog.conf
1	`user`
2	`mail`#
3	`daemon`
4	`auth`#
6	`lpr`#
16	`local0`
17	`local1`
18	`local2`
19	`local3`
20	`local4`
21	`local5`
22	`local6`
23	`local7`

#:

Although you can specify this value, we do not recommend that you specify it.

The table below shows the correspondence between the severity levels of audit events, the values indicating severity that are specified in the `syslog.conf` file, and the types of event log data.

Table 1-9 Correspondence between the severity levels of audit events, the severity levels in syslog.conf, and the types of event log data

Severity of audit events	Severity in syslog.conf	Type of event log data
0	emerg	Error
1	alert	
2	crit	
3	err	
4	warning	Warning
5	notice	Information
6	info	
7	debug	

The following shows an example of the `auditlog.conf` file:

```
# Specify an integer for Facility. (specifiable range: 1-23)
Log.Facility 1

# Specify the event category.
# You can specify any of the following:
# StartStop, Failure, LinkStatus, ExternalService,
# Authentication, AccessControl, ContentAccess,
# ConfigurationAccess, Maintenance, or AnomalyEvent.
Log.Event.Category  Authentication,ConfigurationAccess

# Specify an integer for Severity. (specifiable range: 0-7)
Log.Level 6
```

In the example above, the audit events related to `Authentication` or `ConfigurationAccess` are output. For Windows, `Log.Level 6` outputs audit log data corresponding to the Error, Warning, and Information levels. For Linux, `Log.Facility 1` outputs the audit log data to the `syslog` file that is defined as the `user` facility in the `syslog.conf` file.

Checking audit log data

- In Windows:
  Audit log data is output to the Windows event log in the following format:
  program-name [*process-ID*]: *message-portion*
- In Linux:
  Audit log data is output to the `syslog` file in the following format:
  syslog-header-portion message-portion
  The format of *syslog-header-portion* differs depending on the OS environment setting. For example, when using rsyslog, if you specify `$ActionFileDefaultTemplate RSYSLOG_SyslogProtocol23Format` in

the `/etc/rsyslog.conf` file, audit log data is output in a format that conforms to RFC5424.

The format and contents of *message-portion* are described below.

Note: In *message-portion*, a maximum of 953 single-byte characters can be displayed in a `syslog` file.

The format of *message-portion* is as follows:

uniform-identifier,*unified-specification-revision-number*,*serial-number*,*message-ID*,*date-and-time*,*detected-entity*,*detected-location*,*audit-event-type*,*audit-event-result*,*audit-event-result-subject-identification-information*,*hardware-identification-information*,*location-information*,*location-identification-information*,*FQDN*,*redundancy-identification-information*,*agent-information*,*request-source-host*,*request-source-port-number*,*request-destination-host*,*request-destination-port-number*,*batch-operation-identifier*,*log-data-type-information*,*application-identification-information*,*reserved-area*,*message-text*

Table 1-10 Information in message-portion

Item[#1]	Description
uniform-identifier	Fixed to `CELFSS`.
unified-specification-revision-number	Fixed to `1.1`.
serial-number	Serial number of audit log messages.
message-ID	Message ID. For details, see Information included in audit logs on page 1-3.
date-and-time	The date and time when the message was output. This item is output in the format of *yyyy-mm-ddThh:mm:ss.stime-zone*.
detected-entity	Component or process name.
detected-location	Host name.
audit-event-type	Event type.
audit-event-result	Event result.
audit-event-result-subject-identification-information	Account ID, process ID, or IP address corresponding to the event.
hardware- identification-information	Hardware model or serial number.
location-information	Identification information for the hardware component.
location-identification-information	Location identification information.
FQDN	Fully qualified domain name.
redundancy-identification-information	Redundancy identification information.

Item[#1]	Description
agent-information	Agent information.
request-source-host	Host name of the request sender.
request-source-port-number	Port number of the request sender.
request-destination-host	Host name of the request destination.
request-destination-port-number	Port number of the request destination.
batch-operation-identifier[#2]	Serial number of operations through the program.
log-data-type-information	Fixed to `BasicLog` or `DetailLog`.
application-identification-information	Program identification information.
reserved-area	Not output. This is a reserved space.
message-text	The contents vary according to the audit events. Characters that cannot be displayed are output as asterisks (`*`). For details, see Message text output in the message portion of audit log data on page 1-20.

#1:

Some items are not output for some audit events.

#2:

When array information in the message text portion of the Tiered Storage Manager audit log is output, the basic log data indicating the start of the array is output first. Next, detailed log data is output one line at a time for each element of the array, followed by basic log data indicating the end of the array.

Output example:

```
...,i,BasicLog,,,"......NumSD=n, Start SDs"
...,i,DetailLog,,,"SD[1]=(domainId-1,domainName-1)"
...,i,DetailLog,,,"SD[2]=(domainId-2,domainName-2)"
.....
...,i,DetailLog,,,"SD[n]=(domainId-n,domainName-n)"
...,i,BasicLog,,,"EndSDs"
```

However, when the array length is 1, only basic log data is output, and the detailed log is not used.

Example of *message-portion* output for a login audit event:

```
CELFSS,1.1,0,KAPM01124-I,2006-05-15T14:08:23.1+09:00,HBase-
SSO,management-
host,Authentication,Success,uid=system,,,,,,,,,,,BasicLog,,,"The
login was successful. (session ID = session ID)"
```

Example of *message-portion* output for a request-received audit event of the Device Manager server:

```
CELFSS,1.1,10,KAIC51000-I,2006-03-17T12:45:00.0+09:00,DvM_Srv,
TestServer,
ConfigurationAccess,Success,uid=system,,,,,,,from=12.228.23.124,,,,,B
asicLog,DvM_GUI,,"123456789 ModPort<SA info='R500-14000'><Port
info='0,0,,,1,,'></Port></SA>"
```

Message text output in the message portion of audit log data

The format of message text output in the message portion of audit log data varies from one audit event to another. This section describes the format of the message text for each audit event. The item enclosed by square brackets ([ ]) in the format might not be output.

Message text for Common Component processing

Information about the audit event that occurred is output in a character string.

For more information on the message text, see *Hitachi Command Suite Messages*. The following example shows output message text.

Example of message text output as audit log data when a user logs in:

"The login was successful. (session ID = *session ID*)"

Message text for Device Manager server processing

When the Device Manager server receives a request for Device Manager server processing (for example, a request to change the configuration or to acquire information) or sends a response for the request, message text about the request or response is output as audit log data. The following explains the format of, and information in, the message text.

Format of message text when the Device Manager server receives a request to perform server processing (if no error occurred):

unique-ID message-details

Format of message text when the Device Manager server sends a response (if no error occurred):

unique-ID[*status*][*request-operation-start-unique-ID*]

Format of message text when the Device Manager server receives a request to perform server processing or sends a response (if an error occurred):

unique-ID error-message-ID

Table 1-11 Information in message text when the Device Manager server receives a request or sends a response (for server processing)

Item	Description
unique-ID	A unique request identifier. For response transmission, the unique ID of the request is output. For processing via the SVP, this ID is also output as audit log data on the SVP.
message-details	Detailed information on the request. For details, see Message details output in the message portion of audit log data on page 1-32.
status	If the request and the operation are asynchronous, one of the following character strings that indicate the result of polling is output: • `COMPLETED`: The operation was successful. • `PROCESSING`: Now operating • `FAILED`: The operation failed.
request-operation-start-unique-ID	A unique ID that indicates which response (the result of polling the server about the requested operation) corresponds to which request, when a request and the operation are performed asynchronously. This ID corresponds to the message output as an attribute of the `RequestStatus` element of `GetRequestStatus` (command: `Get`, target: `RequestStatus`). This message ID is output to the detailed message when a request is received. For details about detailed messages, see Message details output in the message portion of audit log data on page 1-32.
error-message-ID	The ID of the error message. For more information on message IDs, see *Hitachi Command Suite Messages*.

The following examples show output message text.

Example of message text output when the Device Manager server receives a request for server processing (if no error occurred):

```
"123456789 AddLUN<SA info='D700-75010421'><Path info=',,
0,4,15,0,'><LDEV info='D700-75010421-31,,'/><LDEV
info='D700-75010421-34,,'/></Path><Path info=',,1,1,15,0,31'/><Path
info=',,16,6,15,0,31'/><Path info=',,0,4,15,1,35'/></SA>"
```

Example of message text output when the Device Manager server sends a response to a request for server processing (if an error occurred):

```
"123456789 KAIC01014-E"
```

Message text for Device Manager GUI processing

Information about the audit event that occurred is output in a character string.

For more information on the message text, see *Hitachi Command Suite Messages*. The following example shows output message text.

Example of message text output as audit log data when a task is registered:

`The task operation (registerTask) succeeded.(task name=`*`task name`*`)`

Message text output when related products are started

When the Device Manager server receives a request to launch a related product or sends a response for a request, message text about the request or response is output as audit log data. The following explains the format of, and information in, the message text.

Format of message text output when the Device Manager server receives a request to launch a related product (if no error occurred):

`unique-ID``[ `*`launch-session-ID`*`][ `*`launch-target-identifier`*`]`

Format of message text output when the Device Manager server sends a response to a request to launch a related product (if no error occurred):

`unique-ID``[ `*`launch-session-ID`*`]`

Format of message text output when the Device Manager server receives a request to launch a related product or sends a response (if an error occurred):

`unique-ID``[ `*`launch-session-ID`*`] `*`error-message-ID`*

Table 1-12 Information in message text output when the Device Manager server receives a request or sends a response (for launching a product)

Item	Description
unique-ID	A unique request identifier. For response transmission, the unique ID of the request is output. For processing via the SVP, this identifier is also output as audit log data on the SVP.
launch-session-ID	Format: `lsessionID=...` The launch session ID is output. This information is output when a specific application is launched under the condition that request-response exchanges between the GUI and the Device Manager server are performed more than once. For information on the applications for which the launch session ID is output, see Table 1-13 Relationship between the presence of a launch session ID and the information contained in the launch identifier on page 1-23. This item is output when the storage system to be launched is Hitachi USP.
launch-target-identifier	Format: `loid=...` Information that identifies the launch target is output. This information is output only when the first request is received. The information contained in the launch identifier varies depending on the application to be launched. For details, see Table 1-13 Relationship between the presence of a launch session ID and the information contained in the launch identifier on page 1-23.

Item	Description
error-message-ID	The ID of the error message. For more information on message IDs, see *Hitachi Command Suite Messages*.

The table below indicates the relationship between the presence of a launch session ID and the information contained in the launch target identifier for each type of the application to be launched.

Table 1-13 Relationship between the presence of a launch session ID and the information contained in the launch identifier

Application type	Storage system	Presence of session ID	Information in launch identifier
Element Manager	Universal Storage Platform V/VM	Not present	Information that identifies the storage system to be launched. The value is the same as an element identifier# in the `StorageArray` element. For more information, see the attribute value output sequence for the `StorageArray` element in Table 1-25 Sequence in which attribute values are output for each element on page 1-43.
	Hitachi USP	Present	
	HUS100	Not present	
	Hitachi AMS2000	Not present	
	Hitachi SMS	Not present	
	Hitachi AMS/WMS	Not present	
Protection Manager	--	Not present	Information that identifies the host computer to be launched. The value is the same as an element identifier# in the `Host` element. For more information, see the attribute value output sequence for the `Host` element in Table 1-25 Sequence in which attribute values are output for each element on page 1-43.

#:

An element identifier is an attribute value that uniquely identifies the element.

The following examples show output message text.

Example of message text output when the Device Manager server receives a launch request (if no error occurred):

```
"123456789 lsessionID=a7e770671b8 loid=R500-14000"
```

Example of message text output when the Device Manager server sends a response to a launch request (if no error occurred):

```
"123456789 lsessionID=a7e770671b8"
```

Message text for Device Manager server processing using CIM

When the Device Manager server receives a request for processing via a CIM service method or sends a response for a request, message text about the request or response is output as audit log data. The following explains the format of, and information in, the message text.

Format of message text output when the Device Manager server receives a request to perform processing via a CIM service method (if no error occurred):

unique-ID method-name input-parameter object-path

Format of message text output when the Device Manager server sends a response (if an error occurred or if no error occurred):

unique-ID return-code output-parameter

Format of message text output when the Device Manager server sends a response (if a job is created through asynchronous processing):

unique-ID return=4096 *object-path*

Caution: If a job is created through asynchronous processing, no completion notification is output as audit log data.

Table 1-14 Information in message text output when the Device Manager server receives a request or sends a response (for processing via CIM)

Item	Description
unique-ID	A unique request identifier. For response transmission, the unique ID of the request is output. For processing via the SVP, this identifier is also output as audit log data on the SVP.
method-name	The name of the requested method.
input-parameter	Format: `inParams={...}` The input parameters passed to the requested method are output.
object-path	Format: `objectPath=...` The object path passed to the requested method is output.
return-code	Format: `return=...` The return code that indicates the execution result of the requested method is output.
output-parameter	Format: `outParams={...}` The output parameters passed as the execution result of the requested method are output.

The following examples show output message text.

Example of message text output when the Device Manager server receives a request for server processing (via CIM, if no error occurred):

```
"123456789 GetSupportedSizeRange inParams={ElementType=3,Goal=//
192.168.0.1/root/smis/
current:HITACHI_StorageSetting.InstanceID='RAID5'} objectPath=/root/
smis/current:HITACHI_StoragePool.InstanceID='AMS500.75010421'"
```

Example of message text output when the Device Manager server sends a response to a request for server processing (via CIM, if no error occurred):

```
"123456789 return=0
outParams={MinimumVolumeSize=1024,MaximumVolumeSize=248139692,VolumeS
izeDivisor=1024}"
```

Message text for Tiered Storage Manager processing

If operations are performed from the Tiered Storage Manager CLI, the output format of the audit log message text and the information to be output are as follows:

message-text operation-type (OP), *operation-target* (Res)[, *failure-cause* (RC)][, *storage-domain-information* (SD)][, *storage-system-information* (SS)][, *migration-group-information* (MG)]
[, *target-migration-group-information-after-task-completion* (MG_moveTo)]
[, *storage-tier-information* (ST)][, *pool-information* (PO)]
[, *volume-information* (VL)][, *volume-pair* (VP)][, *free-space-information* (FS)][, *task-information* (TK)]
[, *option-per-audit-event* (opt)]

Note: The item *failure-cause* (RC) and each item after *failure-cause* (RC) might not be output.

Table 1-15 Items output to the audit log message text (message text, operation type and operation target)

Item	Description	Output format
message-text	Message explaining the event	Message text is output. For details about message text, see Table 1-17 Messages output to the audit log on page 1-30.
operation-type (OP)	Type of operation requested for Tiered Storage Manager server: 1. Operation ID (*OpId*) 2. Operation name (*OpName*)	OP=(*OpId*,*OpName*) For details about OpId and OpName, see Table 1-18 Meanings of the operation types (OP) output to the audit log on page 1-31.
operation-target (Res)	Type of resource for the operation: 1. Resource ID(*ResId*) 2. Resource name(*ResName*)	Res=(*ResId*,*ResName*) For details about ResId and ResName, see Table 1-19 Meanings of the operation targets (Res) output to the audit log on page 1-32.

Table 1-16 Items output to the audit log message text (additional information)

Item	Description	Output format
failure-cause (RC)	Error code indicating the cause of a failure event	RC=KATSppmmm-Z For details on the message contents, see the *Hitachi Command Suite Messages*.
storage-domain-information (SD)	When a single item exists: 1. Storage domain ID (*id*) 2. Storage domain name (*name*)	SD=(*id*,*name*)
	When multiple items exist: 1. Number of elements (*n*) 2. Storage domain ID (*id*) 3. Storage domain name (*name*)	NumSD=*n*, Start SDs SD[1]=(*id*-1,*name*-1) ... SD[*n*]=(*id*-*n*,*name*-*n*) End SDs
	Number of storage domain information items (*n*)	NumSD=*n*
storage-system-information (SS)	1. Storage system name (*name*) 2. Logical DKC number (*ldkc*)	SS=(,,*name*,*ldkc*)
	Number of storage system information items (*n*)	NumSS=*n*
Migration-group-information (MG)	When a single item exists: 1. Migration group ID (*id*) 2. Migration group name (*name*)	MG=(*id*,*name*)
	When multiple items exist: 1. Number of elements (*n*) 2. Migration group ID (*id*) 3. Migration group name (*name*)	NumMG=*n*, Start MGs MG[1]=(*id*-1,*name*-1) ... MG[*n*]=(*id*-*n*,*name*-*n*) End MGs

Item	Description	Output format
	Number of migration group information items (*n*)	NumMG=*n*
target-migration-group-information-after-task-completion (MG_moveTo)	1. Migration group ID (*id*) 2. Migration group name (*name*)	MG_moveTo=(*id*,*name*)
storage-tier-information (ST)	When a single item exists: 1. Storage tier ID (*id*) 2. Storage tier name (*name*)	ST=(*id*,*name*)
	When multiple items exist: 1. Number of elements (*n*) 2. Storage tier ID (*id*) 3. Storage tier name (*name*)	NumST=*n*, Start STs ST[1]=(*id*-1,*name*-1) ... ST[*n*]=(*id*-*n*,*name*-*n*) End STs
	Number of storage tiers (*n*)	NumST=*n*
pool-information (PO)	Storage domain ID (*id*)	SD=(*id*,)
	Number of pools (*n*)	NumPO=*n*
volume-information (VL)	When a single item exists: 1. Controller logical device number (*devnum*) 2. Object ID of LU or LDEV (*id*)	VL=(*devnum*,*id*)
	When multiple items exist: 1. Number of elements (*n*) 2. Controller logical device number (*devnum*) 3. Object ID of LU or LDEV (*id*)	NumVL=*n*, Start VLs VL[1]=(*devnum*-1,*id*-1) ... VL[*n*]=(*devnum*-*n*,*id*-*n*) End VLs
	Number of volumes (*n*)	NumVL=*n*
volume-pair (VP)	When a single item exists: 1. Controller logical device number of the migration source volume (*sdevnum*)	VP=(*sdevnum*,*sid*,*tdevnum*,*tid*)

Item	Description	Output format
	2. Object ID of the migration source LDEV (*sid*) 3. Controller logical device number of the migration target volume (*tdevnum*) 4. Object ID of the migration target LDEV (*tid*)	
	When multiple items exist: 1. Number of elements (*n*) 2. Controller logical device number of the migration source volume (*sdevnum*) 3. Object ID of the migration source LDEV (*sid*) 4. Controller logical device number of the migration target volume (*tdevnum*) 5. Object ID of the migration target LDEV (*tid*)	NumVP=*n*, Start VPs VP[1]= (*sdevnum*-1,*sid*-1,*tdevnum*-1,*tid*-1) ... VP[*n*]= (*sdevnum-n*,*sid-n*,*tdevnum-n*,*tid-n*) End VPs
	Number of volume pairs (*n*)	NumVP=*n*
free-space-information (FS)	Number of free space information items (*n*)	NumFS=*n*
task-information (TK)	For a migration task: 1. Task ID (*id*) 2. Task type (*type*) = 0 3. Whether to erase data (*erase*) Y: Erase data. N: Do not erase data.	TK=(*id*,0,*erase*)
	For a locking task: 1. Task ID (*id*) 2. Task type (*type*) = 2 3. Lock status (*mode*) ReadOnly: Read only Protect: Protected 4. Lock period (*days*)	TK=(*id*,2,*mode*,*days*)

Item	Description	Output format
	For an unlocking task: 1. Task ID (*id*) 2. Task type (*type*) = 3	TK=(*id*,3)
	For a shredding task: 1. Task ID (*id*) 2. Task type (*type*) = 4 3. Shredding method (*method*) 0: Zero once 1: DOD	TK=(*id*,4,*method*)
	For multiple types of task information: 1. Number of tasks 2. Task ID (*id*) 3. Task type (*type*) 0: Migration task 2: Locking task 3: Unlocking task 4: Shredding task	NumTK=*n*, Start TKs TK[1]=(*id*-1,*type*-1) ... TK[*n*]=(*id*-*n*,*type*-*n*) End TKs
option-per-audit-event (opt)	When canceling a task: Whether to perform a forced cancel (*emergency*) Y: Emergency specification N: No emergency specification	opt=(*emergency*)
	When adding volumes: Migration permission (*moveFromMigrationGroup*) Y: Permit migration N: Do not permit migration	opt=(*moveFromMigrationGroup*)
	When changing a task: 1. Task status after the change (*status*) 0x01020600: Executing a task 0x02030000: Erased 0x02040000: Stopped 0x02050000: Stopping mid-task	opt=(*status*,*emergency*)

Item	Description	Output format
	2. Whether to perform a forced change (*emergency*) Y: Emergency specification N: No emergency specification	

Table 1-17 Messages output to the audit log

Message ID	Message (Specific application information)	Description
KATS90000-I	The operation requested by the client has completed.	If the audit log data contains multiple lines, this message appears in the first line. This message occurs when, due to a successful access of the resources managed by Tiered Storage Manager, an audit event of the Configuration Access type occurred.
KATS90001-W	The operation requested by the client has failed.	If the audit log data contains multiple lines, this message appears in the first line. This message occurs when, due to a failure in accessing resources managed by Tiered Storage Manager, an audit event of the Configuration Access type occurred.
KATS90010-W	The user does not have permission for the operation.	This message occurs when, due to a failure in accessing resources managed by Tiered Storage Manager because of a lack of execution permissions, an audit event of the Access Control type occurred.
KATS90020-I	Outputs the subsequent lines of the KATS90000-I message.	If the audit log data contains multiple lines, this message appears immediately following the KATS90000-I message. This message occurs when, due to successful access to the resources managed by Tiered Storage Manager, an audit event for the Configuration Access type occurred.

Message ID	Message (Specific application information)	Description
KATS90021-W	Outputs the subsequent lines of the KATS90001-W message.	If the audit log data contains multiple lines, this message appears immediately following the KATS90001-W message. This message occurs when, due to a failure in accessing resources managed by Tiered Storage Manager, an audit event for the `Configuration Access` type occurred.
KATS90030-I	Outputs the last line of the KATS90000-I message.	If the audit log data contains multiple lines, this message appears immediately following the KATS90020-I message. This message occurs when, due to successful access to the resources managed by Tiered Storage Manager, an audit event for the `Configuration Access` type has occurred.
KATS90031-W	Outputs the last line of the KATS90001-W message.	If the audit log data contains multiple lines, this message appears immediately following the KATS90021-W message. This message occurs when, due to a failure in accessing resources managed by Tiered Storage Manager, an audit event for the `Configuration Access` type occurred.

Table 1-18 Meanings of the operation types (OP) output to the audit log

OpId	OpName	Meaning
10	Get	Acquire information
11	Get_summary	Acquire summary information
12	Get_num	Acquire only a count of information items
20	Create	Create
30	Delete	Delete
40	Modify	Update
50	Add	Add
60	Remove	Remove
70	Change	Change status

OpId	OpName	Meaning
80	Execute	Execute
90	Refresh	Refresh
100	Cancel	Cancel

Table 1-19 Meanings of the operation targets (Res) output to the audit log

ResId	ResName	Formal name	Meaning
20	SD	Storage Domain	Storage domain
21	RS	Refresh Status	Storage refresh status
30	MG	Migration Group	Migration group
40	ST	Storage Tier	Storage tier
50	MP	Migration Plan	Migration plan
60	SS	Subsystem	Storage system
70	TK	Task	Task
80	VL	Volume	Volume
90	VP	Volume Pair	Volume pair
110	LOG	Logger Info	Information about data output to logs
120	PO	Pool	Pool
130	KS	KeyStore	Keystore file information
140	FS	Free Space	Free space

The following are examples of audit log data output:

```
TSMgr[00000974]:CELFSS,1.1,1,KATS90000-I,
2006-11-09T19:58:45.4+09:00,TSM_Srv,
Hostname1,ConfigurationAccess,Success,uid=user01,,,,,,,,,,,BasicLog,
,,"The operation requested by the client has completed.
OP=(30,Delete), Res=(20,SD), SD=(DM1hc2idzx,Domain-A)"
```

Message details output in the message portion of audit log data

If the Device Manager server received a request, the content of the performed operation is output as message details in the message text of the message portion for audit log data.

This section describes the output format of message details. The item enclosed by square brackets ([ ]) might not be output.

command target[*option*][*parameter*]

The following table describes the information output in message details:

Table 1-20 Information output in message details

Item	Description
command	A character string (3 characters) that indicates the operation (for example, addition, deletion, modification, or reference) to be performed on the resource. For the meaning of the output character string, see Commands in message details on page 1-33.
target	Information that identifies the operation to be performed. For information on the target to be output in the message text, see Targets in message details on page 1-33.
option	Information that identifies the operation to be performed. This information is output only when one or more options are specified. For more information on the meanings of output options, see Options in message details on page 1-38. If two or more options are specified, a semicolon (`;`) is used as a separator.
parameter	Information that identifies the operation to be performed and the resource on which the operation is to be performed. (This information is output only when it is specified by request.) This information is output in tagged format. For details about output parameters, see Parameters in message details on page 1-42.

The following sections describe the information that is output.

Commands in message details

The table below lists the commands that can be output in message details.

Table 1-21 Commands output in message details

Output character string	Full name	Operation
`Add`	Add	Addition
`Del`	Delete	Deletion
`Get`	Get	Acquisition
`Imp`	Import	Importing
`Ivk`	Invoke	General operation for an SMI-S enabled storage system
`Mod`	Modify	Modification
`Set`	Set	Setting

Targets in message details

The table below provides information on the targets that can be output in message details.

Table 1-22 Targets output in message details

Output character string	Full name	Operation
AclRel	AclRelation	Creation of, deletion of, acquisition of, or changes to authorization information that is formed by the relationships among the resource group, user group, and roles
AclRol	AclRole	Acquisition of a list of roles
AclRsrcGrp	AclResourceGroup	Creation of, deletion of, acquisition of information about, or changes to the resource group
Alerts	Alerts	Alert information reference or deletion
ArrGrp	ArrayGroup	Parity group configuration change
ArrRsrv	ArrayReservation	Storage system reservation setting or information acquisition
CFForRep	ConfigFileForReplication	CCI configuration file creation
ChgInf	ChangedInformation	Acquisition of information about whether the managed resource configuration was changed, and the list of the last update time
ChgRsc	ChangedResource	Acquisition of the list of the managed resources whose configuration was changed
COMEFSP	CreateOrModifyElementFromStoragePool	Volume creation in an SMI-S enabled storage system
ConfChange	ConfigurationChange	Configuration change notification to the Device Manager server
CpyGrp	CopyGroup	Copy group information acquisition
DataRetentions	DataRetentions	Data retention information setting or acquisition
ExpPaths	ExposePaths	LUN paths set in an SMI-S enabled storage system
ExtArrGrp	ExternalArrayGroup	External parity group setting
Host	Host	Host setting or reference
HostI	HostInfo	Host (agent) configuration change or reference
HostRef	HostRefresh	HostInfo update
HostScan	HostScan	Automatic host setup
HostVol	HostVolume	Host volume information notification to the Device Manager server

Output character string	Full name	Operation
HSD	HostStorageDomain	Host group and iSCSI target configuration change
ISCSIForHSD	ISCSINameForHostStorageDomain	Change of iSCSI names that belong to iSCSI targets
JrnlPool	JournalPool	Pool configuration change
LDEVForALUA	LDEVForALUA	LDEV ALUA attribute change
LDEVForVolMig	LDEVForVolumeMigration	LDEV VolumeMigration attribute setting or information acquisition
LGrp	LogicalGroup	Logical group setting or reference
LU	LogicalUnit	Logical unit configuration change
LUFormat	LogicalUnitFormat	Formats of all LDEVs in the logical unit
LUN	LUN	LUN path configuration change
LUSE	LUSE	Expanded LDEV configuration change
MntrDt	MonitoringData	Gets and applies I/O monitoring information
Msgs	Messages	Message
ObjLabel	ObjectLabel	LDEV label setting or deletion
ObjName	ObjectName	Name assignment to objects used in Device Manager
Port	Port	Port configuration change
PortCtrl	PortController	Port controller configuration change
PortVisibleWWN	PortVisibleWWN	WWN information acquisition of the host (HBA) logged in to the port
PRpu	PResourcePartitionUnit	Resource group configuration change
QrmDsk	QuorumDisk	Quorum disk ID setting or deletion
Rep	Replication	Pair configuration change
RepCtrlPair	ReplicationControllerPair	Pair configuration information reference and change
RepPrfmnc	ReplicationPerformance	Copy group configuration information and performance information update
RepPrfmncDt	ReplicationPerformanceData	Universal Replicator performance information acquisition
RepStatus	ReplicationStatus	Global-active device pair status acquisition
ReqStatus	RequestStatus	Return of command status
ResrcName	ResourceName	Acquisition of the label information of a storage system

Output character string	Full name	Operation
SA	StorageArray	Storage system addition, deletion, and information acquisition
ShrnkPoolPrgrss	ShrinkingPoolProgress	Acquisition of the progress of a DP pool shrinking task
SmrtFldr	SmartFolder	Logical group reference
SpareDrive	SpareDrive	Spare drive configuration change
SrvI	ServerInfo	Device Manager server information acquisition
SSOpt	StorageSystemOption	Option setting for each storage system
SSupervisor	StorageSupervisor	Acquisition of the storage system information that is managed by an SVP
Subscrbr	Subscriber	Event listener addition or deletion
TrngPlcy	TieringPolicy	Tiering policy change
TskStatus	TaskStatus	Task status acquisition and cancellation
URLLink	URLLink	URL Link information configuration change
User	User	User setting or reference
VLDEV	VLDEV	Addition or deletion of a virtual LDEV
VolFmtPrgrss	VolumeFormatProgress	Acquisition of the progress of normal formatting of volumes
VolMig	VolumeMigration	Migration plan setting or information acquisition
VolShred	VolumeShredding	Shredding function execution requests or information acquisition
VpfCP	VpfCapabilityProfile	Setting or referencing of the Capability profile in VASA Provider (file storage)
VpfCS	VpfCapabilitySchema	Referencing of the Capability schema in VASA Provider (file storage)
VpfH	VpfHost	Setting or referencing of VASA Provider (file storage)
VpfHS	VpfHostStatus	Referencing of the status information of VASA Provider (file storage)
VpfSA	VpfStorageArray	Referencing of NAS Platform system recognized by VASA Provider (file storage)
VpfSC	VpfStorageContainer	Setting or referencing of the storage container created in VASA Provider (file storage)

Output character string	Full name	Operation
VRpu	VResourcePartitionUnit	Changes to the configuration of the virtual resource group
VSA	VStorageArray	Acquisition of the configuration information of a virtual storage machine
VSCmplRslt	VASAComplianceResult	Acquisition of the result of the check of whether the VVols that compose the virtual machine are located in a disk area that meets the requirements
VSCpblSchm	VASACapabilitySchema	Acquisition of the Capability schema used by SPBM
VSESXHost	VASAESXHost	Registration and change of a virtualization server which the VVol is allocated to, and binding and unbinding of the VVol to or from the virtualization server
VSPE	VASAProtocolEndpoint	PE information acquisition
VSrv	VirtualizationServer	Acquisition of information about the virtualization server or VMware vCenter Server
VSSC	VASAStorageContainer	Acquisition of storage container information
VSStrgPrf	VASAStorageProfile	Acquisition of the Capability profile information and the default profile information registered to the storage container
VSVVol	VASAVirtualVolume	Creation, deletion, and change of the VVol for the virtual machine, and acquisition of information of such
VVol	VirtualVolume	DP volume setting
WWN	WorldWideName	WWN deletion
WWNForHSD	WWNForHostStorageDomain	Change in the configuration of WWNs belonging to a host group
WWNForLUN	WWNForLUN	LUN WWN configuration change
ZPRVol	ZeroPageReclaimVolume	Information acquisition about the progress of a zero page reclaim task



Note: Character strings that are not in the table might be output.

Options in message details

The table below provides the contents of options that can be output in message details.

Table 1-23 Options output in message details

Output character string	Operation
add	• If the target is Replication Adds a copy pair. • If the target is ReplicationControllerPair Adds a logical path to an existing RCU. • If the target is VResourcePartitionUnit Add a virtual LDEV to a virtual resource group.
all	• If the target is StorageArray Also acquires information on an SMI-S enabled storage system. • If the target is URLLink Also acquires the URL of the management server for an SMI-S enabled storage system.
allocatedChunks	Scans the assigned pages in the VVol, and returns them in bitmap format.
applyMonitorDataAndRelocate	Relocates tiers of HDT pools based on the I/O monitoring information applied to the S-VOL.
auto	Automatically select a PDEV when an HDP pool is created or expanded.
assign	Associates a DP pool with a DP volume.
bind	Binds the VVol to the PE assigned to the virtualization server.
bindRebindStart	Binds the VVol to another PE assigned to the virtualization server because the virtualization server started to prepare for the binding associated with the rebinding.
bulk	Creates the specified number of volumes or multiple volumes of the specified size.
cancel	Cancels the task.
capacity	Expands the VVol capacity.
changerank	Changes the tier rank of an external volume.
clone	Creates a clone of the VVol.
copydiffs	Copies the differential data between the VVol and its snapshot VVol to another snapshot.
ctg	Sets the consistency group ID.
datastore	Updates only the information about the data store capacity on the virtualization server.
default	Acquires the default profile.

Output character string	Operation
delete	• If the target is Replication Deletes a copy pair. • If the target is ReplicationControllerPair Deletes a logical path from an existing RCU. • If the target is VResourcePartitionUnit Delete a virtual LDEV from a virtual resource group.
dividebycap	Creates multiple volumes of the specified size.
dividebynum	Creates the specified number of volumes.
encrypt	• If the target is ArrayGroup Creates an encrypted parity group. • If the target is JournalPool Creates an encrypted HDP pool.
exist	Creates a DP volume in an existing virtual parity group.
expand	Expands a DM-LU.
fastclone	Quickly creates a VVol clone with a high capacity coefficient.
force	• If the target is LUSE Creates an LUSE in the logical unit defined by pre-existing paths between the corresponding volume and host group or between the corresponding volume and iSCSI target. • If the target is VirtualVolume The DP volume associated with a DP pool is disassociated from the pool and deleted. • If the target is ExternalArrayGroup Sets a volume of an external storage system that is not registered in Device Manager (an external volume). • If the target is VResourcePartitionUnit Forcibly deletes the virtual resource group to which the virtual LDEV belongs. • If the target is VpfStorageContainer Deletes the storage container of VASA Provider (file storage) even if it contains a file system that is being used. • If the target is MonitoringData Gets or applies I/O monitoring information regardless of the copy pair configuration.
forExistingSC	Returns only the information about file systems that can be selected when the storage container is being edited.
forNewSC	Returns only the information about file systems that can be selected when a storage container is being created.

Output character string	Operation
HORCMInfo	Updates only the configuration definition file information.
inband2	Operates on Thin Image copy pairs.
iSCSINameDiscard	Discards the iSCSI name that has been set.
lusekeep	Keeps the LUSE.
mapVAttr	Sets virtual LDEV information for a virtual LDEV.
mapVID	Sets a virtual device number for a virtual LDEV.
merge	Merges the WWNs or iSCSI names assigned to multiple hosts into one host.
metadata	Changes the metadata of the VVol.
move	• If the target is PResourcePartitionUnit Moves the resources of a resource group to another resource group. • If the target is VResourcePartitionUnit Moves a virtual LDEV to another virtual resource group.
nameSync:false	• If the target is JournalPool Does not apply the DP pool name to storage systems. • If the target is ObjectLabel Does not apply the volume label to storage systems.
nameSync:true	• If the target is JournalPool Applies the DP pool name to storage systems. • If the target is ObjectLabel Applies the volume label to storage systems.
noformat	Creates a logical unit without formatting.
nolabelbefore	Assumes an error if a label has already been set.
numOfLUs:*n*	Specifies the number of volumes or DP volumes to be created (indicated by *n*).
numOfPDEVs:*n*	Specifies the number of PDEVs that make up an HDP pool.
overwrite	• If the target is Host Hosts with the same name are overwritten. • If the target is ObjectLabel Deletes the current label and then sets a new label. • If the target is VResourcePartitionUnit LDEVs that have the same virtual device number are overwritten.
private	Acquires information about private logical groups.
profile	Changes the policy of the VVol.
public	Acquires information about public logical groups.

Output character string	Operation
quickformat	• If the target is LogicalUnit Creates and quick-formats a logical unit. • If the target is LogicalUnitFormat Quick-formats a logical unit.
refreshable	Returns only storage systems for which the Modify role has been set in responses.
refreshconfiguration	Updates the copy group performance information and the configuration information at the same time.
remainMigraion	Leaves the plan status of the completed plan in the storage system (SVP).
restore	Copies the data of the secondary volume to the primary volume.
resync	Copies the data of the primary volume to the secondary volume.
reverse	Reverses the relationship between the primary volume and the secondary volume, and then deletes the copy pair.
revert	Reverts data in the VVol to that at the time of acquisition of the specified snapshot.
setMode	Sets the operation mode of the virtual LDEV.
smi-s	• If the target is ObjectName Makes the name of the SMI-S enabled storage system the target. • If the target is StorageArray Makes only the SMI-S enabled storage system the target. • If the target is URLLink Makes only the URL of the management server for the SMI-S enabled storage system the target.
snapshot	Prepares for the acquisition of the VVol snapshot, and executes acquisition.
split	Splits the pair.
startMonitor	Starts performance monitoring.
startRelocation	Starts the hardware tier relocation.
stopMonitor	Stops performance monitoring.
stopRelocation	Stops the hardware tier relocation.
suspend	Creates a 3DC pair by using Universal Replicator.
takeOverWWN	Either replaces the WWN or keeps the existing WWN, because the specified WWN is the same as a WWN that is already registered.
unassign	Disassociates a DP volume from a DP pool.
unbind	• If the target is VASAESXHost:

Output character string	Operation
	Unbinds the VVol from the virtualization server. • If the target is `VASAVirtualVolume`: Unbinds the VVol from PE.
`unbindRebindEnd`	Releases the allocation of the VVol to the virtualization server because the virtualization server finished the preparation for the unbinding associated with the rebinding.
`unbindRebindStart`	On the virtualization server, starts to prepare for the unbinding associated with the rebinding.
`unmapVAttr`	Deletes the virtual LDEV information from a virtual LDEV.
`unmapVID`	Deletes the virtual device number from a virtual LDEV.
`unsharedChunks`	Scans data that is not shared between the two VVols, and returns it in bitmap format.
`update`	Modifies an existing pair configuration.
`validate:false`	Does not validate HORCM files when modifying a pair.
`validate:true`	Validates HORCM files when modifying a pair.
`waitingViewSynchro`	Returns a completion response after the database is updated.
`withoutVAttr`	Does not set virtual LDEV information for a virtual LDEV.
`withoutVID`	Does not set a virtual device number for a virtual LDEV.
`ZeroPageReclaim`	Performs zero page reclaim to release unused capacity.

Parameters in message details

The format and content of the parameters (*parameter*, above) output in message details are described below.

Parameter format 1 (nested):

<element attribute>[parameter-1 parameter-2...parameter-n]</element>

The parameters that depend on the element are output between the start and end tags of *element*. If no relevant parameters exist, no parameters are output.

Parameter format 2 (non-nested):

<element attribute/>

The following table describes the parameter information output in message details:

Table 1-24 Parameter information output in message details

Item	Description
element	A character string that indicates the element name. For information on the elements that are output and their

Item	Description
	meanings, see Table 1-25 Sequence in which attribute values are output for each element on page 1-43. However, Table 1-25 Sequence in which attribute values are output for each element on page 1-43 might not contain some displayed characters.
attribute	Format: `info='...'` Attribute values specified for the element are output. When two or more attribute values are output, they are separated by a comma (,). Each attribute value is output as a character string or a numeric value. If no corresponding attribute was specified or nothing was specified for the attribute value, no attribute value is output. If no attribute was specified or nothing was specified for attribute values, this item is not output. If an attribute value contains a single-quotation mark (') or comma (,), the quotation mark or comma is replaced with a question mark (?). For details on the sequence in which attribute values are output, see Table 1-25 Sequence in which attribute values are output for each element on page 1-43.

The table below shows the sequence in which attribute values are output for each element.

Table 1-25 Sequence in which attribute values are output for each element

Output character string	Full name and content	Sequence in which attribute values are output
`AclRel`	AclRelation (Authorization information that is formed by the relationships among the resource group, user group, and roles)	ID of the user group, object ID of the resource group
`AclRol`	AclRole (Information about the role)	Abbreviation for the role
`AclRsrcGrp`	AclResourceGroup (Information about the resource group)	<model name[#1] - serial number - ID of the resource group>, resource group name, description, object ID of the storage system, object ID of the virtual storage machine
`Alert`	Alert (Information about the error that occurred in Device Manager or the storage system)	alert number
`Alerts`	Alerts (A group of Alert elements)	--

Output character string	Full name and content	Sequence in which attribute values are output
ArrGrp	ArrayGroup (Information about the array group of the storage system)	<model name#1 - serial number - chassis number - parity group number>, number of chassis containing the parity group, parity group number, parity group RAID level, CLPR number, emulation mode, optional information for external parity group, type
ArrRsrv	ArrayReservation (Lock information of the storage system)	<model name#1 - serial number>, <model name#1 - serial number>
ArrV	ArrayValue (Element for specifying a value if the type of the parameter specified in Param is array)	Value specified in ArrayValue
ChangedItem	ChangedItem (Information about the data changed in Device Manager)	--
ChangeI	ChangeInfo (Version information of the storage system configuration)	LDEV information version, port information version, LU information version, LUSE information version, LUN information version, host mode information version, DCR information version, CVS information version, SSID information version, CHA information version
ChgCnfg	ChangedConfiguration (Information about changes in the storage system configuration)	-
ChgInf	ChangedInformation (Information about changes in the storage system configuration)	-
ChgRsc	ChangedResource (Information about storage system components whose configuration has been changed)	-
CIMIvk	CIMInvoker (Element for identifying the CIM instance)	Object path for service class whose method is executed
CommandComplete	CommandComplete (Information required by clients when the Get Request Status command is issued)	--
CommParas	CommParameters	--

Output character string	Full name and content	Sequence in which attribute values are output
	(Information about how to access the storage system)	
Comp	Component (Information about the storage system configuration)	--
Cond	Condition (Limits the results of the Get command by using the Filter elements at the same time)	LU type, element identifier of an LDEV, LDEV type, host storage status, alert source, host type, CLPR number of a journal volume, element identifier of a host, journal pool identifier, DP pool volume ID, volume accessible from the specified WWN or iSCSI name, type of LDEV, object ID of a target storage system, MCU model, serial number of an MCU, tier allocation policy for HDT volumes#4, family of the virtual storage machine, serial number of the virtual storage machine, virtual port ID, virtual host group ID, virtual device number#3, snapshot group ID, snapshot group name, type of the virtual storage machine, attribute to be returned, key of metadata, value of metadata, offset value in bytes from the beginning of the VVol for which scan is started, byte length of the area to be scanned, VVol chunk size that is used as the unit of scanning, ID of the VVol that is used as the base of comparing, storage container ID, ID of the VVol targeted by snapshot and clone operations, host ID of the target storage system, type of the default profile to be acquired, ID of the Capability profile, generation ID of the Capability profile, the target object ID, origination time of update check, target resource name, port type, the starting sequence number of resources, the number of resources, object ID of the storage system, object ID of the virtual storage machine, whether IDs (LDEV ID, domain ID of a host group, or domain ID of an iSCSI target) are assigned to resources, consistency group ID, consistency group ID of the mainframe volume, copy type#5
ConfChange	ConfigurationChange (Reports information about the configuration changes of the	user ID, notification type, serial number, product name#1, occurrence date and time, IP address

Output character string	Full name and content	Sequence in which attribute values are output
	storage system to the Device Manager server)	
ConfigChange	ConfigChange (Information about the data changed in the Device Manager server)	--
ConfigF	ConfigFile (Information about the CCI configuration file)	<host ID - HORCM instance number>
CpyGrp	CopyGroup (Copy group information)	<WWN or host ID on the P-VOL side - HORCM instance number on the P-VOL side - WWN or host ID on the S-VOL side - HORCM instance number on the S-VOL side - copy group name>
DataRetention	DataRetention (Data retention information)	--
DataRetentions	DataRetentions (LDEV data retention information)	--
DS	Datastore (Data store information)	--
ErrI	ErrorInfo (Information about the error that occurred in the storage system)	error code of the error detected in the storage system, date and time of the error detected
ErrList	ErrorList (A list including the ErrorInfo elements)	number of ErrorInfo elements
ExternalDevice	ExternalDevice (External volume information)	-
ExtPathI	ExternalPathInfo (Access information of the external storage system)	<model name[#1] - serial number - chassis number - parity group number - WWN of port for external storage system - LUN number of external LU - port ID of external port - priority>[#2] WWN of the port in the external storage system, LUN of the external volume in the external storage system, ID of the path group
ExtS	ExternalStorage	--
F	File (Information about the log file name)	Log file name

Output character string	Full name and content	Sequence in which attribute values are output
Filt	Filter (Limits the results of the Get command)	--
FreeLUN	FreeLUN (Information about the free LUNs of a host group or an iSCSI target)	--
FreeSpace	FreeSpace (Information about the free space in the parity group of the storage system)	<model name[#1] - serial number - chassis number - parity group number - free space index number within parity group>
FSys	FileSystem (File system information acquired from the Device Manager agent)	device file name, mount point, file system type, file system size, , file system usage, , , whether the file system can be deleted, whether the file system can be expanded, , , , , , , , ,
FSys	FileSystem (File system information acquired from the file server)	, , , file system size, amount of used space in the file system, file system usage, amount of free space in the file system, percentage of free space in the file system, , , EVS name related to the file system, file system status, file system label, number of mount points, label of the storage pool to which the file system belongs, minimum retention period, maximum retention period, automatic commit period, default retention period
Host	Host (Host information used by the logical volume)	<host ID>, host name, host IP address, host IP address for IPv6, host type, operation target host name, host OS type
HostI	HostInfo (Information about accesses between the LU and host)	<host name - host SCSI bus number - target ID - LU number of volume on host>, type (model) of storage system connected to host[#1], serial number of storage system connected to host, display name of HostInfo object, host IP address, host IP address for IPv6, LUN mount point, port ID, domain ID of host group or iSCSI target, device number of logical unit[#3], port WWN on an HBA, type of file system to be mounted, file system name, LUN capacity, LUN usage, iSCSI name of an iSCSI initiator
HostModeOpt	HostModeOption	--

Output character string	Full name and content	Sequence in which attribute values are output
	(Information about the host mode option)	
HostVol	HostVolume (Volume information acquired from the Device Manager agent)	device file name, vendor name, model name[#6], serial number, port number, device number[#3], identification number, host name, IP address, host IP address for IPv6, mount point, SCSI bus number, SCSI bus connection identification number, LU number, WWN of HBA node, WWN of HBA port, WWN of storage system port, file system type, file system name, volume size, volume usage, LU pair type, device file name managed by Dynamic Link Manager, number of LUN paths managed by Dynamic Link Manager, LU pair type, (Universal Replicator), number of LUN paths managed by path management software other than Dynamic Link Manager, device file name managed by path management software other than Dynamic Link Manager, iSCSI name of iSCSI initiator, inquiry host group ID (0 to 254), , , , , , , volume ID, global-active device pair type, physical model name[#6], physical port number
HostVol	HostVolume (Volume information acquired from the file server)	, vendor name, model name[#6], serial number, port number, device number[#3], , host name, IP address, host IP address for IPv6,, SCSI bus number, SCSI bus connection identification number, LU number,, WWN of HBA node, , , , volume size, volume usage, , , , , , , iSCSI name of iSCSI initiator, inquiry's host group ID (0 to 254), cluster name, host type, IP address of management server for file server, volume usage, file server type, cluster ID of the file server, , , ,
HSD	HostStorageDomain (Information about a host group or an iSCSI target)	<model name[#1] - serial number - port ID - domain ID>, port ID, domain ID, new host connection mode for host group or iSCSI target, list of new host connection modes, host connection mode options, host group name or iSCSI target name, nickname of host group or iSCSI target, name of the host group or iSCSI target to be operated on, port ID of the host group

Output character string	Full name and content	Sequence in which attribute values are output
		or iSCSI target to be operated on, domain type, iSCSI name of iSCSI target, platform, middleware, alternate path, failover, additional parameter, priority of the ALUA path
HSDID	HostStorageDomainID (Information about the ID of the host storage domain)	<unique key of the port - domain ID>
IPAddress	IPAddress (The IP address of the port controller)	--
ISCSIName	ISCSIName (iSCSI name information)	iSCSI name of iSCSI initiator, nickname of iSCSI initiator, nickname of operation target iSCSI initiator
JrnlPool	JournalPool (Journal group information)	<model name[#1] - serial number - journal pool identifier - pool ID>, name, journal pool identifier, pool ID, DP pool threshold 1, DP pool threshold 2, DP pool threshold 2 mode, journal volume inflow limit, data overflow monitoring interval (seconds), unit of remote path monitoring interval, remote path monitoring interval, transfer of remote path monitoring interval, use of cache, line speed, handling at delta resync failure, RAID level, subscription warning, subscription max, whether to generate a warning for the subscription, whether tiers exist, HDT automatic execution mode, automatic monitoring execution interval, automatic monitoring start time, automatic monitoring end time, HDT relocation monitoring mode of automatic monitoring, HDT pool I/O load information of manual monitoring, operating state of manual monitoring, start time and date of last manual monitoring executed, end time and date of last manual monitoring executed, execution state of tier relocation of manual monitoring, progress of tier relocation of manual monitoring, monitoring information used for tier relocation of manual monitoring, number of HDT pool tiers, replication depletion warning threshold, replication data release threshold, whether the volume is operable when the over provisioning limit is exceeded, tier

Output character string	Full name and content	Sequence in which attribute values are output
		relocation speed for HDT pools, whether to protect DP volumes if I/O to those volumes fails because the DP pool is full (whether to change to Protect attribute), whether to protect DP volumes if I/O to those volumes fails because the DP pool volume is blocked (whether to change to Protect attribute), whether active flash is enabled or disabled
JrnlPoolDriveAttr	JournalPoolDriveAttr (Information about drive attributes of the DP pool volume)	-
JrnlPoolTier	JournalPoolTier (HDT pool tier information)	<model name[#1] - serial number - journal pool identifier - pool ID - tier identifier>, tier identifier, buffer space for new page assignment, buffer space for tier relocation
LDEV	LDEV (Information about the LDEV)	<model name[#1] - serial number - LDEV device number[#3]>, LBA of the LDEV, CLPR number, stripe size, tier allocation policy for HDT volumes[#4], number of chassis containing the parity groups to be used to expand the DM-LUs, number of parity groups to be used to expand the DM-LUs, whether the tier of an HDT volume[#4] has been relocated, information about the HDT volume to which new pages are assigned according to the tier allocation policy, prioritized-relocation specification information, whether to reserve pages for the DP volume capacity from a DP pool, whether the ALUA attribute is enabled or disabled, whether the T10 PI attribute is enabled or disabled
LDKC	LogicalDKC (Logical DKC of the storage system)	--
LGrp	LogicalGroup (Groups together hosts, volumes, or other logical groups.)	<logical group ID>, name, description, <element identifier of logical group of parent group>, operation target logical group name, parent logical group name
LicenseKey	LicenseKey (Key code required to make the program available)	<model name[#1] - serial number - LicenseKeyID>

Output character string	Full name and content	Sequence in which attribute values are output
LogSet	LogSettings (The following settings and information items that are set for the storage system: syslog settings for the audit log, information related to FTP settings, and information related to SNMP settings for alerts.)	-
LU	LogicalUnit (Information that represents the LU)	<model name[#1] - serial number - logical device number[#3]>, number of LDEV contained in a logical unit[#3], volume size, emulation mode, default number of port controllers, whether the LU is used as a command device, whether command device security is set, whether user authentication mode is set when the LU is used as a command device, whether the device group definition is set when the LU is used as a command device, DP pool volume ID, DP pool threshold, whether the LU is a Differential Management LU, tier rank of external volumes
LVol	LogicalVolume (Logical volume information)	name, size, whether the logical volume can be deleted, whether the logical volume can be expanded, logical volume type
MFRepI	MFReplicationInfo(Information about replication of mainframe volumes)	<PVOL serial number - PVOL LDEV number[#3] - SVOL serial number - SVOL LDEV number[#3]>, P-VOL storage system type[#1], serial number of the storage system to which P-VOL belongs, P-VOL device number[#3], port number in the HORCM configuration file that manages P-VOL paths, S-VOL storage system type[#1], serial number of the storage system to which S-VOL belongs, S-VOL device number[#3], port number in the HORCM configuration file that manages S-VOL paths, pool ID to which S-VOL belongs, copy type[#5], copy status, P-VOL MU number, P-VOL fence level, consistency group ID of the mainframe volume
MFVolI	MFVolumeInfo (Access information between the main frame host and LDEV)	--

Output character string	Full name and content	Sequence in which attribute values are output
MntrDt	MonitorData (I/O monitoring information)	transfer information about HDT volumes, session data of I/O monitoring information, whether acquisition of I/O monitoring information is successful
MountPoint	MountPoint (Mount point information)	name, protocol, directory path, shared capacity, amount of space used in shared capacity, shared capacity usage, CIFS share name
Msg	Message (Asynchronous message)	--
Msgs	Messages (Groups the Message elements)	Wait time (seconds)
ObjLabel	ObjectLabel (Sets the object label of the Device Manager server)	Object ID, label to give to the object
ObjName	ObjectName (Sets the object name of the Device Manager server)	<target element name - target element identifier>, name *Caution:* <target element name> and <target element identifier> indicate the element name and element identifier other than those specified for the ObjectName attribute. For information on the component corresponding to the element identifier, see the attribute value output sequence for <target element name>.
PgMntrDt	PageMonitorData (I/O monitoring information per page)	page number, I/O monitoring read information, I/O monitoring write information, I/O monitoring information for sequential data, weighted average of I/O monitoring information (short period), weighted average of I/O monitoring information (long period), data guarantee code of I/O monitoring information
PairedJrnlPool	PairedJournalPool (The journal pool paired with the journal pool of Universal Replicator)	<model name[#1] - serial number - journal group identifier - pool ID - MU number >[#2], MU number, initial copy transmission rate
PairedPortController	PairedPortController (CHIP paired on the NAS configuration)	--

Output character string	Full name and content	Sequence in which attribute values are output
PairedVol	PairedVolume (Information about the volume that is paired with HostVolume)	Replication operation type[#5], volume type, serial number of volume device, model of volume device[#1], logical device number of volume[#3], pair status, fence level, MU number of P-VOL corresponding to paired S-VOL
Para	Parameter (A pair of the name and value)	parameter name, parameter value[#1]
PArrGrp	PArrayGroup (Information about parity groups in resource groups)	chassis number, parity group number
Part	Partition (Partition information)	name, volume group name, capacity of the partition
Path	Path (Information about the path between the host and host group or between the host and iSCSI target)	<model name[#1] - serial name - port ID - domain ID - logical device number[#3]>, name, port ID, domain ID of host group or iSCSI target, name of the host group or iSCSI target to be operated on, SCSI ID, LUN assigned to the path between the host and host group or between the host and iSCSI target, device number for logical unit identification[#3], port ID of the host group or iSCSI target to be operated on, ID of the host group or iSCSI target to be operated on, nickname of the host group or iSCSI target to be operated on, operation target device number[#3]
PDEV	PDEV (Information about PDEV)	<model name[#1] - serial number - PDEV ID>, drive type, drive size, form factor
PHSD	PHostStorageDomain (Information about host groups in the resource group)	port ID, host group ID
PLDEV	PLDEV (Information about LDEVs in the resource group)	LDEV device number
Port	Port (Information about the port)	<model name[#1] - serial number - port ID>, Fibre Channel port address, Fibre Channel topology, availability of LUN security for an iSCSI port, iSCSI port options, channel speed, SCSI port IP address, port subnet mask, iSCSI port gateway IP address, iSCSI

Output character string	Full name and content	Sequence in which attribute values are output
		port number, keep alive time, iSCSI port attribute, IPv6 status, link-local address setting type, link-local address, global address setting type, global address 1, global address 2, IPv6 gateway address, MTU settings, VLAN status, VLAN ID, Window Scale, whether the Selective ACK mode is enabled or disabled, whether the Delayed ACK mode is enabled or disabled, values set for the Window Scale Option
PortCtrl	PortController (Information about the port controller of the storage system)	<model-name[#1] - serial number - port controller ID>, mode
PPort	PPort (Information about the port in the resource group)	port ID
Prm	Param (Element for specifying the parameter for the method specified by CIMInvoker)	Name of the parameter for the method to be executed, the type of the value specified by this parameter, the value specified by the parameter
PRpu	PResourcePartitionUnit (Resource group configuration change)	<model name[#1] - serial number - ID of the resource group>
QrmDsk	QuorumDisk (Information about the quorum disk)	<model name[#1] - serial number - quorum disk ID>, the quorum disk ID, the device number[#3] of the quorum disk, the family of the other storage system that shares the quorum disk, the serial number of the other storage system that shares the quorum disk
RDArrGrp	RelatedDistributedArrayGroup	--
RepCon	ReplicationConnection (Information about communication between the MCU and RCU)	MCU-side port name, RCU-side port name, IP address of the iSCSI port on the RCU-side, iSCSI port number on the RCU-side
RepCtrlPair	ReplicationControllerPair (Information about MCU and RCU)	<MCU model - serial number of MCU model - CU number of MCU - ArrayFamily of RCU - serial number of RCU device - SSID of RCU, path group ID of RCU>, MCU model, serial number of MCU, CU number of MCU, RCU model, serial number of RCU, SSID of RCU, CU number of RCU, pair type, path group ID of RCU, line bandwidth

Output character string	Full name and content	Sequence in which attribute values are output
RepGrp	ReplicationGroup (Information about the HORCM instance group)	<replication group ID>, name of copy group used by CCI, host ID of host that recognizes P-VOL, instance number of HORCM instance that manages P-VOL, port number of HORCM instance that manages P-VOL, host ID of host that identifies S-VOL, instance number of HORCM instance that manages S-VOL, port number of HORCM instance that manages S-VOL, copy type[#5], P-VOL fence level, copy pace, quorum disk ID, consistency group ID
RepI	ReplicationInfo (Information about replication)	<PVOL serial number - PVOLLDEV number[#3] - SVOL serial number - SVOLLDEV number[#3]>, name of copy pair used by CCI, type of P-VOL storage system[#1], serial number of storage system containing P-VOL, P-VOL device number[#3], port number in the HORCM configuration file that manages P-VOL paths, serial number of storage system containing P-VOL in the HORCM configuration file, P-VOL device number in the HORCM configuration file, ID of pool that contains P-VOL, type of S-VOL storage system[#1], serial number of storage system containing S-VOL, S-VOL device number[#3], port number in the HORCM configuration file that manages S-VOL paths, serial number of storage system containing S-VOL in the HORCM configuration file, S-VOL device number in the HORCM configuration file, ID of pool that contains S-VOL, copy type[#5], MU number of P-VOL, P-VOL fence level, copy pace, pool ID of DP pool for P-VOL management data, pool ID of DP pool for S-VOL management data, snapshot group ID, quorum disk ID, consistency group ID
RepPrfmncPrmtrs	ReplicationPerformanceParameters (information related to obtaining performance information for Universal Replicator)	<WWN or host ID on the P-VOL side - HORCM instance number on the P-VOL side - WWN or host ID on the S-VOL side - HORCM instance number on the S-VOL side - copy group name>, host name, HORCM instance number, copy group name, start date and time of obtaining the performance information, end date

Output character string	Full name and content	Sequence in which attribute values are output
		and time of obtaining the performance information.
ReqStatus	RequestStatus (Returns the status of the preceding request)	message ID
RPort	RelatedPort (Port whose attribute is changed when the attribute of another port is changed)	--
RSIMI	RSIMInfo (RSIM information of the storage system)	RSIM ID of RSIM information
RsltObj	ResultObject (A single row in a list displayed by the ListView elements)	--
SA	StorageArray (Storage system information)	<model name[#1] - serial number>
SIMI	SIMInfo (SIM information of the storage system)	SIM ID of SIM information
SizeCond	SizeCondition (Conditions for specifying the number within SearchCondition)	number of records to be skipped from the beginning, number of records to be acquired
SlctCond	SelectCondition (Element for which the SelectItem elements were collected)	conditional operator used to concatenate conditions represented by subordinate SelectItem elements
SlctItem	SelectItem (Filtering conditions within SearchCondition)	filtering condition key value, operator indicating relationship between key attribute and value attribute, filtering condition value[#1]
SmrtFldr	SmartFolder (Information about a logical group)	<logical group ID>, logical group path
SortCond	SortCondition (Element for which SortItems were collected)	--
SortItem	SortItem (Sorting conditions within SearchCondition)	column name used as sort key, sort order, sort priority
SPool	StoragePool	label, storage pool capacity, amount of used space in the storage pool,

Output character string	Full name and content	Sequence in which attribute values are output
	(Storage pool information)	storage pool usage, amount of free space in the storage pool, percentage of free space in the storage pool, number of system drives that belong to the storage pool, storage pool status
SrchCond	SearchCondition (Search conditions for acquiring ListView)	--
SrcHost	SourceHost (Information about the migration source host)	host ID, host name
SrvI	ServerInfo (Information about the Device Manager server)	--
SsGrp	SnapshotGroup (Information about the snapshot group)	<model name[#1] - serial number - snapshot group ID>, storage system type, serial number, snapshot group ID, snapshot group name, type of operation to be performed on the copy pair[#5], consistency group ID
SSOpt	StorageSystemOption (Information about the options set for the storage system)	option name, option value
SsSummary	SnapshotSummary (Information about Copy-on-Write Snapshot P-VOL)	--
SSupervisor	StorageSupervisor (SVP information)	IP address of the SVP, family of the storage system that is managed by the SVP, displayed family name of the storage system that is managed by the SVP, port number of the RMI registry for the SVP
Subscrbr	Subscriber (Report plan topic)	--
SysDrv	SystemDrive (System drive information)	system drive identification number, system drive label, whether the system drive can be accessed, system drive status, location to which the system drive is mirrored, status of the location to which the system drive is mirrored, label of the storage pool to which the system drive belongs
TargetPort	TargetPort (External storage system port)	WWN of the port for the external storage system

Output character string	Full name and content	Sequence in which attribute values are output
Timestamp	Timestamp (Time when the message was created in the Device Manager server)	--
Topic	Topic (Name of the message topic)	report information
TrngPlcy	TieringPolicy (Tiering policy information for HDT volume[#4])	<model name[#1] - serial number - tiering policy ID>,tiering policy name, maximum capacity threshold for tier 1, minimum capacity threshold for tier 1, maximum capacity threshold for tier 3, minimum capacity threshold for tier 3
TskStatus	TaskStatus (Task status information)	Task ID
URLLink	URLLink (Links between a Hitachi Command Suite object and an application)	<related element identifier - ID>, URL required to launch application or Web page, application name, <link-destination related element identifier - link-destination ID>, description, file server host name
User	User (Account information of a single user of Device Manager)	user ID, name of the resource group that is associated with the user, permissions for the resource group that is associated with the user, user name, description
VD	VirtualDisk (Virtual drive information)	-
VHSD	VHostStorageDomain (Information about the virtual host storage domain)	-
VLDEV	VLDEV (Information about the virtual LDEV)	<model name[#1] - serial number - ID of the virtual resource group - device number[#3]>, device number[#3], virtual device number[#3], virtual emulation type, virtual SSID, number of virtual LUSE components, whether virtual CVS is set, operation mode of the virtual LDEV
VM	VM (Virtual machine information)	-
VolCon[#2]	VolumeConnection (Information about the assigned LDEV and the corresponding external LU)	<model name of assigned LU[#1] - device serial number of assigned LU - device number of assigned LU[#3]>

Output character string	Full name and content	Sequence in which attribute values are output
VolFmtPrgrss	VolumeFormatProgress (Progress of normal formatting of the volume)	--
VolGrp	VolumeGroup (Volume group information)	type, name, volume group capacity, number of drives that belong to the volume group
VolID	VolumeID (Information about the volume ID)	<unique key of the storage system - device number of the LDEV>
VolMig	VolumeMigration (Information about the migration plan)	<model name[#1] - serial number - source LDEV number[#3] - target LDEV number[#3]>, owner ID of the user who performs migration, source device number[#3], target device number[#3]
VolShred	VolumeShredding (Information about the shredding function)	shredding owner ID
VpfC	VpfCapability (Information about the Capability profile or Capability that is associated with the file system)	Name, value
VpfCAV	VpfCapabilityAllowedValue (Information about values that VpfCapabilityDeclaration can take)	--
VpfCD	VpfCapabilityDeclaration (Capability definition information in the Capability schema)	--
VpfCP	VpfCapabilityProfile (Information about the Capability profile that is set in VASA Provider (file storage))	<VASA Provider (file storage) ID - resource ID>, name, description, object ID of the related file system
VpfCS	VpfCapabilitySchema (Information about the Capability schema that is in VASA Provider (file storage))	<VASA Provider (file storage) ID - resource ID>
VpfFS	VpfFileSystem (File system information of NAS Platform recognized by VASA Provider (file storage))	<VASA Provider (file storage) ID - resource ID>
VpfH	VpfHost (Information about VASA Provider (file storage))	<VASA Provider (file storage) ID>, name, IP address

Output character string	Full name and content	Sequence in which attribute values are output
VpfSA	VpfStorageArray (Information about NAS Platform recognized by VASA Provider (file storage))	<VASA Provider (file storage) ID - resource ID>
VpfSC	VpfStorageContainer (Information about a storage container created in VASA Provider (file storage))	<VASA Provider (file storage) ID>, name, description
VpfSP	VpfStorageProcessor (Information about NAS Platform nodes recognized by VASA Provider (file storage))	--
VPort	VPort (Virtual port information)	--
VRpu	VResourcePartitionUnit (Information about the virtual resource group)	<model name[#1] - serial number - ID of the virtual resource group>, resource group name, type of the virtual storage machine, family of the virtual storage machine, serial number of the virtual storage machine
VSA	VStorageArray (Configuration information of the virtual storage machine)	<family of the virtual storage machine or type of the virtual storage machine[#1] - serial number of the virtual storage machine>, resource group name
VSCmplRslt	VASAComplianceResult (Information about the result of the compliance check)	--
VSCnstInst	VASAConstraintInstance (Information about instances for Capability constraints)	--
VSCpblCnst	VASACapabilityConstraints (Capability constraint information)	--
VSCpblId	VASACapabilityId (Capability ID information)	Capability ID, namespace
VSCpblInst	VASACapabilityInstance (Capability instance information)	--
VSCpblSchm	VASACapabilitySchema (Capability schema information)	Capability schema name
VSESXHost	VASAESXHost (Virtualization server information)	GUID of the target host

Output character string	Full name and content	Sequence in which attribute values are output
VSPE	VASAProtocolEndpoint (Protocol endpoint information)	ID of the PE, ID with an in-band response
VSPropInst	VASAPropertyInstance (Capability profile information)	Capability key, value, model name
VSRngVal	VASARangeValue (Information about the range of values specified when the Capability profile is created)	Maximum and minimum values of Capability, model name
VSSbProf	VASASubProfile (Capability subprofile information)	Capability subprofile name
VSSC	VASAStorageContainer (Storage container information)	ID of the storage container
VSSetVal	VASASetValue (Information about the values specified when the Capability profile is created)	Value, model name
VSStrgPrf	VASAStorageProfile (Capability profile information)	Capability profile name, profile ID, user ID of the creator, date and time when the Capability profile object was created, object details, revision number of the Capability profile, ID of the user who last changed the Capability profile, last update date and time
VSVVol	VASAVirtualVolume (VVol information)	ID of the VVol, size (MB) of the VVol, type of the VVol, VVol ID with an in-band response
VSVVolMtdt	VASAVirtualVolumeMetadata (VVol metadata information)	metadata key, metadata value
VSrv	VirtualizationServer (Information about the virtualization server)	--
VSrvMan	virtualizationservermanager (Information about VMware vCenter Server)	--
WritingPattern	WritingPattern (Writing pattern information for a single writing)	writing pattern used when shredding is specified
WritingPatterns	WritingPatterns (All writing pattern information of a single VolumeShredding)	--

Output character string	Full name and content	Sequence in which attribute values are output
WWN	WorldWideName (Host HBA information)	WorldWideName, nickname, operation target host group name, WorldWideName

Legend:

--: No attribute value is output

<...>: An element identifier that represents an attribute. If the contents include multiple elements, they are concatenated by a hyphen (-).

#1:

This information is output as the storage system model, and is the common output name indicated in Table 1-26 Common output names for storage system models on page 1-62.

#2:

This information is output as the ObjectName element <target element identifier>. <target element identifier> is not output as the element attribute.

#3:

For VSP G1000, VSP Gx00 models, VSP Fx00 models, Virtual Storage Platform, Universal Storage Platform V/VM and HUS VM storage systems, a numerical value that is a combination of the LDKC, CU, and LDEV numbers (*LDKC* **x** 65536 + *CU* **x** 256 + *LDEV*) is output.

For Hitachi USP, a numerical value that combines the CU and LDEV numbers (= *CU* x 256 + *LDEV*) is output.

For HUS100, Hitachi SMS, and Hitachi AMS/WMS, the LU number is output.

#4:

The virtual volume is created from the HDT pool (associated with HDT pool).

#5:

The replication operation type attribute is represented by the common output name indicated in Table 1-27 Common output names for replication operation type attributes on page 1-63 when it is output.

#6:

This information is output as the storage system model, and is the common output name indicated in Table 1-28 Common output names for storage system models (when RaidID is output) on page 1-63.

Table 1-26 Common output names for storage system models

Common output name	Applicable storage system model
D700	Hitachi AMS/WMS

Common output name	Applicable storage system model
D800	Hitachi AMS2000
D850	HUS100
HM700	HUS VM
HM800	VSP Gx00 models or VSP Fx00 models
R500	Hitachi USP
R600	Universal Storage Platform V/VM
R700	Virtual Storage Platform
R800	VSP G1000
S800	Hitachi SMS

Table 1-27 Common output names for replication operation type attributes

Common output name	Applicable product
Local Copy	ShadowImage
Local Copy for Mainframe	ShadowImageForMF
Remote Copy (Async)	TrueCopy Async
Remote Copy (Async) for Mainframe	TrueCopyAsyncForMF
Remote Copy (Ha)	GlobalActiveDevice
Remote Copy (Jrnl)	Universal Replicator
Remote Copy (Jrnl) for Mainframe	UniversalReplicatorForMF
Remote Copy (Sync)	TrueCopy Sync
Remote Copy (Sync) for Mainframe	TrueCopySyncForMF
SnapShot	Copy-on-Write Snapshot
SnapShot (Fast)	Thin Image

Table 1-28 Common output names for storage system models (when RaidID is output)

Common output name (RaidID)	Applicable storage system model
71	Hitachi WMS 100
73	Hitachi AMS 200
75	Hitachi AMS 500
77	Hitachi AMS 1000
81	Hitachi SMS 100

Common output name (RaidID)	Applicable storage system model
82	Hitachi SMS 110
83	Hitachi AMS2100
85	Hitachi AMS2300
87	Hitachi AMS2500
91	HUS110
92	HUS130
93	HUS150
HM70	HUS VM
HM82	VSP G200
HM84	VSP G400, VSP G600, VSP F400 or VSP F600
HM86	VSP G800 or VSP F800
R500	Hitachi USP 100, Hitachi USP 600 or Hitachi USP 1100
R501	Hitachi NSC 55
R600	Universal Storage Platform V
R601	Universal Storage Platform VM
R700	Virtual Storage Platform
R800	VSP G1000

Correlation between user operations and Tiered Storage Manager CLI audit log data

This section describes what audit log data is output as a result of operations that a user performs in Tiered Storage Manager CLI.

Procedure

1. Extract the audit log data output by Tiered Storage Manager (data where the program name is `TSMgr`).

   Audit log data created by executing CLI commands is output by Tiered Storage Manager and has the `TSM_CLI` application identifier information.

   When multiple users are accessing Tiered Storage Manager at the same time, you can perform filtering by the user IDs that are output to *subject-identification-information*.
2. To determine the CLI command used, compare the details of the output audit log data with the contents of Table 1-29 CLI commands and corresponding audit log data on page 1-65 and look for a matching pattern.

Except for commands starting with `Get`, you can identify user-executed commands by examining the audit log data that has an *Y* in the *key* column.

Table 1-29 CLI commands and corresponding audit log data

CLI command	Key#1	OpName#2	ResName#2	Additional information#2	Note
AddVolumeToMigrationGroup	Y	Add	VL	SD, MG, VL	--
	--	Get	MG	SD, MG	--
	--	Get	SD	SD	--
	--	Get	VL	SD, NumVL	--
CancelTask	Y	Cancel	TK	TK	--
CreateLockingTask	Y	Create	TK	TK, SD, MG, NumVL, VLs	TK=(*id*, 2,...)
	--	Execute	TK	TK	--
	--	Get	TK	TK	--
CreateMigrationGroup	--	Get	SD	SD	--
	Y	Create	MG	SD, MG	--
CreateMigrationPlan	--	Get	ST	SD, NumST, [STs]	--
	Y	Create	MP	SD, MG, ST	--
CreateMigrationTask	Y	Create	TK	TK, SD, MG, ST, NumVP, VPs	TK=(*id*, 0,...)
	--	Execute	TK	TK	When --execute is specified
	--	Get	TK	TK	When --execute is specified
CreateShreddingTask	Y	Create	TK	TK, SD, MG, NumVL, VLs	TK=(*id*, 4,...)
	--	Execute	TK	TK	When --execute is specified

CLI command	Key#1	OpName#2	ResName#2	Additional information#2	Note
	--	Get	TK	TK	When --execute is specified
CreateStorageDomain	Y	Create	SD	SD, SS	--
CreateStorageTier	--	Get	SD	SD	--
	Y	Create	ST	SD, ST	--
CreateUnlockingTask	Y	Create	TK	TK, SD, MG, NumVL, VLs	TK=(*id*, 3,...)
	--	Execute	TK	TK	When --execute is specified
	--	Get	TK	TK	When --execute is specified
DeleteMigrationGroup	--	Get	MG	SD, MG	--
	Y	Delete	MG	MG	--
DeleteStorageDomain	--	Get	SD	SD	--
	Y	Delete	SD	SD	--
DeleteStorageTier	--	Get	ST	SD, ST	--
	Y	Delete	ST	SD, ST	--
DeleteTasks	--	Get	TK	{TK | NumTK}	When --force is not specified
	Y	Delete	TK	{TK | NumTK, TKs}	--
ExecuteTask	Y	Execute	TK	TK	--
GetFreeSpaces	--	Get	SS	NumSS	--
	--	Get_num	FS	SS, NumFS	Only acquires the number of storage systems specified in the subsystem name parameter

CLI command	Key[#1]	OpName[#2]	ResName[#2]	Additional information[#2]	Note
	Y	Get	FS	SS, NumFS	Only acquires the number of storage systems specified in the subsystem name parameter
GetMigrationGroups	Y	Get	MG	SD, NumMG, [MGs]	--
GetPools	--	Get_num	PO	NumPO	--
	--	Get	SD	SD	--
	Y	Get	PO	SD, NumPO	--
GetStorageDomains	Y	Get	SD	NumSD, [SDs]	--
	--	Get	RS	NumSD, SDs	--
GetStorageTiers	Y	Get	ST	SD, NumST, [STs]	--
	--	Get	SD	SD	--
GetTasks	Y	Get	TK	{TK | NumTK}	--
GetVolumes	--	Get_num	VL	NumVL	--
	--	Get	SD	SD	Acquires information on 10,000 volumes at a time
	Y	Get	VL	SD, NumVL	Acquires information on 10,000 volumes at a time
ModifyMigrationGroup	--	Get	MG	SD, MG	--
	Y	Modify	MG	SD, MG	--
ModifyStorageDomain	--	Get	SD	SD	--

CLI command	Key#1	OpName#2	ResName#2	Additional information#2	Note
	Y	Modify	SD	SD	--
ModifyStorageTier	--	Get	ST	SD, ST	--
	Y	Modify	ST	SD, ST	--
ModifyTask	--	Get	TK	TK	--
	Y	Modify	TK	TK	--
Refresh	--	Get_summary	SD	NumSD	When storage domain names have been specified
	Y	Refresh	SD	SD	--
RemoveVolumeFromMigrationGroup	--	Get_summary	SD	SD	--
	--	Get	MG	SD, MG	--
	--	Get	VL	SD, NumVL	--
	Y	Remove	VL	SD, MG, VL	--
StopTask	Y	Change	TK	TK	opt = 0x02040000 or 0x02050000

Legend:

Y: Main key

--: Not applicable

#1

Indicates key audit log data for determining the command.

#2

For details, see Table 1-15 Items output to the audit log message text (message text, operation type and operation target) on page 1-25 through Table 1-19 Meanings of the operation targets (Res) output to the audit log on page 1-32.

2

VSP G1000 audit logs

Audit logs are created on the Service Processor (SVP) computer in the storage system. You can access the audit logs that are output by the SVP, but the SVP is accessible only by support personnel.

- Overview
- Audit Log file description
- Audit log file format
- Log output formats for different versions
- Syslog file format

Overview

The audit log is an important tool that you can use to keep track of operations, to monitor security, to investigate the cause of errors, and to avoid potential errors.

Audit logs are created on the SVP computer in the storage system. You can access the audit logs that are output by the SVP, but the SVP is accessible only by support personnel.

Audit logs store the following histories:

- Operations performed from a Device Manager - Storage Navigator computer or an SVP.
- Commands that the storage system received from a host, a computer using CCI, or a host using Business Continuity Manager.
- Operations and events about encryption keys for data encryption.

The history may not be output in chronological order. This history includes the user, the time of the operation, the name of the operation, any parameters set, and the end result (normal completion or error message). Each audit log file ends with a serial number, from 0,000,000,000 to 4,294,967,295. When the number reaches 4,294,967,295, it resets and starts over at 0,000,000,000.

There are two types of audit log files:

- **Audit log file**, which consists of two files:
  - Auditlog information file 1 contains operations performed from the Device Manager - Storage Navigator computer or SVP, and operations about encryption keys.
  - Auditlog information file 2 contains commands sent from a host, a computer using CCI, or a host using Business Continuity Manager, and events about encryption keys.

  You can download them to your management client or transfer to a primary or secondary FTP server.
- **Syslog file.** This file contains the audit log. You can download it to your management client or transfer it to a primary or secondary syslog server.

  The syslog file has two types of formats: RFC3164-compliant and RFC5424-compliant. You can select either of the formats when downloading syslog files and transferring syslog files to syslog servers.

Features

The audit log feature stores a history of all operations performed on a computer using the Device Manager - Storage Navigator feature. This history includes the user, the time of the operation, the name of the operation, any parameter set, and the end result (normal completion or error message). The audit log file records until full and then starts over, rerecording from the beginning of the file.

Audit Log file description

The following table describes the audit log file components:

Table 2-1 Audit Log File Components

Component	Audit Log File	Syslog File
File Type	Text format. Auditlog information file 1 Auditlog information file 2 Files are compressed in tgz format.	Text format. In syslogYYYYMMDD.tgz, there are syslog-svp.log (audit log file for SVP) and syslog-dkc.log (audit log file for DKC).
Downloaded File Name	audit-SVPYYYYMMDD.tgz or audit-DKCYYYYMMDD.tgz where YYYY = year MM = month DD = day The file name can be changed when downloading.	syslogYYYYMMDD.tgz where YYYY = year MM = month DD = day The file name can be changed when downloading.
File Name Transferred to the FTP Server	Audit-SVPSSSSSYYYYMMDDHHMMSS.tgz or Audit-DKCSSSSSYYYYMMDDHHMMSS.tgz where SSSSS = serial number YYYYMMDD = date of the transfer HHMMSS = hour (HH), minute (MM) and second (SS) of the transfer The output folder must be specified in the FTP tab on the Edit Audit log Settings window.	N/A
Linefeed Codes	CR + LF The standard linefeed codes for Windows. Some text editors cannot display these codes correctly.	LF The standard linefeed codes for UNIX. Some text editors cannot display these codes correctly.
File Output	Contains login and logout information as well as basic and detailed information about settings made for each option. • Basic information consists of information common to each audit log. • Detailed information consists of information about the operations of each executed option. This includes an index	Contains the same information as released to the audit log file. However the output format differs between the audit log file and syslog file. (some items are output to the syslog file only.)

Component	Audit Log File	Syslog File
	representing each item and its values.	
Maximum Line Size	1,024 bytes	1,024 bytes
Maximum Number of Lines	250,000 lines	250,000 lines
Maximum Size of Files	122.5 MB	488.2 MB
When Reaching the Maximum Number of Lines	The newest data overwrites the oldest data (wrap around).  is shown on the Device Manager - Storage Navigator main window.	The newest data overwrites the oldest data (wrap around). Also, the following log is output in the syslog file. • [AuditLog], Over MaxLine
Threshold of the Maximum Number of Lines and When Reaching Threshold	The threshold value is 70% (175,000 lines) of the maximum number of lines. • If the audit log information reaches the threshold, a warning message urging you to download the audit log file appears when you log in Device Manager - Storage Navigator. Also,  is shown on the Device Manager - Storage Navigator main window. • If you set to transfer files to an FTP server, the audit log file will be automatically transferred to the FTP server when the information stored in the audit log file reaches the threshold. • Once you download or transfer the audit log file, the counter is reset and monitoring will start from 0% again.	The threshold value is 70% (175,000 lines) of the maximum number of lines. When the audit log information reaches the threshold, the following log is output in the syslog file. • [AuditLog], Over Threshold If this log is output, download the file as necessary before old information is overwritten. Once you download the file, the counter is reset and monitoring will start from 0% again.

Audit log file format

The following figures show sample audit log files:

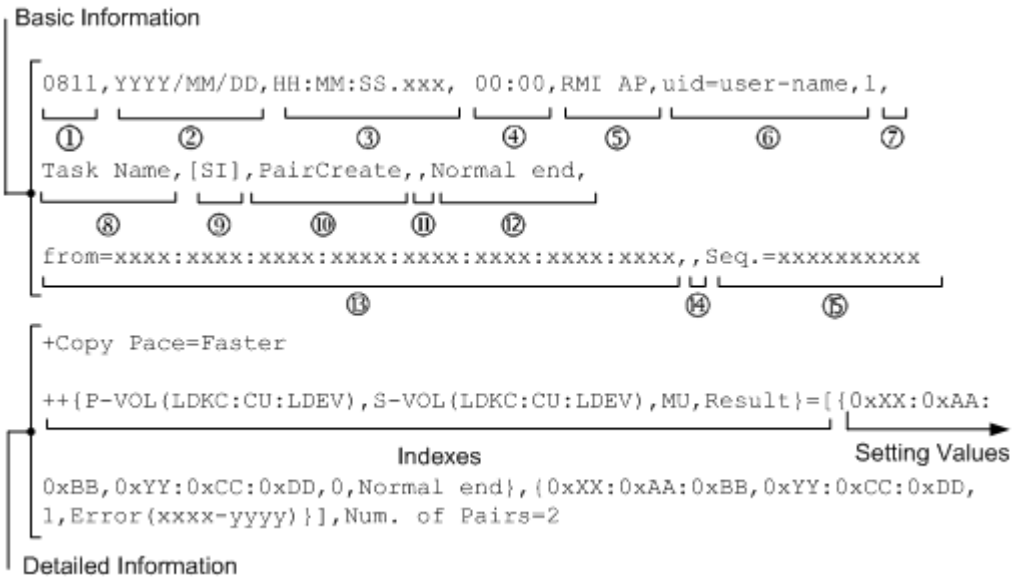


Figure 2-1 Audit Log File 1 (SVP)

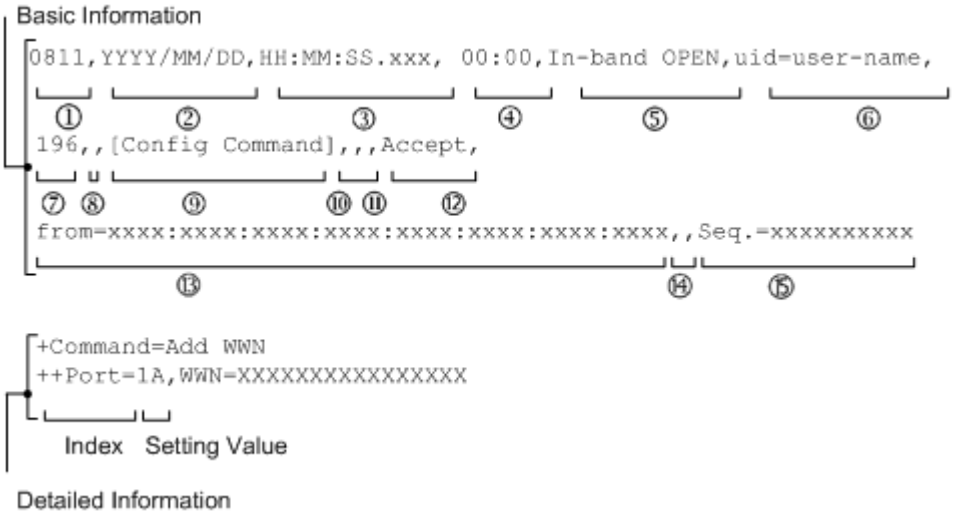


Figure 2-2 Audit Log File 2 (DKC)

Basic Information

Each item output in the audit log information file is delimited by commas (,).

Table 2-2 Basic Information in Audit Log File

No.	Item	File 1 (SVP)	File 2 (DKC)
①	Version	XXYY indicates the model name (XX) and the version number in audit log output format (YY). When the output format is changed, the value of YY is updated.	Same as File 1.

No.	Item	File 1 (SVP)	File 2 (DKC)
		See Table 2-3 Format changes for each version number on page 2-10 for the changed contents of XXYY.	
②	Date	YYYYMMDD indicates the year, month, and day the audit log was created. A date and a time being set on the SVP are output as log data. If a failure, such as an SVP failure and a LAN failure, occurs in the storage system, the data and the time may be output of the accumulated date and time since January 01, 1970.	Same as File 1.
③	Time	HH:MM:SS.xxx indicates the hour, minute, second, and millisecond the audit log was created.	Same as File 1.
④	Time zone	The time difference between Coordinated Universal Time (UTC) and the local time displays as "±HH:MM" (HH: hour, MM: minute). For example; "+09:00", "-08:00", "00:00"	Same as File 1.
⑤	Interface	• RMI AP indicates the log for Device Manager - Storage Navigator and Remote Method Invocation Applications such as Hitachi Command Suite (HCS). • SVP indicates the log for the SVP. • RM AP indicates the log for Remote Maintenance Application.	• In-band OPEN: Logs for commands received from open-system hosts, or FC-SP authentication logs • In-band MF: Logs for commands received from mainframe-system hosts • Out-of-band: Logs for commands received from computers using CCI • No output for the event logs about encryption keys.
⑥	Login user Name	• A user name is output for Device Manager - Storage Navigator, RMI AP or SVP operations. • <System> is output when the storage system detects the failure. • No output for RM AP operations.	• A user name is output for commands received by a command device for authentication. • <Host> is output for other operations. • <system> is output for the event about encryption keys.
⑦	Connection number	• 0 - 161 indicate Device Manager - Storage Navigator or SVP connection ID.	• 195 - 706 indicate a connection number assigned when a command device for

No.	Item	File 1 (SVP)	File 2 (DKC)
		• 162 - 193 indicate Hitachi Command Suite and RMI AP connection ID. • 194 indicates SMI-S(RMI) connection ID. • No output for RM AP operations. • No output when the login user name is <System>.	authentication received the command. • No output for other operations.
⑧	Task name	Task name specified when a task is registered. No task name is output when a user performs operations using the Device Manager - Storage Navigator secondary window.	No output.
⑨	Function name	The abbreviation indicating the function that performed the operation. • Maintenance window name is output for SVP operations.	• User Auth indicates an user authentication command. • FC-SP indicates a device authentication command. • Config Command indicates a configuration changing command. • [ENC] is output for the event about encryption keys.
⑩	Operation or event name	The operation or event name.	The following items are output only when Function name is User Auth. No output for other operations. • Login indicates that a log-in command is received. • Logout indicates that a log-out command is received. The event name is output when the function name is [ENC].
⑪	Parameters	Parameters for certain functions.	No output.
⑫	Result	The result of your operation. • Normal end. The operation has ended normally. • Error (xxxx-yyyyy). The operation has ended abnormally. • Warning (xxxx-yyyyy). The operation has partly ended abnormally or was canceled during the operation. xxxxx-yyyyyy is an error code. xxxxx is a part code of four or five digits showing where the	The result of the received commands. • Normal end. The authentication has ended normally, or the event about encryption keys occurs. • Error. The authentication has ended abnormally. • Accept. Received the commands from the host. • Reject. Rejected the commands from the host.

No.	Item	File 1 (SVP)	File 2 (DKC)
		error occurs. yyyyyy is a message ID of four, five, or six digits. For more information about error codes, see *Hitachi Command Suite Messages*. Note that error codes "xxxx-yyyyy" appear only for Device Manager - Storage Navigator operations.	
⑬	Host Identification	An IP address (IPv4 or IPv6) is output for Device Manager - Storage Navigator, RMI AP and SVP operations. The IP address may be that of the proxy server or the router depending on the configuration of the connected network. No output for RM AP operations. No output when the login user name is <System>. If both IPv4 and IPv6 are available for communication between the management client and the SVP, but the Device Manager - Storage Navigator secondary window uses IPv4 communication. In this case, IPv4 addresses are output to audit logs.	• A WWN is output for unauthenticated open-system host. When a command is received from a different storage system, a WWN for the storage system sending the command is output. • A host name is output for authenticated open-system hosts. • A serial number is output for main-frame system hosts. When a command is received from a different storage system, a serial number for the storage system sending the command is output. • A host name is output for computers using CCI. • A WWN is output for the FC-SP authentication. • No output for the event about encryption keys.
⑭	Application Identification	No output.	• An internal-use ID is output for open-system hosts. • An LPR number is output for mainframe system hosts. • 0x0000 is output if a command comes from other storage system. • No output for other commands. No output for the FC-SP authentication, computers using CCI, hosts using Business Continuity Manager or the event about encryption keys.
⑮	Serial number	The serial number of the saved log information (0000000000 to 4294967295). When the number reaches 4,294,967,295, it is reset to 0000000000.	Same as File 1.

Detailed Information

The indexes and setting values that indicates the set items are output to the detailed information. There are two types of the detailed information format.

Detailed information format 1

Example:

```
+Copy Type=TI
++{P-VOL(LDKC:CU:LDEV),S-VOL(LDKC:CU:LDEV),PoolID,MU,
Snapshot Group,Result}
=[{0xXX:0xAA:0xBB,0xYY:0xCC:0xDD,0,1,SnapshotSet1,Normal end},
{0xXX:0xAA:0xBB,0xYY:0xCC:0xDD,0,,SnapshotSet2,Error(xxxx-yyyy)}],
Num. of Pairs=2
```

Symbol	Definition
+ and -	'+' or '-' displays at the beginning of a line. '+' means the beginning of the index. The number of occurrences of '+' represents the number of indents. '-' means that the line continues from the previous line.
=	Connects an index and a setting value.
[ ]	When there is more than one setting value for an index, the setting values are enclosed by [ ], and separated by a comma (,). *Example:* CU:LDEV=[0x00:0x00,0x00:0x01,0x00:0x02]
{ }	Details are enclosed by {}. *Example:* {Port,Fabric,Connection}=[{1E,ON,FC-AL},{3E,OFF,P-to-P}]
( )	Supplementary and additional information for setting values are enclosed by ( ). *Example:* {VOL(CU:LDEV),Result}={0x00:0x01,Error(xxxx-yyyy)}

Note:

- If there is an item that is not specified when entering commands or performing operations, a hyphen (-) is output for its setting value, no setting value is output, or the index itself is not output.
- For audit logs generated by commands sent from hosts, computers using CCI, or hosts using Business Continuity Manager, if an invalid value is specified when entering commands, numerical characters might be output in the index for character strings and vice versa.
- For audit logs generated by events related to encryption keys, if an audit log to be output contains invalid values, numerical characters might be output in the index for character strings or nothing is output for detailed information.
- For audit logs output in Audit log information file 2 (DKC), values different from the specified ones might be output because optimal values might be automatically assigned in DKC.

Detailed information format 2

Example:

```
+{Alus[0]{
  Id="60-06-0E-81-30-76-D9-30-76-D9-00-00-00-00-00-49",
  Result=Normal end,LdevId=0x00:0x00:0x49}}
```

Note: Line feeds are added to make the example easy to see, while no line feed is added to the actual logs.

Symbol	Definition
+ and -	'+' or '-' displays at the beginning of a line. • '+' means the beginning of the index. The number of occurrences of '+' represents the number of indents. • '-' means that the line continues from the previous one.
{ }	The tiering relation is indicated by the following format. *Parent setting item*{*Child setting item 1*, *Child setting item 2*{*Grandchild setting item 2-1*, *Grand child setting item 2-2*,...},...}
=	Connects an index and a setting value.
[*x*]	For the log output by the command or operation in which multiple resources or items of the same type can be set at one time, the resource or item of the same type is indicated as follows. *Setting item*[*x*] (where *x* is a number: 0, 1, 2,...)

Note: If there is an item that is not specified when entering commands or performing operations, "null" is output for its setting value, or the index itself is not output.

Log output formats for different versions

Table 2-3 Format changes for each version number

Version number	Changes
0802	The log output format for DKCMAIN program version 80-01-2x-xx/xx (xx is a two-digit number.) or later.
0803	The log output format for DKCMAIN program version 80-01-4x-xx/xx (xx is a two-digit number.) or later. The following formats are changed from version number 0802. There are no changes to other log formats. • Output format of the detailed information for [Remote Replication] Create Pairs • Output format of the detailed information for [Remote Replication] Delete Pairs • Output format of the detailed information for [Remote Replication] Edit Options • Output format of the detailed information for [Remote Replication] Resync Pairs

Version number	Changes
0804	The log output format for DKCMAIN program version 80-02-0x-xx/xx (xx is a two-digit number.) or later. The following formats are changed from version number 0803. There are no changes to other log formats. • Output format of the detailed information for [PROV] Create/Expand Pools • Output format of the detailed information for [PROV] Edit/Delete Pools
0805	The log output format for DKCMAIN program version 80-02-2x-xx/xx (xx is a two-digit number.) or later. The following formats are changed from version number 0804. There are no changes to other log formats. • Changed the function name from [BASE] Edit System Options to [BASE] Advanced Settings
0806	The log output format for DKCMAIN program version 80-02-4x-xx/xx (xx is a two-digit number.) or later. The following formats are changed from version number 0805. There are no changes to other log formats. • Output format of the detailed information for [BASE] Login • Output format of the detailed information for [Install] Set Subsystem Time • Output format of the detailed information for [PROV] Create LDEVs • Output format of the detailed information for [User Auth] Login
0807	The log output format for DKCMAIN program version 80-03-0x-xx/xx (xx is a two-digit number.) or later. The following formats are changed from version number 0806. There are no changes to other log formats. • Output format of the detailed information for [Information] ORM Value
0808	The log output format for DKCMAIN program version 80-03-3x-xx/xx (xx is a two-digit number.) or later. The following formats are changed from version number 0807. There are no changes to other log formats. • Output format of the detailed information for [Local Replication] Edit Options • Output format of the detailed information for [PROV] Create LDEVs • Output format of the detailed information for [PROV] Create/Expand Pools • Output format of the detailed information for [PROV] Edit/Delete Pools • Output format of the detailed information for [UVM] Add External Volumes
0809	The log output format for DKCMAIN program version 80-04-0x-xx/xx (xx is a two-digit number.) or later. The following formats are changed from version number 0808. There are no changes to other log formats. • Output format of the detailed information for [Install] Install • Output format of the detailed information for [Local Replication] Edit Options • Output format of the detailed information for [PROV] Create LDEVs • Output format of the detailed information for Config Command (Open system) and Config Command (Mainframe system)
0810	The log output format for DKCMAIN program version 80-04-2x-xx/xx (xx is a two-digit number.) or later. The following formats are changed from version number 0809. There are no changes to other log formats.

Version number	Changes
	• Output format of the detailed information for [Local Replication] Edit Options • Output format of the detailed information for [PROV] Edit Tiering Policy • Changed the operation name from [UVM] Edit External WWNs to Edit External WWNs / iSCSI Targets • Output format of the detailed information for [UVM] Add External Volumes, Disconnect ES Paths, Edit ES Path Config, and Reconnect ES Paths • Output format of the detailed information for [Config Command] Pairsplit-S(RemoteCopy)
0811	The log output format for DKCMAIN program version 80-05-0x-xx/xx (xx is a two-digit number.) or later. The following formats are changed from version number 0810. There are no changes to other log formats. • Output format of the detailed information for [Install] Install • Output format of the detailed information for [Install] Remove • Output format of the detailed information for [Local Replication] Create Pairs • Output format of the detailed information for [Local Replication] Split Pairs • Output format of the detailed information for [PROV] Create LDEVs • Output format of the detailed information for [PROV] EditPortInfo • Output format of the detailed information for Add CHAP User • Output format of the detailed information for Add Ldev(Dynamic Provisioning) • Output format of the detailed information for Add Snapshot • Output format of the detailed information for Add SPM Group • Output format of the detailed information for Add SPM WWN • Output format of the detailed information for Delete CHAP User • Output format of the detailed information for Modify Pool(Data Direct Mapping) • Output format of the detailed information for Modify Port(iSCSI) • Output format of the detailed information for Reset CHAP User • Output format of the detailed information for Reset Ldev Priority • Output format of the detailed information for Set CHAP User • Output format of the detailed information for Set Ldev Priority • Output format of the detailed information for Add Pair when SIMF is specified to the copy type

Syslog file format

Syslog file format (RFC3164-compliant)

The following figure shows a sample syslog file.

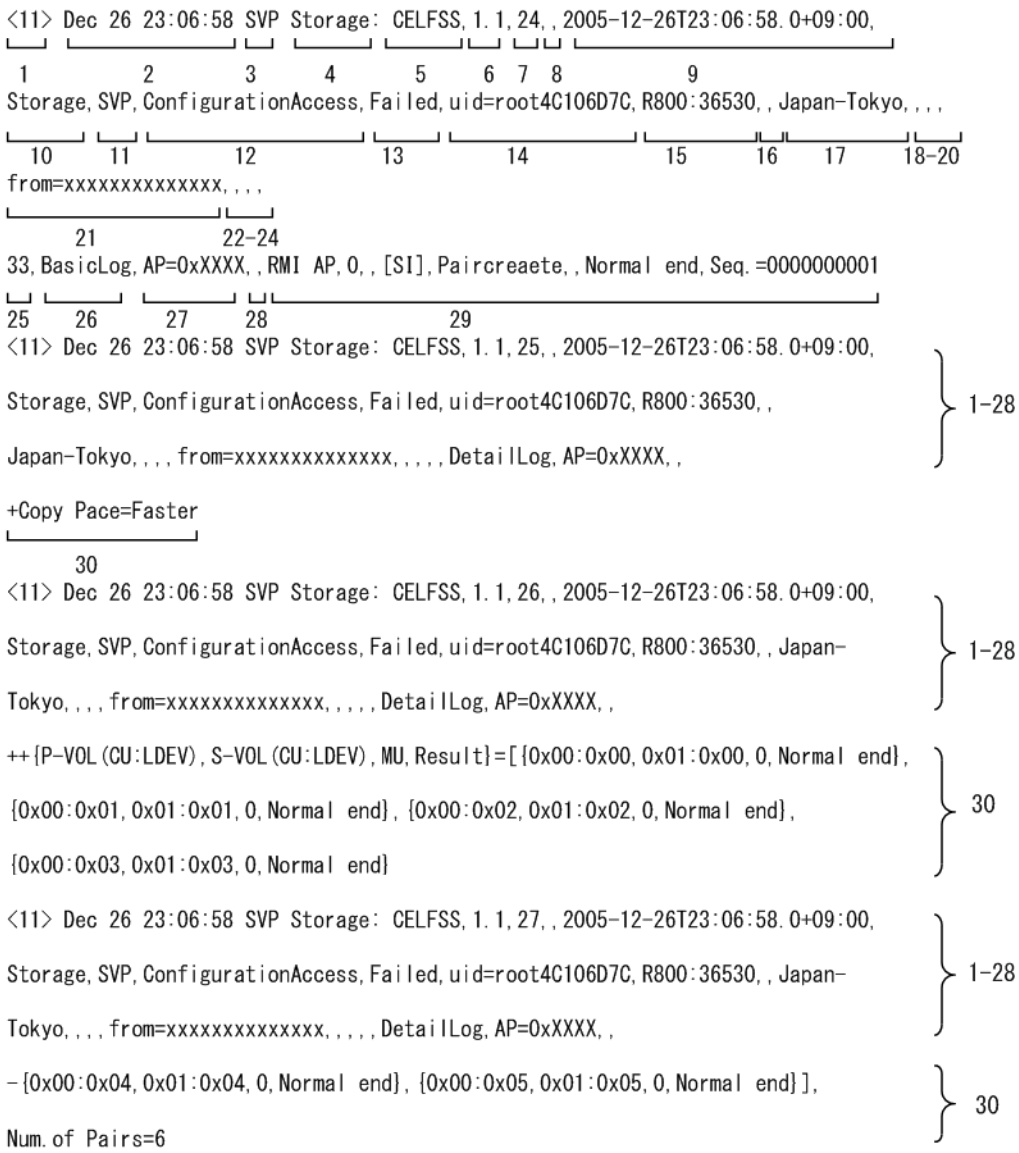


Figure 2-3 Syslog File (RFC3164-compliant)

Item 29 and 30 are output either one of them in one syslog information.

Table 2-4 Items in the Syslog File (RFC3164-compliant)

No.	Item	Description
1	Priority	The priority of an item in the syslog file is determined according to the following formula, enclosed by brackets (< >): Priority = 8 X Facility + Severity Facility is 1 (fixed). Severity depends on the type of log information: • 4: Error or Warning. Error means the operation has ended abnormally. Warning means the operation has partly ended abnormally or was canceled during the operation. • 6: Informational. The operation has ended normally.

No.	Item	Description
		For example, <12> indicates the priority when the severity is error.
2	Date, time*	The date and time in the format of "MMM DD HH:MM:SS" (MMM: month such as Jan or Dec, DD: day, HH: hour, MM: minute and SS: second). If the "DD" is a single digit (for example, 1), it is displayed as " 1" (with a blank space before "1") and not as "01".
3	Detected location	The host name (SVP).
4	Program name	The detection entity identifier (Storage).
5	Unified specification identification	The Unified specification identifier (CELFSS).
6		The revision number of the Unified specification document (1.1).
7	Message identification	The serial number of the syslog header information.
8		No output
9	Date, time#2*	The date, time and the time difference between UTC and the local time in the format of "YYYY-MM-DD-Thh:mm:ss.s ± hh:mm". • YYYY: year, MM: month, DD: day • hh: hour, mm: minute, ss.s: second in one decimal place. • ± hh:mm: hours and minute of the time difference. "Z" is displayed instead of "± hh:mm" when there is no time difference between UTC and the local time, such as "2005-12-26T:23:06:58.0Z".
10	Detection entity	The detection entity identifier (Storage).
11	Detected location	The host name (SVP).
12	Type of audit event	The category name of the event. • Authentication of RMI, FC-SP, or Device Manager - Storage Navigator. • ConfigurationAccess indicates setting from Device Manager - Storage Navigator, SVP or host. • Maintenance indicates SVP operations. • AnomalyEvent indicates reached the maximum of the Audit Log, etc. • ExternalService indicates remote maintenance operations through SVP.
13	Result of audit event	• Success: Normal end. The operation has ended normally. • Failed: Error (xxxx-yyyy). The operation has ended abnormally. • Failed: Warning (xxxx-yyyy). The operation has partly ended abnormally or was canceled during the operation. "xxxx-yyyyy" indicates error codes and it is output only for Device Manager - Storage Navigator operations.
14	Subject identification	The user name in the format of "uid=user name".

No.	Item	Description
		• <system> is output when the category name is AnomalyEvent. • <DKCMaintenance> is output for SVP operations. • <Host> is output for commands from host.
15	Hardware identification	The ID (R800) to identify the model name of the product and the serial number divided by a colon.
16	Generated location	No output.
17	Related information	The location identification name set by the user in the Syslog tab on Edit Audit Log Settings window.
18		No output.
19		No output.
20	Agent information	No output.
21	Detailed information	Identification of the host sending the request. This information is output when a command is received from the host unless it is FC-SP authentication.
22		No output.
23		No output.
24		No output.
25		Collective operation identifier. This is a serial number that identifies those multiple lines displayed by one operation are the same operation. Outputs only if the log type information is "BasicLog" and the category name is other than "AnomalyEvent".
26		Log type information: • BasicLog: basic information • DetailLog: detailed information No output when the category name is "AnomalyEvent".
27		Identification of the application. This information is output when commands are sent from the host.
28		No output.
29		The same information contained in the basic information of the audit log file, such as interface, connection number, task name, function name, operation name, parameter, result, and serial number. Task name is output only when a task is registered using Device Manager - Storage Navigator. No parameter is output if the operation has no parameters. No serial number is output when the category name is "AnomalyEvent".
30		The same information contained in the detailed information of the audit log file.

No.	Item	Description
*A date and time being set on SVP are output as log data. If a failure, such as a SVP failure and a LAN failure, occurs in the storage system, the data and time may be output of the accumulated date and time since January 01, 1970.		

Syslog file format (RFC5424-compliant)

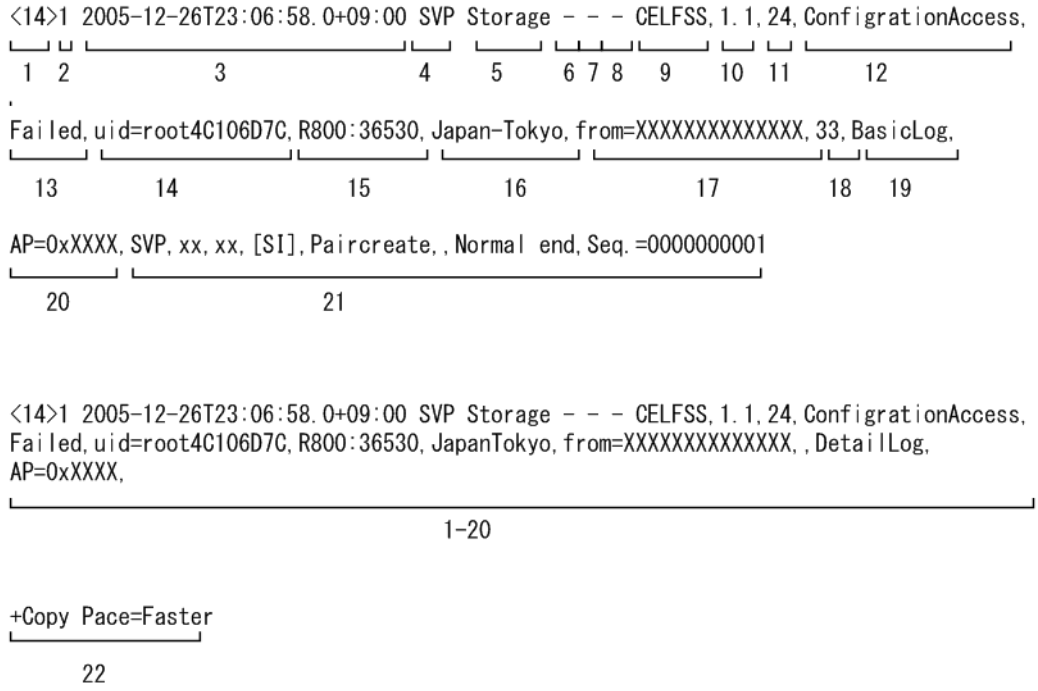


Figure 2-4 syslog file (RFC5424-compliant)

Item 21 and 22 are output either one of them in one syslog information.

Table 2-5 Items in the Syslog File (RFC5424-compliant)

No.	Item	Description
1	Priority	The priority of an item in the syslog file is determined according to the following formula, enclosed by brackets (< >): Priority = 8 X Facility + Severity Facility is 1 (fixed). Severity depends on the type of log information: • 4: Error or Warning. Error means the operation has ended abnormally. Warning means the operation has partly ended abnormally or was canceled during the operation. • 6: Informational. The operation has ended normally. For example, <12> indicates the priority when the severity is error.
2	Version	The version (1).

No.	Item	Description
3	Date, time*	The date, time and the time difference between UTC and the local time in the format of "YYYY-MM-DD-Thh:mm:ss.s ± hh:mm". • YYYY: year, MM: month, DD: day • hh: hour, mm: minute, ss.s: second in one decimal place. • ± hh:mm: hours and minute of the time difference. "Z" is displayed instead of "± hh:mm" when there is no time difference between UTC and the local time, such as "2005-12-26T:23:06:58.0Z".
4	Detected location	The host name (SVP).
5	Program name	The detection entity identifier (Storage).
6	Process name	The process name (-).
7	Message ID	The message ID (-).
8	Structured data	The structured data (-).
9	Unified specification identification	The unified specification identifier (CELFSS).
10		The revision number of the unified specification document (1.1).
11	Message identification	The serial number of the syslog header information.
12	Type of audit event	The category name of the event. • Authentication of RMI, FC-SP, or Device Manager - Storage Navigator. • ConfigurationAccess indicates setting from Device Manager - Storage Navigator, SVP or host. • Maintenance indicates SVP operations. • AnomalyEvent indicates reached the maximum of the Audit Log, etc. • ExternalService indicates remote maintenance operations through SVP.
13	Result of audit event	• Success: Normal end. The operation has ended normally. • Failed: Error (xxxx-yyyy). The operation has ended abnormally. • Failed: Warning (xxxx-yyyy). The operation has partly ended abnormally or was canceled during the operation. "xxxx-yyyyy" indicates error codes and it is output only for Device Manager - Storage Navigator operations.
14	Account identification	The user name in the format of "uid=user name". • <system> is output when the category name is AnomalyEvent. • <DKCMaintenance> is output for SVP operations. • <Host> is output for commands from host.
15	Hardware identification	The ID (R800) to identify the model name of the product and the serial number divided by a colon.

No.	Item	Description
16	Related information	The location identification name set by the user in the Syslog tab of Edit Audit Log Settings window.
17	Detailed information	Identification of the host sending the request. This information is output when a command is received from the host unless it is FC-SP authentication.
18		Collective operation identifier. This is a serial number that identifies those multiple lines displayed by one operation are the same operation. Outputs only if the log type information is "BasicLog" and the category name is other than "AnomalyEvent".
19		Log type information: • BasicLog: basic information • DetailLog: detailed information No output when the category name is "AnomalyEvent".
20		Identification of the application. This information is output when commands are sent from the host.
21	Detailed information	The same information contained in the basic information of the audit log file, such as interface, connection number, task name, function name, operation name, parameter, result, and serial number. Task name is output only when a task is registered using Device Manager - Storage Navigator. No parameter is output if the operation has no parameters. No serial number is output when the category name is "AnomalyEvent".
22		The same information contained in the detailed information of the audit log file. No serial number is output when the category name is "AnomalyEvent".
*A date and time being set on SVP are output as log data. If a failure, such as a SVP failure and a LAN failure, occurs in the storage system, the data and time may be output of the accumulated date and time since January 01, 1970.		

3

Using VSP G1000 audit logs

You can download audit log files and syslog files to management client or transfer audit log files to FTP servers or syslog servers.

- ☐ Starting Device Manager - Storage Navigator by logging in to Hitachi Command Suite
- ☐ Downloading audit log files
- ☐ Downloading syslog files
- ☐ Automatically transferring audit log files to FTP servers
- ☐ Completing SIM generated when FTP transfer of audit log files failed
- ☐ Manually transferring audit log files to FTP servers
- ☐ Transferring audit log to syslog servers

Starting Device Manager - Storage Navigator by logging in to Hitachi Command Suite

To use audit log files, you need to log in to Hitachi Command Suite (HCS), and then open Device Manager - Storage Navigator.

To log in:

1. Start a web browser and enter the URL of the HCS server:
   `http://`*`server-IP-or-name`*`:`*`port-number`*`/DeviceManager/`
   - *server-IP-or-name*: IP address or host name of the Device Manager server.
   - *port-number*: Port number of the HBase Storage Mgmt Web Service.

   URL examples:
   - `http://localhost:22015/DeviceManager/`
   - `https://localhost:22016/DeviceManager/`



Note: Using the localhost name entry implies you are logged in at that server. To access the interface from another system, specify an IP address or host name in the URL. For a secure connection, use the https URL on port 22016.

2. Enter values in the **User ID** and **Password** fields, and click **Log In**.
   Required role: The Admin role or one of the Custom roles described below.
   - Audit Log Administrator (View & Modify) (When setting audit logs or downloading audit logs)
   - Audit Log Administrator (View & Modify) or Audit Log Administrator (View Only) (When viewing audit log windows or downloading audit logs)



Tip: To authenticate with an external authentication server, use its authentication password.

3. In the **Resource Groups** tab, right-click the target storage system, and then select **Other Functions**.

Related topics

- Downloading audit log files on page 3-3
- Downloading syslog files on page 3-4
- Automatically transferring audit log files to FTP servers on page 3-4
- Completing SIM generated when FTP transfer of audit log files failed on page 3-6
- Manually transferring audit log files to FTP servers on page 3-6
- Transferring audit log to syslog servers on page 3-7

Downloading audit log files

Download the audit log files to management client to prevent the old data from being overwritten. It takes from one to five minutes to download the audit log file.

WARNING: Do not download the audit log file to the management client if the audit log is set to be transferred to an FTP server. Some information may not be transferred to the FTP server because the line counter resets when the audit log file is manually downloaded. Download the file only when the FTP server has failed and cannot receive the audit log file. If you want to transfer the audit log to the FTP server after downloading the log, transfer it manually. See Manually transferring audit log files to FTP servers on page 3-6 for more information.

Prerequisites

- You must have Audit Log Administrator (View Only) or Audit Log Administrator (View & Modify) role to download audit log files.

To download the audit log file:

1. Click **Audit Log** on the menu bar of the Device Manager - Storage Navigator main window. The **Audit Log Properties** window opens. Each icon displayed on the menu bar indicates the accumulated status of the audit log information.
   -  indicates the number of saved lines is below the threshold.
   -  indicates the number of saved lines is above the threshold, but the data is still being saved.
   -  indicates the number of saved lines has exceeded the maximum, and data is partly lost because the newest lines were overwritten the oldest lines.
2. Click **Download (SVP)** or **Download (DKC)** to open the Save As dialog box. **Download (SVP)** downloads the auditlog information file 1 and **Download (DKC)** downloads the auditlog information file 2.
3. Select a destination for the file and click **Save**.
4. Click **Close** to close the Audit Log Properties window.

Related topics

- Starting Device Manager - Storage Navigator by logging in to Hitachi Command Suite on page 3-2
- Audit Log Properties window on page A-2

Downloading syslog files

Syslog files stored in the storage system can be downloaded to the management client as necessary. It takes from one to five minutes to download the syslog file.

Prerequisites

- You must have Audit Log Administrator (View Only) or Audit Log Administrator (View & Modify) role to download syslog files.

To download the syslog file from SVP:

1. Click **Settings** > **Security** > **Edit Audit Log Settings**. Select **Syslog** tab on the **Edit Audit Log Settings** window.
2. Select **Transfer Protocol**. The output file format is different by the selected protocol.
3. Click **Download Syslog**. The Specify the Destination dialog box appears.
4. Enter the destination and the file name and click **Save**.

Related topics

- Starting Device Manager - Storage Navigator by logging in to Hitachi Command Suite on page 3-2
- Edit Audit Log Settings wizard on page A-2

Automatically transferring audit log files to FTP servers

If you configure FTP server settings, the audit log will be automatically transferred to the FTP server when the number of lines in the file reaches the threshold.

Note: Keep a list of the items such as the IP address you entered in the **FTP** tab on **Edit Audit Log Settings** window. You may need to enter them again when an SVP is replaced.

Prerequisites

- You must have Audit Log Administrator (View & Modify) role to configure FTP server settings.
- Ensure that SVP is connected to the FTP server on a LAN.

To transfer the audit log file to the FTP server:

1. Click **Settings** > **Security** > **Edit Audit log Settings**. Select **FTP** tab on the **Edit Audit Log Settings** window.
2. Perform the following if using a primary FTP server.
   a. Click **Enable** the Primary Server.

b. Select **IPv4** or **IPv6** on **IP Address** setting and enter the IP address.
c. Enter the user name and the password you use to log in to the primary FTP server.
d. Enter the output folder to which the audit log file is sent with the relative path from the home directory.

3. Perform the following if using a secondary FTP server.
   a. Click **Enable** the Secondary Server.
   b. Select **IPv4** or **IPv6** on **IP Address** setting and enter the IP address.
   c. Enter the user name and the password you use to log in to the secondary FTP server.
   d. Enter the output folder to which the audit log file is sent with the relative path from the home directory.
4. Click **Finish**.
5. Confirm the settings from the setting confirmation window, and then enter the task name on **Task Name**.
6. Click **Apply**. The task is registered. If you check the **Go to tasks window for status** check box, the **Task** window is displayed.
7. Manually transfer the audit log file to confirm that the FTP server setting is correct.
   a. Check that the transfer setting task to the FTP server is complete on the **Task** window. If the task has not completed, wait until it is complete.
   b. Transfer the audit log file to the FTP server manually to confirm that the FTP server setting is correct. For details of manual transfer, see Manually transferring audit log files to FTP servers on page 3-6.

Troubleshooting

A SIM notifies a storage administrator that an FTP transfer has failed. This can occur when the audit log file is not transferred to an FTP server because either the FTP server or LAN has failed. You can view the SIM in the **Alerts** window. The reference code for a failed FTP transfer is *7C0300*. If a SIM is reported, do the following:

- Resolve the error on the FTP server or LAN, and then manually transfer the audit log file. And then complete the SIM referring to Completing SIM generated when FTP transfer of audit log files failed on page 3-6.
  If the instructions in SIM is not complete, SIM will not be generated on next transfer failure.
- If the error condition cannot be resolved, download the audit log file to the management client by clicking **Audit Log** on the upper right of the Device Manager - Storage Navigator main window.

Related topics

- Starting Device Manager - Storage Navigator by logging in to Hitachi Command Suite on page 3-2
- Edit Audit Log Settings wizard on page A-2

Completing SIM generated when FTP transfer of audit log files failed

Prerequisites

- You must have Audit Log Administrator (View & Modify) and Storage Administrator (System Resource Management) role to complete SIM.

To complete SIM:

1. Click **Settings** > **Security** > **Edit Audit log Settings**. Select **FTP** tab on the **Edit Audit Log Settings** window.
2. Select **Complete SIMs** check box.
3. Click **Finish**.
4. Confirm the settings from the setting confirmation window, and then enter the task name on **Task Name**.
5. Click **Apply**. The task is registered. If you check the **Go to tasks window for status** check box, the **Task** window is displayed.

Related topics

- Starting Device Manager - Storage Navigator by logging in to Hitachi Command Suite on page 3-2
- Edit Audit Log Settings wizard on page A-2

Manually transferring audit log files to FTP servers

You can transfer the audit log file manually from the SVP to the FTP server.

Prerequisites

- You must have Audit Log Administrator (View Only) or Audit Log Administrator (View & Modify) role.
- Ensure that SVP is connected to the FTP server on a LAN.
- Transfer setting to the FTP server must be finished. For how to set, refer to Automatically transferring audit log files to FTP servers on page 3-4.

To transfer the audit log file to the FTP server:

1. Click **Settings** > **Security** > **Edit Audit log Settings**. Select **FTP** tab on the **Edit Audit Log Settings** window.
2. Click **Transfer to Primary Server** or **Transfer to Secondary Server**. A message appears indicating that the transfer has completed.

Related topics

- Starting Device Manager - Storage Navigator by logging in to Hitachi Command Suite on page 3-2
- Edit Audit Log Settings wizard on page A-2

Transferring audit log to syslog servers

If you configure syslog server settings, the audit log will always be transferred to the syslog server and stored as the syslog files.

You can select either of the following protocols to transfer the audit log to the syslog server. The output file format is different by the selected protocol.

- TLS1.2/RFC5424
- UDP/RFC3164

Note: When you use UDP/RFC3164, consider the characteristics of UDP (User Datagram Protocol) when designing a network. See RFC3164 (Request for Comments) issued by IETF (Internet Engineering Task Force) for more details.

Note: Keep a list of the items such as the IP address you entered in the **Syslog** tab on **Edit Audit Log Settings** window. You may need to enter them again when an SVP is replaced.

Prerequisites

- You must have Audit Log Administrator (View & Modify) role to configure syslog server settings.
- Make sure the storage system is connected to syslog servers on a LAN.
- Make sure the syslog servers are configured so as to transfer audit logs to the syslog servers.
- The syslog server certificate and the client certificate is required to use TLS1.2/RFC5424. See *Hitachi Command Suite User Guide* for details.

Caution: If audit logs are transferred before configuring the setting of a syslog server to which the audit logs are transferred, the logs are not saved on the syslog server and lost. See the user manual of the syslog server for the details of the syslog server setting.

To transfer audit log files:

1. Click **Settings > Security > Edit Audit Log Settings**. Select **Syslog** tab on the **Edit Audit Log Settings** window.
2. Select **New Syslog Protocol (TLS1.2/RFC5424)** or **Old Syslog Protocol (UDP/RFC3164)**.
3. Click **Enable** the Primary Server.
   a. Select **IPv4** or **IPv6** on **Server setting** and enter the IP address.
   b. Enter the Port Number in the primary server setting.
   c. Enter client certificate file name, password, and root certificate file name (only when you choose **New Syslog Protocol (TLS1.2/ RFC5424)** at **Transfer Protocol**).
4. Perform the following if using a secondary syslog server.
   a. Click **Enable** the Secondary Server.
   b. Select **IPv4** or **IPv6** on **Server setting** and enter the IP address.
   c. Enter the Port Number in the secondary server setting.
   d. Enter client certificate file name, password, and root certificate file name (only when you chose **New Syslog Protocol (TLS1.2/ RFC5424)** at **Transfer Protocol**).
5. Enter the name of the storage system from which you are transferring the audit log file in **Location Identification Name**.
6. If selected **New Syslog Protocol (TLS1.2/RFC5424)** for **Transfer Protocol**, specify **Timeout**, **Retry Interval**, and **Number of Retries**.
7. If you want to transfer the detailed information of audit log to the syslog server, click **Enable** for **Output Detailed Information**.
8. Click **Send Test Message to Syslog Server** to test the settings.
9. Check that the test log (function name AuditLog, operation name Send Test Message) has been sent to the syslog server.
10. Click **Finish**.
11. Confirm the settings from the setting confirmation window, and then enter the task name on **Task Name**.
12. Click **Apply**. The task is registered. If you check the **Go to tasks window for status** check box, the **Task** window is displayed.
13. Confirm that the syslog server is receiving the log of syslog server setting when the task has completed. The function name of the log is "AuditLog" and the operation name is "Set Syslog Server".

If the audit log is not received by the syslog server, check whether the set IP address and port number matches the IP address and port number of the syslog server, and make sure that the Client Certificate File Name, password, and the Root Certificate File Name are correct. If the settings are correct, check the syslog server setting. See the user manual of the syslog server for the details of the syslog server setting.

Related topics

- Starting Device Manager - Storage Navigator by logging in to Hitachi Command Suite on page 3-2
- Edit Audit Log Settings wizard on page A-2

4

VSP G1000 audit logs quick reference

This topic provides a quick reference to what each log indicates.

- Audit Log Functions
- Device Manager - Storage Navigator and SVP operation
- Encryption Key operation
- Command sent from the host
- PIN Deletion Tool operation
- Audit log reproduced output
- Audit log lost output

Audit Log Functions

The following table lists the functions used in audit logging and provides their meanings.

Table 4-1 Function Names

Function name	Description
ACM	Audit log functions used for account management
AuditLog	Audit log functions used during audit logging
BASE	Audit log functions used during initial setup
CPAV	Audit log functions used during Compatible PAV operations
E-MAIL	Audit log functions used during E-Mail notification operations
Information	Audit log functions used during log related operations on SVP
Install	Audit log functions used during software or firmware installation
Local Replications	Audit Log functions used during local replication operations
Maintenance	Audit log functions used during general maintenance
Monitor	Audit log functions used to monitor process
PFM	Audit log functions used to monitor performance
PP KEY	Audit log functions used to install or enable a license key
PROV	Audit log functions used to provision the system
Remote Maintenance	Audit log functions used for Remote Maintenance application
Remote Replications	Audit log functions used during remote replication operations
SNMP	Audit log functions used during SNMP Agent operations
SPM	Audit log functions used during Server Priority Manager operations
Spreadsheet	Audit log functions used during External API operations
UVM	Audit log functions used during Universal Volume Manager operations
VM	Audit log functions used during Volume Migration operations
VPM	Audit log functions used during Virtual Partition Manager operations
VS	Audit log functions used during volume shredding operations
XRC	Audit log functions used to configure XRC

Device Manager - Storage Navigator and SVP operation

The storage system logs operations performed from Device Manager - Storage Navigator computer or SVP. The following table lists the function/operation names as well as GUI operations that trigger logging. Functions are listed in alphabetical order.

Table 4-2 Audit Log and Device Manager - Storage Navigator/SVP Operations

Function Name	Operation Name	Corresponding GUI Operation
AuditLog	Send Test Message	Sending the test log to the syslog server in the Edit Audit Log Settings window
AuditLog	Set FTP Server	Changing settings in the Edit Audit Log Settings window
AuditLog	Set Syslog Server	Changing settings in the Edit Audit Log Settings window
AuditLog	SIM Complete	SIM complete in the Edit Audit Log Settings window
ACM	Add Users	Adding a user account to a user group
ACM	Assign Resource Grps	Changing the resource group allocation of a user group
ACM	Assign Roles	Changing the role allocation of a user group
ACM	Change Password	Changing a password
ACM	Create User	Creating a new user account
ACM	Create User Grp	Creating a new user group
ACM	Delete User Grps	Deleting a user group
ACM	Delete Users	Deleting a user account
ACM	Edit User	Changing settings of a user account
ACM	Edit User Grp	Changing the name of a user group
ACM	Release Lockout	Releasing a user account from lockout
ACM	Remove Users	Removing a user from a user group
ACM	Set Login Message	Setting login message
ACM	Setup Server	Setting a server for the View External Authentication Server Properties
BASE	Advanced Settings	Editing advanced system settings
BASE	Certificate Update	Changing settings in the Update Certificate Files window
BASE	Control Panel Backup	Backing up the configuration files using Control Panel
BASE	Control Panel Restore	Restoring the configuration files using Control Panel
BASE	Create Conf Report	Creating a configuration report
BASE	Delete CVAE Info	Changing information from Command Suite
BASE	Delete Reports	Deleting a configuration report
BASE	Delete Tasks	Deleting a task
BASE	Disable Auto Delete	Disabling Task Auto Delete function
BASE	Edit Alert Setting	Setting a destination of the alert
BASE	Edit High TEMP Mode	Settings of High Temperature Mode
BASE	Edit SIM Syslog Serv	Settings of SIM Syslog notification
BASE	Edit Storage System	Editing storage system information

Function Name	Operation Name	Corresponding GUI Operation
BASE	Enable Auto Delete	Enabling Task Auto Delete function
BASE	Entry Tasks	Applying a task to the storage system
BASE	Environment Setting	Changing parameters on Control Panel
BASE	HCSSO Authentication	Launching Device Manager - Storage Navigator from Hitachi Command Suite
BASE	HCSSO SetOneTimeKey	Issuing OneTimeKey from Hitachi Command Suite
BASE	Login	Log in to Device Manager - Storage Navigator or SVP
BASE	Logout	Log out from Device Manager - Storage Navigator or SVP
BASE	Release HTTP Block	Changing settings on the Release HTTP Blocking window
BASE	Resume Tasks	Resuming a task
BASE	Set CVAE Info	Changing information from Hitachi Command Suite
BASE	Set Up HTTP Block	Changing settings on the Set Up HTTP Blocking window
BASE	Suspend Tasks	Suspending a task
BASE	Unlock Forcibly	Cancelling lock forcibly
BASE	Update HCS Crt	Registering or deleting a certificate for Hitachi Command Suite
BASE	Update SMIS CrtFiles	Updating a digital certificate for SMI-S
BASE	Upload SMIS ConfFile	Uploading a configuration file for SMI-S
CPAV	Add Alias Delete Alias	Compatible PAV
E-Mail	MailAddress Write Valid Flag Update	Settings of E-Mail notification
Information	Delete Log ORM Value SIM Complete SIM Reporting Option Threshold Value	Log-related operation on Service Processor (SVP)
Install	Add Host Group	Maintenance on SVP
Install	Add LU Path	Maintenance on SVP
Install	Add WWN	Maintenance on SVP
Install	All Config	Maintenance on SVP
Install	Backup Config	Maintenance on SVP
Install	Change Host Group	Maintenance on SVP
Install	Change WWN	Maintenance on SVP
Install	DCR Prestaging	Maintenance on SVP

Function Name	Operation Name	Corresponding GUI Operation
Install	Define Config.	Maintenance on SVP
Install	Delete DKC WWN	Maintenance on SVP
Install	Delete Host Group	Maintenance on SVP
Install	Delete LU Path	Maintenance on SVP
Install	Delete WWN	Maintenance on SVP
Install	Dku Emulation	Maintenance on SVP
Install	Embedded OSS	Maintenance on SVP
Install	FlashDrive ORM Value	Maintenance on SVP
Install	Force Reset	Maintenance on SVP
Install	Format	Maintenance on SVP
Install	Format Stop	Maintenance on SVP
Install	Initialize ORM Value	Maintenance on SVP
Install	Install	Maintenance on SVP
Install	Install CV	Maintenance on SVP
Install	M/F DCR	Maintenance on SVP
Install	Machine Install Date	Maintenance on SVP
Install	Make Volume	Maintenance on SVP
Install	Micro Program	Maintenance on SVP
Install	MP Install	Maintenance on SVP
Install	Open DCR	Maintenance on SVP
Install	Remove	Maintenance on SVP
Install	Restore Config.	Maintenance on SVP
Install	Set Battery Life	Maintenance on SVP
Install	Set Channel Speed	Maintenance on SVP
Install	Set CommandDev	Maintenance on SVP
Install	Set CommandDevSec	Maintenance on SVP
Install	Set DevGrpDef	Maintenance on SVP
Install	Set Fibre Address	Maintenance on SVP
Install	Set Fibre Topology	Maintenance on SVP
Install	Set Host Mode	Maintenance on SVP
Install	Set IP Address	Maintenance on SVP
Install	Set Security Switch	Maintenance on SVP
Install	Set Subsystem Time	Maintenance on SVP

Function Name	Operation Name	Corresponding GUI Operation
Install	Set UserAuth	Maintenance on SVP
Install	System Option	Maintenance on SVP
Install	System Tuning	Maintenance on SVP
Install	Update Config	Maintenance on SVP
Install	Volume to Space	Maintenance on SVP
Local Replication	Assign S-VOLs	Assigning secondary volumes of Thin Image pairs
Local Replication	Create Pairs	Creating pairs for ShadowImage, ShadowImage for Mainframe, or Thin Image
Local Replication	Delete Pairs	Deleting pairs for ShadowImage, ShadowImage for Mainframe, or Thin Image
Local Replication	Edit Options	Editing options for ShadowImage or ShadowImage for Mainframe
Local Replication	Initialize	Initializing pairs for ShadowImage and ShadowImage for Mainframe
Local Replication	Release Reserved CTG	Releasing reserved consistency groups for ShadowImage for Mainframe
Local Replication	Remove S-VOLs	Removing secondary volumes of Thin Image pairs
Local Replication	Reserve CTG	Reserving consistency groups for ShadowImage for Mainframe
Local Replication	Resync Pairs	Resynchronizing pairs for ShadowImage, ShadowImage for Mainframe, or Thin Image
Local Replication	Split Pairs	Splitting pairs for ShadowImage, ShadowImage for Mainframe, or Thin Image
Local Replication	Suspend Pairs	Suspending pairs for ShadowImage or ShadowImage for Mainframe
Maintenance	Blockade	Maintenance on SVP
Maintenance	Correction Copy	Maintenance on SVP
Maintenance	DMA Restore	Maintenance on SVP
Maintenance	Drive Interrupt	Maintenance on SVP
Maintenance	DRR Restore	Maintenance on SVP
Maintenance	Format	Maintenance on SVP
Maintenance	Format Stop	Maintenance on SVP
Maintenance	MP Restore	Maintenance on SVP
Maintenance	PCB Restore	Maintenance on SVP
Maintenance	Pre QuickFormat Stop	Maintenance on SVP
Maintenance	Quick Format	Maintenance on SVP

Function Name	Operation Name	Corresponding GUI Operation
Maintenance	Replace	Maintenance on SVP
Maintenance	Restore	Maintenance on SVP
Maintenance	Restore Data	Maintenance on SVP
Maintenance	Set Battery Life	Maintenance on SVP
Maintenance	Size Change	Maintenance on SVP
Maintenance	Spare Disk	Maintenance on SVP
Maintenance	Switch SVP	Maintenance on SVP
Maintenance	Transfer Config	Maintenance on SVP
Maintenance	Type Change	Maintenance on SVP
Maintenance	Verify	Maintenance on SVP
Maintenance	Verify Stop	Maintenance on SVP
Monitor	Threshold	Maintenance on SVP
PFM	DCR Prestaging	• Cache Residency Manager • Cache Residency Manager for Mainframe
PFM	Delete M/F DCR	Cache Residency Manager for Mainframe
PFM	Delete Open DCR	Cache Residency Manager
PFM	Delete Unused WWNs	Performance Monitor
PFM	Edit CU Monitor Mode	Performance Monitor
PFM	Edit Monitoring SW	Performance Monitor
PFM	Edit WWN	Performance Monitor
PFM	Edit WWN MonitorMode	Performance Monitor
PFM	Set M/F DCR	Cache Residency Manager for Mainframe
PFM	Set Open DCR	Cache Residency Manager
PP KEY	PP Apply PP Disable chk PP Enable chk PP Install chk PP Install File chk Update License	License Key
PROV	Add Hosts	• Adding the specified host to a host group • Adding a host to the specified host group
PROV	Add LUN Paths	• Mapping an LU path • Creating an alternate LUN path • Copying the selected LUN path
PROV	Assign MP Blade	Assigning an MP blade

Function Name	Operation Name	Corresponding GUI Operation
PROV	Block LDEVs	Blocking LDEVs
PROV	CalculateTieringMonitorData	Recalculating tier monitoring data from Hitachi Command Suite
PROV	Complete SIMs	Completing SIMs related to a pool
PROV	Create Host Groups	Creating a host group
PROV	Create LDEVs	• Creating a basic volume • Creating an external volume • Creating a virtual volume for Dynamic Provisioning
PROV	Create Resource Grps	Creating a resource group
PROV	Create VDKC-Box	Creating a VDKC-Box from Hitachi Command Suite
PROV	Create/Expand Pools	• Creating a pool • Increasing pool capacity
PROV	CreateAlus	Creating an LDEV with the ALU attribute
PROV	CreateiScsiName	Adding hosts to selected iSCSI targets
PROV	CreateiScsiPath	• Adding iSCSI paths to external storage systems • Adding connections to remote storage systems
PROV	CreateiScsiTarget	Creating iSCSI targets
PROV	CreateRemoteChapUser	Adding CHAP users to selected iSCSI targets
PROV	CreateSlus	Creating an LDEV with the SLU attribute from Hitachi Command Suite
PROV	CreateTiPairsWithSlu	Creating Thin Image pairs using LDEVs with the SLU attribute from Hitachi Command Suite
PROV	CreateTiVolumes	Creating a secondary volume for Thin Image from Hitachi Command Suite
PROV	Delete Host Groups	Deleting a host group
PROV	Delete LDEVs	• Deleting a basic volume • Deleting an external volume • Deleting a virtual volume for Dynamic Provisioning
PROV	Delete Login WWNs	Deleting an unnecessary WWN
PROV	Delete LUN Paths	Removing a LUN path from an LDEV
PROV	Delete Resource Grps	Deleting a resource group
PROV	Delete VDKC-Box	Deleting a VDKC-Box from Hitachi Command Suite
PROV	DeleteAlus	Deleting an LDEV with the ALU attribute
PROV	DeleteiScsiInitiatorUser	Deleting the setting information of users with CHAP authentication on ports
PROV	DeleteiScsiName	Removing hosts from selected iSCSI targets

Function Name	Operation Name	Corresponding GUI Operation
PROV	DeleteiScsiPath	• Deleting iSCSI paths to external storage systems • Deleting iSCSI paths when connections cannot be added to remote storage systems
PROV	DeleteiScsiTarget	Deleting iSCSI targets
PROV	DeleteLoginiScsiName	Deleting unnecessary iSCSI names
PROV	DeleteRemoteChapUser	Removing CHAP users from selected iSCSI targets
PROV	DeleteSlus	Deleting an LDEV with the SLU attribute from Hitachi Command Suite
PROV	DeleteTargetChapUser	Removing CHAP users assigned to iSCSI targets
PROV	DeleteTiVolumes	Deleting a secondary volume for Thin Image from Hitachi Command Suite
PROV	DRU Expiration Lock	Data Retention Utility
PROV	Edit Cmd Dev(Auth)	Editing the user authentication setting for a command device
PROV	Edit Cmd Dev(DevGrp)	Editing the device group setting for a command device
PROV	Edit Cmd Dev(Sec)	Editing the command device security setting
PROV	Edit Command Devices	Enabling or disabling the command device setting
PROV	Edit DRU Attribute	Data Retention Utility
PROV	Edit Full Allocation	Enabling or disabling the Full Allocation setting
PROV	Edit Host	Editing host settings
PROV	Edit Host Grps(Mode)	Editing host group settings
PROV	Edit Host Grps(Name)	Editing host group settings
PROV	Edit LDEVs(tier)	Relocating tier
PROV	Edit LDEV Tier Rank	Editing the external LDEV tier ranks of pool volumes assigned to a pool
PROV	Edit MP Blades	Editing the MP blade setting
PROV	Edit Ports(Address)	Editing a port address
PROV	Edit Ports(Attr)	Changing a port attribute with TrueCopy, TrueCopy for Mainframe, Universal Replicator, Universal Replicator for Mainframe, Universal Volume Manager.
PROV	Edit Ports(Security)	Editing LUN security setting for a port
PROV	Edit Ports(Speed)	Editing the data transfer speed of a port
PROV	Edit Ports(Topology)	Editing the topology setting of a port
PROV	Edit Resource Grp	Editing a resource group
PROV	Edit SCP Time	Setting a SCP (State Change Pending) time to the mainframe host
PROV	Edit Tiering Policy	Editing the tiering policy

Function Name	Operation Name	Corresponding GUI Operation
PROV	Edit VR Attribute	Volume Retention Manager
PROV	Edit V-VOL Option	• Creating an LDEV • Changing information of an LDEV
PROV	Edit/Delete Pools	• Deleting a pool • Editing pool settings
PROV	Edit/Delete UUIDs	• Editing an UUID • Deleting an UUID
PROV	EditiScsiInitiatorUser	Editing the setting information of users with CHAP authentication on ports
PROV	EditiScsiName	Editing host settings
PROV	EditiScsiNickName	Editing host settings
PROV	EditiScsiTarget	Editing iSCSI target settings
PROV	EditiSNS	Editing port settings
PROV	EditPortInfo	Editing port settings
PROV	EditRemoteChapUser	Editing CHAP user settings
PROV	EditRemoteTargetUser	Editing iSCSI targets
PROV	EditT10piMode	Editing T10 PI mode settings on ports
PROV	EditTargetChapUser	Editing settings of CHAP users assigned to iSCSI targets
PROV	ExecBindingOperation	Binding or unbinding an LDEV with the SLU attribute to or from the LDEV with the ALU attribute
PROV	Expand V-VOLs	Increasing virtual volume capacity
PROV	ExpandSlus	Increasing capacity of an LDEV with the SLU attribute from Hitachi Command Suite
PROV	Force Del MF V-VOLs	Forcibly deleting a V-Vol for Dynamic Provisioning for Mainframe, Dynamic Tiering for Mainframe, or active flash for mainframe
PROV	Format LDEVs	Formatting an LDEV
PROV	Format LDEVs(H)	Formatting a LDEV using the Write to Control Blocks function
PROV	Format LDEVs(Q)	Quick formatting an LDEV
PROV	Initialize Pools	Initializing a pool
PROV	LDEV Name	• Setting an LDEV name • Editing an LDEV
PROV	MapSecondaryVolumeWithSlu	Mapping LDEVs with the SLU attribute to the secondary volumes of Thin Image pairs from Hitachi Command Suite
PROV	Monitor Pools	Starting the performance monitoring of a pool

Function Name	Operation Name	Corresponding GUI Operation
PROV	Move Resources	• Adding a resource to a resource group • Removing a resource from a resource group
PROV	OperateSiPairsWithSlu	Operating ShadowImage pairs using LDEVs with the SLU attribute from Hitachi Command Suite
PROV	OperateTiPairsWithSlu	Operating Thin Image pairs using LDEVs with the SLU attribute from Hitachi Command Suite
PROV	Pool Name	• Setting a pool name • Deleting a pool name
PROV	Reclaim Zero Pages	Releasing pages in a virtual volume
PROV	Release HostReserved	Releasing Host-Reserved LUNs
PROV	Relocate Pool	Starting the tier relocation of a pool
PROV	Remove Hosts	Removing a host from a host group
PROV	Restore LDEVs	Restoring an LDEV
PROV	Restore Pools	Restoring a pool
PROV	RevertTiPairsWithSlu	Reverting Thin Image pairs using LDEVs with the SLU attribute from Hitachi Command Suite
PROV	Set FCSP Host	Creating, changing, or deleting the host authentication information
PROV	Set FCSP Port Info	• Setting port information • Setting default such as user name and secret
PROV	Set FCSP Port Switch	Registering authentication information Authentication Mode: bi-directional -> unidirectional or unidirectional -> bi-directional Authentication (Port): Enable -> Disable or Disable -> Enable
PROV	Set FCSP Target	Registering or deleting authentication information Authentication (Host Group): Disable -> Enable or Enable -> Disable
PROV	Set PageTieringLevel	Setting a tiering policy in pages
PROV	Set SSID	• Creating an LDEV • Setting an SSID
PROV	Set Virtual LDEV	• Editing virtualization management settings • Setting or releasing the GAD reserve attribute on a volume for the secondary volume of a global-active device pair
PROV	Shrink Pool	Decreasing pool capacity
PROV	Stop Monitoring	Stopping the performance monitoring of a pool
PROV	Stop Reclm ZeroPages	Stop releasing pages in a virtual volume

Function Name	Operation Name	Corresponding GUI Operation
PROV	Stop Relocating	Stopping the tier relocation of a pool
PROV	Stop Shrinking Pool	Stop decreasing pool capacity
PROV	UnmapSecondaryVolumeWithSlu	Unmapping the secondary volumes of Thin Image pairs using LDEVs with the SLU attribute from Hitachi Command Suite
PROV	UpdateAluaMode	• Editing an LDEV • Creating pairs for global-active device • Resynchronizing pairs for TrueCopy, TrueCopy for Mainframe, Universal Replicator, Universal Replicator for Mainframe, and global-active device • Resynchronizing pairs for global-active device by the consistency group
PROV	UpdateAsymmetricAccessStatePerHG	Editing Asymmetric Access States settings
PROV	UpdateParityGroupSettings	Enabling or disabling accelerated compression
PROV	VTOC	Volume Retention Manager
Remote Maintenance	PS Control Reboot MP Reboot Port Reboot SVP StartVerify StopVerify Switch SVP Transfer Config	Hi-track
Remote Replication	Add Path	Adding paths for TrueCopy, TrueCopy for Mainframe, Universal Replicator, and Universal Replicator for Mainframe on the remote storage system.
Remote Replication	Add Quorum Disk ID	Adding quorum disk IDs used by global-active device.
Remote Replication	Add RCU	Adding remote storage system settings for TrueCopy, TrueCopy for Mainframe, Universal Replicator, and Universal Replicator for Mainframe.
Remote Replication	Change JNL Option	Changing the journal option for Universal Replicator and Universal Replicator for Mainframe.
Remote Replication	Change Mirror Option	Changing the mirror option for Universal Replicator and Universal Replicator for Mainframe.
Remote Replication	Change RCU Option	Changing the remote storage system option for TrueCopy, TrueCopy for Mainframe, Universal Replicator, and Universal Replicator for Mainframe.
Remote Replication	Clear SIM	Clearing SIMs for TrueCopy for Mainframe, Universal Replicator for Mainframe, and global-active device.

Function Name	Operation Name	Corresponding GUI Operation
Remote Replication	Create Pairs	Creating pairs for TrueCopy, TrueCopy for Mainframe, Universal Replicator, Universal Replicator for Mainframe, and global-active device.
Remote Replication	Delete Cmd.Dev	Deleting a command device for TrueCopy for Mainframe.
Remote Replication	Delete Pairs	Deleting pairs for TrueCopy, TrueCopy for Mainframe, Universal Replicator, Universal Replicator for Mainframe, and global-active device.
Remote Replication	Delete Path	Deleting paths for TrueCopy, TrueCopy for Mainframe, Universal Replicator, and Universal Replicator for Mainframe on the remote storage system.
Remote Replication	Del Quorum Disk ID	Deleting quorum disk IDs used by global-active device.
Remote Replication	Delete RCU	Deleting the remote storage system setting for TrueCopy, TrueCopy for Mainframe, Universal Replicator, and Universal Replicator for Mainframe.
Remote Replication	Edit EXCTG	Creating and deleting journals on expanded consistency groups for Universal Replicator for Mainframe
Remote Replication	Edit Options	Setting the remote replica options for TrueCopy, TrueCopy for Mainframe, Universal Replicator, Universal Replicator for Mainframe, and global-active device.
Remote Replication	Edit Pair Options	Setting pair options for TrueCopy, TrueCopy for Mainframe, Universal Replicator, and Universal Replicator for Mainframe.
Remote Replication	Journal Owner	Setting the journal ownership for Universal Replicator and Universal Replicator for Mainframe.
Remote Replication	Journal Vol	Creating or deleting of journal or assigning journal volumes for Universal Replicator and Universal Replicator for Mainframe. Forcibly removing journals from expanded consistency groups for Universal Replicator for Mainframe
Remote Replication	R-Cmd.Dev.	Setting a remote command device for Universal Replicator and Universal Replicator for Mainframe.
Remote Replication	Resync Pairs	Resynchronizing pairs for TrueCopy, TrueCopy for Mainframe, Universal Replicator, Universal Replicator for Mainframe, and global-active device.
Remote Replication	Split Pairs	Split pairs for TrueCopy, TrueCopy for Mainframe, Universal Replicator, and Universal Replicator for Mainframe.
Remote Replication	Suspend Pairs	Suspending pairs for global-active device.
Remote Replication	UpdateQuorumDisks	Editing the value of Read Response Guaranteed Time When Quorum Disk Blocked for global-active device.
SNMP	UpdateSnmpSetting	Setting information related to SNMP

Function Name	Operation Name	Corresponding GUI Operation
SPM	Change SPMGrp Clear SPM Info Default Set Set All Prio Port Set All Prio WWN Set Ctrl Kind Set Prio Port Set Prio WWN SPMGrp Del/Chg Update Port WWN Update SPMGrp Update WWN	Server Priority Manager
Spreadsheet	CflSet End CflSet Start	Performing the CFLSET command using External API
UVM	Add External Volumes	Mapping an external volume
UVM	Assign MP Blade	Assigning an MP blade for an external volume
UVM	Delete ES VOLs	Releasing external volume mapping
UVM	Disconnect ES Paths	Disconnecting an external path
UVM	Disconnect ES VOLs	Disconnecting an external storage system or an external volume
UVM	Edit ES Path Config	• Adding a path to an external path group • Deleting a path from an external path group • Changing priority among external paths
UVM	Edit ES VOLs	Editing external volume settings
UVM	Edit External WWNs / iSCSI Targets	• Editing external WWN parameters • Editing external iSCSI target parameters
UVM	Merge ES Path Grps	Merging external path groups using External API
UVM	ProfileUpgrade	Operable by tool only
UVM	Reconnect ES Paths	Reconnecting an external path
UVM	Reconnect ES VOLs	Reconnecting an external storage system or external volume
UVM	Split ES Path Grp	Splitting external path group using External API
VM	Delete All Histories Del Migration Plans Migrate Volumes	Volume Migration
VPM	Edit CLPR	Creating, adding, deleting, or editing CLPR Migrating parity groups to a different CLPR

Function Name	Operation Name	Corresponding GUI Operation
VS	Abort Shredding	Aborting shredding an LDEV
VS	End Shredding	Ending shredding an LDEV
VS	Shred LDEVs	Shredding an LDEV
XRC	Set XRC Option	Compatible XRC

Encryption Key operation

The following tables show the function names, operation names and event names of encryption keys for data encryption and each item is listed in alphabetical order. The logs for the operation names listed in the first table are output to Auditlog information file 1, while the logs for the event names listed in the second table are output to Auditlog information file 2.

Table 4-3 Function Name and Operation Name Output to Auditlog information file 1

Function Name	Operation Name	Corresponding GUI Operation
ENC	Add keys to DKC	Creating encryption keys Configuring encryption environment settings
	Backup Keys	Backing up encryption keys on the key management server or backing up encryption keys as a file on the Device Manager - Storage Navigator PC
	Backup Keys to File	Backing up encryption keys as a file on the Device Manager - Storage Navigator PC
	Backup Keys to Serv	Backing up encryption keys on the key management server
	Create KEK Dynamic	Configuring encryption environment settings Updating key encryption keys
	Create Keys	Creating encryption keys Configuring encryption environment settings
	Create Keys On Serv	Creating encryption keys Backing up encryption keys on the key management server Configuring encryption environment settings
	Delete KEK Dynamic	Configuring encryption environment settings Updating key encryption keys
	Delete Keys	Deleting encryption keys
	Delete Keys on Serv	Deleting encryption keys backed up on the key management server
	DEK assign SpareDisk	Configuring encryption environment settings
	DEK delete	Configuring encryption environment settings
	Edit Encryption	Enabling/disabling the encryption in a parity group level

Function Name	Operation Name	Corresponding GUI Operation
	Edit ENC Settings	Configuring encryption environment settings
	Edit Password Policy	Editing password policies for backing up encryption keys
	Register KEK Dynamic	Configuring encryption environment settings Updating key encryption keys
	Rekey CEK	Configuring encryption environment settings Updating certificate encryption keys
	Rekey KEK Dynamic	Updating key encryption keys
	Restore Keys	Restoring encryption keys from back up copies on the key management server or the Device Manager - Storage Navigator PC
	Restore Keys fr File	Restoring encryption keys from back up copies on the Device Manager - Storage Navigator PC
	Restore Keys fr Serv	Restoring encryption keys from back up copies on the key management server
	Retry KEK Dynamic	Reacquisition of key encryption keys
	Set Up Key Mng Serv	Configuring encryption environment settings
KEK Acquisition	Acquisition Key	Reacquisition of key encryption keys
	Set Key	

Table 4-4 Function Name and Event Name Output to Auditlog information file 2

Function Name	Event Name	Output Trigger
ENC	Change CEK Status	• When the encryption environment setting is configured from the initial setting. • When the certificate encryption key is updated. • When the encryption disk adapter is deleted or replaced.
	Change DEK Status	• When the encryption environment setting is configured from the initial setting. • When the encryption environment setting is initialized. • When the data encryption is enabled/disabled. • When Dynamic sparing, Correction copy or Copy back is performed. • When the drive (Hard disk drive, SSD or FMD) is added, deleted or replaced after the encryption environmental setting is configured.
	Clear Keys	When the encryption environment setting is initialized.
	Create Keys	When the encryption key is created.
	Delete Keys	When the encryption key is deleted.
	Use Keys for CEK/KEK	• When the encryption environment setting is configured from the initial setting.

Function Name	Event Name	Output Trigger
		• When the certificate encryption key is updated. • When the encryption disk adapter is added or replaced.

Command sent from the host

The following table describes the function name output to the audit log file when receiving commands from the host.

Table 4-5 Audit Log and Command Sent from Host

Function Name	Description
Config Command	Indicates that a configuration command was received.
FC-SP	Indicates that the FC-SP authentication is completed.
User Auth	Indicates that a user authentication command was received.

PIN Deletion Tool operation

The following table shows the function name and the operation name concerning the PIN Deletion Tool.

Table 4-6 Audit Log and PIN Deletion Tool Operation

Function Name	Operation Name	Corresponding GUI Operation
PINDeletion	Delete	PIN deletion operation by PIN deletion tool

Audit log reproduced output

The following table describes the operation name, event name, and triggering events that are output when the audit log file is reproduced. The "create file" event name will be automatically output only once.

Table 4-7 Audit Log File Output

Function Name	Event Name	Output Trigger
AuditLog	Create File	Output when abnormal files in the audit log are reproduced automatically.

Audit log lost output

The following shows the function name and the event name that are output when the audit log by the commands that the storage system accepted from

the host has been lost. The "DKCAuditLog was lost" event name will be automatically output only once for each output trigger.

Table 4-8 Audit Log Lost Output

Function Name	Event Name	Output Trigger
AuditLog	DKCAuditLog was lost	Output when the audit log by the commands that the storage system accepted from the host has been lost.

5

VSP G1000 audit log examples

This topic provides examples and descriptions of the audit logs produced by each function and operation that can be performed with Device Manager - Storage Navigator and SVP. The descriptions are listed alphabetically by function name and operation name. For detailed information on the version numbers in log output examples, see Table 2-3 Format changes for each version number on page 2-10.

- ☐ Audit Log Descriptions
- ☐ ACM Descriptions
- ☐ BASE Descriptions
- ☐ Compatible PAV Descriptions
- ☐ E-Mail Descriptions
- ☐ Information Descriptions
- ☐ Install Descriptions
- ☐ Local Replication Descriptions
- ☐ Maintenance Descriptions
- ☐ Monitor Descriptions
- ☐ Performance Monitor Descriptions
- ☐ Program Product Key (PP KEY) Descriptions
- ☐ Provisioning Descriptions

- Remote Maintenance Descriptions
- Remote Replication Descriptions
- SNMP Descriptions
- Server Priority Manager Descriptions
- Spreadsheet Descriptions
- Universal Volume Manager Descriptions
- Volume Migration Descriptions
- Virtual Partition Manager Descriptions
- Volume Shredder Descriptions
- Compatible XRC Descriptions

Audit Log Descriptions

[AuditLog] Create File

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,<system>,,,
[AuditLog],Create File,SVP,Warning,,,Seq.=xxxxxxxxxx
```

Basic Information

Parameter	Description
SVP	Indicates that the audit log file 1 has been reproduced
DKC	Indicates that the audit log file 2 has been reproduced

[AuditLog] DKCAuditLog was lost

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,<system>,,,
[AuditLog],DKCAuditLog was lost,,Error,,,Seq.=xxxxxxxxxx
```

[AuditLog] Over MaxLine

This information appears in the syslog file only.

Example: RFC3164

```
<14> Jan  4 06:25:18 SVP Storage: CELFSS,1.1,250001,,
2006-01-04T06:25:18.3Z,
Storage,SVP,AnomalyEvent,Success,<system>,R800:65307,,
Japan-Tokyo,,,,,,,,,,,SVP,,,[AuditLog],Over MaxLine,SVP,
Normal end
```

Example: RFC5424

```
<14>1 2006-01-04T06:25:18.3Z SVP Storage - - - CELFSS,1.1,
250001,AnomalyEvent,Success,<system>,R800:65307,
Japan-Tokyo,,,,,SVP,,,[AuditLog],Over MaxLine,SVP,Normal end
```

Basic Information

Parameter	Description
SVP	Indicates that the capacity of audit log file 1 has reached the maximum
DKC	Indicates that the capacity of audit log file 2 has reached the maximum

[AuditLog] Over Threshold

This information appears in the syslog file only.

Example: RFC3164

```
<14> Jan  4 06:25:18 SVP Storage: CELFSS,1.1,250001,,
2006-01-04T06:25:18.3Z,
Storage,SVP,AnomalyEvent,Success,<system>,R800:65307,,
Japan-Tokyo,,,,,,,,,,,SVP,,,[AuditLog],Over Threshold,
SVP,Normal end
```

Example: RFC5424

```
<14>1 2006-01-04T06:25:18.3Z SVP Storage - - - CELFSS,1.1,
250001,AnomalyEvent,Success,<system>,R800:65307,
Japan-Tokyo,,,,,SVP,,,[AuditLog],Over Threshold,SVP,Normal end
```

Basic Information

Parameter	Description
SVP	Indicates that the capacity of audit log file 1 has exceeded the threshold value
DKC	Indicates that the capacity of audit log file 2 has exceeded the threshold value

[AuditLog] Send Test Message

This information appears in the syslog server only.

Example: RFC3164

```
<14> Jun 20 12:28:51 SVP Storage: CELFSS,1.1,,,
2013-06-20T12:28:51.2+09:00,Storage,SVP,
ConfigurationAccess,Success,uid=maintenance,R800:65307,,
Japan-Tokyo,,,,,,,,,,,SVP,108,,[AuditLog],Send Test Message,,
Normal end
```

Example: RFC5424

```
<14>1 2013-06-20T12:27:18.3+09:00 SVP Storage - - - CELFSS,
1.1,,ConfigurationAccess,Success,uid=maintenance,R800:65307,
Japan-Tokyo,,,,,SVP,108,,[AuditLog],Send Test Message,,
Normal end
```

[AuditLog] Set FTP Server

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[AuditLog],Set FTP Server,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{ServerType,IPAddrVer,OutFlg,SrvAddr,UserName,OutputDir}
=[{Primary,IPv4,Disable,192.168.0.1,root,/Data/AuditLog},
```

```
{Secondary,IPv6,Enable,3ffe:0501:4819:2000:5254:00ff:fedc:50d2,
-,-}]
```

Detailed Information

No detailed information is output when no setting is changed.

Item	Description
ServerType	The server type of the FTP server to be set. If the setting is not changed, a hyphen (-) is displayed. Primary: Primary FTP server. Secondary: Secondary FTP server.
IPAddrVer	The version number of the internet protocol. If the setting is not changed, a hyphen (-) is displayed. IPv6: Internet Protocol Version 6, IPv4: Internet Protocol Version 4
OutFlg	Whether to transfer the audit log file (audit.log) to the FTP server. Enable: Transfer audit log file. Disable: Do not transfer audit log file.
SrvAddr	The IP address to which the audit log file is sent. If the setting has not changed, a hyphen (-) is displayed.
UserName	The user name to login to the FTP server. If the setting has not changed, a hyphen (-) is displayed.
OutputDir	The directory in the FTP server that the transferred audit log files are stored. If the setting is not changed, a hyphen (-) is displayed.

[AuditLog] Set Syslog Server

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[AuditLog],Set Syslog Server,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Transfer Protocol=TLS1.2
+Location Identification Name=ABCDEFG
+Output Detailed Information=Enable
+Timeout=10
+Retry Interval=1
+Number of Retries=3
+{Server Type,Output,IP Version,IP Address,Port Number,
Client Certificate File Name,Root Certificate File Name}
=[{Primary,Enable,IPv4,xxx.xxx.xxx.xxx,yyy,FILE1,FILE2},
{Secondary,Disable,,,,,}],Num. of Servers=2
```

Detailed Information

No detailed information is output when no setting is changed.

Item	Description
Transfer Protocol	Indicates the syslog transfer protocol. It is not output if the setting is not changed. TLS1.2: New Syslog Protocol (TLS1.2/RFC5424)

Item	Description
	UDP: Old Syslog Protocol (UDP/RFC3164)
Location Identification Name	Indicates the location identification information of the storage system. It is not output if the setting is not changed.
Output Detailed Information	Indicates whether to output the detailed information of the audit log to the syslog server. It is not output if the setting is not changed. Enable: Detailed information is output Disable: Detailed information is not output
Timeout	Indicates the time to detect the timeout of communication with the syslog server. It is not output if the setting is not changed.
Retry Interval	Indicates the retry interval when the communication with the syslog server fails. It is not output if the setting is not changed.
Number of Retries	Indicates the number of retries when the communication with the syslog server fails. It is not output if the setting is not changed.
Server Type	Indicates the syslog server that transfers syslog information. It is not output if the setting is not changed. Primary: Primary syslog server Secondary: Secondary syslog server
Output	Indicates whether to transfer the syslog information to the syslog server. It is not output if the setting is not changed. Enable: Syslog information is transferred Disable: Syslog information is not transferred
IP Version	Indicates the internet protocol version. It is not output if the setting is not changed. IPv6: Internet Protocol Version 6 IPv4: Internet Protocol Version 4
IP Address	Indicate the IP address of the syslog server. It is not output if the setting is not changed.
Port Number	Indicates the port number of the LAN while transferring syslog information. It is not output if the setting is not changed.
Client Certificate File Name	Indicates the client certificate file name. It is not output if the file is not uploaded.
Root Certificate File Name	Indicates the CA certificate file name. It is not output if the file is not uploaded.
Num. of Servers	Indicates the number of the servers that are set. It is not output if there are no servers that are set.

[AuditLog] SIM Complete

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[AuditLog],SIM Complete,,Normal end,
```

```
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Reference Code=[0x7C0300],Num. of Reference Codes=1
```

Detailed Information

Item	Description
Reference Code	The reference code of the SIM whose errors are solved or the SIM that the causes of its generation are removed.
Num. of Reference Codes	The number of the reference codes of the SIM whose errors are solved or the SIM that the causes of its generation are removed.

ACM Descriptions

[ACM] Add Users

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx,+00:00,RMI AP,uid=user-name,1,
Task Name,[ACM],Add Users,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{User Name,User Group Name,Result}
=[{User01,Group01,Normal end},{User02,Group01,Normal end}],
Num. of Users=2
```

Detailed Information

Item	Description
User Name	The user name that was added to a user group
User Group Name	The name of the user group to which the user ID was added
Result	Result of the operation Normal end: normal end, Error(*xxxxx-yyyyyy*): Abnormal end *xxxxx*: part code, *yyyyyy*: error code
Num. of Users	The number of users that were added

[ACM] Assign Resource Grps

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[ACM],Assign Resource Grps,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{User Group Name,Result}={Group01,Normal end},
Num. of User Groups=1
++{Resource Group ID,Result}=[{1,Normal end},{2,Normal end}],
Num. of Resource Groups=2
```

Detailed Information

Item	Description
User Group Name	The name of a user group
Result	Result of the operation Normal end: Normal end, Error(*xxxxx-yyyyyy*): Abnormal end *xxxxx*: Part code, *yyyyyy*: Error code
Num. of User Groups	The number of user groups
Resource Group ID	The resource group ID allocated to the user group Not the difference but all the resource group numbers are output, which are allocated to the target user group after the operation.
Num. of Resource Groups	The number of resource groups

As a result of the operations, when all the allocation of resource groups are released from the target user group, "++{Resource Group ID,Result}" and later in the detailed information are not output.

[ACM] Assign Roles

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[ACM],Assign Roles,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{User Group Name,All Resource Groups Assigned,Result}
={Group01,Yes,Normal end},Num. of User Groups=1
++{Role Name,Result}=[{Role01,Normal end},{Role02,Normal end}],
Num. of Roles=2
```

Detailed Information

Item	Description
User Group Name	The name of a user group
All Resource Groups Assigned	Indicates whether there is All Resource Groups Assigned setting in the user group
Result	Result of the operation Normal end: Normal end, Error(*xxxxx-yyyyyy*): Abnormal end *xxxxx*: Part code, *yyyyyy*: Error code
Num. of User Groups	The number of user groups
Role Name	The role name allocated to the user group Not the difference but all the role names are output, which are allocated to the target user group after the operation.
Num. of Roles	The number of roles

[ACM] Change Password

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx,+00:00,RMI AP,uid=user-name,1,
Task Name,[ACM],Change Password,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{User Name,Result}=[{User01,Normal end}],Num. of Users=1
```

Detailed Information

Item	Description
User Name	The name of the user whose password was changed.
Result	Result of the operation Normal end: normal end, Error(*xxxxx-yyyyyy*): Abnormal end *xxxxx*: part code, *yyyyyy*: error code
Num. of Users	The number of users whose passwords were changed.

[ACM] Create User

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx,+00:00,RMI AP,uid=user-name,1,
Task Name,[ACM],Create User,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{User Name,Account Status,Authentication,User Group Name,Result}
=[{User01,Enabled,Local,Group01,Normal end}],Num. of Users=1
```

Detailed Information

Item	Description
User Name	The user name that was created
Account Status	Indicates whether the user account is enabled or disabled. Enabled: the account is enabled, Disabled: the account is disabled
Authentication	The authentication server that the user uses Local: SVP authentication, External: External authentication
User Group Name	The name of the user group to which the user ID was added
Result	Result of the operation Normal end: normal end, Error(*xxxxx-yyyyyy*): Abnormal end *xxxxx*: part code, *yyyyyy*: error code
Num. of Users	The number of users that were created

[ACM] Create User Grp

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[ACM],Create User Grp,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{User Group Name,All Resource Groups Assigned,Result}
={Group01,Yes,Normal end},Num. of User Groups=1
```

Detailed Information

Item	Description
User Group Name	The name of a user group name that was created
All Resource Groups Assigned	Indicates whether there is All Resource Groups Assigned setting in the created user group
Result	Result of the operation Normal end: Normal end, Error(*xxxxx-yyyyyy*): Abnormal end *xxxxx*: Part code, *yyyyyy*: Error code
Num. of User Groups	The number of created user groups

[ACM] Delete User Grps

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[ACM],Delete User Grps,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{User Group Name,Result}=[{Group01,Normal end},
{Group02,Normal end}],Num. of User Groups=2
```

Detailed Information

Item	Description
User Group Name	The user group name
Result	Result of the operation Normal end: Normal end, Error(*xxxxx-yyyyyy*): Abnormal end *xxxxx*: Part code, *yyyyyy*: Error code
Num. of User Groups	The number of user groups

[ACM] Delete Users

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx,+00:00,RMI AP,uid=user-name,1,
Task Name,[ACM],Delete Users,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{User Name,Result}=[{User01,Normal end},{User02,Normal end}],
Num. of Users=2
```

Detailed Information

Item	Description
User Name	The user name that was deleted
Result	Result of the operation Normal end: normal end, Error(*xxxxx-yyyyyy*): Abnormal end *xxxxx*: part code, *yyyyyy*: error code
Num. of Users	The number of users that were deleted

[ACM] Edit User

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx,+00:00,RMI AP,uid=user-name,1,
Task Name,[ACM],Edit User,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{User Name,Account Status,Authentication,Result}
=[{User01,Enabled,Local,Normal end}],Num. of Users=1
```

Detailed Information

Item	Description
User Name	The user name that was edited
Account Status	Indicates whether the user account is enabled or disabled. A hyphen (-) appears if the setting is not changed. Enabled: the account is enabled, Disabled: the account is disabled.
Authentication	The authentication server that the user uses A hyphen (-) appears if the setting is not changed. Local: SVP authentication, External: External authentication
Result	Result of the operation Normal end: normal end, Error(*xxxxx-yyyyyy*): Abnormal end *xxxxx*: part code, *yyyyyy*: error code
Num. of Users	The number of users that were edited

[ACM] Edit User Grp

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[ACM],Edit User Grp,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{User Group Name,New User Group Name,Result}
={Group01,New Group01,Normal end},Num. of User Groups=1
```

Detailed Information

Item	Description
User Group Name	The user group name
New User Group Name	The user group name that was newly set
Result	Result of the operation Normal end: Normal end, Error(*xxxxx-yyyyyy*): Abnormal end *xxxxx*: Part code, *yyyyyy*: Error code
Num. of User Groups	The number of user groups

[ACM] Release Lockout

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[ACM],Release Lockout,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{User Name,Result}=[{User01,Normal end}],Num. of Users=1
```

Detailed Information

Item	Description
User Name	The user name that was released from lockout
Result	Result of the operation Normal end: normal end, Error(*xxxxx-yyyyyy*): Abnormal end *xxxxx*: part code, *yyyyyy*: error code
Num. of Users	The number of users that were released from lockout

[ACM] Remove Users

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx,+00:00,RMI AP,uid=user-name,1,
Task Name,[ACM],Remove Users,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
```

```
+{User Name,User Group Name,Result}
=[{User01,Group01,Normal end},{User02,Group01,Normal end}],
Num. of Users=2
```

Detailed Information

Item	Description
User Name	The user name that was removed from a user group
User Group Name	The name of the user group from which the user was removed
Result	Result of the operation Normal end: normal end, Error(*xxxxx-yyyyyy*): Abnormal end *xxxxx*: part code, *yyyyyy*: error code
Num. of Users	The number of users that were removed

[ACM] Set Login Message

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[ACM],Set Login Message,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+LoginMessageSentence=Login Message
```

Detailed Information

Item	Description
LoginMessageSentence	Indicates the sentence displayed on the login window of Device Manager - Storage Navigator

[ACM] Setup Server

Example 1

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[ACM],Setup Server,Disable,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
```

Basic Information for Example 1

Parameter	Description
Disable	Indicates that the External Authentication server is not used

Example 2

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[ACM],Setup Server,LDAP,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
```

```
+{Certificate File Name,DNS Lookup,Authentication Protocol,
External User Group Mapping,Primary Host Name,
Primary Port Number,Domain Name,User Name Attribute,Base DN,
Search User's DN,Timeout,Retry Interval,Number of Retries}=
-{CFFILE,Disable,STARTTLS,Enable,
-examplehost,389,example1.com,sAMAccountName,
-dc=example2 dc=com,example3.com,10,1,3}
++{Secondary Server,Secondary Host Name,Secondary Port Number}=
{Enable,example4.com,389}
+Num. of Servers=1
```

Basic Information for Example 2

Parameter	Description
LDAP	Indicates that the LDAP server is used as the External Authentication server

Detailed Information for Example 2

Item	Description
Certificate File Name	Indicates the name of certificate file
DNS Lookup	Indicates whether to search the LDAP server using the information registered in the SRV records in the DNS server Enable: Performs the search using information registered in the SRV records in the DNS server Disable: Performs the search using the host name and the port number
Authentication Protocol	Indicates the LDAP protocol (LDAP over SSL/TLS or STARTTLS) to use
External User Group Mapping	Indicates whether to connect an authentication server to an authorization server Enable: Connects an authentication server to an authorization server Disable: Does not connect an authentication server to an authorization server
Primary Host Name	Indicates the host name of the LDAP server
Primary Port Number	Indicates the port number of the LDAP server
Domain Name	Indicates the domain name that the LDAP server manages
User Name Attribute	Indicates the attribute name to identify a user
Base DN	Indicates the Base DN (Distinguished Name) for searching for users to authenticate Commas that are input by user are indicated with spaces
Search User's DN	Indicates the DN of the user for searching

Item	Description
Timeout	Indicates the number of seconds before connection to the LDAP server times out
Retry Interval	Indicates the retry interval in seconds when the connection to the LDAP server fails
Number of Retries	Indicates the retry times when the connection to the LDAP server fails
Secondary Server	Indicates whether to use a secondary LDAP server Enable: Use the secondary server Disable: Do not use the secondary server
Secondary Host Name	Indicates the host name of the secondary LDAP server
Secondary Port Number	Indicates the port number of the secondary LDAP server
Num. of Servers	The number of external authentication servers that are set

Example 3

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[ACM],Setup Server,RADIUS,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Authentication Protocol,Primary Host Name,NAS Address,
Primary Port Number,Timeout,Number of Retries,Secondary Server,
Secondary Host Name,Secondary Port Number}=
-{PAP,example1.com,
-10.213.74.20,1812,10,3,Enable,example2.com,1812}
++{External User Group Mapping,Certificate File Name,
Authentication Protocol,DNS Lookup,Host Name,Port Number,
Domain Name,Base DN,Search User's DN,Timeout,Retry Interval,
Number of Retries}=
-{Enable,CFFILE,STARTTLS,Disable,
-example.com,389,example1.com,
-dc=example2 dc=com,example3.com,10,1,3}
+Num. of Servers=1
```

Basic Information for Example 3

Parameter	Description
RADIUS	Indicates that the RADIUS server is used as the External Authentication server.

Detailed Information for Example 3

Item	Description
Authentication Protocol	Indicates the RADIUS protocol to use PAP: password authentication protocol that transmits plaintext user ID and password

Item	Description
	CHAP: challenge-handshake authentication protocol that transmits encrypted password
Primary Host Name	Indicates the host name of the RADIUS server
NAS Address	Indicates the identifier for the RADIUS server to find SVP
Primary Port Number	Indicates the port number of the RADIUS server
Timeout	Indicates the number of seconds before connection to the RADIUS server times out
Number of Retries	Indicates the number of times that the system tries to reconnect to the server when the connection to the RADIUS server fails
Secondary Server	Indicates whether to use a secondary RADIUS server or a secondary LDAP server Enable: Use the secondary server Disable: Do not use the secondary server
Secondary Host Name	Indicates the host name of the secondary RADIUS server
Secondary Port Number	Indicates the port number of the secondary RADIUS server
External User Group Mapping	Indicates whether to connect an authentication server to an authorization server Enable: Connects an authentication server to an authorization server Disable: Does not connect an authentication server to an authorization server
Certificate File Name	Indicates the name of certificate file
Authentication Protocol	Indicates the LDAP protocol to use
DNS Lookup	Indicates whether to search for the LDAP server using the information registered in the SRV records in the DNS server Enable: Performs the search using information registered in the SRV records in the DNS server Disable: Performs the search using the host name and the port number
Host Name	Indicates the host name of the LDAP server
Port Number	Indicates the port number of the LDAP server
Domain Name	Indicates the domain name that the LDAP server manages
Base DN	Indicates the Base DN for searching for users to authenticate Commas that are input by user are indicated with spaces
Search User's DN	Indicates the DN of the user for searching
Timeout	Indicates the number of seconds before the connection to the LDAP server times out

Item	Description
Retry Interval	Indicates the retry interval in seconds when the connection to the LDAP server fails
Number of Retries	Indicates the retry times when the connection to the LDAP server fails
Num. of Servers	The number of external authentication servers that are set

Example 4

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[ACM],Setup Server,Kerberos,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{DNS Lookup,Realm Name,Primary Host Name,Primary Port Number,
Clock Skew,Timeout,Secondary Server,Secondary Host Name,
Secondary Port Number}=
-{Disable,example1.com,example2.com,88,300,10,Enable,example3.com,
88}
++{External User Group Mapping,Certificate File Name,
Authentication Protocol,Primary Port Number,Base DN,
Search User's DN,Timeout,Retry Interval,Number of Retries,
Secondary Sever,Secondary Port Number}
=-{Enable,CFFILE,STARTTLS,389,-dc=example4 dc=com,example5.com,
10,1,20,Enable,389}
+Num. of Servers=1
```

Basic Information for Example 4

Parameter	Description
Kerberos	Indicates that the Kerberos server is used as the External Authentication server.

Detailed Information for Example 4

Item	Description
DNS Lookup	Displays whether to search for the Kerberos server using the information registered in the SRV records in the DNS server Enable: Performs the search using information registered in the SRV records in the DNS server Disable: Performs the search using the host name and the port number
Realm Name	Indicates the default realm name
Primary Host Name	Indicates the host name of the Kerberos server
Primary Port Number	Indicates the port number of the Kerberos server
Clock Skew	Indicates the acceptable range of time difference between the SVP and the Kerberos server

Item	Description
Timeout	Indicates the number of seconds before connection to the Kerberos server times out
Secondary Server	Indicates whether to use a secondary Kerberos server Enable: Use the secondary server Disable: Do not use the secondary server
Secondary Host Name	Indicates the host name of the secondary Kerberos server
Secondary Port Number	Indicates the port number of the secondary Kerberos server
External User Group Mapping	Indicates whether to connect an authentication server to an authorization server Enable: Connects an authentication server to an authorization server Disable: Does not connect an authentication server to an authorization server
Certificate File Name	Indicates the name of certificate file
Authentication Protocol	Indicates the LDAP protocol to use
Primary Port Number	Indicates the port number of the LDAP server
Base DN	Indicates the Base DN for searching for users to authenticate Commas that are input by user are indicated with spaces
Search User's DN	Indicates the DN of the user for searching
Timeout	Indicates the number of seconds before connection to the LDAP server times out
Retry Interval	Indicates the retry interval in seconds when the connection to the LDAP server fails
Number of Retries	Indicates the retry times when the connection to the LDAP server fails
Secondary Server	Indicates whether to use a secondary LDAP server Enable: Use the secondary server Disable: Do not use the secondary server
Secondary Port Number	Indicates the port number of the secondary LDAP server
Num. of Servers	The number of external authentication servers that are set

BASE Descriptions

[BASE] Advanced Settings

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[BASE],Advanced Settings,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Option, Option Bit}
=[{Advanced System Setting, F0000000000000000000000000000
0000000000000000000000000000000000000000000000000000000000
0000000000000000000000000000000000000000000000000000000000
0000000000000000000000000000000000000000000000000000000000
0000000000000000000000000000000000000000000000000000000000}],
Num. of Modes=1024
```

Detailed Information

Item	Description
Option	Indicates the specified option Advanced System Setting: Advanced system setting of Device Manager - Storage Navigator
Option Bit	Indicates the specified option in hexadecimal.
Num. of Modes	The number of modes

[BASE] Certificate Update

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,0,,
[BASE],Certificate Update,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{File Name,Result}=[{server.crt,Normal end},
{server.key,Error(xxxx-yyyy)}]
```

Detailed Information

Item	Description
File Name	Name of the uploaded file
Result	Result of the upload operation Normal end: normal end, Error(*xxxx-yyyy*): Abnormal end *xxxx*: part code, *yyyy*: error code

[BASE] ControlPanel Backup

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,0,,
[BASE],ControlPanel Backup,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{File Name,Result}
=[{User Account Information,Normal end},
{Environment Parameter List,Normal end},
{Log Transfer Information,Normal end},{External Authentication,-},
{External Application Link,-},{HiCommand Setting,-},
{Key Management Server,Normal end},{Password Policy,Normal end}]
```

Detailed Information

Item	Description
File Name	Name of the backup file
Result	Result of the backup operation Normal end: normal end, Error(*xxxx-yyyy*): Abnormal end, -: not selected *xxxx*: part code, *yyyy*: error code

[BASE] ControlPanel Restore

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,0,,
[BASE],ControlPanel Restore,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{File Name,Result}
=[{User Account Information,Normal end},
{Environment Parameter List,Normal end},
{Log Transfer Information,Normal end},{External Authentication,-},
{External Application Link,-},{HiCommand Setting,-},
{Key Management Server,Normal end},{Password Policy,Normal end}]
```

Detailed Information

Item	Description
File Name	Name of the restore file
Result	Result of the restore operation Normal end: normal end, Error(*xxxx-yyyy*): Abnormal end, -: not selected *xxxx*: part code, *yyyy*: error code

[BASE] Create Conf Report

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[BASE],Create Conf Report,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
++{ReportName,UserName,FolderName,StartTime}
={XXXXXXX,manager,YYYYYYYYY,YYYYMMDDHHMMSS}
```

Detailed Information

Item	Description
ReportName	Name of the created configuration report
UserName	Name of the user who created the configuration report
FolderName	Folder name where the configuration report is output
StartTime	Starting date and time of the configuration report creation

[BASE] Delete CVAE Info

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[BASE],Delete CVAE Info,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{ID}={0,1,2,3},Num. of IDs=4
```

Detailed Information

Item	Description
ID	ID (unique ID row by row) of the version information that was deleted
Num. of IDs	The number of IDs

[BASE] Delete Reports

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[BASE],Delete Reports,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{FolderName,Result}=[{XXXXXXXXX,Normal end},
{XXXXXXXXX,Normal end},{XXXXXXXXX,Normal end},
-{XXXXXXXXX,Normal end}],Num. of Reports=4
```

Detailed Information

Item	Description
FolderName	Folder name of the deleted configuration report.
Result	Result of the operation Normal end: normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: part code, *yyyyy*: error code
Num. of Reports	The number of deleted configuration reports

[BASE] Delete Tasks

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[BASE],Delete Tasks,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Task Name,Type,User Name,Submission Time,Result}
=[{20100101-EditStorageSystem,Edit Storage System,User01,
YYYY/MM/DD HH:MM:SS,Normal end},{20100101-CreateLdev,
Create LDEV,User02,YYYY/MM/DD HH:MM:SS,Normal end}],
Num. of Tasks=2
```

Detailed Information

Item	Description
Task Name	Name of the deleted task
Type	Type of the task
User Name	The user ID who deleted the task
Submission Time	Time when the task was registered
Result	Result of the operation Normal end: normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: part code, *yyyyy*: error code
Num. of Tasks	The number of deleted tasks

[BASE] Disable Auto Delete

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[BASE],Disable Auto Delete,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Task Name,Type,User Name,Submission Time,Result}
=[{20100101-EditStorageSystem,Edit Storage System,User01,
YYYY/MM/DD HH:MM:SS,Normal end},{20100101-CreateLdev,
Create LDEV,User02,YYYY/MM/DD HH:MM:SS,Normal end}],
Num. of Tasks=2
```

Detailed Information

Item	Description
Task Name	The task name that the disable auto delete operation was performed
Type	Type of the task
User Name	ID of the user who performed the operation
Submission Time	Time when the task was registered
Result	Result of the operation Normal end: normal end, Error(*xxxx-yyyyy*): Abnormal end: *xxxx*: part code, *yyyyy*: error code
Num. of Tasks	Number of the target tasks.

[BASE] Edit Alert Setting

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[BASE],Edit Alert Setting,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Notification Alert=Host Report
```

Detailed Information

Item	Description
Notification Alert	Indicates the type of notification Host Report: SIMs with host reports, all: All SIMs

[BASE] Edit High TEMP Mode

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[BASE],Edit High TEMP Mode,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+High Temperature Mode=Enable
```

Detailed Information

Item	Description
High Temperature Mode	The temperature environment setting of the storage system Enable: High Temperature Mode is enabled Disable: High Temperature Mode is disabled

[BASE] Edit SIM Syslog Serv

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[BASE],Edit SIM Syslog Serv,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Transfer Protocol=TLS1.2
+Location Identification Name=ABCDEFGHIJK
+Timeout=10
+Retry Interval=1
+Number of Retries=3
+{Server Type,SIM Transfer,IP Version,IP Address,Port Number,
Client Certificate File Name,Root Certificate File Name}
=[{Primary,Enable,IPv4,xxx.xxx.xxx.xxx,yyy,FILE1,FILE2},
{Secondary,Disable,,,,,}],Num. of Servers=2
```

Detailed Information

Item	Description
Transfer Protocol	Indicates the syslog transfer protocol. TLS1.2: New Syslog Protocol (TLS1.2/RFC5424) UDP: Old Syslog Protocol (UDP/RFC3164)
Location Identification Name	Indicates the location identification information of the storage system.
Timeout	Indicates the time to detect the timeout of communication with the syslog server. It is not output if the syslog transfer protocol is UDP.
Retry Interval	Indicates the retry interval when the communication with the syslog server fails. It is not output if the syslog transfer protocol is UDP.
Number of Retries	Indicates the number of retries when the communication with the syslog server fails. It is not output if the syslog transfer protocol is UDP.
Server Type	Indicates the syslog server that notifies SIMs by syslog. Primary: Primary syslog server Secondary: Secondary syslog server
SIM Transfer	Whether to notify SIMs by syslog. Enable: SIMs are notified by syslog Disable: SIMs are not notified by syslog
IP Version	Indicates the internet protocol version. It is not output if SIMs are not notified by syslog. IPv6: Internet Protocol Version 6 IPv4: Internet Protocol Version 4
IP Address	Indicate the IP address of the syslog server. It is not output if SIMs are not notified by syslog.
Port Number	Indicates the port number of the LAN while notifying SIMs by syslog. It is not output if SIMs are not notified by syslog.

Item	Description
Client Certificate File Name	Indicates the client certificate file name. It is not output if the file is not uploaded.
Root Certificate File Name	Indicates the CA certificate file name. It is not output if the file is not uploaded.
Num. of Servers	Indicates the number of the servers that are set.

[BASE] Edit Storage System

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[BASE],Edit Storage System,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Name,Contact,Location}=[{XXXXX,XXXXX,XXXXX}],
Num. of SystemInfos=1
```

Detailed Information

Item	Description
Name	Name of the storage system
Contact	Administrator of the storage system
Location	Location of the storage system
Num. of SystemInfos	Number of the edited storage systems

[BASE] Enable Auto Delete

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[BASE],Enable Auto Delete,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Task Name,Type,User Name,Submission Time,Result}
=[{20100101-EditStorageSystem,Edit Storage System,User01,
YYYY/MM/DD HH:MM:SS,Normal end},{20100101-CreateLdev,
Create LDEV,User02,YYYY/MM/DD HH:MM:SS,Normal end}],
Num. of Tasks=2
```

Detailed Information

Item	Description
Task Name	The task name that the enable auto delete operation was performed.
Type	The type of task
User Name	ID of the user who performed the operation

Item	Description
Submission Time	Time when the task was registered
Result	Result of the operation Normal end: normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: part code, *yyyyy*: error code
Num. of Tasks	Number of the target tasks

[BASE] Entry Tasks

This log is output when each task on the Device Manager - Storage Navigator menu is performed.

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[BASE],Entry Tasks,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Action Name}=[{xxxxxxx},{xxxxxxx},{xxxxxxx},{xxxxxxx},
{xxxxxxx}],Num. of Actions=5
```

Detailed Information

Item	Description
Action Name	The name of the performed action
Num. of Actions	The number of performed actions

[BASE] Environment Setting

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,0,,
[BASE],Environment Setting,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{RMI time-out period,RMI time-out period for Modify,
Polling period for checking exclusive lock,
Polling period for checking obstacles}={1,10,5,5}
```

Detailed Information

Item	Description
RMI time-out period	RMI time-out period
RMI time-out period for Modify	RMI time-out period for Modify

Item	Description
Polling period for checking exclusive lock	The polling period for checking exclusive lock
Polling period for checking obstacles	The polling period for checking obstacle statuses

[BASE] HCSSO Authentication

Example 1: When SSO authentication is succeeded

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,0,,
[BASE],HCSSO Authentication,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
```

* "0" is always output in the connection number.

Example 2: When SSO authentication failed

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,0,,
[BASE],HCSSO Authentication,,Error(xxxxx-yyyyyy),
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
```

* "0" is always output in the connection number.

[BASE] HCSSO SetOneTimeKey

Example 1: When authentication failed in issuance of OneTimeKey

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,0,,
[BASE],HCSSO SetOneTimeKey,Authentication,Error(xxxxx-yyyyyy),
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
```

* "0" is always output in the connection number.

Example 2: When the number of registered OneTimeKeys exceeds the maximum

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,0,,
[BASE],HCSSO SetOneTimeKey,OneTimeKey EntryOver,
Error(xxxxx-yyyyyy),from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,
Seq.=xxxxxxxxxx
```

* "0" is always output in the connection number.

Basic Information

Parameter	Description
Authentication	The authentication failed in the issuance of OneTimeKey.

Parameter	Description
OneTimeKey EntryOver	The number of OneTimeKeys exceeded the maximum.

[BASE] Login

Example 1: When login succeeded

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[BASE],Login,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
```

Example 2: When login failed

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[BASE],Login,,Error(xxxx-yyyy),
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Lockout=No
```

Detailed Information

Item	Description
Lockout	Indicates whether the user account is locked out or not Yes: Locked out, No: Not locked out

Example 3: When logged into an operation window on the Tool Panel

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[BASE],Login,,Error(xxxx-yyyy),
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Operation Name,Lockout}={Control Panel,Yes}
```

Detailed Information

Item	Description
Operation Name	Indicates which operation window that was logged in on the Tool Panel
Lockout	Indicates whether the user account is locked out or not Yes: Locked out, No: Not locked out When login succeeded, this item is not output.

[BASE] Logout

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[BASE],Logout,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
```

[BASE] Release HTTP Block

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,0,,
[BASE],Release HTTP Block,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{HTTP Block,Result}={-,Normal end}
```

Detailed Information

Item	Description
HTTP Block	Status of the HTTP Block. -: disabled, Blocked: enabled
Result	Result of the HTTP Block setting Normal end: normal end, Error(*xxxx-yyyy*) Abnormal end *xxxx*: part code, *yyyy*: error code

[BASE] Resume Tasks

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[BASE],Resume Tasks,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Task Name,Type,User Name,Submission Time,Result}
=[{20100101-EditStorageSystem,Edit Storage System,User01,
YYYY/MM/DD HH:MM:SS,Normal end},{20100101-CreateLdev,
Create LDEV,User02,YYYY/MM/DD HH:MM:SS,Normal end}],
Num. of Tasks=2
```

Detailed Information

Item	Description
Task Name	Name of the resumed task
Type	The type of task
User Name	The ID of the user who resumed the task
Submission Time	Time when the task was registered
Result	Result of the operation Normal end: normal end, Error(*xxxx-yyyyy*): Abnormal end

Item	Description
	xxxx: part code, *yyyyy*: error code
Num. of Tasks	The number of target tasks

[BASE] Set CVAE Info

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[BASE],Set CVAE Info,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{ID,ProductName,VersionInfo,IPAddress,RegistryDate,
LastAccessDate,MemoRandom}
={1,DevMgr,6.0.0.-00,10.213.38.210,
01/23/2008 12:34:56,01/24/2008 16:54:02,MEMO SPACE},
Num. of CVAEInfos=1
+{LicenseInfo}={Core license,Full license,Expired},
Num. of LicenseInfos=3
```

Detailed Information

Item	Description
ID	ID (unique ID row by row) of the version information that was deleted
ProductName	Product name (Hitachi Command Suite)
VersionInfo	Version Information
IPAddress	Network address information (IPv4, IPv6, and network name)
RegistryDate	Time stamp of initial registration
LastAccessDate	Time stamp of the final access
MemoRandom	Memo space information
Num. of CVAEInfos	The number of Hitachi Command Suite messages
LicenseInfo	License information
Num. of LicenseInfos	The number of license messages

[BASE] Set Up HTTP Block

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,0,,
[BASE],Set Up HTTP Block,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{HTTP Block,Result}={Blocked,Normal end}
```

Detailed Information

item	Description
HTTP Block	Status of the HTTP Block -: disabled, Blocked: enabled
Result	Result of the HTTP Block setting Normal end: normal end, Error(*xxxx-yyyy*): Abnormal end *xxxx*: part code, *yyyy*: error code

[BASE] Suspend Tasks

Example

```
08xx,YYYY/MM/DD,HH:MM.SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[BASE],Suspend Tasks,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Task Name,Type,User Name,Submission Time,Result}
=[{20100101-EditStorageSystem,Edit Storage System,User01,
YYYY/MM/DD HH:MM:SS,Normal end},{20100101-CreateLdev,
Create LDEV,User02,YYYY/MM/DD HH:MM:SS,Normal end}],
Num. of Tasks=2
```

Detailed Information

Item	Description
Task Name	Name of the suspended task
Type	The type of task
User Name	Name of the user who suspended the task
Submission Time	Time when the task was registered.
Result	Result of the operation Normal end: normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: part code, *yyyyy*: error code
Num. of Tasks	Number of the target tasks

[BASE] Unlock Forcibly

Example

```
08xx,YYYY/MM/DD,HH:MM.SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[BASE],Unlock Forcibly,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
```

[BASE] Update HCS Crt

Example

```
08xx,YYYY/MM/DD,HH:MM.SS.xxx, 00:00,RMI AP,uid=user-name,0,,
[BASE],Update HCS Crt,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Mode=Set
```

Detailed Information

Item	Description
Mode	The type of the operation Delete: Deletion of the certificate for Hitachi Command Suite Set: Registration of the certificate for Hitachi Command Suite

[BASE] Update SMIS CrtFiles

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,0,,
[BASE],Update SMIS CrtFiles,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{File Name,Result}=[{server.crt,Normal end},
{server.key,Normal end}]
```

Detailed Information

Item	Description
File Name	Name of a digital certificate file for SMI-S to be modified
Result	Result of the operation Normal end: normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: part code, *yyyyy*: error code

[BASE] Upload SMIS ConfFile

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,0,,
[BASE],Upload SMIS ConfFile,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{File Name,Result}=[{array-setting-01.properties,Normal end}]
```

Detailed Information

Item	Description
File Name	Name of the uploaded file

Item	Description
Result	Result of the upload operation Normal end: normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: part code, *yyyyy*: error code

Compatible PAV Descriptions

[CPAV] Add Alias

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[CPAV],Add Alias,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+LDKC=0x00,CU=0x00
++{Alias LDEV,Base LDEV}=[{0xFD,0x00},{0xFE,0x00},{0xFF,0x01}],
Num. of Alias LDEVs=3
+LDKC=0x00,CU=0x01
++{Alias LDEV,Base LDEV}=[{0xFF,0x00}],Num. of Alias LDEVs=1
+Num. of Alias LDEVs=4
```

Detailed Information

Item	Description
LDKC	Indicates LDKC number containing the alias device and the base device
CU	Indicates CU number containing the alias device and the base device
Alias LDEV	The alias device number allocated to the CU number indicated in CU of the index
Base LDEV	The base device number allocated to the CU number indicated in CU of the index
Num. of Alias LDEVs	The number of alias devices allocated to the CU number indicated in CU of the index
Num. of Alias LDEVs	The number of alias devices allocated to all CU numbers indicated in CU of the index

[CPAV] Delete Alias

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[CPAV],Delete Alias,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+LDKC=0x00,CU=0x00
++{Alias LDEV,Base LDEV}=[{0xFD,0x00},{0xFE,0x00},{0xFF,0x01}],
Num. of Alias LDEVs=3
```

```
+LDKC=0x00,CU=0x01
++{Alias LDEV,Base LDEV}=[{0xFF,0x00}],Num. of Alias LDEVs=1
+Num. of Alias LDEVs=4
```

Detailed Information

Item	Description
LDKC	Indicates LDKC number containing the alias device and the base device
CU	Indicates CU number containing the alias device and the base device
Alias LDEV	The alias device number allocated to the CU number indicated in CU of the index
Base LDEV	The base device number allocated to the CU number indicated in CU of the index
Num. of Alias LDEVs	The number of alias devices allocated to the CU number indicated in CU of the index
Num. of Alias LDEVs	The number of alias devices allocated to all CU numbers indicated in CU of the index

E-Mail Descriptions

[E-Mail] MailAddress Write

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[E-Mail],MailAddress Write,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{MailServerSetting,MailServer}={HostName,smtp.test.co.jp}
+{SMTP AUTH,Account}={Enable,Account}
+{FromAddress,ReturnAddress}={TransAddr@co.jp,ReplyAddr@co.jp}
+UsedCount=32
++{ToAddressList,Attribute}=[{usr1@co.jp,TO},{usr2@co.jp,TO},
{usr3@co.jp,TO},{usr4@co.jp,CC},   [snip] {usr25@co.jp,CC},
{usr26@co.jp,BCC},{usr27@co.jp,BCC},{-,-},{-,-},
{usr31@co.jp,BCC}],Num. of Accounts=32
```

Detailed Information

Item	Description
MailServerSetting	The specification type of the server HostName: Host name, IP Address: IP address (IPv4 or IPv6)
MailServer	The SMTP server domain name or IP address. If IP address is specified, the address divided by periods means IPv4 address and the address divided by colons means IPv6 address.

Item	Description
SMTP AUTH	Indicates whether the SMTP authentication is enabled or disabled. Disable or Enable will appear.
Account	SMTP server account
FromAddress	Mail source address
ReturnAddress	Return mail address. If you want to receive the reply to another mail address, you can specify the desired address by using ReturnAddress.
UsedCount	The number of mail addresses that have been registered as a destination
ToAddressList	Mail addresses of a destination. Thirty-two addresses are always displayed. If a mail address is not specified, {-,-} is displayed instead of mail address and attribute.
Attribute	Attributes (TO, CC, or BCC) of the destination mail addresses
Num. of Accounts	The number of displayed destination mail addresses. The displayed mail addresses may not have an account setting.

[E-Mail] Valid Flag Update

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[E-Mail],Valid Flag Update,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+MailNoticeSetting=Enable
```

Detailed Information

Item	Description
MailNoticeSetting	Indicates whether the mail notice is enabled or disabled. Disable or Enable will appear.

Information Descriptions

[Information] Delete Log

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Information],Delete Log,SIM,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
```

Basic Information

Parameter	Description
SIM	Record of a deleted SIM log
SSB	Record of a deleted SSB log
Reset	Record of a deleted Reset log
Power Event	Record of a deleted Power Event log
Detail	Record of a deleted Detail log
Incident	Record of a deleted Incident log
HTP	Record of a deleted HTP log
Diagnosis	Record of a deleted Diagnosis log
Copy History	Record of a deleted Copy History log

[Information] ORM Value

Example 1: changing the threshold of SAS

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Information],ORM Value,Alter,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Type=7days
+{Read Err.(Unrecovered),Read Err.(Recovered),
Seek Err.(Recovered),Seek Err.(Unrecovered),Not Ready,
Other Errors}={15,1.00e-008,100,10,10,10}
++PDEV=[HDD000-01,HDD000-02],Num. of PDEVs=2
```

Example 2: changing the threshold of the SSD when drive type is other than SLxxx-MxxxSS

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Information],ORM Value,Alter,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Type=Total
+{Total Defect Count}={15}
++PDEV=[HDD000-01,HDD000-02],Num. of PDEVs=2
```

Example 3: changing the threshold of the SSD when drive type is SLxxx-MxxxSS

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Information],ORM Value,Alter,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Type=Total
+{Total Defect Count,Used Endurance Indicator}={160000,(99,90)}
++PDEV=[HDD000-03],Num. of PDEVs=1
```

Example 4: changing the threshold of the FMD when drive type is NFHxx-Pxxxxx

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Information],ORM Value,Alter,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Type=Today
+{Total Defect Count,Reboot Error,DMA Error,Memory Error,
Uncorrected Error,Used Endurance Indicator,Battery Error,
FMD Battery Life Indicator}={0,2,10,500,512,(0,0),1,0}
++PDEV=[HDD000-03],Num. of PDEVs=1
```

Example 5: changing the threshold of the FMD when drive type is NFHxx-Qxxxxx

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Information],ORM Value,Alter,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Type=Today
+{Total Defect Count,Reboot Error,DMA Error,Memory Error,
Uncorrected Error,Used Endurance Indicator,Capacitor Error}=
{0,2,10,500,512,(0,0),1}
++PDEV=[HDD000-03],Num. of PDEVs=1
```

Example 6: Error Reset

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Information],ORM Value,Error Reset,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+PDEV=HDD000-01
```

Basic Information

Parameter	Description
Alter	Change the threshold of ORM (Online Read Margin)
Error Reset	Indicates Error Reset

Detailed Information

Item	Description
Type	The period of time to acquire the result of threshold diagnosis using the read diagnosis function Today: Current day only, 7days: 7 days, Total: Every operating days
Read Err. (Unrecovered)	The threshold of the Read Error (Unrecovered)
Read Err. (Recovered)	The threshold of the Read Error (Recovered)
Seek Err. (Recovered)	The threshold of the Seek Error (Recovered)
Seek Err. (Unrecovered)	The threshold of the Seek Error (Unrecovered)

Item	Description
Not Ready	The threshold of the Not Ready status.
Other Errors	The threshold of Other Errors.
Total Defect Count	The threshold of the Total Defect Count
Used Endurance Indicator	The threshold of the Used Endurance Indicator
Reboot Error	The threshold of the Reboot Error
DMA Error	The threshold of the DMA Error
Memory Error	The threshold of the Memory Error
Uncorrected Error	The threshold of the Uncorrected Error
Battery Error	The threshold of the Battery Error
FMD Battery Life Indicator	The threshold of the FMD Battery Life Indicator
Capacitor Error	The threshold of the Capacitor Error
PDEV	The mounting location of the PDEV (physical device) that is the target of Alter or error reset
Num. of PDEVs	The number of PDEVs (physical devices)

[Information] SIM Complete

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Information],SIM Complete,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Reference Code=[XXXXXX,XXXXXX],Num. of Reference Codes=2
```

Detailed Information

Item	Description
Reference Code	The reference code of the SIM whose error and service request are resolved.
Num. of Reference Codes	The number of SIM reference codes whose error and service request are resolved.

[Information] SIM Reporting Option

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Information],SIM Reporting Option,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Type=DKC SIM
```

```
++{Acute,Serious,Moderate,Service}={ON,ON,ON,ON}
+Type=Cache SIM
++{Acute,Serious,Moderate,Service}={ON,ON,ON,ON}
+Type=Media SIM
++{Acute,Serious,Moderate,Service}={ON,ON,ON,ON}
+Type=Device SIM
++{Acute,Serious,Moderate,Service}={ON,ON,ON,ON}
+Num. of Types=4
```

Detailed Information

Item	Description
Type	The type of SIM. DKC SIM: SIM related to storage system, Cache SIM: SIM related to cache, Media SIM: SIM related to recording media Device SIM: SIM related to disk device
Acute	Report acute level information as a SIM. ON: Report, OFF: Do not report
Serious	Report serious level information as a SIM. ON: Report, OFF: Do not report
Moderate	Report moderate level information as a SIM. ON: Report, OFF: Do not report
Service	Report service level information as a SIM. ON: Report, OFF: Do not report
Num. of Types	The number of information levels to be reported as a SIM.

[Information] Threshold Value

Example 1

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Information],Threshold Value,Alter,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Type=7days
+{Mechanical error(Recovered,Unrecd.),Media error(Recovered,
Unrecd.),Read/Write error(Recovered,Unrecd.),
Drive I/F error(Recovered,Unrecd.),
Controller hardware error(Recovered,Unrecd.),
Drive response late,SAS I/F error Port 0(Unrecd.),
SAS I/F error Port 1(Unrecd.),Port 0 error(Unrecd.),
Port 1 error(Unrecd.)}
={(150,60),(0,15),(150,30),(150,6),(150,6),0,6,6,12,12}
++PDEV=[HDD000-01,HDD000-02],Num. of PDEVs=2
```

Example 2

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Information],Threshold Value,Error Reset,Normal end,
```

```
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+PDEV=HDD000-01
```

Basic Information

Parameter	Description
Alter	Change the threshold of failed PDEV (physical device).
Error Reset	Indicates Error Reset.

Detailed Information

Item	Description
Type	The period of time to acquire the result of threshold diagnosis using the read diagnosis function. 7days: 7 days, Total: Every operating days
Mechanical error (Recovered, Unrecd.)	The threshold of the Mechanical error
Media error (Recovered, Unrecd.)	The threshold of the Media error
Read/Write error (Recovered, Unrecd.)	The threshold of the Read/Write error
Drive I/F error (Recovered, Unrecd.)	The threshold of the Drive I/F error
Controller hardware error (Recovered, Unrecd.)	The threshold of the Controller hardware error
Drive response late	The threshold of the Drive response late
SAS I/F error Port 0 (Unrecd.)	The threshold of the SAS I/F error Port 0
SAS I/F error Port 1 (Unrecd.)	The threshold of the SAS I/F error Port 1
Port 0 error (Unrecd.)	The threshold of the Port 0 error
Port 1 error (Unrecd.)	The threshold of the Port 1 error
PDEV	The mounting location of PDEV (physical device) that is the target of Alter or error reset
Num. of PDEVs	The number of PDEVs (physical devices)

Install Descriptions

[Install] Add Host Group

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Install],Add Host Group,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Port,HostGrpID,HostGrpName,Mode,Option[0:31],Option[32:63],
Option[64:95],Option[96:127]}=
{XX,0xXXX,XXXXXXXXXXXXXXXX,0xXX,0xXXXXXXXX,
0xXXXXXXXX,0xXXXXXXXX,0xXXXXXXXX}
++{WWN,Nickname}=[{0xXXXXXXXXXXXXXXXX,XXXXXXXXXXXXXXXX},
{0xXXXXXXXXXXXXXXXX,XXXXXXXXXXXXXXXX}],Num. of WWNs=2
+{Port,HostGrpID,HostGrpName,Mode,Option[0:31],Option[32:63],
Option[64:95],Option[96:127]}=
{XX,0xXXX,XXXXXXXXXXXXXXXX,0xXX,0xXXXXXXXX,
0xXXXXXXXX,0xXXXXXXXX,0xXXXXXXXX}
+Num. of Host Groups=2
```

Detailed Information

Item	Description
Port	The name of the port where the host group has been newly added.
HostGrpID	The newly added host group number
HostGrpName	The name of the newly added host group.
Mode	The newly added host mode. Please see the *Provisioning Guide for Open Systems* for the meaning of the host mode number.
Option[0:31] Option[32:63] Option[64:95] Option[96:127]	The newly added host mode option. Hexadecimal values are output.
WWN	Indicates WWN of the host bus adapter for the host registered in the host group.
Nickname	The nickname of the host bus adapter for the host registered in the host group.
Num. of WWNs	The number of WWNs of the host registered in the host group.
Num. of Host Groups	The number of added host groups.

[Install] Add LU Path

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Install],Add LU Path,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Port,HostGrpID,LUN,LDKC:CU:LDEV}=[{XX,0xXXX,XX,
```

```
0xXX:0xXX:0xXX},{XX,0xXXX,XX,0xXX:0xXX:0xXX},
{XX,0xXXX,XX,0xXX:0xXX:0xXX}],Num. of Paths=3
```

Detailed Information

Item	Description
Port	The name of the port to which the host group belongs.
HostGrpID	The host group number linked to the logical volume.
LUN	Indicates the LUN of the logical volume linked to the host group.
LDKC:CU:LDEV	The LDKC, CU, and LDEV numbers of the logical volume linked to the host group.
Num. of Paths	The number of LU paths set.

[Install] Add WWN

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Install],Add WWN,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Port,HostGrpID,WWN,Nickname}
=[{XX,0xXXX,0xXXXXXXXXXXXXXXXX,XXXXXXXXXXXXXXXX},
{XX,0xXXX,0xXXXXXXXXXXXXXXXX,XXXXXXXXXXXXXXXX}],
Num. of WWNs=2
```

Detailed Information

Item	Description
Port	The name of the port to which the host group belongs.
HostGrpID	The number of the host group where the host was registered.
WWN	Indicates WWN of the host bus adapter for the host registered in the host group. WWN is a 16-digit number in the hexadecimal format.
Nickname	The nickname of the host bus adapter for the host registered in the host group.
Num. of WWNs	The number of WWNs of the host registered in the host group.

[Install] All Config

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Install],All Config,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{New Ver.,Old Ver.}={xx-xx-xx/xx,xx-xx-xx/xx}
```

Detailed Information

Item	Description
New Ver.	The new version number.
Old Ver.	The old version number.

[Install] Backup Config

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Install],Backup Config,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Ver.=xx-xx-xx/xx
```

Detailed Information

Item	Description
Ver.	The version number of the configuration information to be backed up.

[Install] Change Host Group

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Install],Change Host Group,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Port,HostGrpID,HostGrpName}
=[{XX,0xXXX,XXXXXXXXXXXXXXXX},{XX,0xXXX,XXXXXXXXXXXXXXXX}],
Num. of Host Groups=2
```

Detailed Information

Item	Description
Port	The name of the port to which the host group belongs.
HostGrpID	The number of the host group where the host group name has been changed.
HostGrpName	The name of the host group. If the name is changed, the name after change is indicated.
Num. of Host Groups	The number of host groups where the settings have been changed.

[Install] Change WWN

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Install],Change WWN,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Port,HostGrpID,WWN,Change WWN,Change NickName}
=[{XX,0xXXX,0xXXXXXXXXXXXXXXXX,0xXXXXXXXXXXXXXXXX,
XXXXXXXXXXXXXXXX}],
Num. of WWNs=1
```

Detailed Information

Item	Description
Port	The name of the port where the host is connected.
HostGrpID	The host group number on which the host with WWN or nickname of the host bus adapter being changed is registered.
WWN	Indicates the WWN of the host bus adapter before the change.
Change WWN	Indicates the WWN of the host bus adapter after the change.
Change Nickname	The nickname of the host bus adapter after the change.
Num. of WWNs	The number of host bus adapters (WWN) where the settings have been changed.

[Install] DCR Prestaging

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Install],DCR Prestaging,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
```

[Install] Define Config.

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Install],Define Config.,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
```

[Install] Delete DKC WWN

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Install],Delete DKC WWN,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Port,Delete WWN}
=[{XX,0xXXXXXXXXXXXXXXXX},{XX,0xXXXXXXXXXXXXXXXX}],
Num. of WWNs=2
```

Detailed Information

Item	Description
Port	The port name where the host of deleted Login WWN was connected
Delete WWN	Indicates the deleted Login WWN. WWN is a 16-digit number in the hexadecimal format
Num. of WWNs	The number of deleted Login WWNs

[Install] Delete Host Group

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Install],Delete Host Group,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Port,HostGrpID}=[{XX,0xXXX},{XX,0xXXX}],Num. of Host Groups=2
```

Detailed Information

Item	Description
Port	The name of the port to which the deleted or initialized host group belonged
HostGrpID	The host group number that was deleted or initialized
Num. of Host Groups	The number of host groups that was deleted or initialized

[Install] Delete LU Path

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Install],Delete LU Path,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Port,HostGrpID,LUN,LDKC:CU:LDEV}
=[{XX,0xXXX,XX,0xXX:0xXX:0xXX},{XX,0xXXX,XX,0xXX:0xXX:0xXX},
{XX,0xXXX,XX,0xXX:0xXX:0xXX}],
Num. of Paths=3
```

Detailed Information

Item	Description
Port	The name of the port to which the host group belongs
HostGrpID	The host group number where the LU path is deleted
LUN	Indicates LUN where the LU path assignment is cancelled
LDKC:CU:LDEV	The LDKC, CU, and LDEV numbers of the volume where the LU path assignment is cancelled

Item	Description
Num. of Paths	The number of LU paths deleted

[Install] Delete WWN

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Install],Delete WWN,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Port,HostGrpID,WWN}
=[{XX,0xXXX,0xXXXXXXXXXXXXXXXX},
{XX,0xXXX,0xXXXXXXXXXXXXXXXX}],Num. of WWNs=2
```

Detailed Information

Item	Description
Port	The name of the port where the host deleted from host group was connected
HostGrpID	The host group number where the host is deleted
WWN	Indicates WWN of the host deleted from the host group
Num. of WWNs	The number of hosts (WWN) deleted from the host group

[Install] Dku Emulation

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Install],Dku Emulation,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Type=3390-3A
++LDEV(LDKC:CU:LDEV)=[0x00:0x00:0x02,0x00:0x00:0x03],
Num. of LDEVs=2
+Type=3390-3B
++LDEV(LDKC:CU:LDEV)=[0x00:0x00:0x04,0x00:0x00:0x05],
Num. of LDEVs=2
+Num. of Emulation Types=2
```

Detailed Information

Item	Description
Type	The emulation type
LDEV(LDKC:CU:LDEV)	The LDKC, CU, and LDEV numbers where the emulation type is changed
Num. of LDEVs	The number of logical volumes where the emulation type is changed

Item	Description
Num. of Emulation Types	The number of emulation types

[Install] Embedded OSS

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Install],Embedded OSS,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Old Ver,New Ver}={80-00-00/00-00,80-00-00/00-01}
```

Detailed Information

Item	Description
Old Ver	The old version number of the Embedded OSS
New Ver	The new version number of the Embedded OSS

[Install] FlashDrive ORM Value

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Install],FlashDrive ORM Value,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Flash Drive Collective setting,Dynamic Sparing,Warning SIM}
={Valid,99,95}
+{FMD Battery Collective setting,Warning SIM}={Valid,95}
```

Detailed Information

Item	Description
Flash Drive Collective Setting	Indicates whether the flash drive collective setting information is valid or invalid Valid: Valid, Invalid: Invalid
Dynamic Sparing	The Dynamic Sparing threshold of flash drive
Warning SIM	The warning SIM threshold of flash drive
FMD Battery Collective setting	Indicates whether the FMD battery collective setting information is valid or invalid Valid: Valid, Invalid: Invalid
Warning SIM	The warning SIM threshold of FMD battery

[Install] Force Reset

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Install],Force Reset,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Port,HostGrpID,LUN}
=[{3B,0x0FE,0},{3B,0x0FE,5},{3B,0x0FE,9}],
Num. of LUNs=3
```

Detailed Information

Item	Description
Port	The name of the port where the reserve attribute of the host is forcefully cancelled
HostGrpID	The host group number
LUN	Indicates the LUN of the volume linked to the host group
Num. of LUNs	The number of LUNs where the reserve attribute of the host is forcefully cancelled

[Install] Format

The logged information indicates that the Format operation was only requested but not completed.

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Install],Format,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+PG=[1-1],Num. of PGs=1
```

Detailed Information

Item	Description
PG	The parity group number E1-1: In the case of an external volume V1-1: In the case of a virtual volume X1-1: In the case of a Dynamic Provisioning volume
Num. of PGs	The number of parity groups
LDEV	The LDKC number, the CU number, and the LDEV number
Num. of LDEVs	The number of LDEVs

[Install] Format Stop

This log information is output when the format process is suspended.

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Install],Format Stop,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+PG=[1-1],num. of PGs=1
```

Detailed Information

Item	Description
PG	The parity group number E1-1: In the case of an external volume V1-1: In the case of a virtual volume X1-1: In the case of a Dynamic Provisioning volume
Num. of PGs	The number of parity groups
LDEV	The LDKC number, the CU number, and the LDEV number
Num. of LDEVs	The number of LDEVs

[Install] Initialize ORM Value

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Install],Initialize ORM Value,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
```

[Install] Install

Example 1: installing additional channel adapters

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Install],Install,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{CHA,Kind}={CHA-1PD,16FC8(Fibre )},
++{Port,Initiator/Target,Channel Speed,CU Number}
=[{1C,Target,Auto,0x00:0x00-0x00:0xFE},
{3C,Target,Auto,0x00:0x00-0x00:0xFE},
{5C,Target,Auto,0x00:0x00-0x00:0xFE},
{7C,Target,Auto,0x00:0x00-0x00:0xFE},
{1D,Target,Auto,0x00:0x00-0x00:0xFE},
{3D,Target,Auto,0x00:0x00-0x00:0xFE},
{5D,Target,Auto,0x00:0x00-0x00:0xFE},
{7D,Target,Auto,0x00:0x00-0x00:0xFE}],
Num. of Ports=8
+{CHA,Kind}={CHA-1PE,16M8 (Mfibre)},
++{Port,HTP/FNP,CU Number,Emulation}
=[{1E,HTP,0x00:0x00-0x00:0x3F,H-6591-C3},
{3E,HTP,0x00:0x00-0x00:0x3F,H-6591-C3},
{5E,HTP,0x00:0x00-0x00:0x3F,H-6591-C3},
{7E,HTP,0x00:0x00-0x00:0x3F,H-6591-C3},
{1F,HTP,0x00:0x00-0x00:0x3F,H-6591-C3},
{3F,HTP,0x00:0x00-0x00:0x3F,H-6591-C3},
```

```
{5F,HTP,0x00:0x00-0x00:0x3F,H-6591-C3},
{7F,HTP,0x00:0x00-0x00:0x3F,H-6591-C3}],
Num. of Ports=8
+{CHA,Kind}={CHA-2PD,16FC8(Fibre )},
++{Port,Initiator/Target,Channel Speed,CU Number}
=[{2C,Target,Auto,0x00:0x00-0x00:0xFE},
{4C,Target,Auto,0x00:0x00-0x00:0xFE},
{6C,Target,Auto,0x00:0x00-0x00:0xFE},
{8C,Target,Auto,0x00:0x00-0x00:0xFE},
{2D,Target,Auto,0x00:0x00-0x00:0xFE},
{4D,Target,Auto,0x00:0x00-0x00:0xFE},
{6D,Target,Auto,0x00:0x00-0x00:0xFE},
{8D,Target,Auto,0x00:0x00-0x00:0xFE}],
Num. of Ports=8
+{CHA,Kind}={CHA-2PE,16M8 (Mfibre)},
++{Port,HTP/FNP,CU Number,Emulation}
=[{2E,HTP,0x00:0x00-0x00:0x3F,H-6591-C3},
{4E,HTP,0x00:0x00-0x00:0x3F,H-6591-C3},
{6E,HTP,0x00:0x00-0x00:0x3F,H-6591-C3},
{8E,HTP,0x00:0x00-0x00:0x3F,H-6591-C3},
{2F,HTP,0x00:0x00-0x00:0x3F,H-6591-C3},
{4F,HTP,0x00:0x00-0x00:0x3F,H-6591-C3},
{6F,HTP,0x00:0x00-0x00:0x3F,H-6591-C3},
{8F,HTP,0x00:0x00-0x00:0x3F,H-6591-C3}],
Num. of Ports=8
+Num. of CHAs=4
```

Detailed Information for Example 1

Item	Description
CHA	The channel adapter (CHA) mounting location
Kind	The kind of PCB mounted
Port	The mounting location of the port
Initiator/Target	The type of Initiator or Target is indicated. No output for a mainframe system.
Channel Speed	The channel speed is indicated. No output for a mainframe system. 2: 2 Gbps, 4: 4 Gbps, 8: 8 Gbps, 10: 10 Gbps, 16: 16 Gbps, Auto: Auto mode.
CU Number	Indicates the range of the CU number that the port belongs
HTP/FNP	The HTP or FNP is indicated for FICON. No output for an open system.
Emulation	The emulation type is indicated. No output for an open system.
Num. of Ports	The number of ports
Num. of CHAs	The number of Channel Adapter (CHA)s

Example 2: installing additional DKAs

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Install],Install,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
```

```
+{DKA,Kind}=[{DKA-1PB,DKA  (4Port)},{DKA-1PH,DKA  (4Port)},
{DKA-2PB,DKA  (4Port)},{DKA-2PH,DKA  (4Port)}],Num. of DKAs=4
```

Detailed Information for Example 2

Item	Description
DKA	The Disk Adapter mounting location
Kind	The type of Disk Adapter DKA (4Port): DKA, EDKA (4Port): Encryption DKA Note: In the actual log file, there are two spaces output between "DKA" and "(4Port)".
Num. of DKAs	The number of Disk Adapters
Note: Only the changed items are output.	

Example 3: installing additional ECC Groups or LDEVs

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Install],Install,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{DKU,Kind}
=[{DKU-01,3.5" DKU},{DKU-02,FBX}],Num. of DKUs=2
+{PG,RAID Level,Drive Type,Emulation,Concatenation,Encryption,
Accelerated Compression}
={1-1,RAID5 (3D+1P),DKR5D-J900SS,OPEN-V,-,Disable,Disable},
++{LDKC:CU:LDEV,Emulation,Size,Unit,SSID,MPB}
=[{0x00:0x00:0x00,OPEN-V,5066268672,LBA,0x1111,MPB-1MA}],
Num. of LDEVs=1
+{PG,RAID Level,Drive Type,Emulation,Concatenation,Encryption,
Accelerated Compression}
={1-2,RAID5 (3D+1P),DKR5D-J900SS,OPEN-V,-,Disable,Disable},
++{LDKC:CU:LDEV,Emulation,Size,Unit,SSID,MPB}
=[{0x00:0x00:0x01,OPEN-V,5066268672,LBA,0x1111,Auto}],
Num. of LDEVs=1
+Num. of PGs=2
+{B4,SPARE,Drive Type}=[{1,1,DKR5D-J900SS}],Num. of SPAREs=1
```

Basic Information for Example 3

Parameter	Description
Progress Close	The window that shows the progress of LDEV formatting has closed.
Quick Format	Quick Format is selected.
Quick Format Close	The window that shows the progress of preparing for Quick Format has closed.
Note: No parameter is output for any case other than those described in this table.	

Detailed Information for Example 3

Only the changed items are output. The detailed information on the recovery process is not output when the setting at the time of installation before the

recovery process is complete. However, when the setting is not complete, the setting on the recovery process is output as the detailed information.

Item	Description
DKU	The mounting location of Disk Unit
Kind	The type of DKU
Num. of DKUs	The number of Disk Units
PG	The parity group number
RAID Level	The RAID Level
Drive Type	The type of the drive
Emulation	The emulation type
Concatenation	The RAID concatenated parity group number. A hyphen (-) is indicated when the parity group is not RAID concatenated.
Encryption	The status of encryption Enable: Enabled, Disable: Disabled
Accelerated Compression	The setting status of the accelerated compression Enable: Enabled, Disable: Disabled
LDKC:CU:LDEV	The LDKC number, the CU number, and the LDEV number
Size	The capacity of CV
Unit	The unit of the capacity of CV
SSID	The storage system ID
MPB	The ownership of the MPB
Num. of LDEVs	The number of LDEVs
Num. of PGs	The number of parity groups
B4	The B4 number
SPARE	The spare drive number
Num. of SPAREs	The number of spare drives

Example 4: installing additional cache memory

This logged information indicates until the formatting is requested (not until the formatting process is complete). However, if the operation does not request the formatting, it indicates the logged information after completing the volume creation.

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Install],Install,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{CM,CMG,Size}
=[{1CA/2CA,CM16G x 2,65536},{1CB/2CB,CM16G x 2,65536},
{1CC/2CC,CM16G x 2,65536},{1CD/2CD,CM16G x 2,65536}],Num. of CMs=4
+{BKM,Type,Size}=[{1BA/2BA,BKML,BMM128 x 2(400GB)},
{1BB/2BB,BKML,BMM128 x 2(400GB)},{1BC/2BC,BKML,BMM128 x 2(400GB)},
{1BD/2BD,BKML,BMM128 x 2(400GB)}],Num. of BKMs=4
```

```
+DCR available size=2048
+{CLPR,Cache size,DCR size,Extent Number}
=[{CLPR0,217088,3072,15384},{CLPR1,8192,1024,1000}],
Num. of CLPRs=2
+PP Flag=[(64KLDEV, SI/VM Extension, TPF, iSCSI, dedupe and
compression),(TC/UR/GAD)],
Num. of PP Flags=2
+Max Number of CUs=255
+{Battery,Date,Remained Life}=[{BATTERY-1BA,YYYY/MM/DD,990},
{BATTERY-2BC,YYYY/MM/DD,990}],Num. of Batteries=2
```

Detailed Information for Example 4

Item	Description
CM	The mounting location of the PCB for cache memory
CMG	The capacity of CMG
Size	The capacity of cache memory
Num. of CMs	The number of cache memory
BKM	The mounting location for BKM
Type	The type of BKM
Size	The size of CFM
Num. of BKMs	The number of BKMs
DCR available size	The capacity of Cache Residency
CLPR	The CLPR name
Cache size	The capacity of the cache memory allocated to CLPR
DCR size	The capacity of Cache Residency allocated to CLPR
Extent Number	The number of extents allocated to CLPR
Num. of CLPRs	The number of CLPRs
PP Flag	The flag of the program product
Num. of PP Flags	The number of flags of the program product
Max Number of CUs	The maximum number of CUs
Battery	The mounting location of the battery
Date	Indicates the date of setting in "YYYY/MM/DD" format (YYYY: year, MM: month, DD: day)
Remained Life	The remaining date of the battery shelf life
Num of Batteries	The number of batteries
Note: Only the changed items are output.	

Example 5: installing additional MPB

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx,00:00,SVP,uid=user-name,1,,
[Install],Install,,Normal end,
```

```
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxx
+{MPB,Kind,Auto LDEV Assignment}=[{MPB-1PE,MPB1,Enable},
{MPB-2PE,MPB1,Enable},
{MPB-1MC,MPB1,Enable},{MPB-1PL,MPB1,Enable},{MPB-2MC,MPB1,Enable},
{MPB-2PL,MPB1,Enable}],Num. of MPBs=6
+{CM,CMG,Size}=[{1CC/2CC,CM16G x 2,262144}],Num. of CMs=1
+{BKM,Type,Size}=[{1BC/2BC,BKMS,BMM128 x 2(400GB)}],Num. of BKMs=1
+DCR available size=2048
+{CLPR,Cache size,DCR size,Extent Number}
=[{CLPR0,275200,0,16384}],Num. of CLPRs=1
+{Battery,Date,Remained Life}=[{BATTERY-1BC,YYYY/MM/DD,990},
{BATTERY-2BC,YYYY/MM/DD,990}],Num. of Batteries=2
```

Detailed Information for Example 5

Item	Description
MPB	The installed location of the MPB
Kind	The type of PCB
Auto LDEV Assignment	The attribute of the auto LDEV assignment
Num. of MPBs	The number of MPBs
CM	The mounting location of the PCB for cache memory
CMG	The capacity of CMG
Size	The capacity of cache memory
Num. of CMs	The number of cache memory
BKM	The mounting location for BKM
Type BKM	The type of BKM
Size CFM	The size of CFM
Num. of BKMs	The number of BKMs
DCR available size	The capacity of Cache Residency
CLPR	The CLPR name
Cache size	The capacity of the cache memory allocated to CLPR
DCR size	The capacity of the Cache Residency allocated to CLPR
Extent Number	The number of extents allocated to CLPR
Num. of CLPRs	The number of CLPRs
Battery	The mounting location of the battery
Date	Indicates the date of setting in "YYYY/MM/DD" format (YYYY: year, MM: month, DD: day)
Remained Life	The remaining date of the battery shelf life
Num. of Batteries	The number of batteries

Example 6: installing additional SVP

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Install],Install,SVP,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{SVP}={SVP-OPTION}
+{IPAddress,Subnet Mask}
={(123.456.789.123),(255.255.255.255)}
+Use Duplex= Valid
+SVP Kind= Master SVP
+IPv4=Valid
+IPv6=Valid
+{M-SVP IPv4(IPAddress,Subnet Mask),IPv6(IPAddress,
Subnet Prefix length)}
={((111.222.333.444),(255.255.255.255)),
((1111:2222:3333:4444:5555:6666:7777:8888),(64))}
+{ S-SVP IPv4(IPAddress,Subnet Mask),IPv6(IPAddress,
Subnet Prefix length)}
={((555.666.777.888),(255.255.255.255)),
((9999:AAAA:BBBB:CCCC:DDDD:EEEE:FFFF:0000),(64))}
```

Basic Information

Parameter	Description
SVP	Indicates a change in the IP address of the SVP
SVP and DKC	Indicates a change in the IP address of the SVP and the DKC

Detailed Information for Example 6

Item	Description
SVP	The installed location of the SVP
IPAddress	IP address in the SVP
Subnet Mask	The subnet mask in the SVP
Use Duplex	The duplex status of the SVP. Valid or Invalid will appear.
SVP Kind	The kind of the duplex status. Master SVP or Standby SVP will appear.
IPv4	The status of IPv4 settings. Valid or Invalid will appear.
IPv6	The status of IPv6 settings. Valid or Invalid will appear.
M-SVP IPv4(IPAddress,Subnet Mask) IPv6(IPAddress, Subnet Prefix length)	Master SVP details are provided in the format described below. IPv4 (IPAddress: IP address, Subnet Mask: Subnet mask) IPv6 (IPAddress: IP address, Subnet Prefix length: The value of subnet prefix)

Item	Description
S-SVP IPv4(IPAddress,Subnet Mask) IPv6(IPAddress, Subnet Prefix length)	Standby SVP details are provided in the format described below. IPv4 (IPAddress: IP address, Subnet Mask: Subnet mask) IPv6 (IPAddress: IP address, Subnet Prefix length: The value of subnet prefix)

Example 7: Installing additional SM PP Flag

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Install],Install,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+PP Flag=[(64KLDEV, SI/VM Extension, TPF, iSCSI, dedupe and
compression),(TC/UR/GAD)],
Num. of PP Flags=2
+Max Number of CUs=255
```

Detailed Information for Example 7

Item	Description
PP Flag	The flag of the program product
Num. of PP Flags	The number of flags of the program product
Max Number of CUs	The maximum number of CUs

[Install] Install CV

This logged information indicates that the formatting was only requested but not completed. If the operation does not require the formatting, this logged information indicates that the volume was created.

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Install],Install CV,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{PG,LDKC:CU:LDEV,Slot,Emulation,Size,Unit,SSID,MPB}
=[{1-1,0x00:0x00:0x00,-,OPEN-V,10000,LBA,0x0005,Auto}],
Num. of LDEVs=1
```

Basic Information

Parameter	Description
Non Format	Unformatted Install CV.
Progress Close	The window that shows the progress of LDEV formatting has closed.
Quick Format	Quick Format is selected.

Parameter	Description
Quick Format Close	The window that shows the progress of preparing for Quick Format has closed.
Note: No parameter is output for any case other than those described in this table.	

Detailed Information

Item	Description
PG	The parity group number E1-1: In the case of an external volume V1-1: In the case of a virtual volume X1-1: In the case of a Dynamic Provisioning volume A1-1: In the case of an ALU volume
LDKC:CU:LDEV	The LDKC, CU, and LDEV numbers
Slot	The slot number. A hyphen (-) is indicated for Install CV.
Emulation	The emulation type
Size	The CV capacity
Unit	The CV unit capacity
SSID	The storage system ID
MPB	The ownership of the MPB
Num. of LDEVs	The number of LDEVs

[Install] Machine Install Date

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Install],Machine Install Date,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Date=YYYY/MM/DD HH:mm
```

Detailed Information

Item	Description
Date	Indicates the date and the time of the setting in "YYYY/MM/DD HH:mm" format (YYYY: year, MM: month, DD: day, HH: hour, mm: minute).

[Install] Make Volume

This logged information indicates that formatting the volume was requested but not completed. If the operation does not require formatting, this logged information indicates that the volume was created.

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Install],Make Volume,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{PG,LDKC:CU:LDEV,Slot,Emulation,Size,Unit,SSID,MPB}
=[{1-1,0x00:0x14:0x00,-,OPEN-V,205440,LBA,0x0005,Auto}],
Num. of LDEVs=1
```

Basic Information

Parameter	Description
Non Format	The Make Volume operation does not require the formatting.
Progress Close	The window that shows the progress of LDEV formatting has closed.
Quick Format	Quick Format is selected.
Quick Format Close	The window that shows the progress of preparing for Quick Format has closed.
Note: No parameters are selected for any case other than those described in this table	

Detailed Information

Item	Description
PG	The parity group number E1-1: In the case of an external volume V1-1: In the case of a virtual volume X1-1: In the case of a Dynamic Provisioning volume A1-1: In the case of an ALU volume
LDKC:CU:LDEV	The LDKC, CU, and LDEV numbers
Slot	The slot number. A hyphen (-) is indicated for Make Volume.
Emulation	The emulation type
Size	The CV capacity
Unit	The unit of the CV capacity
SSID	The storage system ID
MPB	The ownership of the MPB
Num. of LDEVs	The number of LDEVs

[Install] Micro Program

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Install],Micro Program,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Micro Media=CD-ROM
+Exchange How=Online
+Reboot Grp.=By 1/2
+{Micro Kind, Old Ver, New Ver}
=[{DKCMAIN, 7000320000,7000320001},
{SVP, 70003200, 70003201}],Num. of Kinds=2
```

Detailed Information

Item	Description
Micro Media	The media which the microcode to be exchanged is stored (CD-ROM:CD-ROM, HD: Hard Disk, HD Backup: HDD Backup (version down), or Remote: Remote transfer).
Exchange How	The method to exchange the microcode. Online: Exchanging the microcode online, Offline: Exchanging the microcode offline.
Reboot Grp.	The reboot group (By 1/2, By 1/4, By 1/8 or By One). However, it is not output when microcode is changed offline, or MP reboot is not executed.
Micro Kind	The kind of microcode
Old Ver	The old version number of the microcode
New Ver	The new version number of the microcode
Num. of Kinds	The number of types of microcodes

[Install] MP Install

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Install],MP Install,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Micro Program
={RAMBOOT,HTP,FCDG,DKCMAIN,FCHF,DKAF},Num. of Kinds=6
+Target MP={MP00-1MA,MP01-1MA,MP02-1MA},Num. of MPs=3
```

Detailed Information

Item	Description
Micro Program	The kind of microcode installed
Num. of Kinds	The number of types of installed microcodes

Item	Description
Target MP	The mounting location of the installed processor
Num. of MPs	The number of processors installed

[Install] M/F DCR

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Install],M/F DCR,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+LDKC:CU:LDEV=0x00:0x00:0x00
++{Define,Mode,Prestaging,Start CC-HH,End CC-HH}
=[{Set,Bind,No,00-00,00-10},
{Set,Priority,Yes,1000-00,1009-14}],
{Delete,-,-,1000-00,1009-14}],
Num. of DCR Settings=3
```

Detailed Information

Item	Description
LDKC:CU:LDEV	The LDKC number, the CU number, and the LDEV number of the logical volume where Cache Residency is set.
Define	The status of Cache Residency Set: set, Delete: cancel
Mode	The Cache Residency. mode Indicates a dash (-) when Define is Delete. Bind: Bind mode, Priority: Priority mode
Prestaging	Indicates whether the Prestaging mode set is enabled or disabled Indicates a dash (-) when Define is Delete. No: Prestaging mode is disabled, Yes: Prestaging mode is enabled
Start CC-HH	The starting cylinder number (CC) and the starting head number (HH) to which the Cache Residency is set or canceled
End CC-HH	The ending cylinder number (CC) and the ending head number (HH) to which the Cache Residency is set or canceled
Num. of DCR Settings	The number of Cache Residency settings that have been set or canceled

[Install] Open DCR

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Install],Open DCR,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+LDKC:CU:LDEV=0x00:0x00:0x00
++{Define,Mode,Prestaging,Start LBA,End LBA}
```

```
=[{Set,Bind,No,0,2015},{Set,Priority,Yes,3636,4175},
{Delete,-,-,3636,4175}],Num. of DCR Settings=3
```

Detailed Information

Item	Description
LDKC:CU:LDEV	The LDKC number, the CU number, and the LDEV number of the logical volume where Cache Residency is set
Define	The setting status of Cache Residency. Set: set, Delete: cancel
Mode	The setting mode of Cache Residency. Indicates a dash (-) when Define is Delete. Bind: Bind mode, Priority: Priority mode
Prestaging	Indicates whether the Prestaging mode set is enabled or disabled. Indicates a dash (-) when Define is Delete. No: Prestaging mode is disabled, Yes: Prestaging mode is enabled
Start LBA	The starting LBA number of the data which Cache Residency was set or canceled
End LBA	The ending LBA number of the data which Cache Residency was set or canceled
Num. of DCR Settings	The number of Cache Residencies set or canceled

[Install] Remove

Example 1: removing a channel adapter (CHA)

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Install],Remove,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{CHA,Kind}
=[{CHA-1PC,16FC8(Fibre )},{CHA-2PU,16FC8(Fibre )}],
Num. of CHAs=2
```

Detailed Information for Example 1

Item	Description
CHA	The Channel Adapter mounting location
Kind	The kind of PCB mounted
Num. of CHAs	The number of Channel Adapters

Example 2: removing a Disk Adapter (DKA)

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Install],Remove,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
```

```
+{DKA,Kind}=[{DKA-1PB,DKA  (4Port)},{DKA-1PH,DKA  (4Port)},
{DKA-2PB,DKA  (4Port)},{DKA-2PH,DKA  (4Port)}],Num. of DKAs=4
```

Detailed Information for Example 2

Item	Description
DKA	The Disk Adapter mounting location
Kind	The type of Disk Adapter DKA (4Port): DKA, EDKA (4Port): Encryption DKA Note: In the actual log file, there are two spaces output between "DKA" and "(4Port)".
Num. of DKAs	The number of Disk Adapters
Note: Only the changed items are output.	

Example 3: removing an ECC Group or an LDEV

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Install],Remove,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+DKU=[DKU-01],Num. of DKUs=1
+PG=[1-6,1-7],Num. of PGs=2
+{B4,SPARE}=[{1,1}],Num. of SPAREs=1
```

Detailed Information for Example 3

Only the changed items are output. The detailed information on the recovery process is not output when the setting at the time of removing before the recovery process is complete. However, when the setting is not complete, the setting on the recovery process is output as the detailed information.

Item	Description
DKU	The Disk Unit mounting location
Num. of DKUs	The number of Disk Units
PG	The parity group number
Num. of PGs	The number of parity groups
B4	The B4 number
SPARE	The spare drive number
Num. of SPAREs	The number of spare drives

Example 4: removing a cache memory module

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Install],Remove,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{CM,CMG,Size}
=[{1CA/2CA,CM16G x 2,65536},{1CB/2CB,CM16G x 2,65536},
{1CE/2CG,CM16G x 2,65536},{1CF/2CH,CM16G x 2,65536}],Num. of CMs=4
+{BKM,Type,Size}=[{1BA/2BA,BKML,BMM128 x 2(400GB)},
```

```
{1BB/2BB,BKML,BMM128 x 2(400GB)},{1BC/2BC,BKML,BMM128 x 2(400GB)},
{1BD/2BD,BKML,BMM128 x 2(400GB)}],Num. of BKMs=4
+DCR available size=1024
+{CLPR,Cache size,DCR size,Extent Number}
=[{CLPR0,217088,3072,15384}],Num. of CLPRs=1
+PP Flag=[(64KLDEV, SI/VM Extension, TPF, iSCSI, dedupe and
compression),(TC/UR/GAD)],
Num. of PP Flags=2
+Max Number of CUs=64
```

Detailed Information for Example 4

Item	Description
CM	The mounting location of the PCB for cache memory
CMG	The capacity of the CMG
Size	The capacity of the cache memory
Num. of CMs	The number of cache memories
BKM	The mounting location for BKM
Type	The type of BKM
Size	The size of CFM
Num. of BKMs	The number of BKMs
DCR available size	The capacity of the Cache Residency
CLPR	The CLPR name
Cache size	The capacity of the cache memory allocated to CLPR
DCR size	The capacity of the Cache Residency allocated to CLPR
Extent Number	The number of extents allocated to CLPR
Num. of CLPRs	The number of CLPRs
PP Flag	The flag of the program product
Num. of PP Flags	The number of program product flags
Max Number of CUs	The maximum number of CUs
Note: Only the changed items are output.	

Example 5: removing MPB

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Install],Remove,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{MPB,Kind,Auto LDEV Assignment}
=[{MPB-1MB,MPB1,Disable},{MPB-2MB,MPB1,Enable},{MPB-1MD,MPB1,Enable},
{MPB-2MD,MPB1,Enable}],Num. of MPBs=4
+{CM,CMG,Size}=[{1CC/2CC,CM16G x 2,0}],Num. of CMs=1
+{BKM,Type,Size}=[{1BC/2BC,----------,0}],Num. of BKMs=1
+DCR available size=1024
+{CLPR,Cache size,DCR size,Extent Number}
=[{CLPR0,177664,0,16384}],Num. of CLPRs=1
```

Detailed Information for Example 5

Item	Description
MPB	The installed location of the MPB
Kind	The type of PCB
Auto LDEV Assignment	The attribute of auto LDEV assignment
Num. of MPBs	The number of MPBs
CM	The mounting location of the PCB for cache memory
CMG	The capacity of the CMG
Size	The capacity of the cache memory
Num. of CMs	The number of cache memories
BKM	The mounting location for BKM
Type	The type of BKM
Size	The size of CFM
Num. of BKMs	The number of BKMs
DCR available size	The capacity of the Cache Residency
CLPR	The CLPR name
Cache size	The capacity of the cache memory allocated to CLPR
DCR size	The capacity of the Cache Residency allocated to CLPR
Extent Number	The number of extents allocated to CLPR
Num. of CLPRs	The number of CLPRs

Example 6: removing SVP

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Install],Remove,SVP,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{SVP}={SVP-OPTION}
+{IPAddress,Subnet Mask}={(123.456.789.123),(255.255.255.255)}
+Use Duplex=Invalid
+Svp Kind=Master SVP
+IPv4=Valid
+IPv6=Valid
+{M-SVP IPv4(IPAddress,Subnet Mask),
IPv6(IPAddress,Subnet Prefix length)}
={((111.222.333.444),(255.255.255.255)),
((1111:2222:3333:4444:5555:6666:7777:8888),(64))}
+{S-SVP IPv4(IPAddress,Subnet Mask),
IPv6(IPAddress,Subnet Prefix length)}
={((555.666.777.888),(255.255.255.255)),
((9999:AAAA:BBBB:CCCC:DDDD:EEEE:FFFF:0000),(64))}
```

Basic Information

Parameter	Description
SVP	Indicates a change in the IP address of the SVP
SVP and DKC	Indicates a change in the IP address of the SVP and the DKC

Detailed Information for Example 6

Item	Description
SVP	The installed location of the SVP
IPAddress	IP address in the SVP
Subnet Mask	The subnet mask in the SVP
Use Duplex	The duplex status of the SVP. Valid or Invalid will appear.
SVP Kind	The kind of the duplex status. Master SVP or Standby SVP will appear.
IPv4	The status of IPv4 settings. Valid or Invalid will appear.
IPv6	The status of IPv6 settings. Valid or Invalid will appear.
M-SVP IPv4(IPAddress,Subnet Mask) IPv6(IPAddress, Subnet Prefix length)	Master SVP details are provided in the format described below. IPv4 (IPAddress: IP address, Subnet Mask: Subnet mask) IPv6 (IPAddress: IP address, Subnet Prefix length: The value of subnet prefix)
S-SVP IPv4(IPAddress,Subnet Mask) IPv6(IPAddress, Subnet Prefix length)	Standby SVP details are provided in the format described below. IPv4 (IPAddress: IP address, Subnet Mask: Subnet mask) IPv6 (IPAddress: IP address, Subnet Prefix length: The value of subnet prefix)

Example 7: removing SM PP Flag

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Install],Remove,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+PP Flag=[(64KLDEV, SI/VM Extension, TPF, iSCSI, dedupe and
compression),(TC/UR/GAD)],
Num. of PP Flags=2
+Max Number of CUs=64
```

Detailed Information for Example 7

Item	Description
PP Flag	The flag of the program product
Num. of PP Flags	The number of program product flags
Max Number of CUs	The maximum number of CUs

[Install] Restore Config.

The audit log files in Example 1 and Example 2 are output when the Restore Configuration operation is performed by using an SVP. However, the audit log file in Example 2 is not output if the Restore Configuration operation is suspended before the Define Configuration and Install operation is performed.

Example 1

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Install],Restore Config,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{New Ver.,Old Ver.}={xx-xx-xx/xx,xx-xx-xx/xx}
```

Detailed Information for Example 1

Item	Description
New Ver.	The new version number
Old Ver.	The old version number

Example 2

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Install],Restore Config.,SVP and DKC,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
```

Basic Information for Example 2

Parameter	Description
SVP and DKC	Indicates that the configuration of the SVP and DKC has been restored.

[Install] Set Battery Life

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Install],Set Battery Life,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Use Battery Life=Valid
```

```
+{Battery,Date,Remained Life}=[{BATTERY-1BA,YYYY/MM/DD,990},
{BATTERY-2BA,YYYY/MM/DD,990}],Num. of Batteries=2
```

Detailed Information

Item	Description
Use Battery Life	The status of Battery life function set. Valid: Valid, Invalid: Invalid
Battery	The mounting location of the battery
Date	Indicates the date of the setting in "YYYY/MM/DD" format (YYYY: year, MM: month, DD: day)
Remained Life	The remaining date of the battery shelf life
Num of Batteries	The number of batteries

[Install] Set Channel Speed

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Install],Set Channel Speed,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Port,Speed(Gbps)}=[{XX,1},{XX,2},{XX,Auto}],
Num. of Ports=3
```

Detailed Information

Item	Description
Port	The name of the port on which the channel speed is set.
Speed(Gbps)	The channel speed set 1: 1 Gbps, 2: 2 Gbps, 4: 4 Gbps, 8: 8 Gbps, Auto: Auto mode.
Num. of Ports	The number of ports where the channel speed is set

[Install] Set CommandDev

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Install],Set CommandDev,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{LDKC:CU:LDEV,CommandDev}=[{0x00:0xXX:0xXX,Disable},
{0x00:0xXX:0xXX,Enable}],Num. of LDEVs=2
```

Detailed Information

Item	Description
LDKC:CU:LDEV	The LDKC, CU, and LDEV numbers of the logical volume where the command device is set
CommandDev	Indicates whether the command device setting is enabled or disabled. Disable or Enable will appear
Num. of LDEVs	The number of logical volumes where the command device is set.

[Install] Set CommandDevSec

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Install],Set CommandDevSec,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{LDKC:CU:LDEV,CommandDevSec}=[{0x00:0xXX:0xXX,Disable},
{0x00:0xXX:0xXX,Enable}],Num. of LDEVs=2
```

Detailed Information

Item	Description
LDKC:CU:LDEV	The LDKC, CU, and LDEV numbers of the logical volume where the command device is set
CommandDevSec	Indicates whether the command device security setting is enabled or disabled. Disable or Enable will appear
Num. of LDEVs	The number of logical volumes where the command device is set.

[Install] Set DevGrpDef

Example

```
08xx, YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Install],Set DevGrpDef,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{LDKC:CU:LDEV,DevGrpDef}=[{0xXX:0xXX:0xXX,Enable}],
Num. of LDEVs=1
```

Detailed Information

Item	Description
LDKC:CU:LDEV	The LDKC, CU, and LDEV numbers of the volume where the device group definition is specified.
UserAuth	Indicates whether the device group definition is enabled or disabled.

Item	Description
	Disable or Enable will appear.
Num. of LDEVs	The number of logical volumes where the device group definition is set.

[Install] Set Fibre Address

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Install],Set Fibre Address,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Port,Fibre Addr.}=[{XX,0xXX(xx)},{XX,0xXX(xx)}],Num. of Ports=2
```

Detailed Information

Item	Description
Port	The name of the port that the fibre address has been set
Fibre Addr.	The address of the Fibre Channel port after the setting is made The information outside the parentheses indicates AL-PA (arbitrated-loop physical address).The information inside the parentheses indicates the loop ID.
Num. of Ports	The number of ports where address has been set

[Install] Set Fibre Topology

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Install],Set Fibre Topology,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Port,Fabric,Connection}
=[{XX,Enable,FC-AL},{XX,Disable,FC-AL},
{XX,Enable,P-to-P},{XX,Disable,P-to-P}],Num. of Ports=4
```

Detailed Information

Item	Description
Port	The name of the port where the topology of Fibre Channel is set
Fabric	Indicates whether the Fabric switch is enabled or disabled Enable: Enabled, Disable: Disabled
Connection	The connecting mode of the Fabric switch selected FC-AL: FC-AL is selected, P-to-P: P-to-P is selected
Num. of Ports	The number of ports where the topology of Fibre Channel is set

[Install] Set Host Mode

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Install],Set Host Mode,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Port,HostGrpID,Mode,Option[0:31],Option[32:63],Option[64:95],
Option[96:127]}
=[{XX,0xXXX,0x00,0xXXXXXXXX,0xXXXXXXXX,0xXXXXXXXX,0xXXXXXXXX},
{XX,0xXXX,0x4F,0xXXXXXXXX,0xXXXXXXXX,0xXXXXXXXX,0xXXXXXXXX}],
Num. of Host Groups=2
```

Detailed Information

Item	Description
Port	The name of the port to which the host group belongs
HostGrpID	The host group number
Mode	The host mode set. Please see the *Provisioning Guide for Open Systems* for the meaning of the host mode number
Option[0:31] Option[32:63] Option[64:95] Option[96:127]	The specified host mode option. 128 host mode options from 0 to 127 are output in groups of 32 options. Please see Table 5-1 Host mode option 0 to 31 and output contents of Option[0:31] on page 5-138 to Table 5-4 Host mode option 96 to 127 and output contents of Option[96:127] on page 5-139 for the relation of output values and host mode option. Please see the *Provisioning Guide for Open Systems* for the meaning of the host mode number.
Num. of Host Groups	The number of host groups that the host mode setting is changed

[Install] Set IP Address

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Install],Set IP Address,SVP and DKC,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{IPAddress,Subnet Mask}={(123.456.789.123),(255.255.255.255)}
+Use Duplex=Valid
+Svp Kind=Master SVP
+IPv4=Valid
+IPv6=Valid
+{M-SVP IPv4(IPAddress,Subnet Mask),
IPv6(IPAddress,Subnet Prefix length)}
={((111.222.333.444),(255.255.255.255)),
((1111:2222:3333:4444:5555:6666:7777:8888),(64))}
+{S-SVP IPv4(IPAddress,Subnet Mask),
IPv6(IPAddress,Subnet Prefix length)}
={((555.666.777.888),(255.255.255.255)),
((9999:AAAA:BBBB:CCCC:DDDD:EEEE:FFFF:0000),(64))}
```

Basic Information

Parameter	Description
SVP	The SVP IP address change
SVP and DKC	The IP address change of the SVP and DKC

Detailed Information

Item	Description
IPAddress	The SVP IP address
Subnet Mask	The subnet mask in SVP
Use Duplex	Indicates whether the Duplex setting in SVP is valid or invalid Valid: Valid, Invalid: Invalid
SVP Kind	The kind of duplicated SVP Master SVP: Master SVP, Standby SVP: Standby SVP.
IPv4	The status of IPv4 Valid: enabled, Invalid: disabled
IPv6	The status of IPv6 Valid: enabled, Invalid: disabled
M-SVP IPv4(IPAddress,Subnet Mask) IPv6(IPAddress,Subnet Prefix length)	Master SVP details are provided in the format described below IPv4 (IPAddress: IP address, Subnet Mask: Subnet mask) IPv6 (IPAddress: IP address, Subnet Prefix length: The value of subnet prefix)
S-SVP IPv4(IPAddress,Subnet Mask) IPv6(IPAddress,Subnet Prefix length)	Standby SVP details are provided in the format described below IPv4 (IPAddress: IP address, Subnet Mask: Subnet mask) IPv6 (IPAddress: IP address, Subnet Prefix length: The value of subnet prefix)

[Install] Set Security Switch

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Install],Set Security Switch,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Port,Switch}=[{XX,Disable},{XX,Enable}],Num. of Ports=2
```

Detailed Information

Item	Description
Port	The name of the port where the LUN security setting is changed
Switch	Indicates whether the LUN security setting is enabled or disabled. Disable or Enable will appear.
Num. of Ports	The number of ports where the LUN security setting is changed

[Install] Set Subsystem Time

Example 1: The case of TOD Change

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Install],Set Subsystem Time,TOD Change,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Time=YYYY/MM/DD HH:mm:SS
```

Example 2: The case of Synchro. Infor.

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Install],Set Subsystem Time,Synchro. Infor.,Normal end,
from=xxx:xxx:xxx:xxx,,Seq.=xxxxxxxxxx
+Use Synchro.=Valid
+{Server priority,SNTP IP/Host,SNTP Port,Time Zone}=
[{Priority one,(123.456.789.123),100,Tokyo Standard Time}],
Num. of Servers=1
+Check Time=23
+Create SIM=ON
```

Example 3: The case of Change time zone

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Install],Set Subsystem Time,Change time zone,Normal end,
from=xxx:xxx:xxx:xxx,,Seq.=xxxxxxxxxx
+{Time Zone,DST}={(UTC+09:00) Osaka Sapporo Tokyo,Invalid}
```

Basic Information

Parameter	Description
TOD Change	The setting of the date and the time
Synchro. Infor.	The setting of time correction function
Change time zone	The setting of the time zone

Detailed Information for Example 1

Item	Description
Time	Indicates the date and the time in the format of "YYYY/MM/DD HH:mm:SS".(YYYY: year, MM: month, DD: date, HH: hour, mm: minute, SS: second).

Detailed Information for Example 2

Item	Description
Use Synchro.	Indicates whether the time correction function is valid or invalid Valid: Enable, Invalid: Disable
Server priority	The SNTP server priority
SNTP IP/Host	The IP address (IPv4 or IPv6) or host name of the SNTP server Commas that are input in the host name by a user are indicated with spaces.
SNTP Port	The port number used by the SNTP server
Time Zone	The specified time zone
Num. of Servers	The number of SNTP servers that are set
Check Time	The time when the time correction function is executed. Only HH (Hour: 00 to 23) is indicated for the execution time.
Create SIM	Indicates whether the SIM was created or not when the setting of time correction failed ON: Created, OFF: Not created

Detailed Information for Example 3

Item	Description
Time Zone	The specified time zone Commas included in the setting value are not indicated.
DST	Indicates whether the daylight saving time adjustment is valid or invalid Valid: Enable, Invalid: Disable

[Install] Set UserAuth

Example

```
08xx, YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Install],Set UserAuth,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{LDKC:CU:LDEV,UserAuth}=[{0xXX:0xXX:0xXX,Enable}],
Num. of LDEVs=1
```

Detailed Information

Item	Description
LDKC:CU:LDEV	The LDKC, CU, and LDEV numbers of the volume where the user authentication is specified.
UserAuth	Indicates whether the user authentication is enabled or disabled. Disable or Enable will appear.
Num. of LDEVs	The number of logical volumes where the user authentication is set.

[Install] System Option

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Install],System Option,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Spare Disk Recover=Full Speed
+Disk Copy Pace=Slower
+Copy Operation(Correction Copy)=OFF
+Copy Operation(Dynamic Sparing)=OFF
+Link Failure Threshold=10
+{LDKC:CU:LDEV,Destage}=[{0x00:0x00:0x00,OFF}],
Num. of LDEVs=1
+{LPR,Cache Tuning}=[{System,Level5}],Num. of LPRs=1
+{LPR,Command Control}=[{System,10}],Num. of LPRs=1
+{LPR,Mode,Set}=[{System,0,ON}],Num. of Modes=1
+Debug Mode=Set
```

Detailed Information

Item	Description
Spare Disk Recover	Indicates the setting status of Spare Disk Recover. Interleave: Give priority to the access from the host while executing copy process, Full speed: Give priority to the copy process.
Disk Copy Pace	Indicates the setting status of Disk Copy Pace. Slower: Low speed, Medium: Medium speed, Faster: High speed
Copy Operation (Correction Copy)	Indicates the setting status of Copy Operation (Correction Copy). ON: Execute Correction Copy, OFF: Do not execute Correction Copy
Copy Operation (Dynamic Sparing)	Indicates the setting status of Copy Operation (Dynamic Sparing). ON: Execute Dynamic Sparing, OFF: Do not execute Dynamic Sparing
Link Failure Threshold	The threshold to report link failure
LDKC:CU: LDEV	The LDKC number, the CU number, and the LDEV number
Destage	Indicates the setting status of Destage. ON: Execute write through operation (report the completion of the writing to the host after the writing to the disk drive has completed).

Item	Description
	OFF: Do not execute write through operation (report the completion of the writing to the host when the data is written in the cache memory).
Num. of LDEVs	The number of LDEVs
LPR	The LPR name
Cache Tuning	The level of Cache Tuning
Num. of LPRs	The number of LPRs
Command Control	Command Control
Mode	The local mode number
Set	The setting status. ON: Set, Off: Release
Num. of Modes	The number of local modes.
Debug Mode	Setting executed from the debug window (Set: fix).
Note: Only the changed items will be output.	

[Install] System Tuning

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Install],System Tuning,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Serial No.=64040
+IP Address Mode=Based on Serial Number
+IP Address=126.132.246.15
+Subnet Mask=255.0.0.0
+{Port,CU Number,Emulation}=[{1E,-,I-2107},
{3E,0x00:0x10-0x00:0x1F,I-2107},{5E,-,I-2107},{7E,-,I-2107}],
Num. of Ports=4
+{LDKC:CU,LDEV,SSID}=[{0x00:0x00,0x00-0xff,0x0005}],
Num. of SSIDs=1
+{TPF Enable,Number of MPLs}={ON,4096}
```

Detailed Information

Item	Description
Serial No.	The serial number
IP Address Mode	The IP address mode set. Based on Serial Number: Set the IP address from the serial number. Specified: Set the specified IP address.
IP Address	The IP address set
Subnet Mask	The subnet mask set

Item	Description
Port	The mounting location of the port
CU Number	Indicates the range of the CU number that the port belongs If the CU Number setting is not changed, a hyphen (-) is output.
Emulation	The emulation type
Num. of Ports	The number of ports
LDKC:CU	The LDKC number and the CU number
LDEV	The LDEV number
SSID	The storage system ID
Num. of SSIDs	The number of storage system IDs
TPF Enable	The status of TPF Function settings ON: Enabled OFF: Disabled
Number of MPLs	The allocated number of MPLs A hyphen (-) is output if the TPF Enable is OFF.

[Install] Update Config

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Install],Update Config,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{New Ver.,Old Ver.}={xx-xx-xx/xx,xx-xx-xx/xx}
```

Detailed Information

Item	Description
New Ver.	The new version number
Old Ver.	The old version number

[Install] Volume to Space

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Install],Volume to Space,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{PG,LDKC:CU:LDEV}=[{1-1,0x00:0x00:0x01},{1-1-(1),
0x00:0x00:0x02}],Num. of LDEVs=2
```

Detailed Information

Item	Description
PG	The parity group number E1-1: In the case of an external volume V1-1: In the case of a virtual volume X1-1: In the case of a Dynamic Provisioning volume A1-1: In the case of an ALU volume
LDKC:CU:LDEV	The LDKC number, the CU number and the LDEV number
Num. of LDEVs	The number of LDEVs

Local Replication Descriptions

[Local Replication] Assign S-VOLs

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[Local Replication],Assign S-VOLs,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Copy Type=TI
++{P-VOL(LDKC:CU:LDEV),S-VOL(LDKC:CU:LDEV),PoolID,MU,
Snapshot Group,Result}
=[{0xXX:0xAA:0xBB,0xYY:0xCC:0xDD,0,1,SnapshotSet1,Normal end},
{0xX:0xAA:0xBB,0xY:0xCC:0xDD,0,,SnapshotSet2,Error(xxxx-yyyyy)}],
Num. of Pairs=2
```

Detailed Information

Item	Description
Copy Type	The program product name for this operation TI: Thin Image
P-VOL (LDKC:CU:LDEV)	The LDKC number, the CU number and the LDEV number of the primary volume
S-VOL (LDKC:CU:LDEV)	The LDKC number, the CU number and the LDEV number of the assigned secondary volume No output if a secondary volume is not specified during the assigning operation.
PoolID	The pool ID of the assigned secondary volume
MU	The mirror unit number of the assigned secondary volume No output if a mirror unit number is not specified during the assigning operation.
Snapshot Group	The snapshot group name
Result	The result of the operation

Item	Description
	Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code
Num. of Pairs	The number of pairs to which secondary volumes are assigned

[Local Replication] Create Pairs

Example 1: when the copy type is SI or SIMF

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[Local Replication],Create Pairs,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Copy Type=SI,Copy Pace=Faster,Split Type=Non Split
++{P-VOL(LDKC:CU:LDEV),S-VOL(LDKC:CU:LDEV),MU,Result}
=[{0xXX:0xAA:0xBB,0xYY:0xCC:0xDD,0,Normal end},
{0xX:0xAA:0xBB,0xY:0xCC:0xDD,1,Error(xxxx-yyyyy)}],
Num. of Pairs=2
```

Example 2: when the copy type is TI

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[Local Replication],Create Pairs,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Copy Type=TI
++{P-VOL(LDKC:CU:LDEV),S-VOL(LDKC:CU:LDEV),PoolID,MU,
Snapshot Group,Cascade,Pair Type,Result}
=[{0xXX:0xAA:0xBB,0xYY:0xCC:0xDD,0,1,SnapshotSet1,Disable,
Snapshot,Normal end},
{0xXX:0xAA:0xBB,0xYY:0xCC:0xDD,0,,SnapshotSet2,Enable,Clone,
Error(xxxx-yyyyy)}],
Num. of Pairs=2
```

Detailed Information

Item	Description
Copy Type	The program product name for this operation SI: ShadowImage, SIMF: ShadowImage for Mainframe, TI: Thin Image
Copy Pace	The copy speed Faster: High speed, Medium; Medium speed, Slower: Low speed This item is output only when the copy type is SI or SIMF.
Split Type	The split type Non Split: Does not split the pair, Quick Split: Pair split by background copy, Steady Split: Pair split by update copy This item is output only when the copy type is SI or SIMF.
P-VOL (LDKC:CU:LDEV)	The LDKC number, the CU number and the LDEV number of the primary volume in the created pair

Item	Description
S-VOL (LDKC:CU:LDEV)	The LDKC number, the CU number and the LDEV number of the secondary volume in the created pair No output if Copy Type is TI, and a secondary volume is not specified during the pair creation operation.
PoolID	The pool ID of the secondary volume of the created pair This item is output only when the copy type is TI.
MU	The mirror unit number of the created pair When Copy Type is TI, the value of this item is not output if a mirror unit number is not specified while creating the pair.
Snapshot Group	The snapshot group name This item is output only when the copy type is TI.
Cascade	Indicates the cascade attribute of the created pair. Enable: Supported pair, Disable: Not supported pair This item is output only when the copy type is TI.
Pair Type	Indicates the clone attribute of the created pair. Clone: Cloned, Snapshot: Non-cloned This item is output only when the copy type is TI.
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code
Num. of Pairs	The number of created pairs

[Local Replication] Delete Pairs

Example 1: when the copy type is SI or SIMF

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[Local Replication],Delete Pairs,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Copy Type=SI
++{P-VOL(LDKC:CU:LDEV),S-VOL(LDKC:CU:LDEV),Result}
=[{0xXX:0xAA:0xBB,0xYY:0xCC:0xDD,Normal end},
{0xX:0xAA:0xBB,0xYY:0xCC:0xDD,Error(xxxx-yyyyy)}],
Num. of Pairs=2
```

Example 2: when the copy type is TI

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[Local Replication],Delete Pairs,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Copy Type=TI
++{P-VOL(LDKC:CU:LDEV),S-VOL(LDKC:CU:LDEV),MU,Result}
=[{0xXX:0xAA:0xBB,0xYY:0xCC:0xDD,,Normal end},
{0xX:0xAA:0xBB,0xYY:0xCC:0xDD,,Error(xxxx-yyyyy)}],Num. of Pairs=2
```

Detailed Information

Item	Description
Copy Type	The program product name for this operation SI: ShadowImage, SIMF: ShadowImage for Mainframe, TI: Thin Image
P-VOL (LDKC:CU:LDEV)	The LDKC number, the CU number and the LDEV number of the primary volume in the deleted pair
S-VOL (LDKC:CU:LDEV)	The LDKC number, the CU number and the LDEV number of the secondary volume in the deleted pair No output if Copy Type is TI, and a secondary volume is not specified during the pair creation operation.
MU	The mirror unit number of the deleted pair The index and value of this item are output only when Copy Type is TI. However, the value of this item is not output if a MU is not specified during the pair deletion operation.
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code
Num. of Pairs	The number of deleted pairs

[Local Replication] Edit Options

Example 1: when the copy type is SI

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[Local Replication],Edit Options,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Copy Type=SI
++Swap & Freeze=Enable,HOST I/O Performance=Enable,
Reserve03=Enable,(snip),
Nondisruptive Migration Data Consistency=Enable,(snip),
Copy Pace Ext. Slower1=Disable,Copy Pace Ext. Slower2=Disable,
Copy Pace Ext.None=Disable,Reserve23=Disable,
Quick/Steady Split Multiplexing (ShadowImage/ShadowImage for
Mainframe)=Enable,
Reverse Copy Multiplexing (ShadowImage/ShadowImage for Mainframe)
=Enable,(snip),Reserve32=Disable
```

Example 2: when the copy type is SIMF

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[Local Replication],Edit Options,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Copy Type=SIMF
++Swap & Freeze=Enable,HOST I/O Performance=Enable,
FC Slower Copy1=Enable,FC Slower Copy2=Enable,
Reserve05=Disable,(snip),
Nondisruptive Migration Data Consistency=Enable,
FC Ext. Slower Copy1=Enable,FC Ext. Slower Copy2=Enable,(snip),
Copy Pace Ext. Slower1=Disable,Copy Pace Ext. Slower2=Disable,
Copy Pace Ext. None=Disable,Reserve23=Disable,
```

```
Quick/Steady Split Multiplexing (ShadowImage/ShadowImage for
Mainframe)=Enable,
Reverse Copy Multiplexing (ShadowImage/ShadowImage for Mainframe)
=Enable,(snip),Reserve32=Disable
```

Detailed Information

Item	Description
Copy Type	The program product name for this operation SI: ShadowImage, SIMF: ShadowImage for Mainframe
Swap & Freeze	Indicates whether the Swap & Freeze option is enabled or disabled. Enable: Enabled, Disable: Disabled
Host I/O Performance	Indicates whether the Host I/O Performance option is enabled or disabled. Enable: Enabled, Disable: Disabled
FC Slower Copy1	Indicates whether the FC Slower Copy1 option is enabled or disabled. Enable: Enabled, Disable: Disabled This item is output only when Copy Type is SIMF.
FC Slower Copy2	Indicates whether the FC Slower Copy2 option is enabled or disabled. Enable: Enabled, Disable: Disabled This item is output only when Copy Type is SIMF.
Nondisruptive Migration Data Consistency	Indicates whether the Nondisruptive Migration Data Consistency option is enabled or disabled. Enable: Enabled, Disable: Disabled
FC Ext. Slower Copy1	Indicates whether the FC Ext. Slower Copy1 option is enabled or disabled. Enable: Enabled, Disable: Disabled This item is output only when Copy Type is SIMF.
FC Ext. Slower Copy2	Indicates whether the FC Ext. Slower Copy2 option is enabled or disabled. Enable: Enabled, Disable: Disabled This item is output only when Copy Type is SIMF.
Copy Pace Ext. Slower1	Indicates whether the Copy Pace Ext. Slower1 option is enabled or disabled. Enable: Enabled, Disable: Disabled
Copy Pace Ext. Slower2	Indicates whether the Copy Pace Ext. Slower2 option is enabled or disabled. Enable: Enabled, Disable: Disabled
Copy Pace Ext. None	Indicates whether the Copy Pace Ext. None option is enabled or disabled. Enable: Enabled, Disable: Disabled
Quick/Steady Split Multiplexing (ShadowImage/	Indicates whether the Quick/Steady Split Multiplexing (ShadowImage/ShadowImage for Mainframe) option is enabled or disabled. Enable: Enabled, Disable: Disabled

Item	Description
ShadowImage for Mainframe)	
Reverse Copy Multiplexing (ShadowImage/ ShadowImage for Mainframe)	Indicates whether the Reverse Copy Multiplexing (ShadowImage/ ShadowImage for Mainframe) option is enabled or disabled. Enable: Enabled, Disable: Disabled
Reserve *X*	Reserved items If Copy Type is SI, X is a number: 03 to 15, 17 to 19, 23, or 26 to 32. If Copy Type is SIMF, X is a number: 05 to 15, 19, 23, or 26 to 32.

[Local Replication] Initialize

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[Local Replication],Initialize,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
```

[Local Replication] Release Reserved CTG

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[Local Replication],Release Reserved CTG,,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Copy Type=SIMF
++{CTG,Result}=[{0x01,Normal end},{0x02,Normal end},
{0x03,Normal end}],Num. of CTGs=3
```

Detailed Information

Item	Description
Copy Type	The program product name for this operation SIMF: ShadowImage for Mainframe
CTG	The CTG ID of a reserve-released consistency group
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code
Num. of CTGs	The number of consistency groups whose reserved attribute is released

[Local Replication] Remove S-VOLs

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[Local Replication],Remove S-VOLs,,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Copy Type=TI
++{P-VOL(LDKC:CU:LDEV),S-VOL(LDKC:CU:LDEV),PoolID,MU,
Snapshot Group,Result}
=[{0xXX:0xAA:0xBB,0xYY:0xCC:0xDD,0,1,SnapshotSet1,Normal end},
{0xXX:0xAA:0xBB,0xYY:0xCC:0xDD,0,,SnapshotSet2,Error(xxxx-yyyy)}],
Num. of Pairs=2
```

Detailed Information

Item	Description
Copy Type	The program product name for this operation TI: Thin Image
P-VOL (LDKC:CU:LDEV)	The LDKC number, the CU number and the LDEV number of the primary volume No output if a primary volume is not specified during the secondary volume removal operation.
S-VOL (LDKC:CU:LDEV)	The LDKC number, the CU number and the LDEV number of the removed secondary volume No output if a secondary volume is not specified during the removal operation.
PoolID	The pool ID of the removed secondary volume
MU	The mirror unit number of the removed secondary volume No output if a mirror MU is not specified during the secondary volume removal operation.
Snapshot Group	The snapshot group name
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code
Num. of Pairs	The number of pairs whose secondary volumes are removed

[Local Replication] Reserve CTG

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[Local Replication],Reserve CTG,,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Copy Type=SIMF
++{CTG,Result}=[{0x01,Normal end},{0x02,Normal end},
{0x03,Normal end}],Num. of CTGs=3
```

Detailed Information

Item	Description
Copy Type	The program product name for this operation SIMF: ShadowImage for Mainframe
CTG	The CTG ID of a reserved consistency group
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyyy*): Abnormal end *xxxx*: Part code, *yyyyyy*: Error code
Num. of CTGs	The number of reserved consistency groups

[Local Replication] Resync Pairs

Example 1: when the copy type is SI or SIMF

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[Local Replication],Resync Pairs,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Copy Type=SI,Copy Pace=Medium,Resync Type=Normal Copy
++{P-VOL(LDKC:CU:LDEV),S-VOL(LDKC:CU:LDEV),Result}
=[{0xXX:0xAA:0xBB,0xYY:0xCC:0xDD,Normal end},
{0xX:0xAA:0xBB,0xY:0xCC:0xDD,Error(xxxx-yyyyy)}],
Num. of Pairs=2
```

Example 2: when the copy type is TI

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[Local Replication],Resync Pairs,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Copy Type=TI,Resync Type=Reverse Copy
++{P-VOL(LDKC:CU:LDEV),S-VOL(LDKC:CU:LDEV),MU,Result}
=[{0xXX:0xAA:0xBB,0xYY:0xCC:0xDD,,Normal end},
{0xX:0xAA:0xBB,0xYY:0xCC:0xDD,,Error(xxxx-yyyyy)}],Num. of Pairs=2
```

Detailed Information

Item	Description
Copy Type	The program product name for this operation SI: ShadowImage, SIMF: ShadowImage for Mainframe, TI: Thin Image
Copy Pace	The copy speed Faster: High speed, Medium; Medium speed, Slower: Low speed This item is output only when the copy type is SI or SIMF.
Resync Type	The resynchronization type Normal Copy: Normal resynchronization, Quick Resync: High speed resynchronization, Reverse Copy: Reverse resynchronization, Quick Restore: High speed restore

Item	Description
P-VOL (LDKC:CU:LDEV)	The LDKC number, the CU number and the LDEV number of the primary volume in the resynchronized pair
S-VOL (LDKC:CU:LDEV)	The LDKC number, the CU number and the LDEV number of the secondary volume in the resynchronized pair When Copy Type is TI, the values of the secondary volume are not output if the value of MU is output.
MU	The mirror unit number of the resynchronized pair The index and value of this item are output only when Copy Type is TI. However, the value of this item is not output if those of the secondary volume are output.
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code
Num. of Pairs	The number of resynchronized pairs

[Local Replication] Split Pairs

Example 1: when the copy type is SI or SIMF

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[Local Replication],Split Pairs,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Copy Type=SI,Copy Pace=Faster,Split Type=Steady Split
++{P-VOL(LDKC:CU:LDEV),S-VOL(LDKC:CU:LDEV),Result}
=[{0xXX:0xAA:0xBB,0xYY:0xCC:0xDD,Normal end},
{0xX:0xAA:0xBB,0xY:0xCC:0xDD,Error(xxxx-yyyyy)}],
Num. of Pairs=2
```

Example 2: when the copy type is TI

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[Local Replication],Split Pairs,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Copy Type=TI,Copy Pace=Invalid
++{P-VOL(LDKC:CU:LDEV),S-VOL(LDKC:CU:LDEV),MU,Cascade,Pair Type,
Copy Pace,Result}
=[{0xXX:0xAA:0xBB,0xYY:0xCC:0xDD,Enable,Clone,Low,Normal end},
{0xXX:0xAA:0xBB,0xYY:0xCC:0xDD,Disable,Snapshot,Error(xxxx-yyyyy)}],
Num. of Pairs=2
```

Detailed Information

Item	Description
Copy Type	The program product name for this operation SI: ShadowImage, SIMF: ShadowImage for Mainframe, TI: Thin Image
Copy Pace	The copy speed of the splited pair.

Item	Description
	Invalid: Disable, Slower: Low speed, Medium; Medium speed, Faster: High speed
Split Type	The split type Quick Split: Pair split by background copy, Steady Split: Pair split by update copy This item is output only when the copy type is SI or SIMF.
P-VOL (LDKC:CU:LDEV)	The LDKC number, the CU number and the LDEV number of the primary volume in the split pair
S-VOL (LDKC:CU:LDEV)	The LDKC number, the CU number and the LDEV number of the secondary volume in the split pair No output if Copy Type is TI, and a secondary volume is not specified during the pair splitting operation.
MU	The mirror unit number of the split pair The index and value of this item are output only when Copy Type is TI. However, the value of this item is not output if a MU is not specified during the pair splitting operation.
Cascade	Indicates the cascade attribute of the created pair. Enable: Supported pair, Disable: Not supported pair This item is output only when the copy type is TI and pair type is Clone.
Pair Type	Indicates the clone attribute of the created pair. Clone: Cloned, Snapshot: Non-cloned This item is output only when the copy type is TI.
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code
Num. of Pairs	The number of split pairs

[Local Replication] Suspend Pairs

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[Local Replication],Suspend Pairs,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Copy Type=SI
++{P-VOL(LDKC:CU:LDEV),S-VOL(LDKC:CU:LDEV),Result}
=[{0xXX:0xAA:0xBB,0xYY:0xCC:0xDD,Normal end},
{0xX:0xAA:0xBB,0xY:0xCC:0xDD,Error(xxxx-yyyyy)}],
Num. of Pairs=2
```

Detailed Information

Item	Description
Copy Type	The program product name for this operation SI: ShadowImage, SIMF: ShadowImage for Mainframe
P-VOL (LDKC:CU:LDEV)	The LDKC number, the CU number and the LDEV number of the primary volume in the suspended pair
S-VOL (LDKC:CU:LDEV)	The LDKC number, the CU number and the LDEV number of the secondary volume in the suspended pair
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code
Num. of Pairs	The number of suspended pairs

Maintenance Descriptions

[Maintenance] Blockade

Example 1: blocking a PCB

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Maintenance],Blockade,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+PCB=[CHA-1PC],Num. of PCBs=1
```

Example 2: blocking an LDEV

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Maintenance],Blockade,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+PG=[1-1],Num. of PGs=1
```

Detailed Information

Item	Description
PCB	The mounting location of the PCB (Channel Adapter (CHA), Disk Adapter (DKA), CM, MPB) to be blocked
Num. of PCBs	The number PCB to be blocked
PDEV	The mounting location of the PDEV (physical device) to be blocked
PG	The parity group number E1-1: In the case of an external volume V1-1: In the case of a virtual volume X1-1: In the case of a Dynamic Provisioning volume
Num. of PGs	The number of parity groups

Item	Description
LDEV	The LDKC number, the CU number, and the LDEV number
Num. of LDEVs	The number of LDEVs

[Maintenance] Correction Copy

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Maintenance],Correction Copy,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+PDEV=HDD000-00
```

Detailed Information

Item	Description
PDEV	The mounting location of the PDEV (physical device)

[Maintenance] DMA Restore

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Maintenance],DMA Restore,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+DMA=[DMA-10],Num. of DMAs=1
```

Detailed Information

Item	Description
DMA	The specified DMA
Num. of DMAs	The number of specified DMAs

[Maintenance] Drive Interrupt

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Maintenance],Drive Interrupt,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+PDEV=HDD000-00
```

Detailed Information

Item	Description
PDEV	The mounting location of the PDEV (physical device)

[Maintenance] DRR Restore

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Maintenance],DRR Restore,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+DRR=[DRR-10],Num. of DRRs=1
```

Detailed Information

Item	Description
DRR	The specified DRR
Num. of DRRs	The number of specified DRRs

[Maintenance] Format

The logged information indicates that the Format operation was only requested but not completed.

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Maintenance],Format,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+PG=[1-1],Num. of PGs=1
```

Detailed Information

Item	Description
PG	The parity group number E1-1: In the case of an external volume V1-1: In the case of a virtual volume X1-1: In the case of a Dynamic Provisioning volume
Num. of PGs	The number of parity groups
LDEV	The LDKC number, the CU number, and the LDEV number
Num. of LDEVs	The number of LDEVs

[Maintenance] Format Stop

This log information is output when the format process is suspended.

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Maintenance],Format Stop,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+PG=[1-1],Num. of PGs=1
```

Detailed Information

Item	Description
PG	The parity group number E1-1: In the case of an external volume V1-1: In the case of a virtual volume X1-1: In the case of a Dynamic Provisioning volume
Num. of PGs	The number of parity groups
LDEV	The LDKC number, the CU number, and the LDEV number
Num. of LDEVs	The number of LDEVs

[Maintenance] MP Restore

Example

```
08xx,YYYY/MM/DD,HH:MM:SS:xxx, 00:00,SVP,uid=maintenance,0,,
[Maintenance],MP Restore,,Error,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+MP=[MP08-2MC],Num. of MPs=1
```

Detailed Information

Item	Description
MP	The identity of the microprocessor
Num. of MPs	The number of microprocessors that were restored

[Maintenance] PCB Restore

Example

```
08xx,YYYY/MM/DD,HH:MM:SS:xxx, 00:00,SVP,uid=maintenance,0,,
[Maintenance],PCB Restore,,Error,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+PCB=[CACHE-2CC],Num. of PCBs=1
```

Detailed Information

Item	Description
PCB	The PCB.

Item	Description
Num. of PCBs	The number of PCBs

[Maintenance] Pre QuickFormat Stop

This log information is output when the Quick Format process is suspended.

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Maintenance],Pre QuickFormat Stop,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+PG=[1-1],Num. of PGs=1
```

Detailed Information

Item	Description
PG	The parity group number E1-1: In the case of an external volume V1-1: In the case of a virtual volume X1-1: In the case of a Dynamic Provisioning volume
Num. of PGs	The number of parity groups
LDEV	The LDKC number, the CU number, and the LDEV number
Num. of LDEVs	The number of LDEVs

[Maintenance] Quick Format

The logged information indicates that the Quick Format operation was only requested but not completed.

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Maintenance],Quick Format,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+PG=[1-1],Num. of PGs=1
```

Detailed Information

Item	Description
PG	The parity group number E1-1: In the case of an external volume V1-1: In the case of a virtual volume X1-1: In the case of a Dynamic Provisioning volume
Num. of PGs	The number of parity groups

Item	Description
LDEV	The LDKC number, the CU number, and the LDEV number
Num. of LDEVs	The number of LDEVs.

[Maintenance] Replace

Example 1: replacing parts

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Maintenance], Replace,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Parts name=SSVPMN-0
```

Example 2: replacing SFP

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Maintenance], Replace,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+SFP=[1A,3A,5A,7A],Num. of SFPs=4
```

Example 3: replacing Channel Adapter (CHA), Disk Adapter (DKA), cache memory, MPB, and BKM

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Maintenance], Replace,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+PCB=[CHA-1PC],Num. of PCBs=1
+Failed=[CHA-1PC],Num. of PCBs=1
```

Example 4: replacing PDEV (physical device)

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Maintenance], Replace,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+PDEV=HDD000-00
+Copy=Restore Data
```

Example 5: replacing SSW

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Maintenance], Replace,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+SSW=[SSW000-1],Num. of SSWs=1
```

Detailed Information

Item	Description
Parts name	The name of the parts (DKCPS-xx, DKCFAN-xxx, DKCPANEL-x,SSVPMN-x, PCIADP, PCICON, SVP-BASIC, SVP-OPTION, HUBBOX-xx, DKUPS-xxx, MODCON-x) specified to be replaced
SFP	The port that Small Form-Factor Pluggables (SFPs) are inserted.

Item	Description
Num.of SFPs	The number of inserted Small Form-Factor Pluggables
PCB	The mounting location of the PCB, (Channel Adapter (CHA), Disk Adapter (DKA), cache memory, MPB, or BKM) to be replaced.
Failed	When replacing multiple PCBs and some of the PCBs to be replaced had failures, the mounting locations of the failed PCBs are indicated. In such case, "Warning" is output as the result of the process. *Note*: This information is not output when there are no failed PCBs.
Num. of PCBs	The number of PCBs to be replaced
Physical Device (PDEV)	The mounting location of the PDEVs (physical devices) to be replaced
Copy	The status of copy process when replacing physical devices (PDEV)s. This information is output only when replacing PDEVs. Restore Data: Data recovery from spare disk, Correction Copy: correction copy
Diagnosis	Diagnosis is output only when INLINE skip is selected when replacing PDEVs. This information is output only when replacing PDEVs.
Micro Program	Micro Program is output only when microcode update is skipped when replacing PDEVs. This information is output only when replacing PDEVs.
SSW	The mounting location of SSWs to be replaced
Num. of SSWs	The number of SSWs to be replaced

[Maintenance] Restore

Example 1: restoring PCB

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Maintenance],Restore,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+PCB=[CHA-1PC],Num. of PCBs=1
```

Example 2: restoring LDEV

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Maintenance],Restore,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+PG=[1-1],Num. of PGs=1
```

Detailed Information

Item	Description
PCB	The mounting location of the PCB (Channel Adapter (CHA), Disk Adapter (DKA), MPB) to be restored
Num. of PCBs	The number of PCBs to be restored
PDEV	The location of the PDEV to be restored

Item	Description
PG	The parity group number E1-1: In the case of an external volume V1-1: In the case of a virtual volume X1-1: In the case of a Dynamic Provisioning volume
Num. of PGs	The number of parity groups
LDEV	The LDKC number, the CU number, and the LDEV number
Num. of LDEVs	The number of LDEVs

[Maintenance] Restore Data

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Maintenance],Restore Data,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+PDEV=HDD000-00
```

Detailed Information

Item	Description
PDEV	The mounting location of the PDEV

[Maintenance] Set Battery Life

This log information is output when Battery Life Warning SIM is set at the time of replacing a CM or a battery.

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Maintenance],Set Battery Life,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Battery,Date,Remained Life}=[{BATTERY-1BA,YYYY/MM/DD,990}],
Num. of Batteries=1
```

Detailed Information

Item	Description
Battery	The mounting location of the battery
Date	Indicates the date of the setting in "YYYY/MM/DD" format (YYYY: year, MM: month, DD: day)
Remained Life	The remaining date of the battery shelf life
Num of Batteries	The number of batteries

[Maintenance] Size Change

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Maintenance],Size Change,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+PCB=[CACHE-1CA],Num. of PCBs=1
+SIZE=32768
```

Detailed Information

Item	Description
PCB	The mounting location of the PCB (Cache Memory (CM))
Num. of PCBs	The number of PCBs
SIZE	The cache capacity

[Maintenance] Spare Disk

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Maintenance],Spare Disk,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+PDEV=HDD000-00
```

Detailed Information

Item	Description
PDEV	The mounting location of the PDEV

[Maintenance] Switch SVP

This logged information indicates that the Switch SVP operation was only requested but not completed.

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Maintenance],Switch SVP,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
```

[Maintenance] Transfer Config

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Maintenance],Transfer Config,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
```

[Maintenance] Type Change

Example1: changing type of SFPs

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Maintenance],Type Change,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{SFP,Type}=[{1A,Short Wave},{3A,Short Wave},
{5A,Short Wave},{7A,Long Wave}],Num. of SFPs=4
```

Detailed Information

Item	Description
SFP	The port that Small Form-Factor Pluggables (SFPs) are inserted
Type	The type of the Small Form-Factor Pluggable (SFP) Short Wave: Short wave, Long Wave: Long wave
Num. of SFPs	The number of inserted Small Form-Factor Pluggable (SFP)s

Example 2: changing type of PCBs

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Maintenance],Type Change,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+PCB=[DKA-1PA],Num. of PCBs=1
+Type=DKA  (4Port )
```

Detailed Information

Item	Description
PCB	The mounting location of the PCB to be changed
Num. of PCBs	The number of the PCBs to be changed
Type	The type of the PCB DKA (4Port): DKA, EDKA (4Port): Encryption DKA, MPB1: MPB1, MPB2: MPB2 Note: In the actual log file, there are two spaces output between "DKA" and "(4Port)".

[Maintenance] Verify

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Maintenance],Verify,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+PG=[1-1],Num. of PGs=1
```

Detailed Information

Item	Description
PG	The parity group number E1-1: In the case of an external volume V1-1: In the case of a virtual volume X1-1: In the case of a Dynamic Provisioning volume
Num. of PGs	The number of parity groups
LDEV	The LDKC number, the CU number, and the LDEV number
Num. of LDEVs	The number of LDEVs

[Maintenance] Verify Stop

This log information is output when the format process is suspended.

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Maintenance],Verify Stop,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+PG=[1-1],Num. of PGs=1
```

Detailed Information

Item	Description
PG	The parity group number E1-1: In the case of an external volume V1-1: In the case of a virtual volume X1-1: In the case of a Dynamic Provisioning volume
Num. of PGs	The number of parity groups
LDEV	The LDKC number, the CU number, and the LDEV number
Num. of LDEVs	The number of LDEVs

Monitor Descriptions

[Monitor] Threshold

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[Monitor],Threshold,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Item,Threshold,Term}=[{Cache Use Rate,10,20},
{Cache Write Pending Rate,0,0},
{Cache MCU Side File Rate,0,0},
```

```
{MP Processing Rate,70,30},
{Loss of Signal Count(Fibre),50,5},
{Bad Received Character Count(Fibre),0,0},
{Loss of Synchronization Count(Fibre),0,0},
{Link Failure Count(Fibre),80,10},
{Received EOFa Count(Fibre),0,0},
{Discarded Frame Count(Fibre),0,0},
{Bad CRC Count(Fibre),0,0},
{Protocol Error Count(Fibre),0,0},
{Expired Frame Count(Fibre),30,50},
{Link Failure Count(FCoE),0,0},
{Virtual Link Failure Count(FCoE),50,5},
{Symbol Error Count(FCoE),60,5},
{FCS Error Count(FCoE),0,0},
{HTP/FNP Ex Multiple(FICON),0,0},
{HTP/FNP Read Data Transfer Rate(FICON),0,0},
{HTP/FNP Write Data Transfer Rate(FICON),0,0},
{HTP/FNP Processing Rate(FICON),0,0},
{Read Hit Rate,0,0}],
Num. of Items=22
```

Detailed Information

Item	Description
Item	Process monitoring item
Threshold	Threshold for each process monitoring item
Term	Period in which the threshold continues to be exceeded
Num. of Items	Number of the process monitoring items

Performance Monitor Descriptions

[PFM] DCR Prestaging

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[PFM],DCR Prestaging,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
```

[PFM] Delete M/F DCR

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[PFM],Delete M/F DCR,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{LDKC:CU:LDEV,Start CC-HH,End CC-HH}
=[{0x00:0x00:0x00,XXXXXX-XX,XXXXXX-XX},
{0x00:0x00:0x00,XXXXXX-XX,XXXXXX-XX}],
Num. of LDEVs=2
```

Detailed Information

Item	Description
LDKC:CU:LDEV	The LDKC, CU, and LDEV numbers of the logical volume (for a mainframe system) where the setting information of Cache Residency cache is canceled.
Start CC-HH	The starting cylinder number (CC) and the starting head number (HH) of the cancelled data
End CC-HH	The ending cylinder number (CC) and the ending head number (HH). This number is output when the ending cylinder and ending head are specified for the cancelled data.
Num. of LDEVs	The number of logical volumes (for a mainframe system) where the setting information of Cache Residency cache is cancelled

[PFM] Delete Open DCR

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[PFM],Delete Open DCR,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{LDKC:CU:LDEV,Start LBA,End LBA}
=[{0x00:0x00:0x00,XXXXXXXXXXXXXXXX,XXXXXXXXXXXXXXXX},
{0x00:0x00:0x00,XXXXXXXXXXXXXXXX,XXXXXXXXXXXXXXXX}],
Num. of LDEVs=2
```

Detailed Information

Item	Description
LDKC:CU:LDEV	The LDKC, CU, and LDEV numbers of the logical volume (for an open system) where the setting information of Cache Residency cache is canceled.
Start LBA	The starting LBA number of the cancelled data.
End LBA	The ending LBA number of the cancelled data. This number is output when only the ending LBA is specified for the cancelled data.
Num. of LDEVs	The number of logical volumes (for an open system) where Cache Residency cache is canceled.

[PFM] Delete Unused WWNs

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PFM],Delete Unused WWNs,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
```

[PFM] Edit CU Monitor Mode

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PFM],Edit CU Monitor Mode,Enable,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+[LDKC:CU] = [0x00:0x00,0x00:0x01,0x00:0x02],Num. of CUs = 3
```

Basic Information

Parameter	Description
Enable	The monitored CU is enabled

Detailed Information

Item	Description
LDKC:CU	The ID of the monitored CU The logical DKC number and the CU number are separated by colons and arranged in this order.

[PFM] Edit Monitoring SW

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PFM],Edit Monitoring SW,
Enable 60sec,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
```

Basic Information

Parameter	Description
Enable XXsec	Monitoring is enabled and the gathering interval is set as XX sec
Disable	Monitoring is disabled

[PFM] Edit WWN

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PFM],Edit WWN,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Update Mode,HBA WWN,Change WWN Name,Change HBA WWN}
=[{Change HBA WWN,0xXXXXXXXXXXXXXXXX,,0xXXXXXXXXXXXXXXXX},
{Change WWN Name,0xXXXXXXXXXXXXXXXX,
XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX,
}],Num. of WWNs=2
```

Detailed Information

Item	Description
Update Mode	The changing mode of WWN. Change HBA WWN: Change of HBA WWN, Change WWN Name: Change of WWN name.
HBA WWN	The name of HBA WWN.
Change WWN Name	The new WWN name (if changed)
Change HBA WWN	The name of changed HBA WWN.
Num. of WWNs	The number of changed WWNs.

[PFM] Edit WWN MonitorMode

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PFM],Edit WWN MonitorMode,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Mode,HBA WWN,WWN Name}={Add WWN,0xXXXXXXXXXXXXXXXX,
XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX},
++Port=[XX],Num. of Ports=1,
-Num. of WWNs=1
```

Detailed Information

Item	Description
Mode	The setting mode of WWN Add WWN: Addition of HBA WWN, Delete WWN: Deletion of HBA WWN
HBA WWN	The HBA WWN
WWN Name	The WWN name
Port	The name of a target port
Num. of Ports	The number of target ports for the added or deleted WWN
Num. of WWNs	The number of added or deleted WWNs

[PFM] Set M/F DCR

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[PFM],Set M/F DCR,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{LDKC:CU:LDEV,Mode,Prestaging,Start CC-HH,End CC-HH}
=[{0x00:0x00:0x00,Bind,No,XXXXXX-XX,XXXXXX-XX},
```

```
{0x00:0x00:0x00,Priority,Yes,XXXXXX-XX,XXXXXX-XX}],
Num. of LDEVs=2
```

Detailed Information

Item	Description
LDKC:CU:LDEV	The LDKC, CU, and LDEV numbers of the logical volume (for a mainframe system) where the setting information of Cache Residency cache is added or changed.
Mode	The setting mode of Cache Residency cache Bind: Bind, Priority: Priority
Prestaging	The prestaging target No: No (disables the prestaging mode) Yes: Yes (enables the prestaging mode)
Start CC-HH	The starting cylinder number (CC) and the starting head number (HH) of the data resident in Cache Residency cache
End CC-HH	The ending cylinder number (CC) and the ending head number (HH) of the data resident in Cache Residency cache
Num. of LDEVs	The number of logical volumes (for a mainframe system) where the setting information of Cache Residency cache is added or changed

[PFM] Set Open DCR

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[PFM],Set Open DCR,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{LDKC:CU:LDEV,Mode,Prestaging,Start LBA,End LBA}
=[{0x00:0x00:0x00,Bind,No,XXXXXXXXXXXXXXXX,XXXXXXXXXXXXXXXX}],
Num. of LDEVs=1
```

Detailed Information

Item	Description
LDKC:CU:LDEV	The LDKC, CU, and LDEV numbers of the logical volume (for an open system) where the setting information of Cache Residency cache is added or changed.
Mode	The setting mode of Cache Residency cache Bind: Bind, Priority: Priority
Prestaging	The prestaging target. No: No (disables the prestaging mode) Yes: Yes enables the prestaging mode
Start LBA	The starting LBA number of the data resident in Cache Residency cache

Item	Description
End LBA	The ending LBA number of the data resident in Cache Residency cache
Num. of LDEVs	The number of logical volumes (for an open system) where the setting information of Cache Residency cache is added or changed.

Program Product Key (PP KEY) Descriptions

[PP KEY] PP Apply

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PP KEY],PP Apply,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{P.P.Name,Result}
=[{Cache Residency Manager,Normal end},
{Cache Residency Manager for Mainframe,Normal end},
{Compatible PAV,Normal end},{Compatible Hyper PAV,Normal end},
{Data Retention Utility,Normal end},
{Volume Retention Manager,Normal end},
{Dynamic Provisioning,Normal end},
{Dynamic Tiering,Normal end},
{Dynamic Provisioning for Mainframe,Normal end},
{Dynamic Tiering for Mainframe,Normal end},
{Thin Image,Normal end},
{Open Volume Management,Normal end},
{LUN Manager,Normal end},
-{Performance Monitor,Normal end},
{Server Priority Manager,Normal end},
{Volume Migration,Normal end},{Volume Migration V2,Normal end},
{ShadowImage,Normal end},{ShadowImage for Mainframe,Normal end},
{Compatible FlashCopy(R) V2,Normal end},
{Compatible Software for IBM(R) FlashCopy(R) SE,Normal end},
{HDvM/Storage Navigator,Normal end},{SNMP Agent,Normal end},
{JAVA API,Normal end},{TrueCopy,Normal end},
{Universal Replicator,Normal end},
{TrueCopy for Mainframe,Normal end},
-{Universal Replicator for Mainframe,Normal end},
{Disaster Recovery Extended,Normal end},
{Universal Volume Manager,Normal end},{Virtual LVI,Normal end},
{Virtual Partition Manager,Normal end},
{Volume Shredder,Normal end},{Compatible XRC,Normal end},
{FICON(R) Data Migration,Normal end},
{Compatible High Performance Connectivity for FICON(R),
Normal end},
{SMI-S Provider,Normal end},
{Resource Partition Manager,Normal end}],Num. of PPs=38
```

Detailed Information

This log information is output when the setting task of the program product (Install/Remove or Enable/Disable Licenses) is complete. The information of all of the program products is sent to the storage system, so the names of all of these appear in the log.

Item	Description
P.P.Name	The program product name
Result	The check result of the program product Normal end: Normal end, Error(*xxxxx-yyyyyy*): Abnormal end *xxxxx*: Part code, *yyyyyy*: Error code
Num. of PPs	The number of program products

[PP KEY] PP Disable chk

This log information merely indicates that the GUI operation of disabling a license key is complete, and it does not necessarily mean that the license key is actually disabled.

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[PP KEY],PP Disable chk,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{P.P.Name,Result}=[{JAVA API,Normal end}],Num. of PPs=1
```

Detailed Information

Item	Description
P.P.Name	The name of the program product to be disabled
Result	The check result of the program product to be disabled Normal end: Normal end, Error(*xxxxx-yyyyyy*): Abnormal end *xxxxx*: Part code, *yyyyyy*: Error code
Num. of PPs	The number of program products to be disabled

[PP KEY] PP Enable chk

This log information merely indicates that the GUI operation of enabling a license key is complete, and it does not necessarily mean that the license key is actually enabled.

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[PP KEY],PP Enable chk,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{P.P.Name,Result}=[{JAVA API,Normal end}],Num. of PPs=1
```

Detailed Information

Item	Description
P.P.Name	The name of the program product to be enabled
Result	The check result of the program product to be enabled Normal end: Normal end, Error(*xxxxx-yyyyyy*): Abnormal end *xxxxx*: Part code, *yyyyyy*: Error code
Num. of PPs	The number of program products to be enabled

[PP KEY] PP Install chk

This log information merely indicates that the GUI operation of installing a program product is complete, and it does not necessarily mean that the program product is actually installed.

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[PP KEY],PP Install chk,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Key Code
=XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX
XXXXXXX
++{P.P.Name,Result}=[{JAVA API,Normal end}],Num. of PPs=1
```

Detailed Information

Item	Description
Key Code	The key code used for installation
P.P.Name	The name of the program product to be installed
Result	The check result of the installation Normal end: Normal end, Error(*xxxxx-yyyyyy*): Abnormal end *xxxxx*: Part code, *yyyyyy*: Error code
Num. of PPs	The number of program products to be installed

[PP KEY] PP Install File chk

This log information merely indicates that the GUI operation of installing a program product is complete, and it does not necessarily mean that the program product is actually installed.

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[PP KEY],PP Install File chk,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+File Name=C:\Dkc200\Home\Sample.plk
```

```
++{P.P.Name,Result}=[{JAVA API,Normal end},
-{LUN Manager,Normal end}],Num. of PPs=2
```

Detailed Information

Item	Description
File Name	The name of the license key file used for installation
P.P.Name	The name of the program product to be installed
Result	The result of file check in the installation. Normal end: Normal end, Error(*xxxxx-yyyyyy*): Abnormal end *xxxxx*: Part code, *yyyyyy*: Error code
Num. of PPs	The number of program products to be installed

[PP KEY] PP Removal chk

This log information merely indicates that the GUI operation of uninstalling a program product is complete, and it does not necessarily mean that the program product is actually uninstalled.

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[PP KEY],PP Removal chk,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{P.P.Name,Result}=[{JAVA API,Normal end}],Num. of PPs=1
```

Detailed Information

Item	Description
P.P.Name	The name of the program product to be uninstalled
Result	The check result of the uninstallation Normal end: Normal end, Error(*xxxxx-yyyyyy*): Abnormal end *xxxxx*: Part code, *yyyyyy*: Error code
Num. of PPs	The number of program products to be uninstalled

[PP KEY] Update License

This log information merely indicates that the GUI operation of updating a license status is complete, and it does not necessarily mean that the license status is actually updated.

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[PP KEY],Update License,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{P.P.Name,Result}=[{JAVA API,Normal end}],Num. of PPs=1
```

Detailed Information

Item	Description
P.P.Name	The name of the program product whose license status is to be updated
Result	The result of the license status update Normal end: Normal end, Error(*xxxxx-yyyyyy*): Abnormal end *xxxxx*: Part code, *yyyyyy*: Error code
Num. of PPs	The number of program products whose license statuses are to be updated

Provisioning Descriptions

[PROV] Add Hosts

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],Add Hosts,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Port,HostGrpID,WWN,Nickname}
=[{XX,0xXXX,0xXXXXXXXXXXXXXXXX,XXXXXXXXXXXXXXXX},
{XX,0xXXX,0xXXXXXXXXXXXXXXXX,XXXXXXXXXXXXXXXX}],Num. of WWNs=2
```

Detailed Information

Item	Description
Port	The name of the port to which the host group belongs
HostGrpID	The host group number where the host is registered
WWN	Indicates WWN of the host bus adapter for the host registered in the host group. WWN is a 16-digit number in the hexadecimal format.
Nickname	The nickname of the host bus adapter for the host registered in the host group
Num. of WWNs	The number of registered hosts (WWN)

[PROV] Add LUN Paths

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],Add LUN Paths,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Port,HostGrpID,LUN,LDKC:CU:LDEV}
=[{XX,0xXXX,XXXX,0xXX:0xXX:0xXX},
{XX,0xXXX,XXXX,0xXX:0xXX:0xXX},
{XX,0xXXX,XXXX,0xXX:0xXX:0xXX}],Num. of Paths=3
```

Detailed Information

Item	Description
Port	The name of the port to which the host group belongs
HostGrpID	The host group number linked to the logical volume
LUN	Indicates LUN of the logical volume linked to the host group
LDKC:CU:LDEV	The LDKC, CU, and LDEV numbers of the logical volume linked to the host group
Num. of Paths	The number of LU paths set

[PROV] Assign MP Blade

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],Assign MP Blade,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{LDKC:CU:LDEV,MP Blade ID,Result}
=[{0xXX:0xXX:0xXX,0xX,Normal end},
{0xXX:0xXX:0xXX,0xX,Normal end}],Num. of LDEVs=2
```

Detailed Information

Item	Description
LDKC:CU:LDEV	The LDKC number, the CU number, and the LDEV number
MP Blade ID	The MP Blade ID of the migration target
Result	The result of operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code
Num. of LDEVs	The number of specified logical volumes

[PROV] Block LDEVs

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],Block LDEVs,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+LDKC:CU:LDEV=[0x00:0x00:0x01,0x00:0x00:0x02,0x00:0x00:0x03,
0x00:0x00:0x04,0x00:0x00:0x05,0x00:0x00:0x06,0x00:0x00:0x07,
0x00:0x00:0x08,0x00:0x00:0x09,0x00:0x00:0x0A],
Num. of LDEVs=10
```

Detailed Information

Item	Description
LDKC:CU:LDEV	The LDKC number, the CU number, and the LDEV number
Num. of LDEVs	The number of LDEVs being blocked

[PROV] CalculateTieringMonitorData

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[PROV],CalculateTieringMonitorData,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{TieringMonitorDataOperation{
  RelocationOption=Enable,
    Pool{
      Id=2}}}
```

Detailed Information

Item			Description
TieringMonitorDataOperation			The setting information for recalculating the tier relocation using the monitoring data
	RelocationOption		The setting information on the tier relocation option Disable: Tier relocation is not started. Enable: Tier relocation is immediately started. null: Tier relocation is not started.
	Pool		The pool information
		Id	The pool number

[PROV] Complete SIMs

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],Complete SIMs,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+SIM=[0x600000,0x600001,0x60000F],Num. of SIMs=3
```

Detailed Information

Item	Description
SIM	The reference code of the Service Information Message (SIM) generated in the storage system with resolved errors or service request status. No SIM reference code appears if the SIM cannot be completed due to the unsatisfied requirements.

Item	Description
	0xXXXXXX: Reference code of the SIM
Num. of SIMs	The number of SIMs with resolved errors and service request status

[PROV] Create Host Groups

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],Create Host Groups,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Port,HostGrpID,HostGrpName}=[{XX,0xXXX,XXXXXXXXXXXXXXXX},
{XX,0xXXX,XXXXXXXXXXXXXXXX}],Num. of Host Groups=2
```

Detailed Information

Item	Description
Port	The name of the port where the host group has been added
HostGrpID	The host group number newly added
HostGrpName	The name of the host group newly added
Num. of Host Groups	The number of host groups added

[PROV] Create LDEVs

Example 1: Creating internal volumes or external volumes

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],Create LDEVs,Basic,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{PG,LDKC:CU:LDEV,Start LBA,Emulation,Size,Unit,,
MP Blade ID,T10 PI}
=[{XX-XX,0xXX:0xXX:0xXX,XXXXXXXX,OPEN-V,XXXXXXXX,KB,,
Auto,Enable},
{XX-XX,0xXX:0xXX:0xXX,XXXXXXXX,OPEN-V,XXXXXXXX,KB,,
0xX,Disable}],Num. of LDEVs=2
```

Basic Information for Example 1

Parameter	Description
Basic	Indicates that basic volumes were created
External	Indicates that external volumes were created
Basic/External	Indicates that both basic volumes and external volumes were created at the same time

Detailed Information for Example 1

Item	Description
PG	The parity group number. An E at the beginning of a parity group number designates an external volume is present in that parity group.
LDKC:CU:LDEV	The LDKC, CU, and LDEV numbers
Start LBA	The start LBA. A hyphen (-) is output when not specified.
Emulation	The emulation type
Size	The user-specified capacity
Unit	The unit of the CV capacity. LBA is displayed. This capacity value can be converted into kilobytes by dividing by two because one block is 512 bytes. For information about how to convert the capacity value into cylinders, see the section describing size calculation in *Provisioning Guide for Mainframe Systems*.
MP Blade ID	The specified MP blade ID. "Auto" indicates the processor blade number is set automatically.
T10 PI	Indicates the setting status of the T10 PI attribute Enable: T10 PI is enabled. Disable: T10 PI is disabled.
Num. of LDEVs	The number of LDEVs

Example 2: Creating Thin Image volumes

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],Create LDEVs,Snapshot,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Pool ID,LDKC:CU:LDEV,LDEVCapa(blocks),Emulation,CLPR,SSID,
MP Blade ID,T10 PI,Result}
=[{-,0x00:0x00:0x00,96000,OPEN-V,0,0x0004,Auto,Enable,Normal end},
{-,0x00:0x01:0x00,96000,OPEN-V,0,0x0005,Auto,Disable,Normal end}],
Num.of LDEVs=2
```

Example 3: Creating DP-VOLs

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],Create LDEVs,Thin Provisioning,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Pool ID,LDKC:CU:LDEV,LDEVCapa(blocks),Emulation,CLPR,SSID,
MP Blade ID,Attribute,Full Allocation,Data Direct Mapping,
Data Direct Mapped LDEV(LDKC:CU:LDEV),T10 PI,Capacity Saving,Result}
=[{1,0x00:0x00:0x00,96000,OPEN-V,0,0x0004,Auto,-,Enable,Enable,
0x00:0x10:0x00,Enable,Compression,Normal end},
{1,0x00:0x01:0x00,96000,OPEN-V,0,0x0005,Auto,-,Disable,Disable,
-,Disable,Disabled,Normal end}],Num.of LDEVs=2
```

Basic Information for Example 2 and 3

Item	Description
Snapshot	Operating for the Thin Image volumes.
Thin Provisioning	Operating for the Dynamic Provisioning virtual volumes.

Detailed Information for Example 2 and 3

Item	Description
Pool ID	The pool ID of a related pool volume For a Snapshot volume, a hyphen (-) is output, because you specify no setting about a related volume when you create V-Vols for Snapshot.
LDKC:CU:LDEV	The logical DKC, CU, and LDEV numbers of the created V-Vols These numbers are separated by colons and arranged in this order.
LDEVCapa (blocks)	The capacity of the created V-Vols in blocks
Emulation	The emulation type of the created V-Vol
CLPR	The CLPR ID of the created V-Vol
SSID	The SSID
MP Blade ID	MP Blade ID specified for the V-Vol. When an MP Blade ID is specified automatically, "Auto" is output.
Attribute	Indicates the attribute of the created V-VOLs. TSE: TSE attribute, -: No attribute This item is output for Dynamic Provisioning volumes only.
Full Allocation	Indicates the setting status of the Full Allocation Enable: Full Allocation is enabled. Disable: Full Allocation is disabled. This item is output for Dynamic Provisioning volumes only.
Data Direct Mapping	Indicates the setting status of Data Direct Mapping for the created V-Vol Enable: Data Direct Mapping is enabled. Disable: Data Direct Mapping is disabled. This item is output for Dynamic Provisioning volumes only.
Data Direct Mapped LDEV(LDKC:CU:LDEV)	Indicates the LDEV ID of the pool volume with Data Direct Mapping enabled that composes a pool associated with the created V-Vol A hyphen (-) is output if Data Direct Mapping is disabled on the created V-Vol. This item is output for Dynamic Provisioning volumes only.
T10 PI	Indicates the setting status of the T10 PI attribute Enable: T10 PI is enabled. Disable: T10 PI is disabled.

Item	Description
Capacity Saving	Indicates the setting status of Capacity Saving Compression: Compression Deduplication and Compression: Deduplication and Compression Disabled: Capacity Saving is disabled.
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code
Num. of LDEVs	The number of created V-Vols

[PROV] Create Resource Grps

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],Create Resource Grps,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{VDKC-Box ID,Resource Group ID,Resource Group Name,Result}
=[{0,1,RSG1,Normal end},{0,2,RSG2,Normal end}],
Num. of Resource Groups=2
```

Detailed Information

Item	Description
VDKC-Box ID	The number of the VDKC-Box to which the created resource group belongs. A hyphen (-) is output when the creating operation failed.
Resource Group ID	The number of the created resource group. A hyphen (-) is output when the creating operation failed
Resource Group Name	The resource group name of the created resource group
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code
Num. of Resource Groups	The number of created resource groups

[PROV] Create VDKC-Box

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],Create VDKC-Box,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{VDKC-Box ID,Model,SerialNo,Result}
={1,0x0400,28528,Normal end}
++{VDKC-Box ID,Resource Group ID,Resource Group Name,Result}
```

```
=[{1,1,RSG1,Normal end},{1,2,RSG2,Normal end}],
Num. of Resource Groups=2
```

Detailed Information

Item	Description
VDKC-Box ID	The number of the created VDKC-Box. A hyphen (-) is output when the creating operation failed.
Model	The model of the created VDKC-Box
SerialNo	The serial number of the created VDKC-Box
Result	The result of the VDKC-Box operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code
VDKC-Box ID	The number of the VDKC-Box to which the created resource group belongs. A hyphen (-) is output when the creating operation failed.
Resource Group ID	The number of the created resource group. A hyphen (-) is output when the creating operation failed.
Resource Group Name	The resource group name of the created resource group
Result	The result of the resource group operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code
Num. of Resource Groups	The number of created resource groups

[PROV] Create/Expand Pools

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],Create/Expand Pools,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Pool ID,Pool Type,Multi Tier Pool,Warning Threshold(%),
Depletion Threshold(%),Subscription Limit(%),
Protect V-VOLs when I/O fails to Blocked Pool VOL,
Protect V-VOLs when I/O fails to Full Pool,
Tier Management,Cycle Time,Monitoring Period,Monitoring Mode,
Relocation Speed,Data Direct Mapping,Pool Result,Execute Command}
=[{1,Dynamic Provisioning,Enable,20,70,100,Yes,Yes,Auto,24,
00:00-23:59,Continuous Mode,3,Disable,Normal end,Create}],
Num. of Pools=1
++{LDKC:CU:LDEV,External LDEV Tier Rank,LDEV Result}
=[{0x00:0x00:0x00,Middle/Internal,Normal end},
{0x00:0x00:0x01,Middle/Internal,Normal end},
{0x00:0x00:0x02,Middle/Internal,Normal end}],Num. of LDEVs=3
```

Detailed Information

Item	Description
Pool ID	The pool ID of the created or expanded pool
Pool Type	The pool type. Dynamic Provisioning: Dynamic Provisioning, Thin Image: Thin Image
Multi Tier Pool	The setting status of the multi-tier mode and active flash function for the created or expanded pool Enable(Active Flash): Both Dynamic Tiering and active flash are enabled. Enable: Dynamic Tiering is enabled and active flash is disabled. Disable: Both Dynamic Tiering and active flash are disabled. If Pool Type is Thin Image, a hyphen (-) is output.
Warning Threshold(%)	The warning threshold of the usage rate of the created pool. The unit is indicated as a percentage. If Execute Command is Expand, a hyphen (-) is output.
Depletion Threshold(%)	The depletion threshold of the usage rate of the created pool. The unit is indicated as a percentage. If Pool Type is Thin Image, if the depletion threshold is not specified, or if Execute Command is Expand, a hyphen (-) is output.
Subscription Limit(%)	The reserve amount of the created pool. The unit is percent (%). If the reserve amount is not specified, it outputs "Unlimited". If Pool Type is Thin Image, or if Execute Command is Expand, a hyphen (-) is output.
Protect V-VOLs when I/O fails to Blocked Pool VOL	Indicates whether the setting of the protect access attribute on the virtual volume is enabled or disabled when the pool is blocked. Yes: Enabled, No: Disabled If Pool Type is not Dynamic Provisioning, or if the pool is not a pool for an open system, or if Execute Command is Expand, a hyphen (-) is output.
Protect V-VOLs when I/O fails to Full Pool	Indicates whether the setting of the protect access attribute on the virtual volume is enabled or disabled when the pool is full. Yes: Enabled, No: Disabled If Pool Type is not Dynamic Provisioning, or if the pool is not a pool for an open system, or if Execute Command is Expand, a hyphen (-) is output.
Tier Management	The auto control mode of the created or expanded pool Auto: Auto, Manual: Manual If Multi Tier Pool is not Enable, a hyphen (-) is output.
Cycle Time	The cycle of performance monitoring for the created pool 0.5: every thirty minutes, 1: every one hour, 2: every two hours, 4: every four hours, 8: every eight hours, 24: every twenty-four hours

Item	Description
	If Tier Management is not Auto, or if Execute Command is Expand, a hyphen (-) is output.
Monitoring Period	The monitoring period of the pool. Format: "H1:M1-H2:M2" H1: The time when the monitoring starts (hour) M1: The time when the monitoring starts (minute) H2: The time when the monitoring ends (hour) M2: The time when the monitoring ends (minute). If Cycle Time is not 24, or if Execute Command is Expand, a hyphen (-) is output.
Monitoring Mode	The monitoring mode Continuous Mode: Continuous mode, Period Mode: Period mode If Multi Tier Pool is not Enable, or if Execute Command is Expand, a hyphen (-) is output.
Relocation Speed	The relocation speed 1: Slowest, 2: Slower, 3: Normal, 4: Faster, 5: Fastest If Multi Tier Pool is not Enable, or if Execute Command is Expand, a hyphen (-) is output.
Data Direct Mapping	Indicates the setting status of Data Direct Mapping Enable: Data Direct Mapping is enabled. Disable: Data Direct Mapping is disabled. If Execute Command is Expand, a hyphen (-) is output.
Pool Result	The result of pool creation or expansion Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end, Not Execute: Not Executed *xxxx*: Part code, *yyyyy*: Error code
Execute Command	The executed operation Create: Pools are created. Expand: Pools are expanded. If Pool Result is not Normal end, a hyphen (-) is output.
Num. of Pools	The number of created or expanded pools
LDKC:CU:LDEV	The LDKC number, the CU number and the LDEV number of the pool volume assigned to the created or expanded pool
External LDEV Tier Rank	The external LDEV tier rank of the pool volume assigned to the created or expanded pool High: An external volume (High) Middle/Internal: An external volume (Middle) or an internal volume Low: An external volume (Low)
LDEV Result	The result of creating or expanding pools per pool volume Normal end: Normal end, Error(*xxxx-yyyy*): Abnormal end, Not Execute: Not Executed *xxxx*: Part code, *yyyy*: Error code
Num. of LDEVs	The number of created or expanded pool volume

[PROV] CreateAlus

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],CreateAlus,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Alus[0]{
  LdevId=0x00:0x00:0xBC,Result=Normal end,Ssid=0x0004,MpBladeId=Auto,
  Clpr{
    Id=0},
  Id="60-06-0E-81-30-76-D9-30-76-D9-00-00-00-00-00-BC"}}
```

Detailed Information

Item			Description
Alus[x]			The setting information of the created LDEV with the ALU attribute
	LdevId		The LDEV ID
	Result		The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end, Not Execute: Not Executed *xxxx*: Part code, *yyyyy*: Error code
	Ssid		The SSID
	MpBladeId		The MP Blade ID "Auto" indicates the auto assignment is enabled.
	Clpr		The CLPR setting information
		Id	The CLPR ID
	Id		The ALU ID

[PROV] CreateiScsiName

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],CreateiScsiName,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{iScsiPort[0]{
  Port=1A,
  iScsiTarget[0]{
    Id=0,
    RemoteiScsiName[0]{
      Name="Name",NickName="NickName",Result=Normal end}}}}
```

Detailed Information

Item	Description
iScsiPort[x]	The setting information of the port
Port	The port ID to be set
iScsiTarget[x]	The iSCSI target information
Id	The iSCSI target ID
RemoteiScsiName[x]	The information of the iSCSI name of the host bus adapter
Name	The iSCSI name of the host bus adapter
NickName	The host name (nick name) "null" is output if this item is not set or changed.
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code

[PROV] CreateiScsiPath

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],CreateiScsiPath,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{ConnectionTest=true,
iScsiPath[0]{
  iScsiPort{
    Port=1A},
  RemoteiScsiPort{
    Function=UVM,IpType=IPv4,Ipv4Address=192.168.0.101,
    Ipv6Address=0:0:0:0:0:0:0:0,TcpPortNumber=3260,
    RemoteiScsiTarget{
      Name="iqn.1994-04.jp.co.hitachi:rsd.r80.t.00001.3a000",
      iScsiUser{
        AuthSwitch=None,AuthMode=Unidirectional,UserId="CHAPUser"}}},
  Result=Normal end}}
```

Detailed Information

Item	Description
ConnectionTest	Indicates whether to perform the connection test after creating iSCSI paths true: Test is performed. false: Test is not performed.
iScsiPath[x]	The path information between the iSCSI port on the local storage system and the iSCSI target on the remote storage system

Item	Description
iScsiPort	The information of the iSCSI port on the local storage system
Port	The Port ID
RemoteiScsiPort	The information of the iSCSI port on the remote storage system
Function	Function that uses the created iSCSI path UVM: Universal Volume Manager RemoteReplication: Remote Replication
IpType	The type of the IP address IPv4: IPv4 address, IPv6: IPv6 address
IPv4Address	The IPv4 address*
IPv6Address	The IPv6 address*
TcpPortNumber	The TCP port number
RemoteiScsiTarget	The iSCSI target information
Name	The iSCSI name
iScsiUser	The user authentication information
AuthSwitch	Indicates whether the CHAP authentication method is enabled or disabled* None: CHAP is disabled. CHAP: CHAP is enabled.
AuthMode	Indicates the CHAP authentication mode* Unidirectional: CHAP is one-way. Mutual: CHAP is two-way.
UserId	The CHAP user name*
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code
* "null" is output if this item is not set or changed.	

[PROV] CreateiScsiTarget

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],CreateiScsiTarget,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{iScsiPort[0]{
  Port=1A,
  iScsiTarget[0]{
```

```
Id=0,Name="Name",Alias="Alias",UserAuthSwitch=Enable,
AuthMode=Unidirectional,Result=Normal end}}}
```

Detailed Information

Item			Description
iScsiPort[x]			The setting information of the port
	Port		The port ID to be set
	iScsiTarget[x]		The iSCSI target information
		Id	The iSCSI target ID
		Name	The iSCSI target name
		Alias	The iSCSI target alias
		UserAuthSwitch	The setting status of the CHAP user authentication Enable: Enabled, Disable: Disabled, UseHostSetting: Using host settings
		AuthMode	The authentication mode. Unidirectional: One-way, Mutual: Two-way
		Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code

[PROV] CreateRemoteChapUser

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],CreateRemoteChapUser,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{iScsiPort[0]{
  Port=1A,
  iScsiTarget[0]{
    Id=0,
    RemoteiScsiUser[0]{
      ChapUserId="ChapUserId",Result=Normal end}}}}
```

Detailed Information

Item			Description
iScsiPort[x]			The setting information of the port
	Port		The port ID to be set
	iScsiTarget[x]		The iSCSI target information
		Id	The iSCSI target ID
		RemoteiScsiUser[x]	The user information of the CHAP authentication
		ChapUserId	The user ID of the CHAP authentication

Item	Description
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code

[PROV] CreateSlus

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[PROV],CreateSlus,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Slus[0]{
  LdevId=0x00:0x00:0xBC,Result=Normal end,Capacity=8388608,
  Ssid=0x0004,MpBladeId=Auto,
  Clpr{
    Id=0},
  Pool{
    Id=9},
  Id="60-06-0E-81-30-76-D9-30-76-D9-00-00-00-00-00-BC",
  FullAllocation=false}}
```

Detailed Information

Item	Description
Slus[x]	The setting information of the created LDEV with the SLU attribute
LdevId	The LDEV ID
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end, Not Execute: Not Executed *xxxx*: Part code, *yyyyy*: Error code
Capacity	The capacity
Ssid	The SSID
MpBladeId	The MP Blade ID "Auto" indicates the auto assignment is enabled.
Clpr	The CLPR setting information
Id	The CLPR ID
Pool	The pool setting information
Id	The pool number
Id	The SLU ID
FullAllocation	Indicates the setting status of the Full Allocation true: Full Allocation is enabled.

Item	Description
	false: Full Allocation is disabled.

[PROV] CreateTiPairsWithSlu

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[PROV],CreateTiPairsWithSlu,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{TiPairs[0]{
  PrimaryVolume{
    Slu{
      Id="60-06-0E-81-30-00-32-30-00-32-00-00-00-00-30-00"},
    Ldev{
      Id=0x00:0x30:0x00}},
  AccessAttribute=ReadOnly,FastClone=false,
  Pool{
    Id=2},
  Result=Normal end,MirrorUnit=3,
  SnapshotSlu{
    Id="60-06-0E-81-30-00-32-30-00-32-00-00-80-00-00-00"}}}
```

Detailed Information

Item	Description
TiPairs[x]	The setting information of the created Thin Image pair
PrimaryVolume	The setting information of the primary volume
Slu	The SLU information
Id	The SLU ID
Ldev	The LDEV information
Id	The LDEV ID
AccessAttribute	The access attribute FullAccess: Read/Write, ReadOnly: Read Only
FastClone	The setting status of the fast clone for the snapshot true: Enabled, false: Disabled
Pool	The pool information
Id	The pool number
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code
MirrorUnit	The mirror unit number
SnapshotSlu	The SLU information of the secondary volume

Item	Description
Id	The SLU ID

[PROV] CreateTiVolumes

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[PROV],CreateTiVolumes,,Normal end,from=xxxx:xxxx:xxxx:xxxx:xxxx:
xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{TiVolumes[0]{
  LdevId=0x00:0x00:0xBC,Result=Normal end,Capacity=8388608,
  Ssid=0x0004,MpBladeId=Auto,
  Clpr{
    Id=0}}}
```

Detailed Information

Item	Description
TiVolumes[x]	The setting information of the created secondary volume for Thin Image
LdevId	The LDEV ID
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end, Not Execute: Not Executed *xxxx*: Part code, *yyyyy*: Error code
Capacity	The capacity
Ssid	The SSID
MpBladeId	The MP Blade ID "Auto" indicates the auto assignment is enabled.
Clpr	The CLPR setting information
Id	The CLPR ID

[PROV] Delete Host Groups

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],Delete Host Groups,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Port,HostGrpID}
=[{XX,0xXXX},{XX,0xXXX}],Num. of Host Groups=2
```

Detailed Information

Item	Description
Port	The name of the port to which the deleted or initialized host group belonged
HostGrpID	The host group number deleted or initialized
Num. of Host Groups	The number of host groups deleted or initialized

[PROV] Delete LDEVs

Example 1: Deleting internal volumes or external volumes

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],Delete LDEVs,Basic,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{PG,LDKC:CU:LDEV}
=[{XX-XX,0xXX:0xXX:0xXX},{XX-XX,0xXX:0xXX:0xXX}],
Num. of LDEVs=2
```

Basic Information for Example 1

Parameter	Description
Basic	Indicates that basic volumes were deleted
External	Indicates that external volumes were deleted
Basic/External	Indicates that both basic volumes and external volumes were deleted at the same time

Detailed Information for Example 1

Item	Description
PG	The parity group number. An E at the beginning of a parity group number designates an external volume is present in that parity group.
LDKC:CU:LDEV	The LDKC, CU, and LDEV numbers
Num. of LDEVs	The number of LDEVs

Example 2: Deleting Thin Image volumes

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],Delete LDEVs,Snapshot,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{LDKC:CU:LDEV, Result}=[{0x00: 0x00: 0x00, Normal end},
{0x00: 0x01: 0x00, Normal end},
{0x00: 0x02: 0x00, Normal end}],
Num. of LDEVs=3
```

Example 3: Deleting DP-VOLs

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],Delete LDEVs,Thin Provisioning,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{LDKC:CU:LDEV, Result}=[{0x00: 0x00: 0x00, Normal end},
{0x00: 0x01: 0x00, Normal end},
{0x00: 0x02: 0x00, Normal end}],
Num. of LDEVs=3
```

Basic Information for Example 2 and 3

Item	Description
Snapshot	Operating for the Thin Image volumes.
Thin Provisioning	Operating for the Dynamic Provisioning virtual volumes.

Detailed Information for Example 2 and 3

Item	Description
LDKC:CU:LDEV	The logical DKC, CU, and LDEV numbers of the deleted V-Vols These numbers are separated by colons and arranged in this order.
Result	The result of operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *where xxxx*: Part code, *yyyyy*: Error code
Num. of LDEVs	The number of deleted V-Vols

[PROV] Delete Login WWNs

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],Delete Login WWNs,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Port,Delete WWN}
=[{XX,0xXXXXXXXXXXXXXXXX},{XX,0xXXXXXXXXXXXXXXXX}],
Num. of WWNs=2
```

Detailed Information

Item	Description
Port	The port name where the host of deleted WWN was connected
Delete WWN	The deleted WWN. WWN is a 16-digit number in the hexadecimal format.
Num. of WWNs	The number of WWNs deleted

[PROV] Delete LUN Paths

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],Delete LUN Paths,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Port,HostGrpID,LUN}
=[{XX,0xXXX,XXXX},{XX,0xXXX,XXXX},{XX,0xXXX,XXXX}],
Num. of Paths=3
```

Detailed Information

Item	Description
Port	The name of the port to which the host group belongs
HostGrpID	The host group number where the LU path is deleted
LUN	Indicates LUN where the LU path assignment is cancelled
Num. of Paths	The number of LU paths deleted

[PROV] Delete Resource Grps

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],Delete Resource Grps,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{VDKC-Box ID,Resource Group ID,Result}
=[{0,1,Normal end},{0,2,Normal end}],Num. of Resource Groups=2
```

Detailed Information

Item	Description
VDKC-Box ID	The number of the VDKC-Box to which the deleted resource group belongs
Resource Group ID	The number of the deleted resource group
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code
Num. of Resource Groups	The number of deleted resource groups

[PROV] Delete VDKC-Box

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],Delete VDKC-Box,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{VDKC-Box ID,Result}={1,Normal end},Num. of VDKC-Boxes=1
```

Detailed Information

Item	Description
VDKC-Box ID	The number of the deleted VDKC-Box
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code
Num. of VDKC-Boxes	The number of deleted VDKC-Boxes

[PROV] DeleteAlus

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],DeleteAlus,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Alus[0]{
  Id="60-06-0E-81-30-76-D9-30-76-D9-00-00-00-00-00-49",
  Result=Normal end,LdevId=0x00:0x00:0x49}}
```

Detailed Information

Item		Description
Alus[x]		The setting information of the deleted LDEV with the ALU attribute
	Id	The ALU ID
	Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end, Not Execute: Not Executed *xxxx*: Part code, *yyyyy*: Error code
	LdevId	The LDEV ID

[PROV] DeleteiScsiInitiatorUser

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],DeleteiScsiInitiatorUser,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{iScsiPort[0]{
  Port=1A,Result=Normal end}}
```

Detailed Information

Item		Description
iScsiPort[x]		The setting information of the port
	Port	The port ID to be set
	Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code

[PROV] DeleteiScsiName

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],DeleteiScsiName,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{iScsiPort[0]{
  Port=1A,
  iScsiTarget[0]{
    Id=0,
    RemoteiScsiName[0]{
      Name="Name",Result=Normal end}}}}
```

Detailed Information

Item				Description
iScsiPort[x]				The setting information of the port
	Port			The port ID to be set
	iScsiTarget[x]			The iSCSI target information
		Id		The iSCSI target ID
		RemoteiScsiName[x]		The information of the iSCSI name of the host bus adapter
			Name	The iSCSI name of the host bus adapter
			Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code

[PROV] DeleteiScsiPath

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],DeleteiScsiPath,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{iScsiPath[0]{
  iScsiPort{
    Port=1A},
  RemoteiScsiPort{
    Function=UVM,IpType=IPv4,Ipv4Address=192.168.0.101,
    Ipv6Address=0:0:0:0:0:0:0:0,
    RemoteiScsiTarget{
      Name="iqn.1994-04.jp.co.hitachi:rsd.r80.t.00001.3a000"}},
  Result=Normal end}}
```

Detailed Information

Item	Description
iScsiPath[x]	The path information between the iSCSI port on the local storage system and the iSCSI target on the remote storage system
iScsiPort	The information of the iSCSI port on the local storage system
Port	The port ID
RemoteiScsiPort	The information of the iSCSI port on the remote storage system
Function	Function that uses the iSCSI path UVM: Universal Volume Manager RemoteReplication: Remote Replication
IpType	The type of the IP address IPv4: IPv4 address, IPv6: IPv6 address
IPv4Address	The IPv4 address*
IPv6Address	The IPv6 address*
RemoteiScsiTarget	The iSCSI target information
Name	The iSCSI name
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code
* "null" is output if this item is not set.	

[PROV] DeleteiScsiTarget

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],DeleteiScsiTarget,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{iScsiPort[0]{
  Port=1A,
  iScsiTarget[0]{
    Id=0,Result=Normal end}}}
```

Detailed Information

Item			Description
iScsiPort[x]			The setting information of the port
	Port		The port ID to be set
	iScsiTarget[x]		The iSCSI target information
		Id	The iSCSI target ID
		Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code

[PROV] DeleteLoginiScsiName

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],DeleteLoginiScsiName,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{iScsiPort[0]{
  Port=1A,Result=Normal end}}
```

Detailed Information

Item		Description
iScsiPort[x]		The setting information of the port
	Port	The port ID to be set
	Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code

[PROV] DeleteRemoteChapUser

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],DeleteRemoteChapUser,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{iScsiPort[0]{
  Port=1A,
  iScsiTarget[0]{
    Id=0,
    RemoteiScsiUser[0]{
      ChapUserId="ChapUserId",Result=Normal end}}}}
```

Detailed Information

Item				Description
iScsiPort[x]				The setting information of the port
	Port			The port ID to be set
	iScsiTarget[x]			The iSCSI target information
		Id		The iSCSI target ID
		RemoteiScsiUser[x]		The user information of the CHAP authentication
			ChapUserId	The user ID of the CHAP authentication
			Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code

[PROV] DeleteSlus

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[PROV],DeleteSlus,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Slus[0]{
  Id="60-06-0E-81-30-76-D9-30-76-D9-00-00-00-00-00-49",
  Result=Normal end,LdevId=0x00:0x00:0x49}}
```

Detailed Information

Item		Description
Slus[x]		The setting information of the deleted LDEV with the SLU attribute
	Id	The SLU ID
	Result	The result of the operation

Item		Description
		Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end, Not Execute: Not Executed *xxxx*: Part code, *yyyyy*: Error code
	LdevId	The LDEV ID

[PROV] DeleteTargetChapUser

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],DeleteTargetChapUser,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{iScsiPort[0]{
  Port=1A,
  iScsiTarget[0]{
    Id=0,ChapUserId="ChapUserId",Result=Normal end}}}
```

Detailed Information

Item			Description
iScsiPort[x]			The setting information of the port
	Port		The port ID to be set
	iScsiTarget[x]		The iSCSI target information
		Id	The iSCSI target ID
		ChapUserId	The user ID of the CHAP authentication
		Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code

[PROV] DeleteTiVolumes

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[PROV],DeleteTiVolumes,,Normal end,from=xxxx:xxxx:xxxx:xxxx:xxxx:
xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{TiVolumes[0]{
  LdevId=0x00:0x10:0x00,Result=Normal end}}
```

Detailed Information

Item	Description
TiVolumes[x]	The setting information of the deleted secondary volume for Thin Image

Item		Description
	LdevId	The LDEV ID
	Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end, Not Execute: Not Executed *xxxx*: Part code, *yyyyy*: Error code

[PROV] DRU Expiration-Lock

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[PROV],DRU Expiration-Lock,SYSTEM:Enable,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
```

Basic Information

Parameter	Description
SYSTEM:Enable	The expiration-lock setting is enabled in the storage system
SYSTEM:Disable	The expiration-lock setting is disabled in the storage system

[PROV] Edit Cmd Dev(Auth)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],Edit Cmd Dev(Auth),,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{LDKC:CU:LDEV,UserAuth}=[{0xXX:0xXX:0xXX,Disable},
{0xXX:0xXX:0xXX,Enable}],Num. of LDEVs=2
```

Detailed Information

Item	Description
LDKC:CU:LDEV	The LDKC, CU, and LDEV numbers of the logical volume where the command device authentication setting is changed
UserAuth	Indicates whether the command device authentication setting is enabled or disabled. Disable or Enable will appear.
Num. of LDEVs	The number of logical volumes where the command device authentication setting is changed

[PROV] Edit Cmd Dev(DevGrp)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],Edit DevGrpDef,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{LDKC:CU:LDEV,DevGrpDef}
=[{0xXX:0xXX:0xXX,Disable},{0xXX:0xXX:0xXX,Enable}],
Num. of LDEVs=2
```

Detailed Information

Item	Description
LDKC:CU:LDEV	The LDKC, CU, and LDEV numbers of the logical volume where the device groups setting is changed
DevGrpDef	Indicates whether the device groups setting is enabled or disabled. Disable or Enable will appear
Num. of LDEVs	The number of logical volumes where the device groups setting is changed

[PROV] Edit Cmd Dev(Sec)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],Edit CommandDevSec,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{LDKC:CU:LDEV,CommandDevSec}
=[{0xXX:0xXX:0xXX,Disable},{0xXX:0xXX:0xXX,Enable}],
Num. of LDEVs=2
```

Detailed Information

Item	Description
LDKC:CU:LDEV	The LDKC, CU, and LDEV numbers of the logical volume where the command device security setting is changed
CommandDevSec	Indicates whether the command device security setting is enabled or disabled. Disable or Enable will appear.
Num. of LDEVs	The number of logical volumes that the command device security setting is changed

[PROV] Edit Command Devices

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],Edit Command Devices,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
```

```
+{LDKC:CU:LDEV,CommandDev}=[{0xXX:0xXX:0xXX,Disable},
{0xXX:0xXX:0xXX,Enable}],Num. of LDEVs=2
```

Detailed Information

Item	Description
LDKC:CU:LDEV	The LDKC, CU, and LDEV numbers of the logical volume where the command device setting is changed
CommandDev	Indicates whether the command device setting is enabled or disabled. Disable or Enable will appear.
Num. of LDEVs	The number of logical volumes where the command device setting is changed

[PROV] Edit DRU Attribute

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[PROV],Edit DRU Attribute,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{LDKC:CU:LDEV,Attribute,RT,Result}
=[{0x00:0x00:0x01,0x80,100,Normal end},
{0x00:0x00:0x02,0x82,Unlimited,Error(9605-8122)},
{0x00:0x00:0x03,0x81,200,Normal end},
{0x00:0x00:0x03,0x81,xxxx,Normal end}],
Num. of LDEVs=XXX
```

Detailed Information

Item	Description
LDKC:CU:LDEV	The LDKC, CU, and LDEV numbers of the logical volume where the attribute is set
Attribute	The set attribute in hexadecimal. Each bit (0–7) of 1 byte corresponds to the setting item. 1 is assigned to each bit when the setting is enabled and 0 (zero) is assigned to each bit when the setting is disabled. Each bit represents the following attributes: • Bit 0: Mounting of LEDV (fixed to 1) • Bit 1: Setting of S-VOL Disable • Bit 2: Setting of Zero Read Cap mode • Bit 3: Setting of Invisible mode • Bit 4: Setting of reserve • Bit 5: Fixed to 0 (zero)* • Bit 6: Setting of Read Only attribute* • Bit 7: Setting of Protect attribute* When 0x88 is output to the attribute, for example, Read/Write attribute is set to the logical volume to show that the reserve setting has been enabled.

Item	Description
	A hyphen (-) is output when a setting is not changed.
RT	The number of days set in Retention Term. A hyphen (-) is output when setting is not changed.
Result	The result of operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *where xxxx*: Part code, *yyyyy*: Error code
Num. of LDEVs	The number of logical volumes where the attribute has been set
*When bit 5, 6, and 7 are all 0 (zero), Read/Write has been set.	

[PROV] Edit Full Allocation

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],Edit Full Allocation,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Pool ID,LDKC:CU:LDEV,Full Allocation,Result}
=[{0,0x00:0x00:0x00,Enable,Normal end}],Num. of VOLs=1
```

Detailed Information

Item	Description
Pool ID	The pool ID associated with the virtual volume of Dynamic Provisioning
LDKC:CU:LDEV	The LDKC, CU, and LDEV numbers of the virtual volume of Dynamic Provisioning
Full Allocation	Indicates the setting status of the Full Allocation Enable: Full Allocation is enabled. Disable: Full Allocation is disabled.
Result	The result of operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *where xxxx*: Part code, *yyyyy*: Error code
Num. of VOLs	The number of virtual volumes of Dynamic Provisioning whose page reservation settings were changed

[PROV] Edit Host

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],Edit Host,,Normal end,
```

```
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Port,HostGrpID,WWN,Change WWN,Change Nickname}
=[{XX,0xXXX,0xXXXXXXXXXXXXXXXX,0xXXXXXXXXXXXXXXXX,
XXXXXXXXXXXXXXXX}],
Num. of WWNs=1
```

Detailed Information

Item	Description
Port	The name of the port where the host is connected
HostGrpID	The host group number on which the host with WWN or nickname of the host bus adapter being changed is registered
WWN	Indicates WWN of the host bus adapter before change. WWN is represented in hexadecimal
Change WWN	Indicates WWN of the host bus adapter after change
Change Nickname	The nickname of the host bus adapter after change
Num. of WWNs	The number of host bus adapters (WWN) where the settings have been changed

[PROV] Edit Host Grps(Mode)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],Edit Host Grps(Mode),,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Port,HostGrpID,Mode,Option[0:31],Option[32:63],Option[64:95],
Option[96:127]}
=[{XX,0xXXX,0x00,0x20000000,0x00000000,0x00000000,0x00000000},
{XX,0xXXX,0x09,0x00080000,0x00000000,0x00000000,0x00000000}],
Num. of Host Groups=2
```

Item	Description
Port	The name of the port to which the host group belongs.
HostGrpID	The host group number where the host group names have been changed.
Mode	The specified host mode. See the *Provisioning Guide for Open Systems* for the meaning of the host mode number.
Option[0:31] Option[32:63] Option[64:95] Option[96:127]	The specified host mode option. 128 host mode options from 0 to 127 are output in groups of 32 options. The following tables show the output values corresponding to the host mode options. See the *Provisioning Guide for Open Systems* for the meaning of the host mode options.
Num. of Host Groups	The number of host groups that the host mode setting is changed.

Table 5-1 Host mode option 0 to 31 and output contents of Option[0:31]

Host mode option	Value of Option[0:31]	Host mode option	Value of Option[0:31]
0	0x80000000	16	0x00008000
1	0x40000000	17	0x00004000
2	0x20000000	18	0x00002000
3	0x10000000	19	0x00001000
4	0x08000000	20	0x00000800
5	0x04000000	21	0x00000400
6	0x02000000	22	0x00000200
7	0x01000000	23	0x00000100
8	0x00800000	24	0x00000080
9	0x00400000	25	0x00000040
10	0x00200000	26	0x00000020
11	0x00100000	27	0x00000010
12	0x00080000	28	0x00000008
13	0x00040000	29	0x00000004
14	0x00020000	30	0x00000002
15	0x00010000	31	0x00000001

Table 5-2 Host mode option 32 to 63 and output contents of Option[32:63]

Host mode option	Value of Option[32:63]	Host mode option	Value of Option[32:63]
32	0x80000000	48	0x00008000
33	0x40000000	49	0x00004000
34	0x20000000	50	0x00002000
35	0x10000000	51	0x00001000
36	0x08000000	52	0x00000800
37	0x04000000	53	0x00000400
38	0x02000000	54	0x00000200
39	0x01000000	55	0x00000100
40	0x00800000	56	0x00000080
41	0x00400000	57	0x00000040
42	0x00200000	58	0x00000020
43	0x00100000	59	0x00000010

Host mode option	Value of Option[32:63]	Host mode option	Value of Option[32:63]
44	0x00080000	60	0x00000008
45	0x00040000	61	0x00000004
46	0x00020000	62	0x00000002
47	0x00010000	63	0x00000001

Table 5-3 Host mode option 64 to 95 and output contents of Option[64:95]

Host mode option	Value of Option[64:95]	Host mode option	Value of Option[64:95]
64	0x80000000	80	0x00008000
65	0x40000000	81	0x00004000
66	0x20000000	82	0x00002000
67	0x10000000	83	0x00001000
68	0x08000000	84	0x00000800
69	0x04000000	85	0x00000400
70	0x02000000	86	0x00000200
71	0x01000000	87	0x00000100
72	0x00800000	88	0x00000080
73	0x00400000	89	0x00000040
74	0x00200000	90	0x00000020
75	0x00100000	91	0x00000010
76	0x00080000	92	0x00000008
77	0x00040000	93	0x00000004
78	0x00020000	94	0x00000002
79	0x00010000	95	0x00000001

Table 5-4 Host mode option 96 to 127 and output contents of Option[96:127]

Host mode option	Value of Option[96:127]	Host mode option	Value of Option[96:127]
96	0x80000000	112	0x00008000
97	0x40000000	113	0x00004000
98	0x20000000	114	0x00002000
99	0x10000000	115	0x00001000
100	0x08000000	116	0x00000800

Host mode option	Value of Option[96:127]	Host mode option	Value of Option[96:127]
101	0x04000000	117	0x00000400
102	0x02000000	118	0x00000200
103	0x01000000	119	0x00000100
104	0x00800000	120	0x00000080
105	0x00400000	121	0x00000040
106	0x00200000	122	0x00000020
107	0x00100000	123	0x00000010
108	0x00080000	124	0x00000008
109	0x00040000	125	0x00000004
110	0x00020000	126	0x00000002
111	0x00010000	127	0x00000001

When more than one option is set, a logical sum of their values is output. For example, if 0x200C0000 is output to Option[0:31], it means the host mode options [2], [12], and [13] are set.

[PROV] Edit Host Grps(Name)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],Edit Host Grps(Name),,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Port,HostGrpID,HostGrpName}
=[{XX,0xXXX,XXXXXXXXXXXXXXXX},{XX,0xXXX,XXXXXXXXXXXXXXXX}],
Num. of Host Groups=2
```

Detailed Information

Item	Description
Port	The name of the port to which the host group belongs
HostGrpID	The host group number where the host group names have been changed
HostGrpName	The name of the host group. If the name is changed, the name after change is indicated
Num. of Host Groups	The number of host groups where the settings have been changed

[PROV] Edit LDEVs(tier)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],Edit LDEVs(tier),,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Pool ID,LDKC:CU:LDEV,Tier Relocation}
=[{1,0x00:0x01:0x0F,Disable}],Num. of LDEVs = 1
```

Detailed Information

Item	Description
Pool ID	The pool number of the edited LDEV
LDKC:CU:LDEV	The LDKC number, CU number and the LDEV number of the edited volume
Tier Relocation	Indicates whether the tier relocation is enabled or disabled. Enable: Enabled, Disable: Disabled
Num. of LDEVs	The number of edited LDEVs

[PROV] Edit LDEV Tier Rank

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],Edit LDEV Tier Rank,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Pool ID,Pool Result}=[{1,Normal end}],Num. of Pools=1
++{LDKC:CU:LDEV,External LDEV Tier Rank,LDEV Result}
=[{0x00:0x00:0x00,Middle/Internal,Normal end},
{0x00:0x00:0x01,Middle/Internal,Normal end},
{0x00:0x00:0x02,Middle/Internal,Normal end}],Num. of LDEVs=3
```

Detailed Information

Item	Description
Pool ID	The number of the pool where the edited pool volumes are assigned
Pool Result	The result of editing pool volumes per pool Normal end: Normal end Error(*xxxx-yyyyy*): Abnormal end Not Execute: Not executed where *xxxx*: Part code, *yyyyy*: Error code
Num. of Pools	The number of pools whose pool volumes are edited
LDKC:CU:LDEV	The LDKC, CU, and LDEV numbers of the edited pool volume
External LDEV Tier Rank	The external LDEV tier rank of the edited pool volume High: An external volume (High)

Item	Description
	Middle/Internal: An external volume (Middle) or an internal volume Low: An external volume (Low)
LDEV Result	The result of editing pool volumes per pool volume Normal end: Normal end Error(*xxxx-yyyyy*): Abnormal end Not Execute: Not executed where *xxxx*: Part code, *yyyyy*: Error code
Num. of LDEVs	The number of edited pool volumes

[PROV] Edit MP Blades

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],Edit MP Blades,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{DKC,MP Blade ID,Auto Assignment,Result}
=[{0,0x0,Enable,Normal end}],Num. of MP Blades=1
```

Detailed Information

Item	Description
DKC	The DKC number (0 or 1)
MP Blade ID	The MP Blade number in the DKC module displayed in the window (0 to 7)
Auto Assignment	Indicates whether the auto assignment setting is enabled or disabled. Enable or Disable will appear
Result	The result of operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *where xxxx*: Part code, *yyyyy*: Error code
Num. of MP Blades	The number of specified MP Blades (1 to 8)

[PROV] Edit Ports(Address)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],Edit Ports(Address),,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Port,Fibre Addr.}=[{XX,1},{XX,126}],Num. of Ports=2
```

Detailed Information

Item	Description
Port	The name of the port that the address has been changed
Fibre Addr.	The address of Fibre Channel port after change using the number from 1 to 126. See the following table for relation of number and Fibre Channel port address.
Num. of Ports	The number of ports where address has been changed

Table 5-5 Addresses of Fibre Channel Port

Value	Address*	Value	Address*	Value	Address*	Value	Address*
1	EF (0)	33	B2 (32)	65	72 (64)	97	3A (96)
2	E8 (1)	34	B1 (33)	66	71 (65)	98	39 (97)
3	E4 (2)	35	AE (34)	67	6E (66)	99	36 (98)
4	E2 (3)	36	AD (35)	68	6D (67)	100	35 (99)
5	E1 (4)	37	AC (36)	69	6C (68)	101	34 (100)
6	E0 (5)	38	AB (37)	70	6B (69)	102	33 (101)
7	DC (6)	39	AA (38)	71	6A (70)	103	32 (102)
8	DA (7)	40	A9 (39)	72	69 (71)	104	31 (103)
9	D9 (8)	41	A7 (40)	73	67 (72)	105	2E (104)
10	D6 (9)	42	A6 (41)	74	66 (73)	106	2D (105)
11	D5 (10)	43	A5 (42)	75	65 (74)	107	2C (106)
12	D4 (11)	44	A3 (43)	76	63 (75)	108	2B (107)
13	D3 (12)	45	9F (44)	77	5C (76)	109	2A (108)
14	D2 (13)	46	9E (45)	78	5A (77)	110	29 (109)
15	D1 (14)	47	9D (46)	79	59 (78)	111	27 (110)
16	CE (15)	48	9B (47)	80	56 (79)	112	26 (111)
17	CD (16)	49	98 (48)	81	55 (80)	113	25 (112)
18	CC (17)	50	97 (49)	82	54 (81)	114	23 (113)
19	CB (18)	51	90 (50)	83	53 (82)	115	1F (114)
20	CA (19)	52	8F (51)	84	52 (83)	116	1E (115)
21	C9 (20)	53	88 (52)	85	51 (84)	117	1D (116)
22	C7 (21)	54	84 (53)	86	4E (85)	118	1B (117)
23	C6 (22)	55	82 (54)	87	4D (86)	119	18 (118)
24	C5 (23)	56	81 (55)	88	4C (87)	120	17 (119)
25	C3 (24)	57	80 (56)	89	4B (88)	121	10 (120)
26	BC (25)	58	7C (57)	90	4A (89)	122	0F (121)

Value	Address*	Value	Address*	Value	Address*	Value	Address*
27	BA (26)	59	7A (58)	91	49 (90)	123	08 (122)
28	B9 (27)	60	79 (59)	92	47 (91)	124	04 (123)
29	B6 (28)	61	76 (60)	93	46 (92)	125	02 (124)
30	B5 (29)	62	75 (61)	94	45 (93)	126	01 (125)
31	B4 (30)	63	74 (62)	95	43 (94)	-	-
32	B3 (31)	64	73 (63)	96	3C (95)	-	-
*Addresses outside parentheses indicate arbitrated-loop physical address (AL-PA). Addresses in parentheses indicate loop IDs.							

[PROV] Edit Ports(Attr)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],Edit Ports(Attr),,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Attribute=RCU Target
++Port=[1E],Num. of Ports=1
```

Detailed Information

Item	Description
Attribute	The attribute of the port after change. Target: Target port, Initiator: Initiator port, RCU Target: RCU Target port, External: External port
Port	The name of the port where the setting is changed.
Num. of Ports	The number of ports where the setting is changed.

[PROV] Edit Ports(Security)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],Edit Ports(Security),,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Port,Switch}=[{XX,Disable},{XX,Enable}],Num. of Ports=2
```

Detailed Information

Item	Description
Port	The name of the port where the LUN security setting is changed
Switch	Indicates whether the LUN security setting is enabled or disabled.

Item	Description
	Disable or Enable is output
Num. of Ports	The number of ports where the LUN security setting is changed

[PROV] Edit Ports(Speed)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],Edit Ports(Speed),,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Port,Speed(Gbps)}=[{XX,1},{XX,2},{XX,Auto},{XX,4}],
Num. of Ports=4
```

Detailed Information

Item	Description
Port	The name of the port that the channel speed is set
Speed(Gbps)	The channel speed set 1: 1 Gbps, 2: 2 Gbps, 4: 4 Gbps, 8: 8 Gbps, Auto: Auto mode
Num. of Ports	The number of ports where the channel speed is set

[PROV] Edit Ports(Topology)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],Edit Ports(Topology),,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Port,Fabric,Connection}=[{XX,Enable,FC-AL},{XX,Disable,FC-AL},
{XX,Enable,P-to-P},{XX,Disable,P-to-P}],Num. of Ports=4
```

Detailed Information

Item	Description
Port	The name of the port where the topology of Fibre Channel is changed.
Fabric	Indicates whether the Fabric switch is enabled or disabled. Disable or Enable is output.
Connection	The connecting mode of the Fabric switch selected. FC-AL: FC-AL is selected, P-to-P: P-to-P is selected
Num. of Ports	The number of ports where the topology of Fibre Channel is changed

[PROV] Edit Resource Grp

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],Edit Resource Grp,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{VDKC-Box ID,Resource Group ID,Resource Group Name,Result}
=[{0,1,RSG1,Normal end}],Num. of Resource Groups=1
```

Detailed Information

Item	Description
VDKC-Box ID	The number of the VDKC-Box to which the configured resource group belongs
Resource Group ID	The number of the configured resource group
Resource Group Name	The contents of the setting for the changed resource group name
Result	The result of operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *where xxxx*: Part code, *yyyyy*: Error code
Num. of Resource Groups	The number of resource groups that operated the setting

[PROV] Edit SCP Time

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],Edit SCP Time,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{CU,SCP Time(sec.)}=[{0x00,600},{0x01,600},(snip),{0xFE,600}],
Num. of CUs=255
```

Detailed Information

Item	Description
CU	The CU number
SCP Time(sec.)	The SCP (State Change Pending) time in seconds
Num. of CUs	The number of CUs where the SCP time is set

[PROV] Edit Tiering Policy

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],Edit Tiering Policy,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Tiering Policy ID,Tiering Policy Name,Tier1 Max(%),
Tier1 Min(%),Tier3 Max(%),Tier3 Min(%),Result}
=[{6,SamplePolicy,90,10,90,10,Normal end}],Num. of Policies=1
```

Detailed Information

Item	Description
Tiering Policy ID	The tiering policy ID
Tiering Policy Name	The tiering policy name This is output when a tiering policy name is set.
Tier1 Max(%)	The upper limit threshold value for the Tier1 The threshold value is displayed in the range 0 to 100. The unit is percent (%). This is output when the upper limit threshold value for the Tier1 is set.
Tier1 Min(%)	The lower limit threshold value for the Tier1 The threshold value is displayed in the range 0 to 100. The unit is percent (%). This is output when the lower limit threshold value for the Tier1 is set.
Tier3 Max(%)	The upper limit threshold value for the Tier3 The threshold value is displayed in the range 0 to 100. The unit is percent (%). This is output when the upper limit threshold value for the Tier3 is set.
Tier3 Min(%)	The lower limit threshold value for the Tier3 The threshold value is displayed in the range 0 to 100. The unit is percent (%). This is output when the lower limit threshold value for the Tier3 is set.
Result	The result of operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end, Not Execute: Not Executed *where xxxx*: Part code, *yyyyy*: Error code
Num. of Policies	The number of tiering policies that was set

[PROV] Edit VR Attribute

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[PROV],Edit VR Attribute,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{LDKC:CU:LDEV,Attribute,Result}
=[{0x00:0x00:0x00,Protect,Normal end},
{0x00:0x00:0x01,Protect,Normal end}],Num. of LDEVs=2
```

Detailed Information

Item	Description
LDKC:CU:LDEV	The LDKC number, the CU number, and the LDEV number of the volume in which the access attribute is set
Attribute	Indicates the set access attribute Read/Write: The attribute that enables reading and writing Read Only: The attribute that enables reading only Protect: The attribute that disables accessing
Result	The result of operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *where xxxx*: Part code, *yyyyy*: Error code
Num. of LDEVs	The number of edited volumes

[PROV] Edit V-VOL Option

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],Edit V-VOL Option,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Pool ID,LDKC:CU:LDEV,Tiering Policy ID,
New Page Assignment Tier,Relocation Priority,Result}
=[{0,0x00:0x00:0x00,1,Middle,Default,Normal end}],
Num. of VOLs=1
```

Detailed Information

Item	Description
Pool ID	The pool ID of a pool associated with the V-VOL for Dynamic Provisioning to which Tiering policy is set
LDKC:CU:LDEV	The LDKC number, CU number, and LDEV number of the V-VOL for Dynamic Provisioning
Tiering Policy ID	The Tiering Policy ID This is output when the tiering policy is set.

Item	Description
New Page Assignment Tier	The new page assignment tier Middle: A middle performance tier, High: A high performance tier, Low: A low performance tier This is output when the new page assignment tier is set.
Relocation Priority	The relocation priority information Default: Normal, Prioritize: Prioritized This is output when the relocation priority information is set.
Result	The result of the operation. Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end, Not Execute: Not Executed *xxxx*: Part code, *yyyyy*: Error code
Num. of VOLs	The number of operated V-VOLs for Dynamic Provisioning

[PROV] Edit/Delete Pools

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],Edit/Delete Pools,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Command,Pool ID,Pool Type,Multi Tier Pool,Tier Management,
Cycle Time,Monitoring Period,Monitoring Mode,Result}
=[{Change Tier,1,Dynamic Provisioning,Enable,Auto,24,
10:00-11:00,Continuous Mode,Normal End}],Num. of Pool=1
++{Tier,Buffer Space for New page assignment(%),
Buffer Space for Tier relocation(%),Tier Result}
=[{1,10,10,Normal end},{2,20,20,Normal end}],Num. of Tiers=2
```

Detailed Information

Item	Description
Command	The operation on the pool Change: Changing pool information about the threshold and the subscription limit Change Tier: Changing information about Dynamic Tiering Delete: Delete pool
Pool ID	The pool ID of the pool where the settings have been changed or the number of the pool that have been deleted
Pool Type	The pool type Dynamic Provisioning: Dynamic Provisioning, Thin Image: Thin Image
Multi Tier Pool	The setting status of the multi-tier mode and active flash function for the pool Enable(Active Flash): Both Dynamic Tiering and active flash are enabled.

Item	Description
	Enable: Dynamic Tiering is enabled and active flash is disabled. Disable: Both Dynamic Tiering and active flash are disabled. This item is output only when "Command" is "Change Tier". If Pool Type is Thin Image, a hyphen (-) is output.
Warning Threshold(%)	The warning threshold of the usage rate of the pool in percent (%). This item is output only when "Command" is "Change".
Depletion Threshold(%)	The depletion threshold of the usage rate of the pool in percent (%). If the depletion threshold is not specified, this percentage is not output. This item is output only when "Command" is "Change". If Pool Type is Thin Image, or if the depletion threshold is not specified, a hyphen (-) is output.
Subscription Limit(%)	The reserve amount of the pool where the setting was changed. The unit is percent (%). If the reserve amount is not specified, it outputs "Unlimited". This item is output only when "Command" is "Change". If Pool Type is Thin Image, a hyphen (-) is output.
Protect V-VOLs when I/O fails to Blocked Pool VOL	Indicates whether the setting of the protect access attribute on the virtual volume is enabled or disabled when the pool is blocked. Yes: Enabled, No: Disabled This item is output only when "Command" is "Change". If the pool type is not Dynamic Provisioning or the pool is not a pool for an open system, a hyphen (-) is output.
Protect V-VOLs when I/O fails to Full Pool	Indicates whether the setting of the protect access attribute on the virtual volume is enabled or disabled when the pool is full. Yes: Enabled, No: Disabled This item is output only when "Command" is "Change". If the pool type is not Dynamic Provisioning or the pool is not a pool for an open system, a hyphen (-) is output.
Tier Management	The auto control mode of the created or expanded pool. Auto: Auto, Manual: Manual This item is output only when "Command" is "Change Tier". If Multi Tier Pool is anything other than Enable, a hyphen (-) is output.
Cycle Time	The cycle of performance monitoring for the pool. 0.5: every thirty minutes, 1: every one hour, 2: every two hours, 4: every four hours, 8: every eight hours, 24: every twenty-four hours This item is output only when "Command" is "Change Tier". If Tier Management is anything other than Auto, a hyphen (-) is output.
Monitoring Period	The monitoring period of the pool. Format: "H1:M1-H2:M2" H1: The time when the monitoring starts (hour) M1: The time when the monitoring starts (minute) H2: The

Item	Description
	time when the monitoring ends (hour) M2: The time when the monitoring ends (minute). This item is output only when "Command" is "Change Tier". If Cycle Time is anything other than 24, a hyphen (-) is output.
Monitoring Mode	The monitoring mode Continuous Mode: Continuous mode, Period Mode: Period mode This item is output only when "Command" is "Change Tier". If Multi Tier Pool is anything other than Enable, a hyphen (-) is output.
Data Direct Mapping	Indicates the setting status of Data Direct Mapping Enable: Data Direct Mapping is enabled. Disable: Data Direct Mapping is disabled. This item is output only when "Command" is "Change".
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end, Not Execute: Not Executed *xxxx*: Part code, *yyyyy*: Error code
Num. of Pools	The number of pools where the settings have been changed or the number of pools that have been deleted
Tier	The tier number This item is output only when the "Command" is "Change Tier".
Buffer Space for New page assignment(%)	The capacity rate of buffer space for new page assignment The unit is percent (%) This item is output only when the "Command" is "Change Tier".
Buffer Space for Tier relocation(%)	The capacity rate of buffer space for Tier relocation The unit is percent (%) This item is output only when the "Command" is "Change Tier".
Tier Result	The result of Tier operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end, Not Execute: Not Executed where *xxxx*: Part code, *yyyyy*: Error code This item is output only when the "Command" is "Change Tier".
Num. of Tiers	The number of Tiers for the created pools This item is output only when the "Command" is "Change Tier".

[PROV] Edit/Delete UUIDs

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],Edit/Delete UUIDs,,Normal end,
```

```
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{LDKC:CU:LDEV,UUID}
=[{0xXX:0xXX:0xXX,abcdefg},{0xXX:0xXX:0xXX,12345},
{0xXX:0xXX:0xXX,}],Num. of UUIDs=3
```

Detailed Information

Item	Description
LDKC:CU:LDEV	The LDKC number, CU number, and LDEV number
UUID	The configured UUID. There is no output if the UUID was deleted.
Num. of UUIDs	The number of UUIDs configured

[PROV] EditiScsiInitiatorUser

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],EditiScsiInitiatorUser,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{iScsiPort[0]{
  Port=1A,
  iScsiInitiator{
    iScsiUser{
      UserId="CHAPUser"}},
  Result=Normal end}}
```

Detailed Information

Item			Description
iScsiPort[x]			The setting information of the port
	Port		The port ID
	iScsiInitiator		The iSCSI initiator information
		iScsiUser	The authentication information
		UserId	The CHAP user name "null" is output if this item is not set or changed.
	Result		The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code

[PROV] EditiScsiName

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],EditiScsiName,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
```

```
+{iScsiPort[0]{
  Port=1A,
  RemoteiScsiName[0]{
    Name="Name",ChangeName="ChangeName",Result=Normal end}}}
```

Detailed Information

Item			Description
iScsiPort[x]			The setting information of the port
	Port		The port ID to be set
	RemoteiScsiName[x]		The information of the iSCSI name of the host bus adapter
		Name	The iSCSI name of the host bus adapter before change
		ChangeName	The iSCSI name of the host bus adapter after change
		Result	The result of the operation. Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code

[PROV] EditiScsiNickName

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],EditiScsiNickName,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{iScsiPort[0]{
  Port=1A,
  RemoteiScsiName[0]{
    Name="iScsiName",NickName="NickName",Result=Normal end}}}
```

Detailed Information

Item			Description
iScsiPort[x]			The setting information of the port
	Port		The port ID to be set
	RemoteiScsiName[x]		The information of the iSCSI name of the host bus adapter
		Name	The iSCSI name of the host bus adapter
		NickName	The host name (nick name) after change
		Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code

[PROV] EditiScsiTarget

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],EditiScsiTarget,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{iScsiPort[0]{
  Port=1A,
  iScsiTarget[0]{
    Id=0,Name="Name",Alias="Alias",UserAuthSwitch=Enable,
    AuthMode=Unidirectional,Result=Normal end}}}
```

Detailed Information

Item			Description
iScsiPort[x]			The setting information of the port
	Port		The port ID to be set
	iScsiTarget[x]		The iSCSI target information
		Id	The iSCSI target ID
		Name	The iSCSI target name*
		Alias	The iSCSI target alias*
		UserAuthSwitch	The setting status of the CHAP user authentication* Enable: Enabled, Disable: Disabled, UseHostSetting: Using host settings
		AuthMode	The authentication mode* Unidirectional: One-way, Mutual: Two-way
		Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code
* "null" is output if this item is not set or changed.			

[PROV] EditiSNS

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],EditiSNS,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{iScsiPort[0]{
  Port=1A,
  iSnsServer{
    Enabled=true,IpType=IPv4,IPv4Address=192.168.10.2,
    IPv6Address=null,TcpPortNumber=3205},
  Result=Normal end}}
```

Detailed Information

Item			Description
iScsiPort[x]			The setting information of the port
	Port		The port ID to be set
	iSnsServer		The iSNS server information
		Enabled	Indicates whether the iSNS server is used. true: iSNS server is used. false: iSNS server is not used.
		IpType	The IP type (IPv4 or IPv6) of the iSNS server*
		IPv4Address	The IPv4 address of the iSNS server*
		IPv6Address	The IPv6 address of the iSNS server*
		TcpPortNumber	The TCP port number*
	Result		The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code
* "null" is output if this item is not set or changed.			

[PROV] EditPortInfo

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],EditPortInfo,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{iScsiPort[0]{
  Port=1A,
  IPv4{
    IpAddress=192.168.0.100,SubNetMask=255.255.255.0,
    DefaultGateway=0.0.0.0},
  IPv6{
    Available=true,
    LinkLocalAddress{
      AutoMode=true,ManualAddress=FE80:0:0:0:0:0:0:0},
    GlobalAddress{
      AutoMode=true,ManualAddress=0:0:0:0:0:0:0:0},
    GlobalAddress2{
      ManualAddress=0:0:0:0:0:0:0:0},
    DefaultGateway{
      AssignedAddress=0:0:0:0:0:0:0:0}},
  TcpPortNumber=3260,SelectiveAck=true,DelayedAck=true,
  TcpWindowSize(KB)=64,
  EthernetMtuSize{
    Mtu(byte)=1500},
  Vlan{
    AvailableTagging=true,RemovalId=1,AdditionId=2},
  KeepAliveTimer(second)=60,Result=Normal end}}
```

Detailed Information

Item	Description
iScsiPort[x]	The setting information of the port
Port	The port ID to be set
IPv4	The setting information of IPv4
IpAddress	The IP address of IPv4*
SubNetMask	The subnet mask of IPv4*
DefaultGateway	The IP address of the default gateway of IPv4*
IPv6	The setting information of IPv6
Available	The setting status of IPv6 Mode* true: Enabled, false: Disabled
LinkLocalAddress	The setting information of the local link address of IPv6
AutoMode	The setting status of the local link address of IPv6* true: Automatic, false: Manual
ManualAddress	The local link address set manually*
GlobalAddress	The setting information of the global address and the global address 2 of IPv6
AutoMode	The setting status of the global address and the global address 2 of IPv6* true: Automatic, false: Manual
ManualAddress	The global address set manually*
GlobalAddress2	The setting information of the global address 2 of IPv6
ManualAddress	The global address 2 set manually*
DefaultGateway	The setting information of the default gateway of IPv6
AssignedAddress	The address of the default gateway of IPv6*
TcpPortNumber	The TCP port number*
SelectiveAck	The setting status of the selective ACK* true: Enabled, false: Disabled
DelayedAck	The setting status of the delayed ACK* true: Enabled, false: Disabled
TcpWindowSize(KB)	The window size of TCP*
EthernetMtuSize	The information of the Ethernet MTU (Maximum Transmission Unit)
Mtu(byte)	The size of the Ethernet MTU*
Vlan	The information of the VLAN
AvailableTagging	The setting status of the VLAN tagging mode*

Item			Description
			true: Enabled, false: Disabled
		RemovalId	The removed VLAN ID*
		AdditionId	The added VLAN ID*
	KeepAliveTimer(second)		The setting value of the Keep Alive timer*
	Result		The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code
* "null" is output if this item is not set or changed.			

[PROV] EditRemoteChapUser

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],EditRemoteChapUser,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{iScsiPort[0]{
  Port=1A,
  RemoteiScsiUser[0]{
    ChapUserId="ChapUserId",ChangeChapUserId="ChangeChapUserId",
    Result=Normal end}}}
```

Detailed Information

Item			Description
iScsiPort[x]			The setting information of the port
	Port		The port ID to be set
	RemoteiScsiUser[x]		The user information of the CHAP authentication
		ChapUserId	The user ID of the CHAP authentication before change
		ChangeChapUserId	The user ID of the CHAP authentication after change "null" is output if this item is not set or changed.
		Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code

[PROV] EditRemoteTargetUser

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],EditRemoteTargetUser,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
```

```
+{ConnectionTest=true,
iScsiPath[0]{
  iScsiPort{
    Port=1A},
  RemoteiScsiPort{
    IpType=IPv4,Ipv4Address=192.168.0.101,
    Ipv6Address=0:0:0:0:0:0:0:0,TcpPortNumber=3260,
    RemoteiScsiTarget{
      Name="iqn.1994-04.jp.co.hitachi:rsd.r80.t.00001.3a000",
      iScsiUser{
        AuthSwitch=None,AuthMode=Unidirectional,UserId="CHAPUser"}}},
  Result=Normal end}}
```

Detailed Information

Item	Description
ConnectionTest	Indicates whether to perform the connection test after editing iSCSI paths true: Test is performed. false: Test is not performed.
iScsiPath[x]	The path information between the iSCSI port on the local storage system and the iSCSI target on the remote storage system
iScsiPort	The information of the iSCSI port on the local storage system
Port	The Port ID
RemoteiScsiPort	The information of the iSCSI port on the remote storage system
IpType	The type of the IP address IPv4: IPv4 address, IPv6: IPv6 address
IPv4Address	The IPv4 address*
IPv6Address	The IPv6 address*
TcpPortNumber	The TCP port number
RemoteiScsiTarget	The iSCSI target information
Name	The iSCSI name
iScsiUser	The authentication information
AuthSwitch	Indicates whether the CHAP authentication method is enabled or disabled* None: CHAP is disabled. CHAP: CHAP is enabled.
AuthMode	Indicates the CHAP authentication mode* Unidirectional: CHAP is one-way. Mutual: CHAP is two-way.
UserId	The CHAP user name*

Item		Description
	Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code
* "null" is output if this item is not set or changed.		

[PROV] EditT10piMode

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],EditT10piMode,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Port[0]{
  Port=1A,T10pi=true,Result=Normal end}}
```

Detailed Information

Item		Description
Port[x]		The setting information of the T10 PI mode on the port
	Port	The ID of a port representing ports that share the T10 PI mode
	T10pi	The setting status of the T10 PI mode true: Enabled, false: Disabled "null" is output if this item is not set or changed.
	Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code

[PROV] EditTargetChapUser

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],EditTargetChapUser,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{iScsiPort[0]{
  Port=1A,
  iScsiTarget[0]{
    Id=0,ChapUserId="ChapUserId",Result=Normal end}}}
```

Detailed Information

Item	Description
iScsiPort[x]	The setting information of the port

Item			Description
	Port		The port ID to be set
	iScsiTarget[x]		The iSCSI target information
		Id	The iSCSI target ID
		ChapUserId	The user ID of the CHAP authentication
		Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code

[PROV] ExecBindingOperation

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[PROV],ExecBindingOperation,,Normal
end,from=xxxx:xxxx:xxxx:xxxx:xxxx:
xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{BindingOperations[0]{
  Operation=Bind,Port=1A,HostGroup=0,Lun=0,
  Alu{
    Id="60-06-0E-81-30-00-32-30-00-32-00-00-00-00-00-01",
    Ldev{
      Id=0x00:0x00:0x01}},
  Slu{
    Id="60-06-0E-81-30-00-32-30-00-32-00-00-00-00-00-02",
    Ldev{
      Id=0x00:0x00:0x02},
    SecondaryId="E2-00-00-00-02-00"},
  Result=Normal end}}
```

Detailed Information

Item		Description
BindingOperations[x]		The setting information when an LDEV with the SLU attribute is bound to the LDEV with the ALU attribute or when an LDEV with the SLU attribute is unbounded from the LDEV with the ALU attribute Binding can be operated from hosts associated with vSphere. Unbinding can be operated from hosts associated with vSphere or Device Manager - Storage Navigator.
	Operation	Type of operations Bind: Bind mode, Unbind: Unbind mode
	Port	The port number of the LUN path set to the LDEV with the ALU attribute
	HostGroup	The host group number of the LUN path set to the LDEV with the ALU attribute

Item	Description
Lun	The LUN ID of the LUN path set to the LDEV with the ALU attribute
Alu	The setting information of the LDEV with the ALU attribute
Id	The ALU ID
Ldev	The setting information of the LDEV
Id	The LDEV ID
Slu	The setting information of the LDEV with the SLU attribute
Id	The SLU ID
Ldev	The setting information of the LDEV
Id	The LDEV ID
SecondaryId	The secondary ID
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end, Not Execute: Not Executed *xxxx*: Part code, *yyyyy*: Error code

[PROV] Expand V-VOLs

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],Expand V-VOLs,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{LDKC:CU:LDEV,Pool ID,Capacity}
=[{0x00:0x00:0x00,0,80},{0x00:0x00:0x01,1,90},
{0x00:0x00:0x02,2,100}],Num. of VOLs = 3
```

Detailed Information

Item	Description
LDKC:CU:LDEV	The LDKC number, the CU number, and the LDEV number of the V-VOL
Pool ID	The pool ID of the pool corresponding to the expanded V-VOL
Capacity	The capacity of the V-VOL after expanding in LBAs
Num. of VOLs	The number of expanded V-VOLs

[PROV] ExpandSlus

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[PROV],ExpandSlus,,Normal end,
```

```
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Slus[0]{
  Id="60-06-0E-81-30-76-D9-30-76-D9-00-00-00-00-15-01",PoolId=2,
  Capacity=96158,Result=Normal end,LdevId=0x00:0x15:0x01}}
```

Detailed Information

Item		Description
Slus[x]		The setting information of the LDEV with the SLU attribute whose capacity is increased
	Id	The SLU ID
	PoolId	The number of an associated pool
	Capacity	The capacity after it is increased
	Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end, Not Execute: Not Executed *xxxx*: Part code, *yyyyy*: Error code
	LdevId	The LDEV ID

[PROV] Force Del MF V-VOLs

Example

```
07xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],Force Del MF V-VOLs,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{LDKC:CU:LDEV,Result}=[{0x00:0x00:0x00,Normal end},
{0x00:0x01:0x00,Normal end},{0x00:0x02:0x00,Normal end}],
Num. of LDEVs=3
```

Detailed Information

Item	Description
LDKC:CU:LDEV	The LDEV ID of the forcibly deleted V-Vol for Dynamic Provisioning for Mainframe, Dynamic Tiering for Mainframe, or active flash for mainframe
Result	Result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code
Num. of LDEVs	The number of deleted V-Vols

[PROV] Format LDEVs

The logged information indicates that the Format operation was only requested but not completed.

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],Format LDEVs,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+LDKC:CU:LDEV=[0x00:0x00:0x01,0x00:0x00:0x02,0x00:0x00:0x03,
0x00:0x00:0x04,0x00:0x00:0x05,0x00:0x00:0x06,0x00:0x00:0x07,
0x00:0x00:0x08,0x00:0x00:0x09,0x00:0x00:0x0A],
Num. of LDEVs=10
```

Detailed Information

Item	Description
LDKC:CU:LDEV	The LDKC number, the CU number, and the LDEV number
Num. of LDEVs	The number of LDEVs to be formatted.

[PROV] Format LDEVs(H)

The logged information indicates that the Format operation using the Write to Control Blocks function was only requested but not completed.

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],Format LDEVs(H),,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+LDKC:CU:LDEV=[0x00:0x00:0x01,0x00:0x00:0x02,
0x00:0x00:0x03,0x00:0x00:0x04,0x00:0x00:0x05,
0x00:0x00:0x06,0x00:0x00:0x07,0x00:0x00:0x08,
0x00:0x00:0x09,0x00:0x00:0x0A],Num. of LDEVs=10
```

Detailed Information

Item	Description
LDKC:CU:LDEV	The LDKC number, the CU number, and the LDEV number
Num. of LDEVs	The number of LDEVs to be formatted

[PROV] Format LDEVs(Q)

The logged information indicates that the Quick Format operation was only requested but not completed.

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],Format LDEVs(Q),,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+LDKC:CU:LDEV=[0x00:0x00:0x01,0x00:0x00:0x02,
0x00:0x00:0x03,0x00:0x00:0x04,0x00:0x00:0x05,
0x00:0x00:0x06,0x00:0x00:0x07,0x00:0x00:0x08,
0x00:0x00:0x09,0x00:0x00:0x0A],Num. of LDEVs=10
```

Detailed Information

Item	Description
LDKC:CU:LDEV	The LDKC number, the CU number, and the LDEV number
Num. of LDEVs	The number of LDEVs to be formatted

[PROV] Initialize Pools

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],Initialize Pools,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
```

[PROV] LDEV Name

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],LDEV Name,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{LDKC:CU:LDEV,Name,Result}
=[{0x00:0x00:0x00,nickname_0000,Normal end},
{0x00:0x80:0xFF,$%0x0080,Normal end}],Num. of LDEVs=2
```

Detailed Information

Item	Description
LDKC:CU:LDEV	The LDKC number, the CU number, and the LDEV number
Name	The character string of a LDEV nickname
Result	The result of operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end, Not Execute: Not Executed *where xxxx*: Part code, *yyyyy*: Error code
Num. of LDEVs	The number of specified LDEVs

[PROV] MapSecondaryVolumeWithSlu

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[PROV],MapSecondaryVolumeWithSlu,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{TiPairs[0]{
  SnapshotSlu{
    Id="60-06-0E-81-30-00-32-30-00-32-00-00-80-00-00-00"},
  SecondaryVolume{
```

```
    Ldev{
      Id=0x00:0x00:0x06}},
  Result=Normal end}}
```

Detailed Information

Item	Description
TiPairs[x]	The setting information of Thin Image pairs whose secondary volume is mapped
SnapshotSlu	The SLU information
Id	The SLU ID
SecondaryVolume	The information of the secondary volume
Ldev	The LDEV information
Id	The LDEV ID
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code

[PROV] Monitor Pools

This log information does not indicate the completion of performance monitoring processing of pools but the completion of performance monitoring operation of pools.

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[PROV],Monitor Pools,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Pool ID,Result}=[{1,Normal end}],Num. of Pools = 1
```

Detailed Information

Item	Description
Pool ID	The pool ID of a pool where the performance monitoring started
Result	The result of starting the performance monitoring of pools Normal end: Normal end, Error(*xxxx-yyyyy*):Abnormal end, Not Execute: Not executed *where xxxx*: Part code, *yyyyy*: Error code
Num. of Pools	The number of pools where the performance monitoring started

[PROV] Move Resources

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],Move Resources,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Resource Group ID(From),Resource Group ID(To),Result}
={1,0,Normal end}
++{LDKC:CU:LDEV,LDEVResult}=[{0x00:0x00:0x00,Normal end},
{0x00:0x00:0x01,Normal end}],Num. of LDEVs=2
++{PG,PGResult}=[{E1-1,Normal end},{E1-2,Normal end}],
Num. of PGs=2
++{Port,PortResult}=[{1A,Normal end},{2A,Normal end}],
Num. of Ports=2
++{Port(HostGrp),HostGrpID,HostGrpResult}
=[{1A,0x01,Normal end},{1A,0x02,Normal end}],Num. of Host Groups=2
+Num. of Resource Groups=1
```

Detailed Information

Item	Description
Resource Group ID(From)	The source resource group ID to which the resource belongs
Resource Group ID(To)	The target resource group ID
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end, *xxxx*: Part code, *yyyyy*: Error code
LDKC:CU:LDEV	The logical DKC, CU, and LDEV numbers of the moved LDEV.
LDEVResult	The result of the LDEV Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end, *xxxx*: Part code, *yyyyy*: Error code
Num. of LDEVs	The number of moved LDEVs
PG	The number of a moved parity group E1-1: In the case of an external volume V1-1: In the case of a virtual volume X1-1: In the case of a Dynamic Provisioning volume
PGResult	The result of the parity group Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end, *where xxxx*: Part code, *yyyyy*: Error code
Num. of PGs	The number of moved parity groups
Port	The name of a moved port
PortResult	The result of the port Normal end: Normal end,

Item	Description
	Error(*xxxx-yyyyy*): Abnormal end, *where xxxx*: Part code, *yyyyy*: Error code
Num. of Ports	The number of moved ports
Port(HostGrp)	The port name of a moved host group
HostGrpID	The host group ID of the moved host group
HostGrpResult	The result of the host group Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end, *where xxxx*: Part code, *yyyyy*: Error code
Num. of Host Groups	The number of moved host groups
Num. of Resource Groups	The number of resource groups that operated the setting

[PROV] OperateSiPairsWithSlu

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[PROV],OperateSiPairsWithSlu,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{OperationCode=PairCreate,
SiPairs[0]{
  PrimaryVolume{
    Slu{
      Id="60-06-0E-81-30-00-32-30-00-32-00-00-00-00-30-00"},
    Ldev{
      Id=0x00:0x30:0x00}},
  SecondaryVolume{
    Slu{
      Id="60-06-0E-81-30-00-32-30-00-32-00-00-00-00-30-01"},
    Ldev{
      Id=0x00:0x30:0x01}},
  MirrorUnit=2,Result=Normal end}}
```

Detailed Information

Item	Description
OperationCode	The ShadowImage pair operation PairCreate: Create pairs, PairDelete: Delete pairs, CreateAndQuickSplit: Create and split pairs, QuickResync: Resynchronize pairs
SiPairs[x]	The setting information of ShadowImage pairs
PrimaryVolume	The primary volume information
Slu	The SLU information

Item	Description
Id	The SLU ID
Ldev	The LDEV information
Id	The LDEV ID
SecondaryVolume	The secondary volume information
Slu	The SLU information
Id	The SLU ID
Ldev	The LDEV information
Id	The LDEV ID
MirrorUnit	The mirror unit number
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code

[PROV] OperateTiPairsWithSlu

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[PROV],OperateTiPairsWithSlu,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
Seq.=xxxxxxxxxx
+{OperationCode=PairSplit,
TiPairs[0]{
  SnapshotSlu{
    Id="60-06-0E-81-30-00-32-30-00-32-00-00-80-00-00-00"},
  Result=Normal end}}
```

Detailed Information

Item	Description
OperationCode	The Thin Image pair operation PairSplit: Split pairs, PairDelete: Delete pairs, PairResync: Resynchronize pairs
TiPairs[x]	The setting information of Thin Image pairs
SnapshotSlu	The SLU information of the secondary volume
Id	The SLU ID
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code

[PROV] Pool Name

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],Pool Name,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Pool ID,Name,Result}
=[{0,poolname_0000,Normal end},{127,,Normal end}],
Num. of Pools=2
```

Detailed Information

Item	Description
Pool ID	The pool group number
Name	The character string of a pool name
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*):Abnormal end, *where xxxx*: Part code, *yyyyy*: Error code
Num. of Pools	The number of specified pool groups

[PROV] Reclaim Zero Pages

This log information does not indicate the completion of zero pages reclaiming processing but the completion of zero pages reclaiming operation.

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],Reclaim Zero Pages,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{LDKC:CU:LDEV}
=[{0x00:0x00:0x00},{0x00:0x00:0x01},{0x00:0x00:0x02}],
Num. of VOLs = 3
```

Detailed Information

Item	Description
LDKC:CU:LDEV	The LDKC number, the CU number, and the LDEV number of the LDEV where zero pages are reclaimed
Num. of VOLs	The number of LDEVs where zero pages are reclaimed

[PROV] Release HostReserved

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],Release HostReserved,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Port,HostGrpID,LUN,Result}=[{XXX,0xXXX,XXXX,Normal end},
{XXX,0xXXX,XXXX,Error(xxxx-yyyyy)}],Num. of LUNs=2
```

Detailed Information

Item	Description
Port	The name of the port to which the host group belongs
HostGrpID	The host group number
LUN	The LUN where Release HostReserved is forcefully executed
Result	The result of the operation: Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end, Not Execute: Not Executed *where xxxx*: Part code, *yyyyy*: Error code
Num. of LUNs	The number of LUNs for which Release HostReserved is forcefully executed

[PROV] Relocate Pool

This log information does not indicate the completion of Tier relocation processing of pools but the completion of Tier relocation operation of pools.

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[PROV],Relocate Pool,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Pool ID,Result}=[{1,Normal end}],Num. of Pools = 1
```

Detailed Information

Item	Description
Pool ID	The pool ID of a pool where the tier relocation was performed
Result	The result of relocating the tier of pools Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end, Not Execute: Not Executed *where xxxx*: Part code, *yyyyy*: Error code
Num. of Pools	The number of pools where the tier relocation was performed

[PROV] Remove Hosts

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],Remove Hosts,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Port,HostGrpID,WWN}=[{XX,0xXXX,0xXXXXXXXXXXXXXXXX},
{XX,0xXXX,0xXXXXXXXXXXXXXXXX}],Num. of WWNs=2
```

Detailed Information

Item	Description
Port	The name of the port where the host deleted from host group was connected
HostGrpID	The host group number where the host is deleted
WWN	Indicates WWN of the host deleted from the host group
Num. of WWNs	The number of hosts (WWN) deleted from the host group

[PROV] Restore LDEVs

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],Restore LDEVs,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+LDKC:CU:LDEV=[0x00:0x00:0x01,0x00:0x00:0x02,0x00:0x00:0x03,
0x00:0x00:0x04,0x00:0x00:0x05,0x00:0x00:0x06,0x00:0x00:0x07,
0x00:0x00:0x08,0x00:0x00:0x09,0x00:0x00:0x0A],
Num. of LDEVs=10
```

Detailed Information

Item	Description
LDKC:CU:LDEV	The LDKC number, the CU number, and the LDEV number
Num. of LDEVs	The number of LDEVs being restored

[PROV] Restore Pools

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],Restore Pools,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Pool ID,Result}
=[{1,Normal end},{2,Normal end},{128,Normal end}],
Num. of Pools=3
```

Detailed Information

Item	Description
Pool ID	The restored pool ID
Result	The result of the operation: Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end, Not Execute: Not Executed *where xxxx*: Part code, *yyyyy*: Error code
Num. of Pools	The number of restored pools

[PROV] RevertTiPairsWithSlu

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[PROV],RevertTiPairsWithSlu,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{TiPairs[0]{
  PrimaryVolume{
    Slu{
      Id="60-06-0E-81-30-00-32-30-00-32-00-00-00-00-30-00"}},
  SnapshotSlu{
    Id="60-06-0E-81-30-00-32-30-00-32-00-00-80-00-00-00"},
  Result=Normal end}}
```

Detailed Information

Item	Description
TiPairs[x]	The volume information of the reverted Thin Image pairs
PrimaryVolume	The setting information of the primary volume
Slu	The SLU information
Id	The SLU ID
SnapshotSlu	The setting information of the secondary volume
Id	The SLU ID
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code

[PROV] Set FCSP Host

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[PROV],Set FCSP Host,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Port,HostGrpID,Kind,UserName,Change UserName}
=[{1E,0xXXX,Add,111111111111111,-},
{3E,0xXXX,Change,2222222222222222,3333333333333333},
{5E,0xXXX,Delete,4444444444444444,-}],Num. of Info=3
```

Detailed Information

Item	Description
Port	The name of the port that includes the host group where user name has been set
HostGrpID	The number of the host group where user name has been set
Kind	The setting status of the user name that is registered to the host group. Add: Add user name, Change: Change user name, Delete: Delete user name.
UserName	The user name added or deleted when Kind is Add or Delete The user name before change when Kind is Change
Change UserName	The user name after change when Kind is Change Indicates a dash (-) when Kind is Add or Delete
Num. of Info	The number of added, changed or deleted user names.

[PROV] Set FCSP Port Info

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[PROV],Set FCSP Port Info,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Port,Auth_TOV,Reject Time,Reject Count}
=[{1E,45,3,3},{3E,60,1,10}],Num. of Ports=2
```

Detailed Information

Item	Description
Port	The name of the port where authentication parameter has been set
Auth_TOV	The time to execute authentication after the failure of port authentication. The unit is second.
Reject Time	The period of time to reject authentication when port authentication have failed. The unit is minute.

Item	Description
Reject Count	The number of authentication failures allowed before port authentication is rejected
Num. of Ports	The number of ports where authentication parameter has been set

[PROV] Set FCSP Port Switch

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[PROV],Set FCSP Port Switch,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Port,Switch,DH Group,Auth,UserName}
=[{1E,Enable,0,bi-directional,1111111111111111},
{3E,Disable,0,unidirectional,2222222222222222}],
Num. of Ports=2
```

Detailed Information

Item	Description
Port	The name of the port where authentication parameter has been set
Switch	The setting status whether to execute authentication by port. Disable: Do not authenticate, Enable: Authenticate
DH Group	Not used (fixed to 0)
Auth	The setting status of authentication method: bi-directional: bi-directional authentication, unidirectional: unidirectional authentication
UserName	The user name of the port
Num. of Ports	The number of ports where authentication parameter has been set

[PROV] Set FCSP Target

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[PROV],Set FCSP Target,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Port,HostGrpID,Switch,DH Group,UserName}
=[{1E,0xXXX,Enable,0,1111111111111111},
{3E,0xXXX,Disable,0,2222222222222222}],
Num. of Grps=2
```

Detailed Information

Item	Description
Port	The name of the port that includes the host group where authentication parameter has been set
HostGrpID	The number of the host group where authentication has been set
Switch	The setting status whether to execute authentication by host group. Disable: Do not authenticate, Enable: Authenticate
DH Group	Not used (fixed to 0)
UserName	The user name of the host group
Num. of Grps	The number of host groups where authentication parameter has been set

[PROV] Set PageTieringLevel

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[PROV],Set PageTieringLevel,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{LDKC:CU:LDEV,Result}=[{0x00:0x00:0x00,Normal end}]
++{Start Page,Page Length,Page Tiering Level,Page Range Result}
=[{10,5, Level1,Normal end},{100,10, Level1,Normal end}],
Num. of Page Ranges=2
+Num. of VOLs=1
```

Detailed Information

Item	Description
LDKC:CU:LDEV	The LDKC, CU, and LDEV numbers of the volume where the tiering policy is set
Result	The result of setting the tiering policy to the volume Normal end: Normal end Warning(xxxx-yyyyy): End with warning Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Start Page	The beginning page number of page ranges
Page Length	The length of page ranges
Page Tiering Level	The level of the tiering policy that is set to the page ranges If you unset the tiering policy, a hyphen (-) is output.
Page Range Result	The result of setting the tiering policy in page ranges Normal end: Normal end Warning(xxxx-yyyyy): End with warning Error(*xxxx-yyyyy*): Abnormal end

Item	Description
	where *xxxx*: Part code, *yyyyy*: Error code
Num. of Page Ranges	The specified number of page ranges
Num. of VOLs	The number of volumes where the tiering policy is set

[PROV] Set SSID

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],Set SSID,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{SSID,LDKC:CU:LDEV}
=[{0xXXXX,0xXX:0xXX:0xXX},{0xXXXX,0xXX:0xXX:0xXX}],
Num. of SSIDs=2
```

Detailed Information

Item	Description
SSID	The SSID number
LDKC:CU:LDEV	The LDKC, CU, and LDEV numbers
Num. of SSIDs	The number of SSIDs

[PROV] Set Virtual LDEV

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],Set Virtual LDEV,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Operation}={Set H-UVM ON}
++{LDKC:CU:LDEV,Virtual LDKC:CU:LDEV,Virtual Emulation,
Virtual SSID,Virtual LUSE,Virtual Attribute,Result}=
[{0x00:0x00:0x00,0x00:0x01:0x00,OPEN-V,0x0004,0,-,Normal end}],
Num. of LDEVs=1
```

Detailed Information

Item	Description
Operation	Indicates the performed operations Set H-UVM ON Set H-UVM OFF Set Virtual Ldev ID Delete Virtual Ldev ID Set Virtual Ldev Information

Item	Description
	Delete Virtual Ldev Information Set Virtual Ldev ID and Virtual Ldev Information Delete Virtual Ldev ID and Virtual Ldev Information Set Property Normal Set Property Migration Set Property Migration and Virtual Ldev ID and Virtual Ldev Information Set Property GAD S-Vol
LDKC:CU:LDEV	The logical DKC, CU, and LDEV numbers of an LDEV that is mapped the virtual information
Virtual LDKC:CU:LDEV	The logical DKC, CU, and LDEV numbers of the virtual LDEV
Virtual Emulation	The emulation type of the virtual LDEV
Virtual SSID	The SSID of the virtual LDEV
Virtual LUSE	The number of LUSE volumes of the virtual LDEV
Virtual Attribute	The attribute of the virtual LDEV CVS: CVS attribute, -: No attribute
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*):Abnormal end *where xxxx*: Part code, *yyyyy*: Error code
Num. of LDEVs	The number of LDEVs that is mapped the virtual information

[PROV] Shrink Pool

This log information does not indicate the completion of shrinking processing but the completion of shrinking operation.

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],Shrink Pool,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Pool ID,Result}=[{1,Normal end},{2,Normal end}],
Num. of Pools = 2
++{LDKC:CU:LDEV,LDEV Result}
=[{0x00:0x00:0x02,Normal end},
{0x00:0x00:0x03,Normal end},{0x00:0x02:0x01,Normal end}],
Num. of LDEVs = 3
```

Detailed Information

Item	Description
Pool ID	The pool ID of a shrinking pool

Item	Description
Result	The result of the shrinking operation Normal end: Normal end Not Execute: Not executed Error(*xxxxx-xxxxxxx*): Abnormal end where *xxxxx-xxxxxxx* indicates error codes.
Num. of Pools	The number of shrinking pools
LDKC:CU:LDEV	The LDKC number, the CU number, and the LDEV number of the shrinking LDEV
LDEV Result	The result of shrinking individual LDEVs Normal end: Normal end Error(*xxxx-yyyyy*): Abnormal end Not Execute: Not executed where *xxxx*: Part Code, *yyyyy*: Error Code
Num. of LDEVs	The number of shrinking LDEVs

[PROV] Stop Monitoring

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[PROV],Stop Monitoring,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Pool ID,Result}=[{1,Normal end}],Num. of Pools = 1
```

Detailed Information

Item	Description
Pool ID	The pool ID of a pool where the performance monitoring stopped
Result	The result of stopping the tier relocating of pools Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end, Not Execute: Not Executed where *xxxx*:Part code, *yyyyy*: Error code
Num. of Pools	The number of pools where the performance monitoring stopped

[PROV] Stop Reclm ZeroPages

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],Stop Reclm ZeroPages,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{LDKC:CU:LDEV}
=[{0x00:0x00:0x00},{0x00:0x00:0x01},{0x00:0x00:0x02}],
Num. of VOLs = 3
```

Detailed Information

Item	Description
LDKC:CU:LDEV	The LDKC number, the CU number, and the LDEV number of the LDEV where reclaiming of zero pages is stopped
Num. of VOLs	The number of LDEVs where reclaiming of zero pages is stopped

[PROV] Stop Relocating

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[PROV],Stop Relocating,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Pool ID,Result}=[{1,Normal end}],Num. of Pools=1
```

Detailed Information

Item	Description
Pool ID	The pool ID of a pool where the tier relocation was stopped
Result	The result of stop relocating the tier of pools Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end, Not Execute: Not executed where *xxxx*: Part code, *yyyyy*: Error code
Num. of Pools	The number of pools where the tier relocation was stopped

[PROV] Stop Shrinking Pool

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],Stop Shrinking Pool,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Pool ID,Result}=[{1,Normal end},{2,Normal end}],
Num. of Pools = 2
```

Detailed Information

Item	Description
Pool ID	The pool ID of the pool where shrinking is stopped
Result	The result of the stopping shrinking operation Normal end: Normal end Not Execute: Not executed Error(*xxxxx-xxxxxxx*): Abnormal end where *xxxxx-xxxxxxx* indicates error codes.

Item	Description
Num. of Pools	The number of pools where shrinking is stopped

[PROV] UnmapSecondaryVolumeWithSlu

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[PROV],UnmapSecondaryVolumeWithSlu,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{TiPairs[0]{
  SnapshotSlu{
    Id="60-06-0E-81-30-00-32-30-00-32-00-00-80-00-00-00"},
  Result=Normal end,
  SecondaryVolume{
    Ldev{
      Id=0x00:0x00:0x06}}}}
```

Detailed Information

Item			Description
TiPairs[x]			The setting information of Thin Image pairs whose secondary volume is unmapped
	SnapshotSlu		The SLU information of the secondary volume
		Id	The SLU ID
	Result		The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*):Abnormal end *xxxx*: Part code, *yyyyy*: Error code
	SecondaryVolume		The unmapped secondary volume information
		Ldev	The LDEV information
			Id	The LDEV ID

[PROV] UpdateAluaMode

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],UpdateAluaMode,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Ldev[0]{
  Id=0x00:0x00:0x01,AluaMode=true,Result=Normal end}}
```

Detailed Information

Item	Description
Ldev[x]	The setting information of ALUA mode of the LDEV
Id	The LDEV ID
AluaMode	The setting status of ALUA mode true: Enabled, false: Disabled
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code

[PROV] UpdateAsymmetricAccessStatePerHG

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[PROV],UpdateAsymmetricAccessStatePerHG,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{AsymmetricAccessStateSettingOperation[0]{
  AsymmetricAccessState=ActiveOptimized,
  Port{
    Id=1A,
    HostGroup{
      Id=0}},
  Result=Normal end}}
```

Detailed Information

Item	Description
AsymmetricAccessStateSettingOperation[x]	The setting information of Asymmetric Access States
AsymmetricAccessState	The setting status of Asymmetric Access States ActiveOptimized: Prioritized, ActiveNonOptimized: Non-prioritized
Port	The setting information of the port
Id	The port ID
HostGroup	The setting information of the host group
Id	The host group ID
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code

[PROV] UpdateParityGroupSettings

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[PROV],UpdateParityGroupSettings,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{ParityGroup[0]{
  ID=1-1,Accelerated Compression=true,Result=Normal end}}
```

Detailed Information

Item		Description
ParityGroup[x]		The setting information of the parity group
	ID	The parity group ID
	Accelerated Compression	The setting status of the accelerated compression true: Enabled, false: Disabled
	Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code

[PROV] VTOC

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[PROV],VTOC,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{LDKC:CU:LDEV,VTOC(Trk),Result}
=[{0x00:0x00:0x00,14,Normal end},
{0x00:0x00:0x01,14,Normal end}],Num. of LDEVs=2
```

Detailed Information

Item	Description
LDKC:CU:LDEV	The LDKC number, the CU number, and the LDEV number of the volume in which a VTOC size is set
VTOC(Trk)	The set VTOC size is displayed with the number of tracks
Result	The result of operation Normal end: Normal end Error(*xxxxx-xxxxxxx*): Abnormal end *where xxxx*: Part code, *yyyyy*: Error code
Num. of LDEVs	The number of VTOC sizes

[PROV] UpdatePoolDeduplication

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx,00:00,RMI AP,uid=user-name,1,,
[PROV],UpdatePoolDeduplication,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx,
+{Deduplication=true,Pools[0]{Id=1,Result=Normal end,
ThinProvisioningVolumes[0]{Id=0x00:0x00:0x00,Ssid=0x0004}}}
```

Detailed Information

Item			Description
Deduplication			Indicates the setting status of the deduplication of the edited pool true: Enabled, false: Disabled
Pools[x]			The setting information of the deduplication of the edited pool
	Id		The pool ID of the associated pool
	Result		The result of operation Normal end: Normal end, Error(*xxxxx-xxxxxxx*): Abnormal end *where xxxx*: Part code, *yyyyy*: Error code
	ThinProvisioningVolumes[x]		The setting information of the deduplication system data volume
		Id	The ID of the deduplication system data volume
		Ssid	The SSID of the deduplication system data volume

[PROV] UpdateDataSavingOptions

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx,00:00,RMI AP,uid=user-name,1,,
[PROV], UpdateDataSavingOptions,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx,
+{ThinProvisioningVolumes[0]{Id=0x00:0x00:0x00,Result=Normal end,
CapacitySaving=Compression }}
```

Detailed Information

Item		Description
ThinProvisioningVolumes[x]		The setting information of Capacity Saving of the edited Dynamic Provisioning volume
	Id	The ID of the Dynamic Provisioning volume
	Result	The result of operation Normal end: Normal end,

Item		Description
		Error(*xxxxx-xxxxxxx*): Abnormal end *where xxxx*: Part code, *yyyyy*: Error code
	CapacitySaving	The setting status of Capacity Saving Disabled: Capacity Saving is disabled. Compression: Compression is enabled. Deduplication and Compression: Deduplication and compression are enabled.

Remote Maintenance Descriptions

[Remote Maintenance] PS Control

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RM AP,,,,
[Remote Maintenance],PS Control,,Normal end,,,Seq.=xxxxxxxxxx
+PS Control=OFF
```

Detailed Information

Item	Description
PS Control	Indicates whether it is PSON or PSOFF operation. ON: PSON operation, OFF: PSOFF operation.

[Remote Maintenance] Reboot MP

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RM AP,,,,
[Remote maintenance],Reboot MP,,Normal end,,,Seq.=xxxxxxxxxx
+MP=MP00-1MA
```

Detailed Information

Item	Description
MP	Indicates the name of MP to be rebooted

[Remote Maintenance] Reboot Port

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RM AP,,,,
[Remote Maintenance],Reboot Port,,Normal end,,,Seq.=xxxxxxxxxx
+PORT=1E
```

Detailed Information

Item	Description
Port	Indicates the port name to be rebooted

[Remote Maintenance] Reboot SVP

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RM AP,,,,
[Remote maintenance],Reboot SVP,,Normal end,,,Seq.=xxxxxxxxxx
```

[Remote Maintenance] StartVerify

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RM AP,,,,
[Remote Maintenance],StartVerify,,Normal end,,,Seq.=xxxxxxxxxx
+{AutoCorrectMode=true,ErrorStopCount=16,
LogicalDevice[0]{
  ID=0x00:0x00:0x00}}
```

Detailed Information

Item	Description
AutoCorrectMode	Indicates the setting status of the automatic correction mode (where errors detected by the verification are corrected automatically) true: Enabled, false: Disabled
ErrorStopCount	The setting value of the number of errors. The verification will be stopped when the number of detected errors reaches this value.
LogicalDevice[x]	The setting information of the LDEV
ID	The LDEV ID

[Remote Maintenance] StopVerify

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RM AP,,,,
[Remote Maintenance],StopVerify,,Normal end,,,Seq.=xxxxxxxxxx
```

[Remote Maintenance] Switch SVP

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RM AP,,,,
[Remote Maintenance],Switch SVP,,Normal end,,,Seq.=xxxxxxxxxx
```

[Remote Maintenance] Transfer Config

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RM AP,,,,
[Remote Maintenance],Transfer Config,,Normal end,,,Seq.=xxxxxxxxxx
```

Remote Replication Descriptions

[Remote Replication] Add Path

Example 1: system connection

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[Remote Replication],Add Path,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{S/N,MCU LDKC,RCU LDKC,Path Gr.ID,Controller ID,Result}
={99999,0x00,0x00,Default,6,Normal end}
++{MCU Port,RCU Port}
=[{1E,3E},{5E,7E},{1F,3F},{5F,7F},{1G,3G},{5G,7G},{1H,3H}],
Num. of Port Pairs=7
(Snip)
+{S/N,MCU LDKC,RCU LDKC,Path Gr.ID,Controller ID,Result}
={99998,0x00,0x00,Default,6,Normal end}
++{MCU Port,RCU Port}
=[{1E,3E},{5E,7E},{1F,3F},{5F,7F},{1G,3G},{5G,7G},{1H,3H}],
Num. of Port Pairs=7
+Num. of RCUs=xx
```

Example 2: CU connection

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[Remote Replication],Add Path,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{S/N,MCU LDKC,MCU,RCU LDKC,RCU,SSID,Controller ID,Result}
={99999,0x00,0x3F,0x00,0x7F,0x0004,6,Normal end}
++{MCU Port,RCU Port}
=[{1E,3E},{5E,7E},{1F,3F},{5F,7F},{1G,3G},{5G,7G},{1H,3H}],
Num. of Port Pairs=7
(Snip)
+{S/N,MCU LDKC,MCU,RCU LDKC,RCU,SSID,Controller ID,Result}
={99998,0x00,0x3F,0x00,0x7F,0x0004,6,Normal end}
++{MCU Port,RCU Port}
=[{1E,3E},{5E,7E},{1F,3F},{5F,7F},{1G,3G},{5G,7G},{1H,3H}],
Num. of Port Pairs=7
+Num. of RCUs=xx
```

Example 3: mixture of system connection and CU connection

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[Remote Replication],Add Path,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{S/N,MCU LDKC,RCU LDKC,Path Gr.ID,Controller ID,Result}
={99999,0x00,0x00,Default,6,Normal end}
++{MCU Port,RCU Port}
=[{1E,3E},{5E,7E},{1F,3F},{5F,7F},{1G,3G},{5G,7G},{1H,3H}],
```

```
Num. of Port Pairs=7
(Snip)
+{S/N,MCU LDKC,MCU,RCU LDKC,RCU,SSID,Controller ID,Result}
={99998,0x00,0x3F,0x00,0x7F,0x0004,6,Normal end}
++{MCU Port,RCU Port}
=[{1E,3E},{5E,7E},{1F,3F},{5F,7F},{1G,3G},{5G,7G},{1H,3H}],
Num. of Port Pairs=7
+Num. of RCUs=xx
```

Detailed Information

Item	Description
S/N	The serial number of the RCU
MCU LDKC	The LDKC number of the connected LDKC
RCU LDKC	The LDKC number of the paired LDKC
Path Gr.ID	The path group ID. When the path group ID is default setting, "Default" is output.
Controller ID	The controller ID of the RCU 5: USP V/VM, 6: VSP, 7: VSP G1000/G1500 and VSP F1500, 18: VSP Gx00, VSP Fx00, 19: HUS VM
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
MCU	The CU number of the connected CU
RCU	The CU number of the paired CU
SSID	The SSID
MCU Port	The port number of MCU
RCU Port	The port number of RCU
Num. of Port Pairs	Number of pairs of the port to be operated
Num. of RCUs	The number of RCUs set

[Remote Replication] Add Quorum Disk ID

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[Remote Replication],Add Quorum Disk ID,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Quorum Disk ID,Paired S/N,Controller ID,Quorum Disk(LDKC:CU:LDEV),
Result}=[{0x01,64024,7,0x00:0xFE:0x01,Normal end},
{0x02,64024,7,0x00:0xFE:0x02,Normal end},(Snip),
{0x7F,64024,7,0x00:0xFE:0x7F,Error(xxxx-yyyyy)}]
-,Num. of IDs=xx
```

Detailed Information

Item	Description
Quorum Disk ID	The added quorum disk ID used by global-active device
Paired S/N	The serial number of the remote storage system
Controller ID	The controller ID of the remote storage system 5: USP V/VM, 6: VSP, 7: VSP G1000/G1500 and VSP F1500, 18: VSP Gx00, VSP Fx00, 19: HUS VM
Quorum Disk(LDKC:CU:LDEV)	The LDKC, CU, and LDEV numbers of the added quorum disk used by global-active device
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of IDs	The number of added quorum disk IDs used by global-active device

[Remote Replication] Add RCU

Example 1: system connection

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[Remote Replication],Add RCU,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{S/N,MCU LDKC,RCU LDKC,Path Gr.ID,Controller ID,Min.Path,
MIH Time(s),Round Trip Time(ms),FREEZE,Result}
={99998,0x00,0x00,Default,6,08,015,001,Disable,Normal end}
++{MCU Port,RCU Port}
=[{1E,3E},{5E,7E},{1F,3F},{5F,7F},{1G,3G},{5G,7G},{1H,3H},
{5H,7H}],Num. of Port Pairs=8
(Snip)
+{S/N,MCU LDKC,RCU LDKC,Path Gr.ID,Controller ID,Min.Path,
MIH Time(s),Round Trip Time(ms),FREEZE,Result}
={99999,0x00,0x00,Default,6,08,015,001,Disable,Normal end}
++{MCU Port,RCU Port}
=[{1E,3E},{5E,7E},{1F,3F},{5F,7F},{1G,3G},{5G,7G},{1H,3H},
{5H,7H}],Num. of Port Pairs=8
+Num. of RCUs=xx
```

Example 2: CU connection

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[Remote Replication],Add RCU,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{S/N,MCU LDKC,MCU,RCU LDKC,RCU,SSID,Controller ID,Min.Path,
MIH Time(s),Round Trip Time(ms),FREEZE,Result}
={99998,0x00,0x3F,0x00,0x7F,0x0004,6,08,015,001,Disable,Normal end}
++{MCU Port,RCU Port}
=[{1E,3E},{5E,7E},{1F,3F},{5F,7F},{1G,3G},{5G,7G},{1H,3H},
{5H,7H}],Num. of Port Pairs=8
(Snip)
+{S/N,MCU LDKC,MCU,RCU LDKC,RCU,SSID,Controller ID,Min.Path,
```

```
MIH Time(s),Round Trip Time(ms),FREEZE,Result}
={99999,0x00,0x3F,0x00,0x7F,0x0004,6,08,015,001,Disable,Normal end}
++{MCU Port,RCU Port}
=[{1E,3E},{5E,7E},{1F,3F},{5F,7F},{1G,3G},{5G,7G},{1H,3H},
{5H,7H}],Num. of Port Pairs=8
+Num. of RCUs=xx
```

Example 3: mixture of system connection and CU connection

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[Remote Replication],Add RCU,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{S/N,MCU LDKC,RCU LDKC,Path Gr.ID,Controller ID,Min.Path,
MIH Time(s),Round Trip Time(ms),FREEZE,Result}
={99998,0x00,0x00,Default,6,08,015,001,Disable,Normal end}
++{MCU Port,RCU Port}
=[{1E,3E},{5E,7E},{1F,3F},{5F,7F},{1G,3G},{5G,7G},{1H,3H},
{5H,7H}],Num. of Port Pairs=8
(Snip)
+{S/N,MCU LDKC,MCU,RCU LDKC,RCU,SSID,Controller ID,Min.Path,
MIH Time(s),Round Trip Time(ms),FREEZE,Result}
={99999,0x00,0x3F,0x00,0x7F,0x0004,6,08,015,001,Disable,Normal end}
++{MCU Port,RCU Port}
=[{1E,3E},{5E,7E},{1F,3F},{5F,7F},{1G,3G},{5G,7G},{1H,3H},
{5H,7H}],Num. of Port Pairs=8
+Num. of RCUs=xx
```

Detailed Information

Item	Description
S/N	The serial number of the registered RCU
MCU LDKC	The LDKC number of the connected LDKC
RCU LDKC	The LDKC number of the paired LDKC
Path Gr.ID	The path group ID of the registered RCU. When the path group ID is default setting, "Default" is output.
Controller ID	The controller ID of the registered RCU 5: USP V/VM, 6: VSP, 7: VSP G1000/G1500 and VSP F1500, 18: VSP Gx00, VSP Fx00, 19: HUS VM
MCU	The CU number of the connected CU
RCU	The CU number of the paired CU
SSID	The SSID of the registered RCU
MCU Port	The port number of MCU
RCU Port	The port number of the registered RCU
Min.Path	The number of set minimum paths
MIH Time(s)	The value of set RIO MIH (Remote I/O Missing Interrupt Handler) timer (wait time until data copy from MCU to RCU is complete). The unit is second.

Item	Description
Round Trip Time(ms)	The round-trip response time set (delay time for round-trip remote I/O). The unit is millisecond. This value is output when TrueCopy or TrueCopy for Mainframe is used.
FREEZE	Indicates whether CGROUP (FREEZE/RUN) PPRC TSO command support is enabled or disabled. This value is output only when TrueCopy for Mainframe is used. Enable or Disable is output.
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of Port Pairs	The number of port pairs set
Num. of RCUs	The number of RCUs set

[Remote Replication] Change JNL Option

Example 1: when the copy type is UR

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[Remote Replication],Change JNL Option,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Copy Type=UR
+{LDKC,JNL,Data Overflow Watch(s),Inflow Control,
Use of Cache,Result}
=[{0x00,0x001,20,Yes,Not Use,Normal end},
{0x00,0x002,20,No,Use,Normal end}],Num. of JNLs=2
```

Example 2: when the copy type is URMF

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[Remote Replication],Change JNL Option,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Copy Type=URMF
+{LDKC,JNL,Data Overflow Watch(s),Inflow Control,
Timer Type,Use of Cache,Result}
=[{0x00,0x001,20,Yes,System,Not Use,Normal end},
{0x00,0x002,20,No,Local,Use,Normal end}],Num. of JNLs=2
```

Detailed Information

Item	Description
Copy Type	The program product name for this operation UR: Universal Replicator, URMF: Universal Replicator for Mainframe
LDKC	The LDKC number to which the journal belongs
JNL	The journal number

Item	Description
Data Overflow Watch(s)	The overflow watch time of the meta data or journal data (in seconds)
Inflow Control	Whether to restrict the flow of update I/O to the journal volume Yes: Restricted, No: Not restricted
Timer Type	Type of the clock used for the consistency time System: Uses the system clock of the mainframe host of the primary site. Local: Does not use the system clock. None: Uses the system clock of the mainframe host of the primary site when data copying is from the storage system of the secondary site to the storage system of the primary site. This information is output only when the copy type is "URMF".
Use of Cache	Whether to store the journal data in the restore journal in cache. Use: Stores, Not Use: Does not store
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of JNLs	The number of journals

[Remote Replication] Change Mirror Option

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[Remote Replication],Change Mirror Option,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Copy Type=UR
+{LDKC,JNL,MirrorID,Copy Pace,Path Watch Time,
Forward Path Watch Time,Transfer Speed(Mbps),
Delta resync Failure,Result}
=[{0x00,0x001,0x00,Medium,12(hour),Yes,100,Entire,Normal end},
{0x00,0x002,0x00,Low,1(day),No,10,None,Normal end}],
Num. of Mirrors=2
```

Detailed Information

Item	Description
Copy Type	The program product name for this operation UR: Universal Replicator, URMF: Universal Replicator for Mainframe
LDKC	The LDKC number to which the journal belongs
JNL	The journal number
MirrorID	The mirror ID

Item	Description
Copy Pace	The speed of initial copy Low: Low speed, Medium: Medium speed, High: High speed
Path Watch Times	Path block watch time (observation time from the path block till the mirror split <suspended>) The units are minutes, hours or days. If it is set to 30 minutes, it will be 30(min.).
Forward Path Watch Time	Indicates whether to transfer the path blockade watch period of the master journal to the restore journal. Yes: Transfer, No: Do Not Transfer
Transfer Speed(Mbps)	The transfer speed of the communication line. The unit is megabits per second (Mbps).
Delta resync Failure	Indicates the operation mode when Delta resync operation have failed. Entire: Copy the entire data volume, None: Do not copy the entire data volume
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of Mirrors	The number of mirrors

[Remote Replication] Change RCU Option

Example 1: system connection

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[Remote Replication],Change RCU Option,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{S/N,MCU LDKC,RCU LDKC,Path Gr.ID,Controller ID,Min.Path,
MIH Time(s),Round Trip Time(ms),FREEZE,Result}
={99998,0x00,0x00,Default,6,08,015,001,Disable,Normal end}
(Snip)
+{S/N,MCU LDKC,RCU LDKC,Path Gr.ID,Controller ID,Min.Path,
MIH Time(s),Round Trip Time(ms),FREEZE,Result}
={99999,0x00,0x00,Default,6,08,015,001,Disable,Normal end}
+Num. of RCUs=xx
```

Example 2: CU connection

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[Remote Replication],Change RCU Option,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{S/N,MCU LDKC,MCU,RCU LDKC,SSID,Controller ID,Min.Path,
MIH Time(s),Round Trip Time(ms),FREEZE,Result}
={99998,0x00,0x3F,0x00,0x0004,6,08,015,001,Disable,Normal end}
(Snip)
+{S/N,MCU LDKC,MCU,RCU LDKC,SSID,Controller ID,Min.Path,
MIH Time(s),Round Trip Time(ms),FREEZE,Result}
```

```
={99999,0x00,0x3F,0x00,0x0004,6,08,015,001,Disable,Normal end}
+Num. of RCUs=xx
```

Example 3: mixture of system connection and CU connection

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[Remote Replication],Change RCU Option,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{S/N,MCU LDKC,RCU LDKC,Path Gr.ID,Controller ID,Min.Path,
MIH Time(s),Round Trip Time(ms),FREEZE,Result}
={99998,0x00,0x00,Default,6,08,015,001,Disable,Normal end}
(Snip)
+{S/N,MCU LDKC,MCU,RCU LDKC,SSID,Controller ID,Min.Path,
MIH Time(s),Round Trip Time(ms),FREEZE,Result}
={99999,0x00,0x3F,0x00,0x0004,6,08,015,001,Disable,Normal end}
+Num. of RCUs=xx
```

Detailed Information

Item	Description
S/N	The serial number of the RCU on which the RCU option is changed
MCU LDKC	The LDKC number of the connected LDKC
RCU LDKC	The LDKC number of the paired LDKC
Path Gr.ID	The path group ID of the RCU on which the RCU option is changed. When the path group ID is default setting, "Default" is output.
Controller ID	The controller ID of the RCU on which the RCU option is changed 5: USP V/VM, 6: VSP, 7: VSP G1000/G1500 and VSP F1500, 18: VSP Gx00, VSP Fx00, 19: HUS VM
MCU	The CU number of the connected CU
SSID	The SSID of the RCU on which the RCU option is changed
Min.Path	The number of minimum paths after the change
MIH Time(s)	The value of RIO MIH (Remote I/O Missing Interrupt Handler) timer after the change (wait time until data copy from MCU to RCU is complete). The unit is second.
Round Trip Time(ms)	The round-trip response time after the change (delay time for round-trip remote I/O). The unit is millisecond. This value is output when TrueCopy or TrueCopy for Mainframe is used.
FREEZE	Indicates whether CGROUP (FREEZE/RUN) PPRC TSO command support is enabled or disabled. This value is output only when TrueCopy for Mainframe is used. Enable or Disable is output.
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of RCUs	The number of RCUs set

[Remote Replication] Clear SIM

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[Remote Replication],Clear SIM,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
```

[Remote Replication] Create Pairs

Example 1: when the copy type is TC

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[Remote Replication],Create Pairs,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Copy Type=TC,{P-VOL(Port-G-ID-LUN),S-VOL(Port-G-ID-LUN),
S/N,LDKC,ID,Controller ID,Type,Initial Copy,Fence Level,
Copy Pace,Priority,Diff,Result}
=[{1A-0x00-0,GR-0xFE-1023,99999,0x00,Default,6,Sync,Entire,
Never,15,032,Track,Normal end},(Snip)-(Snip)],Num. of Pairs=xx
```

Detailed Information 1

Item	Description
Copy Type	The program product name for this operation TC: TrueCopy
P-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the volume specified to the primary volume
S-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the volume specified to the secondary volume
S/N	The serial number of the RCU
LDKC	The LDKC number of the RCU
ID	The path group ID or SSID When the path group ID is default setting, "Default" is output.
Controller ID	The controller ID of the RCU 5: USP V/VM, 6: VSP, 7: VSP G1000/G1500 and VSP F1500, 18: VSP Gx00, VSP Fx00, 19: HUS VM
Type	Type of the update copy operation Outputs Sync (synchronization mode) as a fixed parameter.
Initial Copy	Type of the pair creation operation Entire: Creates pairs and copies data from the primary volume to the secondary volume. None: Creates pairs but does not copy data from the primary volume to the secondary volume.
Fence Level	Configured fence level (conditions where the local storage system rejects write operations to the primary volume) Never: Can write to the primary volume even the pair is split.

Item	Description
	Data: Cannot write to the primary volume when update copying fails. Status: Cannot write to the primary volume, only when the storage system of the primary site cannot change the pair status of the secondary volume to PSUE.
Copy Pace	The setting of the initial copy speed (the number of tracks that can be copied at a time)
Priority	The priority of the set initial copy operation (scheduling order).
Diff	The unit of the difference management setting Outputs Track as a fixed parameter.
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of Pairs	The number of create pairs

Example 2: when the copy type is TCMF

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[Remote Replication],Create Pairs,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Copy Type=TCMF,{P-VOL(LDKC:CU:LDEV),S-VOL(LDEV),
S/N,LDKC,SSID,Controller ID,Type,Initial Copy,Fence Level,
Copy Pace,Priority,Diff,CFW,DFW,TS,Result}
=[{0x00:0x00:0x00,0xFF,99999,0x00,0x0004,6,Sync,Entire,Never,
15,032,Track,Only P-VOL,Required,Enable,Normal end},
(Snip)-(Snip)],Num. of Pairs=xx
```

Detailed Information 2

Item	Description
Copy Type	The program product name for this operation TCMF: TrueCopy for Mainframe
P-VOL(LDKC:CU:LDEV)	The LDKC, CU, and LDEV numbers of the primary volume
S-VOL(LDEV)	The LDEV number of the secondary volume
S/N	The serial number of the RCU
LDKC	The LDKC number of the RCU
SSID	The SSID of the RCU
Controller ID	The controller ID of the RCU 5: USP V/VM, 6: VSP, 7: VSP G1000/G1500 and VSP F1500
Type	Type of the update copy operation Outputs Sync (synchronization mode) as a fixed parameter.

Item	Description
Initial Copy	Type of the pair creation operation Entire: Creates pairs and copies data from the primary volume to the secondary volume. None: Creates pairs but does not copy data from the primary volume to the secondary volume.
Fence Level	Configured fence level (conditions where the local storage system rejects write operations to the primary volume) Never: Can write to the primary volume even the pair is split. Data: Cannot write to the primary volume when update copying fails. Status: Cannot write to the primary volume, only when the storage system of the primary site cannot change the pair status of the secondary volume to Suspend.
Copy Pace	The setting of the initial copy speed (the number of tracks that can be copied at a time)
Priority	The priority of the set initial copy operation (scheduling order).
Diff	The unit of the difference management setting Outputs Track as a fixed parameter.
CFW	Whether to copy CFW (cache fast write) data to the secondary volume. Only P-VOL: Does not copy, Copy to S-VOL: Copies
DFW	Whether the storage system of the primary site splits pairs when the storage system of the secondary site cannot copy DFW data to the secondary volume. Required: Splits pairs. Not Required: Does not split pairs.
TS	Indicates whether to transfer the host I/O time stamp to the secondary volume when creating a pair. Enable: Transfer, Disable: Not transfer
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of Pairs	The number of create pairs

Example 3: when the copy type is UR

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[Remote Replication],Create Pairs,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Copy Type=UR
+{P-VOL(Port-G-ID-LUN),S-VOL(Port-G-ID-LUN),MirrorID,
S/N,CTRLID,Priority,CTG,Initial Copy,M-JNL,R-JNL,
Path Gr. ID,Error Level,Result}
=[{4C-0x00-0,4A-0x00-0,0x00,67676,6,32,0x000,Entire,
0x001,0x001,Default,Mirror,Normal end},
```

```
{4C-0x00-1,4A-0x00-1,0x00,67676,6,32,0x000,Entire,
0x001,0x001,Default,Mirror,Normal end}],Num. of Pairs=2
```

Detailed Information 3

Item	Description
Copy Type	The program product name for this operation UR: Universal Replicator
P-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the primary data volume
S-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the secondary data volume
MirrorID	The mirror ID
S/N	The serial number of the RCU
CTRLID	The controller ID of the RCU 5: USP V/VM, 6: VSP, 7: VSP G1000/G1500 and VSP F1500, 18: VSP Gx00, VSP Fx00, 19: HUS VM
Priority	The priority of the set initial copy operation (scheduling order).
CTG	The consistency group ID
Initial Copy	Type of the pair creation operation Entire: Creates pairs and copies data from the primary volume to the secondary volume. None: Creates pairs but does not copy data from the primary volume to the secondary volume. Delta: Creates delta resynchronization pairs.
M-JNL	The master journal number
R-JNL	The restore journal number
Path Gr. ID	The path group ID specified for the storage system When the path group ID is default setting, "Default" is output.
Error Level	Range of the pair split at failure occurrence Mirror: When a pair fails, all the pairs are split that exist in the same mirror as the pair. LU: When a pair fails, only the pair is split.
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of Pairs	The number of created pairs

Example 4: when the copy type is URMF

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[Remote Replication],Create Pairs,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
```

```
+Copy Type=URMF
+{P-VOL(LDKC:CU:LDEV),S-VOL(LDKC:CU:LDEV),MirrorID,S/N,
CTRLID,Priority,Initial Copy,M-JNL,R-JNL,Path Gr. ID,
Error Level,CFW,Result}
=[{0x00:0x00:0x00,0x00:0x20:0x00,0x00,65432,6,32,Entire,
0x002,0x000,Default,Mirror,Copy to S-VOL,Normal end},
-{0x00:0x00:0x01,0x00:0x20:0x01,0x00,65432,6,32,Entire,
0x002,0x000,Default,Mirror,Copy to S-VOL,Normal end}],
Num. of Pairs=2
```

Detailed Information 4

Item	Description
Copy Type	The program product name for this operation URMF: Universal Replicator for Mainframe
P-VOL(LDKC:CU:LDEV)	The LDKC, CU, and LDEV numbers of the primary data volume
S-VOL(LDKC:CU:LDEV)	The LDKC, CU, and LDEV numbers of the secondary data volume
MirrorID	The mirror ID
S/N	The serial number of the RCU
CTRLID	The controller ID of the RCU 5: USP V/VM, 6: VSP, 7: VSP G1000/G1500 and VSP F1500
Priority	The priority of the set initial copy operation (scheduling order).
Initial Copy	Type of the pair creation operation Entire: Creates pairs and copies data from the primary volume to the secondary volume. None: Creates pairs but does not copy data from the primary volume to the secondary volume. Delta: Creates delta resynchronization pairs.
M-JNL	The master journal number
R-JNL	The restore journal number
Path Gr. ID	The path group ID specified for the storage system When the path group ID is default setting, "Default" is output.
Error Level	Range of the pair split at failure occurrence Mirror: When a pair fails, all the pairs are split that exist in the same mirror as the pair. Volume: When a pair fails, only the pair is split.
CFW	Whether to copy CFW (cache fast write) data to the secondary volume. Only P-VOL: Does not copy, Copy to S-VOL: Copies
Result	The result of the operation Normal end: Normal end,

Item	Description
	Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of Pairs	The number of created pairs

Example 5: when the copy type is GAD

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[Remote Replication],Create Pairs,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Copy Type=GAD,{P-VOL(Port-G-ID-LUN),S-VOL(Port-G-ID-LUN),
S/N_P,S/N_S,Path Gr.ID,Controller ID,SSID,Copy Pace,Quorum Disk ID,
MirrorID,CTG,Initial Copy,Result}=
[{1A-0x00-0,GR-0xFE-1023,62345,62355,0x00,7,0x0004,15,0x15, 0,
0x000, None,Normal end},(Snip)-(Snip)],Num. of Pairs=xx
```

Detailed Information 5

Item	Description
Copy Type	The program product name for this operation GAD: global-active device
P-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the primary volume
S-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the secondary volume
S/N_P	The serial number of the local storage system
S/N_S	The serial number of the remote storage system
Path Gr.ID	Path group ID used in a global-active device pair
Controller ID	The controller ID of the remote storage system 5: USP V/VM, 6: VSP, 7: VSP G1000/G1500 and VSP F1500, 18: VSP Gx00, VSP Fx00, 19: HUS VM
SSID	The SSID
Copy Pace	The setting of the initial copy speed (the number of tracks that can be copied at a time)
Quorum Disk ID	The quorum disk ID used by global-active device
MirrorID	The mirror ID
CTG	The consistency group ID A hyphen (-) is displayed if the consistency group is not specified.
Initial Copy	Type of the pair creation operation Entire: Creates pairs and copies data from the primary volume to the secondary volume. None: Creates pairs but does not copy data from the primary volume to the secondary volume.
Result	The result of the operation

Item	Description
	Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of Pairs	The number of created pairs

[Remote Replication] Delete Cmd.Dev

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[Remote Replication],Delete Cmd.Dev,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
```

[Remote Replication] Delete Pairs

Example 1: when the copy type is TC

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[Remote Replication],Delete Pairs,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Copy Type=TC,{P-VOL(Port-G-ID-LUN),S-VOL(Port-G-ID-LUN),
Type,Force,Result}
=[{1A-0x00-0,1B-0x00-0,P-VOL,No,Normal end},
{1A-0x00-1,1B-0x00-1,P-VOL,No,Normal end},
{1A-0x00-2,1B-0x00-2,P-VOL,No,Normal end},(Snip)-(Snip)],
Num. of Pairs=xx
```

Detailed Information 1

Item	Description
Copy Type	The program product name for this operation TC: TrueCopy
P-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the volume specified to the primary volume
S-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the volume specified to the secondary volume
Type	Volume type of the local storage system P-VOL: Primary volume, S-VOL: Secondary volume
Force	Conditions to delete pairs forcibly Yes: Deletes pairs, also when the local storage system cannot communicate with the remote storage system. No: Deletes pairs, only when the local storage system can change the pair to simplex volumes.
Result	The result of the operation Normal end: Normal end,

Item	Description
	Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of Pairs	The number of delete pairs

Example 2: when the copy type is TCMF

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[Remote Replication],Delete Pairs,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Copy Type=TCMF,{VOL(LDKC:CU:LDEV),PairVOL(LDEV),
Type,Mode,Result}
=[{0x00:0x00:0x00,0xFD,P-VOL,Normal,Normal end},
{0x00:0x00:0x01,0xFE,P-VOL,Normal,Normal end},
{0x00:0x00:0x02,0xFF,P-VOL,Normal,Normal end},(Snip)-(Snip)],
Num. of Pairs=xx
```

Detailed Information 2

Item	Description
Copy Type	The program product name for this operation TCMF: TrueCopy for Mainframe
VOL(LDKC:CU:LDEV)	The LDKC, CU, and LDEV numbers of the volume on MCU
PairVOL(LDEV)	The LDEV number of the volume on RCU
Type	Volume type of the local storage system P-VOL: Primary volume, S-VOL: Secondary volume
Mode	Type of the pair deletion operation Normal: Deletes pairs. Force: Deletes pairs forcibly. All: Deletes forcibly all the pairs that use the same remote connection as the pair.
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of Pairs	The number of deleted pairs

Example 3: when the copy type is UR

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[Remote Replication],Delete Pairs,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Copy Type=UR
+{P-VOL(Port-G-ID-LUN),S-VOL(Port-G-ID-LUN),MirrorID,
S/N,CTRLID,Type,Range,Delete Mode,Result}
=[{4C-0x00-0,4A-0x00-0,0x00,67676,6,P-VOL,LU,Normal,Normal end},
```

```
{4C-0x00-1,4A-0x00-1,0x00,67676,6,P-VOL,LU,Normal,Normal end}],
Num. of Requests=2
```

Detailed Information 3

Item	Description
Copy Type	The program product name for this operation UR: Universal Replicator
P-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the primary data volume
S-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the secondary data volume
MirrorID	The mirror ID
S/N	The serial number of the RCU
CTRLID	The controller ID of the RCU 5: USP V/VM, 6: VSP, 7: VSP G1000/G1500 and VSP F1500, 18: VSP Gx00, VSP Fx00, 19: HUS VM
Type	The volume type of the deleted volume P-VOL: Primary volume, S-VOL: Secondary volume
Range	The delete range Mirror: All the pairs are delete that exist in the same mirror as the pair. LU: Only the pair is delete.
Delete Mode	Type of the pair deletion operation Normal: Deletes pairs, Force: Deletes pairs forcibly.
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of Requests	The number of deleted mirrors when Range is Mirror The number of deleted pairs when Range is LU

Example 4: when the copy type is URMF

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[Remote Replication],Delete Pairs,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Copy Type=URMF
+{P-VOL(LDKC:CU:LDEV),S-VOL(LDKC:CU:LDEV),MirrorID,S/N,
CTRLID,Type,Range,Delete Mode,Result}
=[{0x00:0x00:0x00,0x00:0x20:0x00,0x00,65432,6,P-VOL,Volume,
Normal,Normal end},
{0x00:0x00:0x02,0x00:0x20:0x02,0x00,65432,6,P-VOL,Volume,
Normal,Normal end}],Num. of Requests=2
```

Detailed Information 4

Item	Description
Copy Type	The program product name for this operation URMF: Universal Replicator for Mainframe
P-VOL(LDKC:CU:LDEV)	The LDKC, CU, and LDEV numbers of the primary data volume
S-VOL(LDKC:CU:LDEV)	The LDKC, CU, and LDEV numbers of the secondary data volume
MirrorID	The mirror ID
S/N	The serial number of the RCU
CTRLID	The controller ID of the RCU 5: USP V/VM, 6: VSP, 7: VSP G1000/G1500 and VSP F1500
Type	The volume type of the deleted volume P-VOL: Primary volume, S-VOL: Secondary volume
Range	The delete range Mirror: All the pairs are delete that exist in the same mirror as the pair. LU: Only the pair is delete.
Delete Mode	Type of the pair deletion operation Normal: Deletes pairs, Force: Deletes pairs forcibly.
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of Requests	The number of deleted mirrors when Range is Mirror The number of deleted pairs when Range is Volume

Example 5: when the copy type is GAD

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[Remote Replication],Delete Pairs,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Copy Type=GAD,{P-VOL(Port-G-ID-LUN),S-VOL(Port-G-ID-LUN),
S/N_P,S/N_S,Type,SSID_P,SSID_S,CTG,Range,Force,MirrorID,
Invisible,Result}=
[{1A-0x00-0,GR-0xFE-1023,62345,62355,P-VOL,0x0004,0x0004,-,
Volume,Yes,0,Disable,Normal end},
(Snip)-(Snip)],Num. of Requests=xx
```

Detailed Information 5

Item	Description
Copy Type	The program product name for this operation GAD: global-active device
P-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the primary volume
S-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the secondary volume
S/N_P	The serial number of the local storage system
S/N_S	The serial number of the remote storage system
Type	Volume type of the local storage system SMPL: simplex, P-VOL: Primary volume, S-VOL: Secondary volume
SSID_P	The SSID of the primary volume
SSID_S	The SSID of the secondary volume
CTG	The consistency group ID A hyphen (-) is displayed when Range is Volume.
Range	The applicable range of pair deletion Volume: Only this volume, Group: All volumes in the consistency group to which this volume belongs
Force	Conditions to delete pairs forcibly Yes: Deletes pairs, also when the local storage system cannot communicate with the remote storage system. No: Deletes pairs, only when the local storage system can change the pair to simplex volumes.
MirrorID	The mirror ID
Invisible	Indicates whether the host can access volumes after deleting pairs. Enable: Deletes the virtual LDEV ID of the volume of the local storage system so that no hosts can access the volume. Disable: Keeps the virtual LDEV ID of the volume of the local storage system so that hosts can access the volume.
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of Requests	The number of requests to delete pairs

[Remote Replication] Delete Path

Example 1: system connection

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[Remote Replication],Delete Path,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
```

```
+{S/N,MCU LDKC,RCU LDKC,Path Gr.ID,Controller ID,Result}
={99999,0x00,0x00,Default,6,Normal end}
++{MCU Port,RCU Port}
=[{1E,3E},{5E,7E},{1F,3F},{5F,7F},{1G,3G},{5G,7G},{1H,3H}],
Num. of Port Pairs=7
(Snip)
+{S/N,MCU LDKC,RCU LDKC,Path Gr.ID,Controller ID,Result}
={99998,0x00,0x00,Default,6,Normal end}
++{MCU Port,RCU Port}
=[{1E,3E},{5E,7E},{1F,3F},{5F,7F},{1G,3G},{5G,7G},{1H,3H}],
Num. of Port Pairs=7
+Num. of RCUs=xx
```

Example 2: CU connection

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[Remote Replication],Delete Path,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{S/N,MCU LDKC,MCU,RCU LDKC,RCU,SSID,Controller ID,Result}
={99999,0x00,0x3F,0x00,0x7F,0x0004,6,Normal end}
++{MCU Port,RCU Port}
=[{1E,3E},{5E,7E},{1F,3F},{5F,7F},{1G,3G},{5G,7G},{1H,3H}],
Num. of Port Pairs=7
(Snip)
+{S/N,MCU LDKC,MCU,RCU LDKC,RCU,SSID,Controller ID,Result}
={99998,0x00,0x3F,0x00,0x7F,0x0004,6,Normal end}
++{MCU Port,RCU Port}
=[{1E,3E},{5E,7E},{1F,3F},{5F,7F},{1G,3G},{5G,7G},{1H,3H}],
Num. of Port Pairs=7
+Num. of RCUs=xx
```

Example 3: mixture of system connection and CU connection

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[Remote Replication],Delete Path,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{S/N,MCU LDKC,RCU LDKC,Path Gr.ID,Controller ID,Result}
={99999,0x00,0x00,Default,6,Normal end}
++{MCU Port,RCU Port}
=[{1E,3E},{5E,7E},{1F,3F},{5F,7F},{1G,3G},{5G,7G},{1H,3H}],
Num. of Port Pairs=7
(Snip)
+{S/N,MCU LDKC,MCU,RCU LDKC,RCU,SSID,Controller ID,Result}
={99998,0x00,0x3F,0x00,0x7F,0x0004,6,Normal end}
++{MCU Port,RCU Port}
=[{1E,3E},{5E,7E},{1F,3F},{5F,7F},{1G,3G},{5G,7G},{1H,3H}],
Num. of Port Pairs=7
+Num. of RCUs=xx
```

Detailed Information

Item	Description
S/N	The serial number of the RCU on which a path is deleted
MCU LDKC	The LDKC number of the connected LDKC
RCU LDKC	The LDKC number of the paired LDKC

Item	Description
Path Gr.ID	The path group ID of the deleted path. When the path group ID is default setting, "Default" is output.
Controller ID	The controller ID of the RCU on which a path is deleted 5: USP V/VM, 6: VSP, 7: VSP G1000/G1500 and VSP F1500, 18: VSP Gx00, VSP Fx00, 19: HUS VM
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
MCU	The CU number of the connected CU
RCU	The CU number of the paired CU
SSID	The SSID
MCU Port	The port number of MCU
RCU Port	The port number of RCU
Num. of Port Pairs	Number of pairs of the port to be operated
Num. of RCUs	The number of RCUs set

[Remote Replication] Del Quorum Disk ID

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[Remote Replication],Del Quorum Disk ID,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Quorum Disk ID,Paired S/N,Controller ID,Quorum Disk(LDKC:CU:LDEV),
Result}=[{0x01,64024,7,0x00:0xFE:0x01,Normal end},
{0x02,64024,7,0x00:0xFE:0x02,Normal end},(Snip),
{0x7F,64024,7,0x00:0xFE:0x7F,Error(xxxx-yyyyy)}]
-,Num. of IDs=xx
```

Detailed Information

Item	Description
Quorum Disk ID	The deleted quorum disk ID used by global-active device
Paired S/N	The serial number of the remote storage system
Controller ID	The controller ID of the remote storage system 5: USP V/VM, 6: VSP, 7: VSP G1000/G1500 and VSP F1500, 18: VSP Gx00, VSP Fx00, 19: HUS VM
Quorum Disk(LDKC:CU:LDEV)	The LDKC, CU, and LDEV numbers of the deleted quorum disk used by global-active device
Result	The result of the operation

Item	Description
	Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of IDs	The number of deleted quorum disk IDs used by global-active device

[Remote Replication] Delete RCU

Example 1: system connection

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[Remote Replication],Delete RCU,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{S/N,MCU LDKC,RCU LDKC,Path Gr.ID,Controller ID,Result}
={99999,0x00,0x00,Default,6,Normal end}
(Snip)
+{S/N,MCU LDKC,RCU LDKC,Path Gr.ID,Controller ID,Result}
={99998,0x00,0x00,Default,6,Normal end}
+Num. of RCUs=xx
```

Example 2: CU connection

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[Remote Replication],Delete RCU,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{S/N,MCU LDKC,MCU,RCU LDKC,SSID,Result}
={99999,0x00,0x3F,0x00,0x0004,Normal end}
(Snip)
+{S/N,MCU LDKC,MCU,RCU LDKC,SSID,Result}
={99998,0x00,0x3F,0x00,0x0004,Normal end}
+Num. of RCUs=xx
```

Example 3: mixture of system connection and CU connection

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[Remote Replication],Delete RCU,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{S/N,MCU LDKC,RCU LDKC,Path Gr.ID,Controller ID,Result}
={99999,0x00,0x00,Default,6,Normal end}
(Snip)
+{S/N,MCU LDKC,MCU,RCU LDKC,SSID,Result}
={99998,0x00,0x3F,0x00,0x0004,Normal end}
+Num. of RCUs=xx
```

Detailed Information

Item	Description
S/N	The serial number of the deleted RCU
MCU LDKC	The LDKC number of the connected LDKC
RCU LDKC	The LDKC number of the paired LDKC

Item	Description
Path Gr.ID	The path group ID of the deleted RCU. When the path group ID is default setting, "Default" is output.
Controller ID	The controller ID of the deleted RCU 5: USP V/VM, 6: VSP, 7: VSP G1000/G1500 and VSP F1500, 18: VSP Gx00, VSP Fx00, 19: HUS VM
MCU	The CU number of the connected CU
SSID	The SSID of the deleted RCU
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of RCUs	The number of deleted RCUs

[Remote Replication] Edit EXCTG

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[Remote Replication],Edit EXCTG,Add,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{LDKC,EXCTG}={0x00,0x00}
++{LDKC,JNL,MirrorID,S/N,CTRLID,Cmd.Dev.(LDKC:CU:LDEV),Result}=
[{0x00,0x000,0x01,65432,5,0x00:0x20:0x00,Normal end},
{0x00,0x001,0x01,65432,5,0x00:0x20:0x00,Normal end}],
Num. of JNLs=2
+{LDKC,EXCTG}={0x00,0x01}
++{LDKC,JNL,MirrorID,S/N,CTRLID,Cmd.Dev.(LDKC:CU:LDEV),Result}=
[{0x00,0x002,0x01,65433,5,0x00:0x20:0x00,Normal end}],
Num. of JNLs=1
+Num. of EXCTGs=2
```

Basic Information

Parameter	Description
Add	Indicates the addition of the journal to the expanded consistency group
Remove	Indicates the deletion of the journal from the expanded consistency group

Detailed Information

Item	Description
LDKC	The number of the LDKC to which the expanded consistency group belongs

Item	Description
EXCTG	The number of the expanded consistency group
LDKC	The LDKC number to which the journal belongs
JNL	The journal number
MirrorID	The mirror ID
S/N	The serial number of the RCU
CTRLID	The controller ID of the RCU 5: USP V/VM, 6: VSP, 7: VSP G1000/G1500 and VSP F1500
Cmd.Dev. (LDKC:CU:LDEV)	The LDKC, CU, and LDEV numbers of the remote command device.
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of JNLs	The number of journals set to the expanded consistency group
Num. of EXCTGs	The number of the expanded consistency groups whose settings are changed

[Remote Replication] Edit Options

Example 1: Editing storage system options

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[Remote Replication],Edit Options,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Copy Type=TC,{Max Initial Copy,CU Activity,
Path Blockade Watch(s),Path Blockade SIM Watch(s),
Service SIM,Switch}
={128,Enable,45,070,Not Report,-}
```

Example 2: Editing CU options

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[Remote Replication],Edit Options,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Copy Type=TC,{LDKC,CU,Service SIM,PPRC Support,Max Initial Copy}
=[{0x00,0x00,Not Report,Yes,04},
{0x00,0x01,Not Report,Yes,04},
{0x00,0x02,Not Report,Yes,04},
{0x00,0x03,Not Report,Yes,04},
{0x00,0x04,Not Report,Yes,04},(Snip)-(Snip)],
Num. of CUs=255
```

Example 3: Editing both storage system options and CU options

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[Remote Replication],Edit Options,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
```

```
+Copy Type=TC,{Max Initial Copy,CU Activity,
Path Blockade Watch(s),Path Blockade SIM Watch(s),
Service SIM,Switch}
={128,Enable,45,070,Not Report,-}
+{LDKC,CU,Service SIM,PPRC Support,Max Initial Copy}
=[{0x00,0x00,Not Report,Yes,04},
{0x00,0x01,Not Report,Yes,04},
{0x00,0x02,Not Report,Yes,04},
{0x00,0x03,Not Report,Yes,04},
{0x00,0x04,Not Report,Yes,04},(Snip)-(Snip)],
Num. of CUs=255
```

Example 4: Editing remote replication function switch

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[Remote Replication],Edit Options,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Copy Type=TC,{Max Initial Copy,CU Activity,
Path Blockade Watch(s),Path Blockade SIM Watch(s),
Service SIM,Switch}
={-,-,-,-,-,1000 0000 0000 0000 0100 0000 0000 0000 0000 0000
0000 0000 0000 0000 0000 0000}
```

Detailed Information

Item	Description
Copy Type	The program product name for this operation TC: TrueCopy
Max Initial Copy	The setting of the maximum number of initial copy operations If this is not a subject to change, a hyphen (-) is displayed. If any one of Max Initial Copy, CU Activity, Path Blockade Watch(s), Path Blockade SIM Watch(s), and Service SIM is changed, this will be the subject to change.
CU Activity	Indicates whether the parallel operation of initial copy by the control unit is enabled or not. Enable or Disable will appear. If this is not a subject to change, a hyphen (-) is displayed. If any one of Max Initial Copy, CU Activity, Path Blockade Watch(s), Path Blockade SIM Watch(s), and Service SIM is changed, this will be the subject to change.
Path Blockade Watch(s)	The path blockade watch period setting (in seconds). If this is not a subject to change, a hyphen (-) is displayed. If any one of Max Initial Copy, CU Activity, Path Blockade Watch(s), Path Blockade SIM Watch(s), and Service SIM is changed, this will be the subject to change.
Path Blockade SIM Watch(s)	The path blockade SIM watch period setting (in seconds). If this is not a subject to change, a hyphen (-) is displayed. If any one of Max Initial Copy, CU Activity, Path Blockade Watch(s), Path Blockade SIM Watch(s), and Service SIM is changed, this will be the subject to change.
Service SIM	Indicates whether the remote replication related SIM is reported or not.

Item	Description
	Report, Not Report If this is not a subject to change, a hyphen (-) is displayed. If any one of Max Initial Copy, CU Activity, Path Blockade Watch(s), Path Blockade SIM Watch(s), and Service SIM is changed, this will be the subject to change.
Switch	Indicates the ON/OFF information of each bit of the function switch that is allocated in the 64 bit format; the first digit corresponds to the bit 0 while the last one corresponds to the bit 63. 0: OFF, 1: ON If this is not a subject to change, a hyphen (-) is displayed.
LDKC	The LDKC number
CU	The CU number of the connected CU
Service SIM	Indicates whether the remote replication related SIM is reported. Report, Not Report If this is not a subject to change, a hyphen (-) is displayed. If any one of Service SIM, PPRC Support, and Max Initial Copy is changed, this will be the subject to change.
PPRC Support	Indicates whether the host supports PPRC Yes: Support, No: Not support If this is not a subject to change, a hyphen (-) is displayed. If any one of Service SIM, PPRC Support, and Max Initial Copy is changed, this will be the subject to change.
Max Initial Copy	The number of parallel operation of initial copy by CU. If this is not a subject to change, a hyphen (-) is displayed. If any one of Service SIM, PPRC Support, and Max Initial Copy is changed, this will be the subject to change.
Num. of CUs	The number of CUs set

Example 5: Editing Max Initial Copy

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[Remote Replication],Edit Options,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Copy Type=UR
+Max Initial Copy=64
```

Example 6: Editing SIM Report

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[Remote Replication],Edit Options,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Copy Type=UR
+{LDKC:CU,SIM Report}
=[{0x00:0x00,Report},{0x00:0x01,Not Report},
{0x00:0x02,Not Report},(Snip)-(Snip),{0x00:0xFE,Report}],
Num. of CUs=256
```

Example 7: Editing both Max Initial Copy and SIM Report

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[Remote Replication],Edit Options,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Copy Type=UR
+Max Initial Copy=64
+{LDKC:CU,SIM Report}
=[{0x00:0x00,Report},{0x00:0x01,Not Report},
{0x00:0x02,Not Report},(Snip)-(Snip),{0x00:0xFE,Report}],
Num. of CUs=256
```

Detailed Information

Item	Description
Copy Type	The program product name for this operation UR: Universal Replicator
Max Initial Copy	The setting of the maximum number of initial copy operations
LDKC:CU	The LDKC and CU numbers
SIM Report	Whether to report SIM to the host or not. Report, Not report
Num. of CUs	The number of CUs on which the setting is changed
Note: Only the changed items are output.	

Example 8: when the copy type is GAD

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[Remote Replication],Edit Options,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Copy Type=GAD,{Max Initial Copy,Path Blockade Watch(s),
Path Blockade SIM Watch(s),Service SIM,Switch,Max Initial Copy HA}=
{128,45,70,Not Report,0000 0000 0000 0000 0000 0000 0000 0000 0000
0000 0000 0000 0000 0000 0000 0000,50}
```

Detailed Information 8

Item	Description
Copy Type	The program product name for this operation GAD: global-active device
Max Initial Copy	The setting of the maximum number of initial copy operations
Path Blockade Watch(s)	The path blockade watch period setting (in seconds).
Path Blockade SIM Watch(s)	The path blockade SIM watch period setting (in seconds).
Service SIM	Indicates whether the remote replication related SIM is reported. Report: Reported, Not Report: Not reported

Item	Description
Switch	Indicates the ON/OFF information of each bit of the function switch that is allocated in the 64 bit format; the first digit corresponds to the bit 0 while the last one corresponds to the bit 63. 0: OFF, 1: ON If this is not a subject to change, a hyphen (-) is displayed.
Max Initial Copy HA	The setting of the number of initial copy operations of GAD

[Remote Replication] Edit Pair Options

Example 1: when the copy type is TC

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[Remote Replication],Edit Pair Options,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Copy Type=TC,{P-VOL(Port-G-ID-LUN),Fence Level,Result}
=[{1A-0x00-0,Never,Normal end},{1A-0x00-1,Never,Normal end},
{1A-0x00-2,Never,Normal end},(Snip)-(Snip)],
Num. of Pairs=xx
```

Detailed Information 1

Item	Description
Copy Type	The program product name for this operation TC: TrueCopy
P-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the primary volume
Fence Level	The changed fence level setting (the condition that MCU rejects the write operation to the primary volume). Never: Can write to the primary volume even when the pair is split. Data: Cannot write to the primary volume when update copying fails. Status: Cannot write to the primary volume, only when the storage system of the primary site cannot change the pair status of the secondary volume to PSUE.
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of Pairs	The number of pairs on which the setting is changed

Example 2: when the copy type is TCMF

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[Remote Replication],Edit Pair Options,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Copy Type=TCMF,{P-VOL(LDKC:CU:LDEV),Fence Level,CFW,Result}
```

```
=[{0x00:0x00:0x00,Never,Copy To S-VOL,Normal end},
{0x00:0x01,Never,Copy to S-VOL,Normal end},(Snip)-(Snip)],
Num. of Pairs=x
```

Detailed Information 2

Item	Description
Copy Type	The program product name for this operation TCMF: TrueCopy for Mainframe
P-VOL(LDKC:CU:LDEV)	The LDKC, CU, and LDEV numbers of the primary volume
Fence Level	The changed fence level setting (the condition that MCU rejects the write operation to the primary volume). Never: Can write to the primary volume even when the pair is split. Data: Cannot write to the primary volume when update copying fails. Status: Cannot write to the primary volume, only when the storage system of the primary site cannot change the pair status of the secondary volume to Suspend.
CFW	Indicates whether the setting to copy the CFW (Cache Fast Write) data to the secondary volume is enabled or not. Only P-VOL: Copy to primary volume only is enabled Copy to S-VOL: Copy to primary and secondary volume is enabled
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of Pairs	The number of pairs on which the setting is changed

Example 3: when the copy type is UR

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[Remote Replication],Edit Pair Options,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Copy Type=UR
+{P-VOL(Port-G-ID-LUN),S-VOL(Port-G-ID-LUN),MirrorID,
M-JNL,R-JNL,Error Level,Result}
=[{4C-0x00-0,4A-0x00-0,0x00,0x001,0x001,Mirror,Normal end},
{4C-0x00-1,4A-0x00-1,0x00,0x001,0x001,Mirror,Normal end}],
Num. of Pairs=2
```

Detailed Information 3

Item	Description
Copy Type	The program product name for this operation UR: Universal Replicator

Item	Description
P-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the primary data volume
S-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the secondary data volume
MirrorID	The mirror ID
M-JNL	The master journal number
R-JNL	The restore journal number
Error Level	Range of the pair split at failure occurrence Mirror: When a pair fails, all the pairs are split that exist in the same mirror as the pair. LU: When a pair fails, only the pair is split.
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of Pairs	The number of pairs on which the setting is changed

Example 4: when the copy type is URMF

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[Remote Replication],Edit Pair Options,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Copy Type=URMF
+{P-VOL(LDKC:CU:LDEV),S-VOL(LDKC:CU:LDEV),
MirrorID,M-JNL,R-JNL,Error Level,CFW,Result}
=[{0x00:0x00:0x00,0x00:0x20:0x00,0x03,0x001,0x002,Volume,
Only P-VOL,Normal end},
{0x00:0x00:0x02,0x00:0x20:0x02,0x03,0x001,0x002,Volume,
Only P-VOL,Normal end}],
Num. of Pairs=2
```

Detailed Information

Item	Description
Copy Type	The program product name for this operation URMF: Universal Replicator for Mainframe
P-VOL(LDKC:CU:LDEV)	The LDKC, CU, and LDEV numbers of the primary data volume
S-VOL(LDKC:CU:LDEV)	The LDKC, CU, and LDEV numbers of the secondary data volume
MirrorID	The mirror ID
M-JNL	The master journal number

Item	Description
R-JNL	The restore journal number
Error Level	Range of the pair split at failure occurrence Mirror: When a pair fails, all the pairs are split that exist in the same mirror as the pair. Volume: When a pair fails, only the pair is split.
CFW	Indicates whether the setting to copy the CFW data to the secondary volume is enabled or not. Only P-VOL: Copy to primary volume only is enabled Copy to S-VOL: Copy to primary and secondary volume is enabled
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end
Num. of Pairs	The number of pairs on which the setting is changed

[Remote Replication] Journal Owner

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[Remote Replication],Journal Owner,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{JNL,Owner,Result}={0x000,0x00,Normal end},
{0x001,0x00,Normal end},
Num. of JNLs=2
```

Detailed Information

Item	Description
JNL	The journal number
Owner	The ownership to which the journal belongs
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end
Num. of JNLs	The number of journals

[Remote Replication] Journal Vol

Example 1: Adding journal volumes when the copy type is UR

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[Remote Replication],Journal Vol,Add,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Copy Type=UR
+{LDKC,JNL,2DC Cascade,Owner}={0x00,0x001,Disable,0x00}
```

```
++{LDKC:CU:LDEV,Result}
=[{0x00:0xD7:0x01,Normal end}],Num. of LDEVs=1
+{LDKC,JNL,2DC Cascade,Owner}={0x00,0x002,Disable,0x00}
++{LDKC:CU:LDEV,Result}
=[{0x00:0xD8:0x21,Normal end}],Num. of LDEVs=1
+Num. of JNLs=2
```

Example 2: Deleting journal volumes when the copy type is UR

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[Remote Replication],Journal Vol,Delete,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Copy Type=UR
+{LDKC,JNL}={0x00,0x001}
++{LDKC:CU:LDEV,Result}
=[{0x00:0xD7:0x01,Normal end}],Num. of LDEVs=1
+{LDKC,JNL}={0x00,0x002}
++{LDKC:CU:LDEV,Result}
=[{0x00:0xD8:0x21,Normal end}],Num. of LDEVs=1
+Num. of JNLs=2
```

Basic Information (Adding or deleting journal volumes when the copy type is UR)

Parameter	Description
Add	Indicates the addition of journal volumes
Delete	Indicates the deletion of journal volumes

Detailed Information (Adding or deleting journal volumes when the copy type is UR)

Item	Description
Copy Type	The program product name for this operation UR: Universal Replicator
LDKC	The LDKC number to which the journal belongs
JNL	The journal number
2DC Cascade	Indicates if the journal supports 2DC cascade configuration. Disable: Not supported, Enable: Supported This information is output when the parameter is Add.
Owner	The ownership to which the journal belongs This information is output when the parameter is Add.
LDKC:CU:LDEV	The LDKC, CU, and LDEV numbers of the volume
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code

Item	Description
Num. of LDEVs	The number of LDEVs set for the journal
Num. of JNLs	The number of journals

Example 3: Adding journal volumes when the copy type is URMF

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[Remote Replication],Journal Vol,Add,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Copy Type=URMF
+{LDKC,JNL,Timer Type,Owner}={0x00,0x001,System,0x00}
++{LDKC:CU:LDEV,Result}
=[{0x00:0xD7:0x01,Normal end}],Num. of LDEVs=1
+{LDKC,JNL,Timer Type,Owner}={0x00,0x002,System,0x00}
++{LDKC:CU:LDEV,Result}
=[{0x00:0xD8:0x21,Normal end}],Num. of LDEVs=1
+Num. of JNLs=2
```

Example 4: Deleting journal volumes when the copy type is URMF

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[Remote Replication],Journal Vol,Delete,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Copy Type=URMF
+{LDKC,JNL}={0x00,0x001}
++{LDKC:CU:LDEV,Result}
=[{0x00:0xD7:0x01,Normal end}],Num. of LDEVs=1
+{LDKC,JNL}={0x00,0x002}
++{LDKC:CU:LDEV,Result}
=[{0x00:0xD8:0x21,Normal end}],Num. of LDEVs=1
+Num. of JNLs=2
```

Basic Information (Adding or deleting journal volumes when the copy type is URMF)

Parameter	Description
Add	Indicates the addition of journal volumes
Delete	Indicates the deletion of journal volumes

Detailed Information (Adding or deleting journal volumes when the copy type is URMF)

Item	Description
Copy Type	The program product name for this operation URMF: Universal Replicator for Mainframe
LDKC	The LDKC number to which the journal belongs
JNL	The journal number
Timer Type	Type of the clock used for the consistency time

Item	Description
	System: Uses the system clock of the mainframe host of the primary site. Local: Does not use the system clock. None: Uses the system clock of the mainframe host of the primary site when data copying is from the storage system of the secondary site to the storage system of the primary site. This information is output when the parameter is Add.
Owner	The ownership to which the journal belongs This information is output when the parameter is Add.
LDKC:CU:LDEV	The LDKC, CU, and LDEV numbers of the volume
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of LDEVs	The number of LDEVs set for the journal
Num. of JNLs	The number of journals

Example 5: Deleting journals when the copy type is UR or URMF

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[Remote Replication],Journal Vol,Delete JNL,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Copy Type=UR
+{LDKC,JNL,Result}
=[{0x00,0x001,Normal end},{0x00,0x003,Normal end},
{0x00,0x005,Normal end}],Num. of JNLs=3
```

Basic Information

Parameter	Description
Delete JNL	Indicates the deletion of journals

Detailed Information

Item	Description
Copy Type	The program product name for this operation UR: Universal Replicator, URMF: Universal Replicator for Mainframe
LDKC	The LDKC number to which the journal belongs
JNL	The journal number
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end

Item	Description
	where *xxxx*: Part code, *yyyyy*: Error code
Num. of JNLs	The number of journals

Example 6: Forcibly deleting journals when the copy type is URMF

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[Remote Replication],Journal Vol,Remove JNL(Force),Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Copy Type=URMF
+{LDKC,JNL,Result}=[{0x00,0x000,Normal end}],Num. of JNLs=1
```

Basic Information

Parameter	Description
Remove JNL(Force)	Forcible deletion of journals from the expanded consistency group

Detailed Information

Item	Description
Copy Type	The program product name for this operation URMF: Universal Replicator for Mainframe
LDKC	The LDKC number to which the journal belongs
JNL	The journal number
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of JNLs	The number of journals

[Remote Replication] R-Cmd.Dev.

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[Remote Replication],R-Cmd.Dev.,Assign,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Copy Type=UR
+{LDKC,JNL,MirrorID,R-Cmd.Dev.(LDKC:CU:LDEV),Result}
=[{0x00,0x001,0x01,0x00:0x12:0x34,Normal end},
{0x00,0x010,0x02,0x00:0x56:0x78,Normal end}],
Num. of Mirrors=2
```

Basic Information

Parameter	Description
Assign	The remote command device is assigned.
Release	The remote command device is released.

Detailed Information

Item	Description
Copy Type	The program product name for this operation UR: Universal Replicator, URMF: Universal Replicator for Mainframe
LDKC	The LDKC number to which the journal belongs
JNL	The journal number
MirrorID	The mirror ID
R-Cmd.Dev. (LDKC:CU:LDEV)	The LDKC, CU, and LDEV numbers of the remote command device. The hyphen (-) indicates • When assigning a remote command device without specifying a remote command device as a parameter. • When releasing a remote command device.
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of Mirrors	The number of mirrors on which the setting is changed

[Remote Replication] Resync Pairs

Example 1: when the copy type is TC

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[Remote Replication],Resync Pairs,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Copy Type=TC,{P-VOL(Port-G-ID-LUN),S-VOL(Port-G-ID-LUN),
Fence Level,Copy Pace,Priority,Result}
=[{1A-0x00-0,1B-0x00-0,Never,15,256,Normal end},
{1A-0x00-1,1B-0x00-1,Never,15,256,Normal end},(Snip)-(Snip)],
Num. of Pairs=xx
```

Detailed Information 1

Item	Description
Copy Type	The program product name for this operation TC: TrueCopy

Item	Description
P-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the primary volume
S-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the secondary volume
Fence Level	Configured fence level (conditions where the local storage system rejects write operations to the primary volume) Never: Can write to the primary volume even the pair is split. Data: Cannot write to the primary volume when update copying fails. Status: Cannot write to the primary volume, only when the storage system of the primary site cannot change the pair status of the secondary volume to PSUE.
Copy Pace	The setting of the initial copy speed (the number of tracks that can be copied at a time)
Priority	The priority of resynchronizing operation set (scheduling order)
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of Pairs	The number of resynchronized pairs

Example 2: when the copy type is TCMF

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[Remote Replication],Resync Pairs,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Copy Type=TCMF,{P-VOL(LDKC:CU:LDEV),S-VOL(LDEV),Fence Level,
Copy Pace,Priority,TS,Result}
=[{0x00:0x00:0x00,0xFE,Never,15,256,Enable,Normal end},
{0x00:0x00:0x01,0xFF,Never,15,256,Enable,Normal end},
(Snip)-(Snip)],Num. of Pairs=xx
```

Detailed Information 2

Item	Description
Copy Type	The program product name for this operation TCMF: TrueCopy for Mainframe
P-VOL(LDKC:CU:LDEV)	The LDKC, CU, and LDEV numbers of the primary volume
S-VOL(LDEV)	The LDEV number of the secondary volume
Fence Level	Configured fence level (conditions where the local storage system rejects write operations to the primary volume) Never: Can write to the primary volume even the pair is split. Data: Cannot write to the primary volume when update copying fails.

Item	Description
	Status: Cannot write to the primary volume, only when the storage system of the primary site cannot change the pair status of the secondary volume to Suspend.
Copy Pace	The setting of the initial copy speed (the number of tracks that can be copied at a time)
Priority	The priority of resynchronizing operation set (scheduling order)
TS	Indicates whether to transfer the host I/O time stamp to the secondary volume when resynchronizing a pair Enable: Transfer, Disable: Not transfer
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of Pairs	The number of resynchronized pairs

Example 3: when the copy type is UR

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[Remote Replication],Resync Pairs,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Copy Type=UR
+{P-VOL(Port-G-ID-LUN),S-VOL(Port-G-ID-LUN),MirrorID,
S/N,CTRLID,Priority,CTG,Range,M-JNL,R-JNL,Error Level,
Resync Mode,Result}
=[{4C-0x00-0,4A-0x00-0,0x00,67676,6,32,0x000,LU,0x001,0x001,
Mirror,Normal,Normal end},
{4C-0x00-1,4A-0x00-1,0x00,67676,6,32,0x000,LU,0x001,0x001,
Mirror,Normal,Normal end}],Num. of Requests=2
```

Detailed Information 3

Item	Description
Copy Type	The program product name for this operation UR: Universal Replicator
P-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the primary data volume
S-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the secondary data volume
MirrorID	The mirror ID
S/N	The serial number of the RCU
CTRLID	The controller ID of the RCU 5: USP V/VM, 6: VSP, 7: VSP G1000/G1500 and VSP F1500, 18: VSP Gx00, VSP Fx00, 19: HUS VM
Priority	The priority of resynchronizing operation set (scheduling order)

Item	Description
CTG	The consistency group ID
Range	The applicable range of resynchronization Mirror: All the pairs are resync that exist in the same mirror as the pair. LU: Only the pair is resync.
M-JNL	The master journal number
R-JNL	The restore journal number
Error Level	Range of the pair split at failure occurrence Mirror: When a pair fails, all the pairs are split that exist in the same mirror as the pair. LU: When a pair fails, only the pair is split.
Resync Mode	Type of the pair resynchronization operation Normal: normal resync, Delta: delta resync, Return to standby: return to standby status
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of Requests	The number of resynchronized mirrors when Range is Mirror The number of resynchronized pairs when Range is LU

Example 4: when the copy type is URMF

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[Remote Replication],Resync Pairs,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Copy Type=URMF
+{P-VOL(LDKC:CU:LDEV),S-VOL(LDKC:CU:LDEV),MirrorID,S/N,CTRLID,
Priority,Range,M-JNL,R-JNL,Error Level,Resync Mode,Result}
=[{0x00:0x00:0x00,0x00:0x20:0x00,0x00,65432,6,7,Volume,0x002,
0x000,Volume,Normal,Normal end},
-{0x00:0x00:0x01,0x00:0x20:0x01,0x00,65432,6,7,Volume,0x003,
0x001,Volume,Normal,Normal end}],Num. of Requests=2
```

Detailed Information 4

Item	Description
Copy Type	The program product name for this operation URMF: Universal Replicator for Mainframe
P-VOL(LDKC:CU:LDEV)	The LDKC, CU, and LDEV numbers of the primary data volume

Item	Description
S-VOL(LDKC:CU:LDEV)	The LDKC, CU, and LDEV numbers of the secondary data volume
MirrorID	The mirror ID
S/N	The serial number of the RCU
CTRLID	The controller ID of the RCU 5: USP V/VM, 6: VSP, 7: VSP G1000/G1500 and VSP F1500
Priority	The priority of resynchronizing operation set (scheduling order)
Range	The applicable range of resynchronization Mirror: All the pairs are resync that exist in the same mirror as the pair. Volume: Only the pair is resync.
M-JNL	The master journal number
R-JNL	The restore journal number
Error Level	Range of the pair split at failure occurrence Mirror: When a pair fails, all the pairs are split that exist in the same mirror as the pair. Volume: When a pair fails, only the pair is split.
Resync Mode	Type of the pair resynchronization operation Normal: normal resync, Delta: delta resync, Return to standby: return to standby status
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of Requests	The number of resynchronized mirrors when Range is Mirror The number of resynchronized pairs when Range is Volume

Example 5: when the copy type is GAD

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[Remote Replication],Resync Pairs,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Copy Type=GAD,{P-VOL(Port-G-ID-LUN),S-VOL(Port-G-ID-LUN),
S/N_P,S/N_S,Type,Path Gr.ID,Controller ID,SSID_P,SSID_S,
Copy Pace,Quorum Disk ID,MirrorID,Swap,Range,CTG,Result}=
-[{1A-0x00-0,GR-0xFE-1023,62345,62345,P-VOL,0x00,7,0x0004,
0x0004,15,0x00,1,Yes,Group,0x000,Normal end},
(Snip)-(Snip)],Num. of Requests=xx
```

Detailed Information 5

Item	Description
Copy Type	The program product name for this operation GAD: global-active device
P-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the primary volume
S-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the secondary volume
S/N_P	The serial number of the local storage system
S/N_S	The serial number of the remote storage system
Type	The volume type of the volume on the local storage system P-VOL: Primary volume, S-VOL: Secondary volume
Path Gr.ID	Path group ID used in a global-active device pair
Controller ID	The controller ID of the remote storage system 5: USP V/VM, 6: VSP, 7: VSP G1000/G1500 and VSP F1500, 18: VSP Gx00, VSP Fx00, 19: HUS VM
SSID_P	The SSID of the primary volume
SSID_S	The SSID of the secondary volume
Copy Pace	The setting of the initial copy speed (the number of tracks that can be copied at a time)
Quorum Disk ID	The quorum disk ID used by global-active device
MirrorID	The mirror ID
Swap	Indicate whether the attributes of the primary and secondary volumes are swapped. No: Not swapped, Yes: Swapped
Range	The applicable range of resynchronization Volume: Only this volume, Group: All volumes in the consistency group to which this volume belongs
CTG	The consistency group ID A hyphen (-) is displayed when the volume does not belong to a consistency group.
Result	The result of the operation Normal end: Normal end, Error(*xxxx*-*yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of Requests	The number of requests to resynchronize pairs

[Remote Replication] Split Pairs

Example 1: when the copy type is TC

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[Remote Replication],Split Pairs,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Copy Type=TC,{P-VOL(Port-G-ID-LUN),S-VOL(Port-G-ID-LUN),
Type,S-VOL Write,Kind,Result}
=[{1A-0x00-0,1B-0x00-0,P-VOL,Disable,S-VOL,Normal end},
{1A-0x00-1,1B-0x00-1,P-VOL,Disable,S-VOL,Normal end},
(Snip)-(Snip)],Num. of Pairs=xx
```

Detailed Information 1

Item	Description
Copy Type	The program product name for this operation TC: TrueCopy
P-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the primary volume
S-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the secondary volume
Type	The volume type of the volume on the primary site P-VOL: Primary volume, S-VOL: Secondary volume
S-VOL Write	Indicates whether the writing to the secondary volume is enabled Enable: Writing is enabled, Disable: Writing is disabled
Kind	Indicates whether the primary volume is writable after splitting a pair. P-VOL Failure: Not writable S-VOL: Writable
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of Pairs	The number of split pairs

Example 2: when the copy type is TCMF

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[Remote Replication],Split Pairs,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Copy Type=TCMF,{VOL(LDKC:CU:LDEV),PairVOL(LDEV),
Type,SSB,Kind,Result}
=[{0x00:0x00:0x00,0xFE,P-VOL,Disable,S-VOL,Normal end},
{0x00:0x00:0x01,0xFF,P-VOL,Disable,S-VOL,Normal end},
(Snip)-(Snip)],Num. of Pairs=xx
```

Detailed Information 2

Item	Description
Copy Type	The program product name for this operation TCMF: TrueCopy for Mainframe
VOL(LDKC:CU:LDEV)	The LDKC, CU, and LDEV numbers of the volume on the primary site
PairVOL(LDEV)	The LDEV number of the paired volume
Type	The volume type of the connected volume P-VOL: Primary volume, S-VOL: Secondary volume
SSB	Whether to notify SSB (F/M = FB) to the host Enable: Notifies SSB, Disable: Does not notify SSB
Kind	Indicates whether the primary volume is writable after splitting a pair. P-VOL Failure: Not writable S-VOL: Writable
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of Pairs	The number of split pairs

Example 3: when the copy type is UR

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[Remote Replication],Split Pairs,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Copy Type=UR
+{P-VOL(Port-G-ID-LUN),S-VOL(Port-G-ID-LUN),MirrorID,
S/N,CTRLID,Type,S-VOL Write,Range,Suspend Mode,Result}
=[{4C-0x00-0,4A-0x00-0,0x00,67676,6,P-VOL,Disable,LU,
Flush,Normal end},
{4C-0x00-1,4A-0x00-1,0x00,67676,6,P-VOL,Disable,LU,
Flush,Normal end}],Num. of Requests=2
```

Detailed Information 3

Item	Description
Copy Type	The program product name for this operation UR: Universal Replicator
P-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the primary data volume
S-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the secondary data volume
MirrorID	The mirror ID

Item	Description
S/N	The serial number of the RCU
CTRLID	The controller ID of the RCU 5: USP V/VM, 6: VSP, 7: VSP G1000/G1500 and VSP F1500, 18: VSP Gx00, VSP Fx00, 19: HUS VM
Type	Indicates whether the split data volume is a primary or secondary data volume P-VOL: Primary, S-VOL: Secondary
S-VOL Write	Indicates whether the writing to the secondary volume is enabled Disable: Disabled, Enable: Enabled
Range	The split range Mirror: All the pairs are split that exist in the same mirror as the pair. LU: Only the pair is split.
Suspend Mode	Indicates how to handle updated data that is not reflected in the secondary volume. Flush: The updated data is reflected when splitting a pair. Purge: The updated data is not reflected when splitting a pair. However, the updated data is reflected when the pair is resynchronized later.
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of Requests	The number of split mirrors when Range is Mirror The number of split pairs when Range is LU

Example 4: when the copy type is URMF

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[Remote Replication],Split Pairs,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Copy Type=URMF
++{P-VOL(LDKC:CU:LDEV),S-VOL(LDKC:CU:LDEV),MirrorID,S/N,
CTRLID,Type,S-VOL Write,Range,Suspend Mode,Result}
=[{0x00:0x00:0x00,0x00:0x20:0x00,0x00,65432,6,
P-VOL,Disable,Volume,Flush,Normal end},
{0x00:0x00:0x01,0x00:0x20:0x00,0x01,65432,6,
P-VOL,Disable,Volume,Flush,Normal end}],Num. of Requests=2
```

Detailed Information 4

Item	Description
Copy Type	The program product name for this operation URMF: Universal Replicator for Mainframe

Item	Description
P-VOL(LDKC:CU:LDEV)	The LDKC, CU, and LDEV numbers of the primary data volume
S-VOL(LDKC:CU:LDEV)	The LDKC, CU, and LDEV numbers of the secondary data volume
MirrorID	The mirror ID
S/N	The serial number of the RCU
CTRLID	The controller ID of the RCU 5: USP V/VM, 6: VSP, 7: VSP G1000/G1500 and VSP F1500
Type	Indicates whether the split data volume is a primary or secondary data volume P-VOL: Primary, S-VOL: Secondary
S-VOL Write	Indicates whether the writing to the secondary volume is enabled Disable: Disabled, Enable: Enabled
Range	The split range Mirror: All the pairs are split that exist in the same mirror as the pair. Volume: Only the pair is split.
Suspend Mode	Indicates how to handle updated data that is not reflected in the secondary volume. Flush: The updated data is reflected when splitting a pair. Purge: The updated data is not reflected when splitting a pair. However, the updated data is reflected when the pair is resynchronized later.
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of Requests	The number of split mirrors when Range is Mirror The number of split pairs when Range is Volume

[Remote Replication] Suspend Pairs

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[Remote Replication],Suspend Pairs,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Copy Type=GAD,{P-VOL(Port-G-ID-LUN),S-VOL(Port-G-ID-LUN),
S/N_P,S/N_S,Type,SSID_P,SSID_S,Kind,CTG,Range,
Swap,MirrorID,Result}
=[{1A-0x00-0,GR-0xFE-1023,62345,62345,P-VOL,0x0008,0x000C,S-VOL,
-,Volume,No,0,Normal end},
```

```
{1A-0x00-0,GR-0xFE-1023,62345,62345,P-VOL,0x0008,0x000C,S-VOL,
-,Volume,No,0,Normal end},(Snip)-(Snip)],Num. of Requests=xx
```

Detailed Information

Item	Description
Copy Type	The program product name for this operation GAD: global-active device
P-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the primary volume
S-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the secondary volume
S/N_P	The serial number of the local storage system
S/N_S	The serial number of the remote storage system
Type	The volume type of the volume on the local storage system P-VOL: Primary volume, S-VOL: Secondary volume
SSID_P	The SSID of the primary volume
SSID_S	The SSID of the secondary volume
Kind	Indicates whether the primary volume is writable after suspending a pair. P-VOL Failure: Not writable S-VOL: Writable
CTG	The consistency group ID A hyphen (-) is displayed when Range is Volume.
Range	The applicable range of suspension Volume: Only this volume, Group: All volumes in the consistency group to which this volume belongs
Swap	Indicate whether the attributes of the primary and secondary volumes are swapped. No: Not swapped, Yes: Swapped, Rollback: Returning the pair status of the secondary volume to PSUS from SSWS
MirrorID	The mirror ID
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of Requests	The number of requests to suspend pairs

[Remote Replication] UpdateQuorumDisks

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[Remote Replication], UpdateQuorumDisks,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{QuorumDisks[0]{
  Result=Normal end,Id=31,ReadResponseGuaranteedTime=40}}
```

Detailed Information

Item		Description
QuorumDisks		The setting information of quorum disks.
	Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
	Id	Indicates the ID of a global-active device quorum disk whose Read Response Guaranteed Time When Quorum Disk Blocked value will be updated.
	ReadResponse GuaranteedTime	Indicates the updated value of Read Response Guaranteed Time When Quorum Disk Blocked for global-active device in seconds.

SNMP Descriptions

[SNMP] Edit SNMP Agent

Edit SNMP Agent is output when SNMP alert notification is set with DKCMAIN program version 80-02-42-XX/XX or earlier.

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[SNMP],Edit SNMP Agent,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Install=Disable
+Manager=[(158.214.133.1),(158.214.133.2),(158.214.133.3),
(1:0:0:0:0:0:0:1),(snip)
-(158.214.133.31),(158.214.133.32) ,(AAAA:0:0:0:0:0:0:FFFF)],
Num. of Managers=xx
+Community
=12345678911234567892123456789312345678941234567895123456789612345
56789712345678981234567899123456789012345678911234567892123456789
312345678941234567895
++Trap=[(158.214.133.1),(158.214.133.2),(158.214.133.3),
(1:0:0:0:0:0:0:1),(snip)
-(158.214.133.31),(158.214.133.32) ,(AAAA:0:0:0:0:0:0:FFFF)],
Num. of Traps=xx
(snip)
```

```
+Num. of Communities=xx
+System Group(Name,Contact,Location)
={12345678911234567892123456789312345678941234567895123456789612
34567897123456789812345678991234567890123456789112345678921234567
78,
-12345678911234567892123456789312345678941234567895123456789612345
45678971234567898123456789912345678901234567891123456789212345678
89312345678941234567895123456789612345,
-12345678911234567892123456789312345678941234567895123456789612345
45678971234567898123456789912345678901234567891123456789212345678
89312345678941234567895123456789612345}
```

Detailed Information

Item	Description
Install	The setting status of SNMP Agent: Enable, Disable
Manager	The IP address of the registered SNMP manager. The IP address divided by periods (.) is an Ipv4 address, and the IP address divided by colons (:) is an Ipv6 address.
Num. of Managers	The number of registered SNMP managers
Community	The registered community name
Trap	The IP address where the trap of community is reported. The IP address divided by periods (.) is an Ipv4 address, and the IP address divided by colons (:) is an Ipv6 address.
Num. of Traps	The number of traps reported
Num. of Communities	The number of registered communities
System Group	The setting of system group information (Name, Contact, and Location).
Name	The nickname of the device set.
Contact	The setting name of the system administrator.
Location	The setting location of the device set

[SNMP] UpdateSnmpSetting

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[SNMP],UpdateSnmpSetting,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{SnmpSetting{
  SnmpAvailable=true,SnmpVersion=v3,
  V1V2c{
    TrapSettings[]{
      CommunityName=null,
      Managers[]{
        IpType=null,Ipv4Address=null,Ipv6Address=null}},
    RequestSettings[]{
```

```
    CommunityName=null,ManagerAvailable=null,
    Managers[]{
      IpType=null,Ipv4Address=null,Ipv6Address=null}}},
V3{
  TrapSetting{
    Managers[0]{
      IpType=Ipv4,Ipv4Address=10.10.10.0,Ipv6Address=null,
      SecuritySetting{
        SecurityName="xxxxx",SecurityLevel=authPriv,
        AuthProtocol=SHA,PrivProtocol=AES}}},
  RequestSetting{
    SecuritySettings[0]{
      SecurityName="xxxx",SecurityLevel=authPriv,AuthProtocol=SHA,
      PrivProtocol=AES}}},
SystemGroup{
  SystemName="xxxxx",SystemContact="xxxxx",
  SystemLocation="xxxxx"}}}
```

Detailed Information

Item	Description
SnmpSetting	The setting information of SNMP
SnmpAvailable	The setting status of SNMP Agent true: Enabled, false: Disabled
SnmpVersion	The version of SNMP protocol
V1V2c	For SNMP protocol v1 or v2c, the setting information is output. For SNMP protocol v3, "null" is output as the setting information of V1V2c.
TrapSettings[x]	The setting information of SNMP trap destinations
CommunityName	The community name
Managers[x]	The information of SNMP Managers
IpType	The type of IP address (IPv4 or IPv6)
Ipv4Address	IPv4 address For IPv6, "null" is output.
Ipv6Address	IPv6 address For IPv4, "null" is output.
RequestSettings[x]	The information of request authentication settings
CommunityName	The community name
ManagerAvailable	Indicates SNMP Managers that are allowed to perform request operations true: The SNMP Manager with the specified IP address is allowed. false: All SNMP Managers are allowed.
Managers[x]	The information of SNMP Managers
IpType	The type of IP address (IPv4 or IPv6)

Item	Description
Ipv4Address	IPv4 address For IPv6, "null" is output.
Ipv6Address	IPv6 address For IPv4, "null" is output.
V3	For SNMP protocol v3, the setting information is output. For SNMP protocol v1 or v2c, "null" is output as the setting information of V3.
TrapSetting	The setting information of SNMP trap destinations
Managers[x]	The information of SNMP Managers
IpType	The type of IP address (IPv4 or IPv6)
Ipv4Address	IPv4 address For IPv6, "null" is output.
Ipv6Address	IPv6 address For IPv4, "null" is output.
SecuritySetting	The setting information of security
SecurityName	The user name used for SNMP trap notification
SecurityLevel	Indicates security levels noAuthNoPriv: Both Authentication and Encryption are disabled. authNoPriv: Authentication is enabled and Encryption is disabled. authPriv: Both Authentication and Encryption are enabled.
AuthProtocol	Indicates authentication protocol (SHA or MD5) If Authentication is disabled, "null" is output.
PrivProtocol	Indicates encryption protocol (AES or DES) If Encryption is disabled, "null" is output.
RequestSetting	The information of request authentication settings
SecuritySettings[x]	The setting information of security
SecurityName	User names whose requests are accepted
SecurityLevel	Indicates security levels noAuthNoPriv: Authentication and Encryption are disabled. authNoPriv: Authentication is enabled and Encryption is disabled. authPriv: Both Authentication and Encryption are enabled.
AuthProtocol	Indicates authentication protocol (SHA or MD5) If Authentication is disabled, "null" is output.

Item	Description
PrivProtocol	Indicates encryption protocol (AES or DES) If Encryption is disabled, "null" is output.
SystemGroup	The setting information of the system group
SystemName	The storage system name
SystemContact	The system administrator and related information
SystemLocation	The location where the storage system is installed

Server Priority Manager Descriptions

[SPM] Change SPMGrp

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[SPM],Change SPMGrp,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{SPM Group,Priority,UpperLimit,Mode}
=[{XXXXXXXXXXXXXXXX,Non-Prio,XXXXXXXX,IOPS}],Num. of SPM Groups=1
```

Detailed Information

Item	Description
SPM Group	An SPM group name
Priority	An attribute specified to an HBA (host bus adapter) in the SPM group after the change Prio: a prioritized WWN Non-Prio: a non-prioritized WWN
Upper Limit	An upper limit when you specify Non-Prio When you specify Prio, this information is not output.
Mode	The type of rate when you specify an upper limit. IOPS: the I/O rate KB/s: the transfer rate When you specify Prio, this information is not output.
Num. of SPM Groups	The number of SPM groups whose settings are changed

Note:

- When the attribute of the host bus adapter in the SPM group changes from a prioritized WWN to a non-prioritized WWN, "Non-Prio" is output to Priority and "0" is output to Upper limit respectively.

- If multiple changes in settings such as Priority and Upper limit are made in succession and then **Apply** is clicked at the end of the operation, these set values are output one by one in the order they were configured.

[SPM] Clear SPM Info

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[SPM],Clear SPM Info,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
```

[SPM] Default Set

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[SPM],Default Set,Kind=WWN,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
```

Basic Information

Parameter	Description
Kind=Port	Indicates that settings in the Port tab are initialized.
Kind=WWN	Indicates that settings in the WWN tab are initialized.

[SPM] Set All Prio Port

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[SPM],Set All Prio Port,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{AllPriority,Threshold,Mode}={Enable,XXXXXXXX,IOPS}
```

Detailed Information

Item	Description
AllPriority	Settings in the All Thresholds field in the Port tab Enable: All Thresholds is configured. Disable: Settings in the All Thresholds field are canceled.
Threshold	A configured value in the All Thresholds field. This information is output only when All Thresholds is configured.
Mode	The type of rate for All Thresholds IOPS: the I/O rate KB/s: the transfer rate

Item	Description
	This information is output only when All Thresholds is configured.

[SPM] Set All Prio WWN

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[SPM],Set All Prio WWN,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{AllPriority,Threshold,Mode}={Enable,XXXXXXXX,IOPS}
```

Detailed Information

Item	Description
AllPriority	Settings in the All Thresholds field in the WWN tab Enable: All Thresholds is configured. Disable: Settings in the All Thresholds field are canceled.
Threshold	A configured value in the All Thresholds field. This information is output only when All Thresholds is configured.
Mode	The type of rate for All Thresholds IOPS: the I/O rate KB/s: the transfer rate This information is output only when All Thresholds is configured.

[SPM] Set Ctrl Kind

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[SPM],Set Ctrl Kind,Kind=WWN,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
```

Basic Information

Parameter	Description
Kind=Port	Indicates that you switched a definition of the server priority by a port without configuring All Thresholds.
Kind=All Port	Indicates that you switched a definition of the server priority by a port with configuring All Thresholds.
Kind=WWN	Indicates that you switched a definition of the server priority by a WWN. This information is output whichever All Thresholds is configured or not.

[SPM] Set Prio Port

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[SPM],Set Prio Port,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Port,Priority,Use,Threshold/Upper Limit,Mode}
=[{1A,Non-Prio,Enable,XXXXXXXX,IOPS}],Num. of Ports=1
```

Detailed Information

Item	Description
Port	A name of the port
Priority	An attribute specified to the port Prio: a prioritized port Non-Prio: a non-prioritized port
Use	When the port is a prioritized port, this information indicates whether a threshold is specified or not. When the port is a non-prioritized port, this information indicates whether an upper limit is specified or not. Enable: specified Disable: not specified
Threshold/Upper Limit	When the port is a prioritized port, this information indicates the threshold. When the port is a non-prioritized port, this information indicates the upper limit. This information is output only when a threshold or an upper limit is specified.
Mode	The type of rate for the threshold or the upper limit IOPS: the I/O rate KB/s: the transfer rate This information is output only when a threshold or an upper limit is specified.
Num. of Ports	The number of ports whose settings are changed

[SPM] Set Prio WWN

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[SPM],Set Prio WWN,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{WWN,Priority,Upper Limit,Mode}
=[{0xXXXXXXXXXXXXXXXX,Non-Prio,XXXXXXXX,IOPS}],Num. of WWNs=1
```

Detailed Information

Item	Description
WWN	A WWN of an HBA A WWN is a 16-digit number in the hexadecimal format.
Priority	An attribute specified to the HBA Prio: a prioritized WWN Non-Prio: a non-prioritized WWN
Upper Limit	When the WWN is a non-prioritized WWN, this information indicates the upper limit. When the WWN is a prioritized WWN, this information is not output.
Mode	The type of rate for the upper limit IOPS: the I/O rate KB/s: the transfer rate This information is not output when the WWN is a prioritized WWN.
Num. of WWNs	The number of WWNs of HBAs whose settings are changed

Note:

- When the attribute of the host bus adapter changes from a prioritized WWN to a non-prioritized WWN, "Non-Prio" is output to Priority and "0" is output to Upper limit respectively.
- If multiple changes in settings such as Priority and Upper limit are made in succession and then **Apply** is clicked at the end of the operation, these set values are output one by one in the order they were configured.

[SPM] SPMGrp Del/Chg

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[SPM],SPMGrp Del/Chg,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Mode,SPM Group,Change Name}
=[{Update,XXXXXXXXXXXXXXXX,XXXXXXXXXXXXXXXX}],
Num. of SPM Groups=1
```

Detailed Information

Item	Description
Mode	An executed operation Delete: Deleted an SPM group. Update: Changed an SPM name.
SPM Group	An SPM group name where the operation is executed
Change Name	An SPM group name after the change This information is output only when an SPM group name is changed.

Item	Description
Num. of SPM Groups	The number of SPM groups that are deleted or whose names are changed

[SPM] Update Port WWN

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[SPM],Update Port WWN,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Mode,WWN,SPM Name,Priority}
={Add WWN,0xXXXXXXXXXXXXXXXX,XXXXXXXXXXXXXXXX,Non-Prio},
++Port=[1A,3A],Num. of Ports=2,
-Num. of WWNs=1
```

Detailed Information

Item	Description
Mode	An executed operation Add WWN: Added a WWN (an HBA is monitored). Delete WWN: Deleted a WWN (an HBA is not monitored).
WWN	An added or deleted WWN A WWN is a 16-digit number in the hexadecimal format.
SPM Name	An SPM name for an added or deleted HBA
Priority	An attribute specified to the HBA Prio: a prioritized WWN Non-Prio: a non-prioritized WWN This information is output only when a WWN (HBA) is added.
Port	A name of the port where the HBA is added
Num. of Ports	The number of ports where the HBA is added
Num. of WWNs	The number of added or deleted WWNs

[SPM] Update SPMGrp

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[SPM],Update SPMGrp,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{UpdateMode,SPM Group,Priority,Upper Limit,Mode}
=[{Add New Group,XXXXXXXXXXXXXXXX,Non-Prio,XXXXXXXX,IOPS},
++WWN=[0xXXXXXXXXXXXXXXXX,0xXXXXXXXXXXXXXXXX],Num. of WWNs=2],
+Num. of SPM Group=1
```

Detailed Information

Item	Description
Update Mode	An executed operation Add New Group: Added a new SPM group. Add WWN: Added an HBA to the SPM group Delete WWN: Deleted an HBA from the SPM group
SPM Group	An SPM group name
Priority	An attribute specified to the HBA Prio: a prioritized WWN Non-Prio: a non-prioritized WWN This attribute is applied to all HBAs in the SPM group. This information is output only when you add a new SPM group.
Upper Limit	When an attribute specified to the SPM group is Non-Prio, this information indicates an upper limit of the HBAs in the SPM group. This information is output only when you add a new SPM group.
Mode	The type of rate when you specify an upper limit. IOPS: the I/O rate KB/s: the transfer rate This information is output only when you add a new SPM group.
WWN	WWNs of HBAs in the SPM group A WWN is a 16-digit number in the hexadecimal format. All WWNs are output for this item. You can add up to 32 WWNs to an SPM group.
Num. of WWNs	The number of WWNs of added or deleted HBAs
Num. of SPM Group	The number of SPM groups whose settings are changed

[SPM] Update WWN

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[SPM],Update WWN,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Update Mode,WWN,Change SPM Name,Change WWN}
={Change WWN,0xXXXXXXXXXXXXXXXX,,0xXXXXXXXXXXXXXXXX},
Num. of WWNs=1
```

Detailed Information

Item	Description
Update Mode	An executed operation Change WWN: Changed an HBA.

Item	Description
	Change Nickname: Changed an SPM name for a WWN
WWN	A WWN of the HBA A WWN is a 16-digit number in the hexadecimal format. When you changed an HBA, the WWN before the change is output.
Change SPM Name	An SPM name for the HBA When you changed an SPM name for the HBA, the SPM name after the change is output.
Change WWN	An WWN of the HBA after the change This information is output only when an HBA is changed.
Num. of WWNs	The number of HBAs whose settings are changed

Spreadsheet Descriptions

[Spreadsheet] CflSet End

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[Spreadsheet],CflSet End,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
```

[Spreadsheet] CflSet Start

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[Spreadsheet],CflSet Start,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Input,Output}={C:\Set_IN.spd,C:\Set_OUT.spd}
```

Detailed Information

Parameter	Description
Input	Indicates the name of the input file
Output	Indicates the name of the output file

Universal Volume Manager Descriptions

[UVM] Add External Volumes

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[UVM],Add External Volumes,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Vendor,Product,Serial,VolumeID1,VolumeID2,Device,
Capa(blocks),ExGroup,PathGroup,CLPR,Emulation,Cache,Inflow,
MP Blade ID,LoadBalanceMode,ALUA Permitted,Data Direct Mapping,
Result}={HITACHI,9500V,28528,0001,
00000000000000000000000000000000000000000000000000000000000000000000,
DF600F,4294967296,E1-1,1,0,OPEN-V,Enable,Disable,Auto,
Extended Round-robin,Enable,Enable,Normal end}
++{Port,WWN,IP Address,iSCSI Target Name,LUN,PathResult}=
[{1A,50560E8000C3E211,-,-,1,Normal end},
{2A,-,192.168.0.136,
iqn.1994-04.jp.co.hitachi:rsd.r80.t.00001.2b000,1,Normal end},
{3A,-,FE80:0:0:0:0:0:0:1,
iqn.1994-04.jp.co.hitachi:rsd.r80.t.00001.3b000,1,Normal end},
{4A,-,0:0:0:0:0:FFFF:192.168.0.137,
iqn.1994-04.jp.co.hitachi:rsd.r80.t.00001.4b000,1,Normal end}],
Num. of Paths=4
++{LDKC:CU:LDEV,LDEVCapa(blocks),SSID,LDEV MP Blade ID,LDEVResult}
=[{0x00:0x00:0x00,96000,0x00D8,Auto,Normal end},
{0x00:0x00:0x01,96000,0x00D8,Auto,Normal end}],Num. of LDEVs=2
+{Vendor,Product,Serial,VolumeID1,VolumeID2,Device,
Capa(blocks),ExGroup,PathGroup,CLPR,Emulation,Cache,Inflow,
MP Blade ID,LoadBalanceMode,ALUA Permitted,Data Direct Mapping,
Result}={HITACHI,9500V,28528,0001,
00000000000000000000000000000000000000000000000000000000000000000000,
DF600F,4294967296,E1-1,1,0,OPEN-V,Enable,Disable,Auto,
Extended Round-robin,Enable,Disable,Normal end}
++{Port,WWN,IP Address,iSCSI Target Name,LUN,PathResult}=
[{1A,50560E8000C3E211,-,-,2,Normal end},
{2A,-,192.168.0.136,
iqn.1994-04.jp.co.hitachi:rsd.r80.t.00001.2b000,2,Normal end}],
{3A,-,FE80:0:0:0:0:0:0:1,
iqn.1994-04.jp.co.hitachi:rsd.r80.t.00001.3b000,2,Normal end},
{4A,-,0:0:0:0:0:FFFF:192.168.0.137,
iqn.1994-04.jp.co.hitachi:rsd.r80.t.00001.4b000,2,Normal end}],
Num. of Paths=4
++{LDKC:CU:LDEV,LDEVCapa(blocks),SSID,LDEV MP Blade ID,LDEVResult}
=[{0x00:0x01:0x00,4294967296,0x00D8,Auto,Normal end}],
Num. of LDEVs=1
+Num. of Volumes=2
```

Detailed Information

Item	Description
Vendor	The name of the vendor of the external storage system that the mapped external volume exists

Item	Description
Product	The product name of the external storage system that the mapped external volume exists
Serial	The serial number the external storage system that the mapped external volume exists
VolumeID1	The volume properties of the mapped external volume
VolumeID2	The device ID of the mapped external volume
Device	The device name that the mapped external volume notifies to the host
Capa(blocks)	The capacity of the mapped external volume indicated by blocks
ExGroup	The number of the external volume group and the reference number assigned to the external volume of the mapped external volume. The number on the left of a dash (-) is the external volume number and the number on the right of the dash (-) is the reference number of the group.
PathGroup	The path group number of the mapped external volume
CLPR	The CLPR ID of the mapped external volume
Emulation	The emulation type of the mapped external volume
Cache	The cache mode of the mapped external volume Enable: Enabled, Disable: Disabled
Inflow	The inflow control setting of the cache of the mapped external volume. Enable: Enabled, Disable: Disabled
MP Blade ID	MP Blade ID specified for the external volume When an MP Blade ID is specified automatically, "Auto" is output.
LoadBalanceMode	The load balance mode of the mapped external volume Normal Round-robin, Extended Round-robin, or Disable will appear.
ALUA Permitted	The ALUA permitted of the mapped external volume Enable: Enabled, Disable: Disabled
Data Direct Mapping	Indicates the setting status of Data Direct Mapping Enable: Data Direct Mapping is enabled. Disable: Data Direct Mapping is disabled.
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Port	The port name of the external port of the local storage system
WWN	For connection through the fibre channel port, the WWN of the target port on the external storage system is indicated. For connection through the iSCSI port, a hyphen (-) is output.

Item	Description
IP Address	For connection through the iSCSI port, the IP address of the iSCSI port on the external storage system is indicated. For connection through the fibre channel port, a hyphen (-) is output.
iSCSI Target Name	For connection through the iSCSI port, the iSCSI target name on the external storage system is indicated. For connection through the fibre channel port, a hyphen (-) is output.
LUN	The LUN of the external volume
Num. of Paths	The number of mapping path (Port-WWN-LUN) configured
PathResult	The result of attempting to create an external path. If the path is created normally, the audit log includes the following: PathResult: Normal end If the path is not created, the audit log includes this: PathResult: Error(xxxx-yyyyy): Abnormal end where xxxx is the Part code and yyyyy is the Error code
LDKC:CU:LDEV	The LDKC number, CU, and LDEV number of the LDEVs in the mapped external volume. The number on the left of the colon is an LDKC number, the number between the colons is a CU number, and the number on the right of the colon is an LDEV number
LDEVCapa(blocks)	The capacity of LDEVs in the mapped external volumes indicated by blocks
SSID	The SSID
LDEV MP Blade ID	MP Blade ID specified for the LDEV. When an MP Blade ID is specified automatically, "Auto" is output.
LDEVResult	The result of attempting to create an external path. If the LDEV is created normally, the audit log includes the following: LDEVResult: Normal end If the LDEV is not created, the audit log includes this: LDEVResult: Error(xxxx-yyyyy): Abnormal end where xxxx is the Part code and yyyyy is the Error code
Num. of LDEVs	The number of LDEVs in the mapped external volumes
Num. of Volumes	The number of mapped external volumes

[UVM] Assign MP Blade

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[UVM],Assign MP Blade,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Group,MP Blade ID,Result}=[{E1-1,0x0,Normal end},
{E1-2,0x1,Normal end},{E1-3,0x2,Normal end}],Num. of Groups=3
```

Detailed Information

Item	Description
Group	The external volume number for the configured external volumes
MP Blade ID	The MP Blade ID assigned to the external volume
Result	The result of operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of Groups	The number of groups of configured external volumes

[UVM] Delete ES VOLs

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[UVM],Delete ES VOLs,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{ExGroup,Mode,Result}=[{E1-1,Force,Normal end},{E1-2,Force,
Normal end},{E1-3,Normal,Normal end}],Num. of Volumes=3
```

Detailed Information

Item	Description
ExGroup	The number of the external volume group and the reference number assigned to the external volume of the external volume that the mapping has been released. The number on the left of a dash (-) is the external volume number and the number on the right of the dash (-) is the reference number of the group.
Mode	The mode of execution when mapping was released Normal: normal execution. Force: forcible execution
Result	The result of operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of Volumes	The number of volumes in the external volumes that mapping has been released

[UVM] Disconnect ES Paths

This logged information indicates that this Disconnect External Paths operation was only requested but not completed.

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[UVM],Disconnect ES Paths,,Normal end,
```

```
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Port,WWN,IP Address,iSCSI Target Name,Result}=
[{1A,50560E8000C3E211,-,-,Normal end},
{2A,-,192.168.0.136,
iqn.1994-04.jp.co.hitachi:rsd.r80.t.00001.2b000,Normal end},
{3A,-,FE80:0:0:0:0:0:0:1,
iqn.1994-04.jp.co.hitachi:rsd.r80.t.00001.3b000,Normal end}],
Num. of Paths=3
```

Detailed Information

Item	Description
Port	The port name of the external port of the local storage system
WWN	For connection through the fibre channel port, the WWN of the target port on the external storage system is indicated. For connection through the iSCSI port, a hyphen (-) is output.
IP Address	For connection through the iSCSI port, the IP address of the iSCSI port on the external storage system is indicated. For connection through the fibre channel port, a hyphen (-) is output.
iSCSI Target Name	For connection through the iSCSI port, the iSCSI target name on the external storage system is indicated. For connection through the fibre channel port, a hyphen (-) is output.
Result	The result of operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of Paths	The number of mapping paths that has been disconnected.

[UVM] Disconnect ES VOLs

If this operation is performed from Device Manager - Storage Navigator, this logged information indicates that the Disconnect External Volumes operation was only requested but not completed. However, if this operation is performed from the External API (if this logged information appears between the CflSet Start operation and the CflSet End operation), this logged information indicates that the Disconnect External Volumes operation was completed.

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[UVM],Disconnect ES VOLs,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,Seq.=xxxxxxxxxx
+{Group,Result}=[{E1-1,Normal end},{E1-2,Normal end},
{E1-3,Normal end},{E1-4,Normal end}],Num. of Groups=4
```

Detailed Information

Item	Description
Group	The group number of the disconnected external volume
Result	The result of operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code
Num. of Groups	The number of external volume groups that contain the disconnected external volume

[UVM] Edit ES Path Config

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[UVM],Edit ES Path Config,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{ExGroup,PathGroup,Result}={E1-1,1,Normal end}
++{Port,WWN,IP Address,iSCSI Target Name,LUN,PathResult}=
[{1A,50560E8000C3E211,-,-,1,Normal end},
{2A,-,192.168,0,136,
iqn.1994-04.jp.co.hitachi:rsd.r80.t.00001.2b000,1,Normal end},
{3A,-,FE80:0:0:0:0:0:0:1,
iqn.1994-04.jp.co.hitachi:rsd.r80.t.00001.3b000,1,Normal end},
{4A,-,0:0:0:0:0:FFFF:192.168.0.137,
iqn.1994-04.jp.co.hitachi:rsd.r80.t.00001.4b000,1,Normal end}],
Num. of Paths=4
+{ExGroup,PathGroup,Result}={E1-2,1,Normal end}
++{Port,WWN,IP Address,iSCSI Target Name,LUN,PathResult}=
[{1A,50560E8000C3E211,-,-,2,Normal end},
{2A,-,192.168,0,136,
iqn.1994-04.jp.co.hitachi:rsd.r80.t.00001.2b000,2,Normal end},
{3A,- FE80:0:0:0:0:0:0:1,
iqn.1994-04.jp.co.hitachi:rsd.r80.t.00001.3b000,2,Normal end},
{4A,-,0:0:0:0:0:FFFF:192.168.0.137,
iqn.1994-04.jp.co.hitachi:rsd.r80.t.00001.4b000,2,Normal end}],
Num. of Paths=4
+Num. of Volumes=2
```

Detailed Information

Item	Description
ExGroup	The number of the external volume group and the reference number assigned to the external volume of the external volume that the mapping path configuration has been changed. The number on the left of a dash (-) is the external volume number and the number on the right of the dash (-) is the reference number of the group.
PathGroup	The path group number of the external volume that the mapping path configuration has been changed
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end

Item	Description
	xxxx: Part code, *yyyyy*: Error code
Port	The port name of the external port of the local storage system
WWN	For connection through the fibre channel port, the WWN of the target port on the external storage system is indicated. For connection through the iSCSI port, a hyphen (-) is output.
IP Address	For connection through the iSCSI port, the IP address of the iSCSI port on the external storage system is indicated. For connection through the fibre channel port, a hyphen (-) is output.
iSCSI Target Name	For connection through the iSCSI port, the iSCSI target name on the external storage system is indicated. For connection through the fibre channel port, a hyphen (-) is output.
LUN	The LUN of the external volume
PathResult	The result of editing the path Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of Paths	The number of mapping path (Port-WWN-LUN) set
Num. of Volumes	The number of external volumes that the mapping path configuration has been changed

[UVM] Edit ES VOLs

Example 1: Change the cache mode

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[UVM],Edit ES VOLs,CacheMode,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Group,Result}
=[{E1-1,Enable,Normal end},{E1-2,Enable,Normal end},
{E1-3,Enable,Normal end},{E1-4,Enable,Normal end}],
Num. of Groups=4
```

Example 2: Set the cache inflow control

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[UVM],Edit ES VOLs, InflowControl,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Group,Mode,Result}=[{E1-1,Enable,Normal end},
{E1-2,Enable,Normal end},{E1-3, Enable,Normal end},
{E1-4, Enable,Normal end}],Num. of Groups=4
```

Basic Information for Example 1 and 2

Parameter	Description
Cachemode	The cache mode is changed.
InflowControl	The cache inflow control is set.

Detailed Information for Example 1 and 2

Item	Description
Group	External volume group number for the executed setting operation
Mode	Whether the setting is enabled or disabled Enable: Enabled, Disable: Disabled
Result	The result of operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of Groups	The number of external volumes groups configured

Example 3: Changing a load balance mode

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[UVM],Edit ES VOLs,LoadBalanceMode,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Group,Mode,Result}=[{E1-1,Normal Round-robin,Normal end},
{E1-2,Normal Round-robin,Normal end}],Num. of Groups=2
```

Basic Information for Example 3

Parameter	Description
LoadBalanceMode	The load balance mode is changed.

Detailed Information for Example 3

Item	Description
Group	External volume group number for the executed setting operation
Mode	The load balance mode after the change Normal Round-robin, Extended Round-robin, or Disable will appear.
Result	The result of operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of Groups	The number of external volumes groups configured

Example 4: Changing ALUA Permitted

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[UVM],Edit ES VOLs,ALUA Permitted,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Group,ALUA Permitted,Result}=[{E1-1,Enable,Normal end},
{E1-2,Enable,Normal end}],Num. of Groups=2
```

Basic Information for Example 4

Parameter	Description
ALUA Permitted	The ALUA Permitted is changed.

Detailed Information for Example 4

Item	Description
Group	The external volume group number of the external volume on which the setting is performed
ALUA Permitted	The ALUA permitted after the change Enable: enable, Disable: disable
Result	The result of operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of Groups	The number of external volume groups on which the setting is performed

[UVM] Edit External WWNs / iSCSI Targets

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[UVM],Edit External WWNs / iSCSI Targets,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{WWN,IP Address,iSCSI Target Name,I/O-TOV,Quedepth,LinkDown,Result}
=[{50060E8000C3E214,-,-,15,8,180,Normal end},
{-,192.168.0.136,iqn.1994-04.jp.co.hitachi:rsd.r80.t.00001.2b000,
15,8,180,Normal end},
{-,FE80:0:0:0:0:0:0:1,iqn.1994-04.jp.co.hitachi:rsd.r80.t.
00001.3b000,
15,8,180,Normal end}],Num. of WWNs=3
```

Detailed Information

Item	Description
WWN	For connection through the fibre channel port, the WWN of the target port on the external storage system is indicated. For connection through the iSCSI port, a hyphen (-) is output.

Item	Description
IP Address	For connection through the iSCSI port, the IP address of the iSCSI port on the external storage system is indicated. For connection through the fibre channel port, a hyphen (-) is output.
iSCSI Target Name	For connection through the iSCSI port, the iSCSI target name on the external storage system is indicated. For connection through the fibre channel port, a hyphen (-) is output.
I/O-TOV	The I/O time over value setting
Quedepth	The Quedepth value (the number of commands issuable)
LinkDown	The Blocked Path Monitoring value
Result	The result of operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of WWNs	The number of WWNs setting of the external storage system

[UVM] Merge ES Path Grps

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[UVM],Merge ES Path Grps,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{PathGroup,TargetPathGroup,Result}
=[{1,2,Normal end},{1,3,Normal end},{11,12,Normal end}],
Num. of PathGroups=3
```

Detailed Information

Item	Description
PathGroup	The path group ID of the original path group
TargetPathGroup	The path group ID of the path group merged into the original path group
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code
Num. of PathGroups	The number of PathGroups to be merged

[UVM] ProfileUpgrade

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,[UVM],
ProfileUpgrade,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Config No.,Mode,Result}=[{10,0x00,Normal end},
{20,0x00,Normal end}],Num. of Profiles=2
```

Detailed Information

Item	Description
Config No.	The configuration number of the profile operated setting
Mode	The parameter of the execution mode on the setting operation
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of Profiles	The number of Profiles operated setting

[UVM] Reconnect ES Paths

This logged information indicates that this Reconnect External Paths operation was only requested but not completed.

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[UVM],Reconnect ES Paths,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Port,WWN,IP Address,iSCSI Target Name,Result}=
[{1A,50060E8000C3E214,-,-,Normal end},
{2A,-,192.168,0,136,
iqn.1994-04.jp.co.hitachi:rsd.r80.t.00001.2b000,Normal end},
{3A,-,FE80:0:0:0:0:0:0:1,
iqn.1994-04.jp.co.hitachi:rsd.r80.t.00001.3b000,Normal end}],
Num. of Paths=3
```

Detailed Information

Item	Description
Port	The port name of the external port of the local storage system
WWN	For connection through the fibre channel port, the WWN of the target port on the external storage system is indicated. For connection through the iSCSI port, a hyphen (-) is output.
IP Address	For connection through the iSCSI port, the IP address of the iSCSI port on the external storage system is indicated.

Item	Description
	For connection through the fibre channel port, a hyphen (-) is output.
iSCSI Target Name	For connection through the iSCSI port, the iSCSI target name on the external storage system is indicated. For connection through the fibre channel port, a hyphen (-) is output.
Result	The result of operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of Paths	The number of mapping paths that path status has been checked.

[UVM] Reconnect ES VOLs

If this operation is performed from Device Manager - Storage Navigator, this logged information indicates that the Reconnect External Volumes operation was only requested but not completed. However, if this operation is performed from the External API (if this logged information appears between the CflSet Start operation and the CflSet End operation), this logged information indicates that the Reconnect External Volumes operation was completed.

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[UVM],Reconnect ES VOLs,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Group,Result}=[{E1-1,Normal end},{E1-2,Normal end},
{E1-3,Normal end},{E1-4,Normal end}],Num. of Groups=4
```

Detailed Information

Item	Description
Group	The group number of the external volume resumed
Result	The result of operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code
Num. of Groups	The number of external volumes resumed

[UVM] Split ES Path Grp

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[UVM],Split ES Path Grp,,Normal end,
```

```
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{PathGroup,NewPathGroup,ExGroup,Result}
=[{1,11,E1-11,Normal end},{1,12,E1-21,Normal end},
{2,21,E2-11,Normal end}],Num. of Volumes=3
```

Detailed Information

Item	Description
PathGroup	The path group ID of the original path group
NewPathGroup	The path group ID of a newly created path group
ExGroup	The external volume group number of the external volumes moved to the new path group, and the sequential number of the external volume. The format is "external volume group number-sequential number of the group".
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of Volumes	The number of external volumes moved to the new path group

Volume Migration Descriptions

For information on using Volume Migration, contact the Hitachi Data Systems Support Center.

[VM] Delete All Histories

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[VM],Delete All Histories,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
```

[VM] Del Migration Plans

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[VM],Del Migration Plans,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{SourceVolume,TargetVolume,OwnerID,Result}
=[{0x00:0x00:0x00,0x00:0x00:0x01,0xFF,Normal end},
{0x00:0x00:0x02,0x00:0x00:0x03,0xFF,Error(xxxx-yyyyy)},
{0x00:0x00:0x04,0x00:0x00:0x05,-,Normal end},
{0x00:0x00:0x06,0x00:0x00:0x07,-,Error(xxxx-yyyyy)}],
Num. of Plans=4
```

Detailed Information

Item	Description
SourceVolume	The logical volume ID of the migration source. The number on the left of the colon is an LDKC number, the number between the colons is a CU number, and the number on the right of the colon is an LDEV number.
TargetVolume	The logical volume ID of the migration target. The number on the left of the colon is an LDKC number, the number between the colons is a CU number, and the number on the right of the colon is an LDEV number.
OwnerID	The application by which a migration plans to be deleted is set. 0x00: Device Manager - Storage Navigator 0x01: Command Control Interface 0xFF: Tiered Storage Manager A hyphen (-) is output, no matter which application is used for a migration plan to be set, if the plan is deleted from the Volume Migration window.
Result	The result of operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end, Not Execute: Not executed *where xxxx*: Part code, *yyyyy*: Error code
Num. of Plans	The number of migration plans deleted.

[VM] Migrate Volumes

This logged information indicates that the migration was only requested but not completed.

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[VM],Migrate Volumes,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{SourceVolume,TargetVolume,OwnerID,Migration Type,Result}
=[{0x00:0x00:0x00,0x00:0x00:0x01,0x00,Nondisruptive Migration,
Normal end},
{0x00:0x00:0x02,0x00:0x00:0x03,0xFF,Normal,Error(xxxx-yyyyy)},
{0x00:0x00:0x04,0x00:0x00:0x05,0x00,Normal,Normal end},
{0x00:0x00:0x06,0x00:0x00:0x07,0xFF,Nondisruptive Migration,
Error(xxxx-yyyyy)}],Num. of VOLs=4
```

Detailed Information

Item	Description
SourceVolume	The logical volume ID of the migration source. The number on the left of the colon is an LDKC number, the number between the colons

Item	Description
	is a CU number, and the number on the right of the colon is an LDEV number.
TargetVolume	The logical volume ID of the migration target. The number on the left of the colon is an LDKC number, the number between the colons is a CU number, and the number on the right of the colon is an LDEV number. This value is output only when the migration plan is set.
OwnerID	The application by which a migration plans is set. 0x00: Device Manager - Storage Navigator 0x01: Command Control Interface 0xFF: Tiered Storage Manager
Migration Type	The migration type of the migration plan. Nondisruptive Migration: Nondisruptive Migration Normal: Normal
Result	The result of operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end, Not Execute: Not executed *where xxxx*: Part code, *yyyyy*: Error code
Num. of VOLs	The number of migration volumes.

Virtual Partition Manager Descriptions

[VPM] Edit CLPR

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[VPM],Edit CLPR,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+CLPR=0:CLPR0,Total Cache Size=15360,Resident Cache Size=0,
Num. of Resident Extents=16384
++PG=[1-1,1-2,1-3,1-4],Num. of PGs=4
+Num. of CLPRs=1
```

Detailed Information

Item	Description
CLPR	The CLPR ID and the CLPR name
Total Cache Size	The cache capacity setting. The unit is megabyte (MB).
Resident Cache Size	The Cache Residency capacity setting. The unit is megabyte (MB).

Item	Description
Num. of Resident Extents	The number of Cache Residency areas
PG	The parity group number assigned to CLPR E1-1: In the case of an external volume V1-1: In the case of a virtual volume X1-1: In the case of a Dynamic Provisioning volume
Num. of PGs	The number of parity groups assigned to CLPR
Num. of CLPRs	The number of CLPRs configured

Volume Shredder Descriptions

[VS] Abort Shredding

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[VS],Abort Shredding,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+OwnerID=0
```

Detailed Information

Item	Description
OwnerID	The owner ID 0: Indicates Device Manager - Storage Navigator 0xXX: Owner ID is expressed in two hexadecimal digits.

[VS] End Shredding

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,<system>,,,[VS],
End Shredding,,Normal end,,Seq.=xxxxxxxxxx
+{Times,Result}
=[{1,Normal},{2,Normal},{3,Normal}],Num. of Data=3
```

Detailed Information

Item	Description
Times	The order of the shredding processes. A number from 1 to 8 is displayed.
Result	The result of the shredding processes.

Item	Description
	Normal: Normal end. Failed: Abnormal end. Aborted: Operation aborted. Not executed: Not executed. Data transfer error: An error occurred while outputting the result to the file. Data verify error: The error occurred in verifying the data. No data assigned: No data.
Num. of Data	The number of shredding processes

[VS] Shred LDEVs

This logged information indicates that the Shredding operation was only requested but not completed.

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[VS],Shred LDEVs,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+OwnerID=0
+{Data, Output File}
=[{0xffff,Disable},{Random,Disable},{0x00,Enable}],
Num. of Data=3
+Output LDEV=[0x00:0x00:0x00,0x00:0x00:0x01,0x00:0x00:0x02],
Num. of LDEVs=3
+Shred LDEV=[0x00:0x00:0x00,0x00:0x00:0x01,0x00:0x00:0x02],
Num. of LDEVs=3
```

Detailed Information

Item	Description
OwnerID	The owner ID 0: Indicates Device Manager - Storage Navigator 0xXX: Owner ID is expressed in two digits of the hexadecimal format
Data	The shredding data pattern Random: Random, 0xXXXX: Define
Output File	Whether the result of shredding is output to the file Disable: No output, Enable: Output
Num. of Data	The number of shredding data patterns
Output LDEV	Indicates LDEVs whose shredding results are output to the file
Num. of LDEVs	The number of target LDEVs of Data Output
Shred LDEV	The LDEV to be shredded
Num. of LDEVs	The number of LDEVs to be shredded

Compatible XRC Descriptions

[XRC] Set XRC Option

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[XRC],Set XRC Option,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{CLPR,LV2 THD(%),Block Option,Donot Block,LV1 Sleep,
Sleep Time(ms),LV1 SIM,LV2 Suspend}
=[{00,50,Cache,Disable,Disable,100,Disable,Disable},
-{1,70,Cache,Enable ,Disable,10,Disable,Disable},
-{2,60,Cache,Disable,Disable, 10,Enable ,Enable }],
Num. of CLPRs=32
```

Detailed Information

Item	Description
CLPR	The CLPR ID (0 to 31).
LV2 THD(%)	The Level 2 Threshold (30, 40, 50, 60, and 70). The unit is percent (%).
Block Option	The status of Block Option Volume: Volume Level, Cache: ache Level
Donot Block	The status of Donot Block (Volume Level) Enable: enabled, Disable: disabled
LV1 Sleep	The status of Level 1 Sleep Enable: enabled, Disable: disabled
Sleep Time(ms)	The Sleep Time (10 or 100). The unit is millisecond (msec).
LV1 SIM	The status of Level 1 SIM Enable: enabled, Disable: disabled
LV2 Suspend	The status of Level 2 Suspend Enable: enabled, Disable: disabled
Num. of CLPRs	The number of CLPRs

6

VSP G1000 audit log examples of encryption key operations

This topic provides examples and descriptions of the audit logs produced by data encryption operations. The descriptions are listed alphabetically by function name and operation name. For detailed information on the version numbers in log output examples, see Table 2-3 Format changes for each version number on page 2-10

- ENC Descriptions
- KEK Acquisition Descriptions

ENC Descriptions

[ENC] Add keys to DKC

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[ENC],Add keys to DKC,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Num. of Keys}=[1]
```

Detailed Information

Item	Description
Num. of Keys	The number of created encryption keys

[ENC] Backup Keys

This logged information is output when back up information of encryption keys is created in the storage system in order to externally back up. It does not necessarily mean that the back up information is backed up normally on the file or the key management server even if Normal End is displayed.

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[ENC],Backup Keys,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
```

[ENC] Backup Keys to File

This logged information is output when encryption key information created in the storage system is written to the file. It does not necessarily mean that the encryption key information is backed up on the file normally even if Normal End is displayed.

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[ENC], Backup Keys to File,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
```

[ENC] Backup Keys to Serv

This logged information is output when encryption key information created in the storage system is backed up on the key management server. Even if Normal End is displayed, it merely means that the key management server received the request for backup and does not necessarily means that the encryption key information is backed up normally.

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[ENC], Backup Keys to Serv,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{UUID,Backup Date,Description,Result,Server_Repry}
=[{3E2332580B110E052D13C378866427A218EF1609881BC058FCBCF79FCD
7727C7,2013/07/06 09:20:37,BACK0706,Normal end,-}],
Num. of Keys=1
```

Detailed Information

Item	Description
UUID	The UUID of the encryption key to be backed up on the key management server
Backup Date	The date and time entered into the backup information when an encryption key is backed up on the key management server
Description	The description set in the backup information when an encryption key is backed up on the key management server
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end
Server_Reply	The return value from the key management server A hyphen (-) is displayed unless an error occurred while processing. For details on return values, see the manuals for each key management server.
Num. of Keys	The number of encryption keys to be backed up This value is fixed to "1" because all of the created encryption keys are backed up as one key.

[ENC] Change CEK Status

This information is output to the audit log information file 2, and it is asynchronous with the Device Manager - Storage Navigator operations.

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,,<system>,,,[ENC],
Change CEK Status,,Normal end,,,Seq.=xxxxxxxxxx
+CEK Status=Unassigned
```

Detailed Information

Item	Description
CEK Status	The status of certificate encryption key Unassigned: CEK is not assigned. Assigned: CEK is assigned.

[ENC] Change DEK Status

This information is output to the audit log information file 2, and it is asynchronous with the Device Manager - Storage Navigator operations.

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,,<system>,,,[ENC],
Change DEK Status,,Normal end,,,Seq.=xxxxxxxxxx
+{Device,DEK Status,DEK}=[{HDD000-01,Not Created,0x0000000C},
{HDD001-01,Free,0x0000000E}],Num. of DEKs=2
```

Detailed Information

Item	Description
Device	The device on which events occur to generate this audit log
DEK Status	The status of encryption keys Not Created: An encryption key is not created. Free: An encryption key is not yet assigned and not used. Not Encrypted: The encryption key is created but the device is not encrypted. Encrypted: The encryption key is created and the device is encrypted.
DEK	The key IDs of encryption keys
Num. of DEKs	The number of encryption keys

[ENC] Clear Keys

This information is output to the audit log information file 2, and it is asynchronous with the Device Manager - Storage Navigator operations.

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,,<system>,,,[ENC],
Clear Keys,,Normal end,,,Seq.=xxxxxxxxxx
+DEK={0x00000000,0x00000002,0x00000003},Num. of DEKs=3
```

Detailed Information

Item	Description
DEK	The key IDs of encryption keys
Num. of DEKs	The number of encryption keys

[ENC] Create KEK Dynamic

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[ENC], Create KEK Dynamic,,Normal end,
```

```
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{UUID,Result,Server_Reply}
=[{C53F242C7DCC27CC9698A72413C1C4DC280A757FDF93CED8AEBDF8807A
79A06D,Normal end,-}],Num. of Keys=1
```

Detailed Information

Item	Description
UUID	The UUID of the created encryption key
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end
Server_Reply	The return value from the key management server A hyphen (-) is displayed unless an error occurred while processing. For details on return values, see the manuals for each key management server.
Num. of Keys	The number of created encryption keys

[ENC] Create Keys

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[ENC],Create Keys,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Num. of Keys}=[1]
```

Detailed Information

Item	Description
Num. of Keys	The number of created encryption keys

[ENC] Create Keys

This information is output to the audit log information file 2, and it is asynchronous with the Device Manager - Storage Navigator operations.

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,,<system>,,,[ENC],
Create Keys,,Normal end,,,Seq.=xxxxxxxxxx
+DEK={0x00000000,0x00000002,0x00000003},Num. of DEKs=3
```

Detailed Information

Item	Description
DEK	The key IDs of encryption keys

Item	Description
Num. of DEKs	The number of encryption keys

[ENC] Create Keys On Serv

Example 1: Creating encryption keys

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[ENC], Create Keys On Serv,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{UUID,Tweak_UUID,Result,Server_Reply}
=[{30708B5A94F5BE54DA84E0CB55BD2CFE5ABEBECBD8309B02EB1B71F17F805617,
94DA26FE13EF6196EF15A3CCCD333CD63D6867E57CF5BD5EB3CB9DF2CDE7CE1A,
Normal end,-}],Num. of Keys=1
```

Detailed Information for Example 1

Item	Description
UUID	The UUID of the created encryption key on the key management server A hyphen (-) is displayed when an error occurred while processing.
Tweak_UUID	The UUID of the created encryption key for Tweak on the key management server A hyphen (-) is displayed when an error occurred while processing.
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end
Server_Reply	The return value from the key management server A hyphen (-) is displayed unless an error occurred while processing. For details on return values, see the manuals for each key management server.
Num. of Keys	The number of created encryption keys

Example 2: Creating key encryption keys

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[ENC], Create Keys On Serv,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Key Type,UUID,Result,Server_Reply}
=[{KEK,4365A0465C69FA96DF64C9BBB77122E9AB65D4D6A2E9BBDE5987EAB
86A0FE94E,Normal end,-}],Num. of Keys=1
```

Detailed Information for Example 2

Item	Description
Key Type	The purpose of the use of the created key KEK: key encryption keys (used as a key wrapping key)

Item	Description
UUID	The UUID of the created encryption key on the key management server A hyphen (-) is displayed when an error occurred while processing.
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end
Server_Reply	The return value from the key management server A hyphen (-) is displayed unless an error occurred while processing. For details on return values, see the manuals for each key management server.
Num. of Keys	The number of created keys

[ENC] DEK assign SpareDisk

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[ENC],DEK assign SpareDisk,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
```

[ENC] DEK delete

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[ENC],DEK delete,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
```

[ENC] Delete KEK Dynamic

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[ENC], Delete KEK Dynamic,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{UUID,Result,Server_Reply}=
[{C53F242C7DCC27CC9698A72413C1C4DC280A757FDF93CED8AEBDF8807A79A06D
,Normal end,-}],Num. of Keys=1
```

Detailed Information

Item	Description
UUID	The UUID of the deleted encryption key
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end
Server_Reply	The return value from the key management server

Item	Description
	A hyphen (-) is displayed unless an error occurred while processing. For details on return values, see the manuals for each key management server.
Num. of Keys	The number of deleted encryption keys

[ENC] Delete Keys

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[ENC],Delete Keys,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Key ID}=[1,2],Num. of Keys=2
```

Detailed Information

Item	Description
Key ID	A deleted encryption key number
Num. of Keys	The number of deleted encryption keys

[ENC] Delete Keys

This information is output to the audit log information file 2, and it is asynchronous with the Device Manager - Storage Navigator operations.

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,,<system>,,,[ENC],
Delete Keys,,Normal end,,,Seq.=xxxxxxxxxx
+DEK={0x00000000,0x00000002,0x00000003},Num. of DEKs=3
```

Detailed Information

Item	Description
DEK	The key IDs of encryption keys
Num. of DEKs	The number of encryption keys

[ENC] Delete Keys on Serv

Even if Normal End is displayed, it merely means that the key management server received the request for deletion and does not necessarily means that encryption keys are deleted normally.

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[ENC], Delete Keys on Serv,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{UUID,Backup Date,Description,Result,Server_Reply}=
[{FBC095D54493A45CAC4BE80EECD1BE51D7E0D4023D377D37B0BFDE72B887CED9
,2013/07/06 09:13:18,BACK0706,Normal end,-}],Num. of Keys=1
```

Detailed Information

Item	Description
UUID	The UUID of the encryption key to be deleted
Backup Date	The date and time of the backup information for the encryption key to be deleted
Description	The description of the backup information for the encryption key to be deleted
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end
Server_Reply	The return value from the key management server A hyphen (-) is displayed unless an error occurred while processing. For details on return values, see the manuals for each key management server.
Num. of Keys	The number of encryption keys to be deleted

[ENC] Edit Encryption

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[ENC],Edit Encryption,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{PG,Encryption}=[{XX-XX,Enable},{XX-XX,Disable}],Num. of PGs=2
```

Detailed Information

Item	Description
PG	A parity group number
Encryption	The status of encryption Enable: Encryption is enabled Disable: Encryption is disabled
Num. of PGs	The number of parity groups

[ENC] Edit ENC Settings

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[ENC],Edit ENC Settings,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{KMS, Generate ENC Keys on KMS, Protect the KEK at the KMS}
=[No Set, No, No],Num. of Settings=1
```

Detailed Information

Item	Description
KMS	Indicates whether the key management server is used No Set: Not set Enable: The key management server is used Disable: The key management server is not used
Generate ENC Keys on KMS	Indicates where the encryption keys are created Yes: The keys are created on the key management server No: The keys are created on the storage system
Protect the KEK at the KMS	Indicates whether the key encryption keys created on the key management server are to be stored on the storage system Yes: The keys are stored on the storage system Yes (Disable Local Key Generation): The keys are stored but Local Key Generation is disabled No: The keys are not stored
Num. of Settings	The number of configured encryption environment settings

[ENC] Edit Password Policy

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[ENC], Edit Password Policy,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Numeric Characters (0-9),Uppercase Characters (A-Z),
Lowercase Characters (a-z),Symbols,Total}={1,2,3,4,10},
Num. of Settings=1
```

Detailed Information

Item	Description
Numeric Characters (0-9)	Indicates the minimum number of numeric characters used for the password
Uppercase Characters (A-Z)	Indicates the minimum number of uppercase characters used for the password

Item	Description
Lowercase Characters (a-z)	Indicates the minimum number of lowercase characters used for the password
Symbols	Indicates the minimum number of symbols used for the password
Total	Indicates the minimum number of total characters used for the password
Num. of Settings	The number of configured password policies

[ENC] Register KEK Dynamic

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[ENC], Register KEK Dynamic,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{UUID,Result,Server_Reply}=
[{B75E9D1699659C10B088E027798ACB082F1375AF2FF613229F15E9FE70D1EC4D
,Normal end,-}],Num. of Keys=1
```

Detailed Information

Item	Description
UUID	The UUID of the registered encryption key
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end
Server_Reply	The return value from the key management server A hyphen (-) is displayed unless an error occurred while processing. For details on return values, see the manuals for each key management server.
Num. of Keys	The number of registered encryption keys

[ENC] Rekey CEK

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[ENC],Rekey CEK,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
```

[ENC] Rekey KEK Dynamic

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[ENC],Rekey KEK Dynamic,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
```

[ENC] Restore Keys

This logged information is output when encryption key information in the storage system is restored with key information obtained externally.

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[ENC],Restore Keys,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
```

[ENC] Restore Keys fr File

This logged information is output when encryption key information is obtained from the backup file.

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[ENC], Restore Keys fr File,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
```

[ENC] Restore Keys fr Serv

This logged information is output when the backup of encryption key information is obtained from the key management server.

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[ENC], Restore Keys fr Serv,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{UUID,Backup Date,Description,Result,Server_Reply}=
[{FBC095D54493A45CAC4BE80EECD1BE51D7E0D4023D377D37B0BFDE72B887CED9
,2013/07/06 09:13:18,BACK0706,Normal end,-}],Num. of Keys=1
```

Detailed Information

Item	Description
UUID	The UUID of the encryption key that is used for restoring on the key management server
Backup Date	The date and time entered into the backup information for the encryption key that is used for restoring

Item	Description
Description	The contents of Description in the backup information for the encryption key that is used for restoring
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end
Server_Reply	The return value from the key management server A hyphen (-) is displayed unless an error occurred while processing. For details on return values, see the manuals for each key management server.
Num. of Keys	The number of encryption keys that are used for restoring This value is fixed to "1" because all of the encryption keys that are used for restoring are backed up as one key.

[ENC] Retry KEK Dynamic

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[ENC],Retry KEK Dynamic,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
```

[ENC] Set Up Key Mng Serv

Example 1: Using a key management server

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[ENC], Set Up Key Mng Serv,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Server Type,Key Management Server,Host Name,Port Number,
Timeout,Retry Interval,Number of Retries,
Client Certificate File Name,Root Certificate File Name}
=[{Primary,Enable,10.213.75.37,5696,10,1,3,,},
{Secondary,Enable,10.213.75.37,5696,10,1,3,,}],
Num. of Servers=2
```

Example 2: Not using a key management server

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[ENC], Set Up Key Mng Serv,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Server Type,Key Management Server}=
[{Primary,Disable},{Secondary,Disable}],Num. of Servers=2
```

Example 3: Initializing a encryption environmental settings

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[ENC], Set Up Key Mng Serv,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{Server Type,Key Management Server}
=[{Primary,No Set},{Secondary,No Set}],Num. of Servers=2
```

Detailed Information

Item	Description
Server Type	The type of the key management server Primary: primary server, Secondary: secondary server
Key Management Server	Indicates whether the key management server is used Enable: The server is used Disable: The server is not used No Set: The encryption environmental settings are to be initialized
Host Name	The address of the key management server
Port Number	The port number of the key management server
Timeout	The communication timeout time to the key management server
Retry Interval	The retry interval to communicate with the key management server
Number of Retries	The number of retries to communicate with the key management server
Client Certificate File Name	The file name of the client certificate
Root Certificate File Name	The file name of the root certificate
Num. of Servers	The number of the configured key management servers

[ENC] Use Keys for CEK/KEK

This information is output to the audit log information file 2, and it is asynchronous with the Device Manager - Storage Navigator operations.

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,,<system>,,,[ENC],
Use Keys for CEK/KEK,,Normal end,,,Seq.=xxxxxxxxxx
+DEK={0x00000000,0x00000002,0x00000003},Num. of DEKs=3
```

Detailed Information

Item	Description
DEK	The key IDs of encryption keys
Num. of DEKs	The number of encryption keys

KEK Acquisition Descriptions

[KEK Acquisition] Acquisition Key

This logged information is output when the storage system obtains KEK Dynamic from the key management server after the power is turned on again with the KMIP mode set to ON.

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[KEK Acquisition],Acquisition Key,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
```

[KEK Acquisition] Set Key

This logged information is output when KEK Dynamic is configured for the storage system after the power is turned on again with the KMIP mode set to ON.

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,
Task Name,[KEK Acquisition],Set Key,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
```

7

Audit log examples of commands received by VSP G1000

This topic provides examples and descriptions of the audit logs when a storage system receives commands sent from hosts, computers using Command Control Interface software, or hosts using Business Continuity Manager. The descriptions are listed alphabetically by function name and operation name. For detailed information on the version numbers in log output examples, see Table 2-3 Format changes for each version number on page 2-10

- Config Command (Open system)
- Config Command (Mainframe system)
- FC-SP
- User Auth

Config Command (Open system)

The following shows examples and descriptions of the audit logs when a storage system receives commands sent from hosts for open system or computers using CCI.

Add CHAP User

Example 1: Adding the CHAP user name on the initiator side

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Add CHAP User
++Port=1A,Target ID=0x00,Initiator CHAP User=AAAAAAA,
Virtual Storage Machine S/N=23456
```

Detailed Information 1: Adding the CHAP user name on the initiator side

Item	Description
Command	The command name
Port	The name of a port to which an iSCSI target, to which a CHAP user is added, belongs
Target ID	The iSCSI target ID
Initiator CHAP User	The CHAP user name on the initiator side
Virtual Storage Machine S/N	The serial number of the virtual storage machine No value is output when a virtual storage machine is not specified.

Example 2: Adding the CHAP user name on the target side

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Add CHAP User
++Port=1A,Target ID=0x00,Target CHAP User=AAAAAAA,
Virtual Storage Machine S/N=23456
```

Detailed Information 2: Adding the CHAP user name on the target side

Item	Description
Command	The command name
Port	The name of a port to which an iSCSI target, to which a CHAP user is added, belongs
Target ID	The iSCSI target ID

Item	Description
Target CHAP User	The CHAP user name on the target side
Virtual Storage Machine S/N	The serial number of the virtual storage machine No value is output when a virtual storage machine is not specified.

Add Copy Group

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Add Copy Group
++Copy Group=AAAAAAA
++Device Group={BBBBBB,CCCCCC},Num. of Device Groups=2,
MU={10,11},JNL={0x020,0x021}
```

Detailed Information

Item	Description
Command	The command name
Copy Group	The name of a copy group to be registered
Device Group	The name of device groups to be registered
Num. of Device Groups	The number of device groups to be registered
MU	The MU number to be registered
JNL	The journal number to be registered

Add Device Group

Add Device Group is an audit log generated when a command operation is performed with the DKCMAIN program version earlier than 80-04-0X-XX/XX.

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Add Device Group
++Device Group=AAAAAAAA
++LDEV(LDKC:CU:LDEV)={0x00:0xAA:0xBB,0x00:0xCC:0xDD,……,
0x00:0xEE:0xFF},Num. of LDEVs=4
```

Detailed Information

Item	Description
Command	The command name
Device Group	The name of a device group to be registered When an LDEV is added, the name of the device group to which the LDEV is added is output
LDEV(LDKC:CU:LDEV)	The LDEV IDs for LDEVs to be added to the device group
Num. of LDEVs	The number of LDEVs to be added to the device group

Add Device Group(Name)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Add Device Group(Name)
++Device Group=AAAAAAAA,,
Device Name=XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX
++LDEV(LDKC:CU:LDEV)
={0x00:0xAA:0xBB,0x00:0xCC:0xDD,……,0x00:0xEE:0xFF},Num. of LDEVs=4
```

Detailed Information

Item	Description
Command	The command name
Device Group	The name of a device group to be operated
Blank item	Nothing is output due to unused.
Device Name	The name of a device to be assigned to LDEVs
LDEV(LDKC:CU:LDEV)	The LDEV IDs for LDEVs to be added to the device group
Num. of LDEVs	The number of LDEVs to be added to the device group

Add DP Pool

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Add DP Pool
++Pool ID=10,Pool Name=Pool_Name_AA,Warning Threshold(%)=85,
High water mark Threshold(%)=85
++LDEV(LDKC:CU:LDEV)
={0x00:0xAA:0xBB,0x00:0xCC:0xDD,……,0x00:0xEE:0xFF},
Num. of LDEVs=4
```

Detailed Information

Item	Description
Command	The command name
Pool ID	The pool number of a pool for Dynamic Provisioning to be created
Pool Name	The pool name of a pool for Dynamic Provisioning to be created
Warning Threshold(%)	The warning threshold of the usage rate of a pool for Dynamic Provisioning to be created
High water mark Threshold(%)	The depletion threshold of a pool for Dynamic Provisioning to be created
LDEV(LDKC:CU:LDEV)	The LDEV IDs for LDEVs of a pool volume
Num. of LDEVs	The number of pool volumes

Add External Group

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Add External Group
++PG=E11111-1,Port=1A,WWN=AAAAAAAA,Path Group ID=1,LUN=1,
Emulation=xxxxxxxx,Migration=Enable,CLPR=3,
Data Direct Mapping=Enable
```

Detailed Information

Item	Description
Command	The command name
PG	The external volume group number
Port	The port name of the storage system (connection source)
WWN	The WWN of the storage system (connection target)
Path Group ID	The path group ID
LUN	The LU number of the external volume
Emulation	The emulation type of the mapped external volume
Migration	The setting status of the nondisruptive migration function Enable: Enabled, Disable: Disabled
CLPR	The CLPR ID
Data Direct Mapping	The setting status of the data direct mapping attribute Enable: Enabled, Disable: Disabled

Add External iSCSI Name/Modify External CHAP User

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Add External iSCSI Name/Modify External CHAP User
++Port=3B,iSCSI Name=iqn.1994-04.jp.co.hitachi:rsd.r80.t.00001.4b000,
TCP Port=3260,IP Address=192.168.0.169,CHAP User=user1,
User Auth Switch=Enable,Auth Mode=Unidirectional
```

Detailed Information

Item	Description
Command	The command name
Port	The name of the port to which the iSCSI initiator belongs
iSCSI Name	The iSCSI name
TCP Port	The TCP port number If this item is not specified by the command option, the TCP port number of the iSCSI target on the port is output.
IP Address	The IP address of the external system
CHAP User	The CHAP user name to be set for Secret When the iSCSI name of the external storage system is added, a hyphen (-) is output.
User Auth Switch	The setting status of CHAP authentication Enable: CHAP authentication is enabled. Disable: CHAP authentication is disabled. When the iSCSI name of the external storage system is changed, a hyphen (-) is output.
Auth Mode	The CHAP authentication mode Unidirectional: One-way CHAP authentication Mutual: Mutual-way CHAP authentication When the iSCSI name of the external storage system is changed, a hyphen (-) is output.

Add HBA iSCSI

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band OPEN,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Add HBA iSCSI
++Port=1A,Target ID=0x00,iSCSI Name=XXXXXXXXXXXXXXXX,
Virtual Storage Machine S/N=23456
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port to which iSCSI targets are added, or on which iSCSI targets are changed When a virtual storage machine is specified, the port name of the virtual storage machine is output.
Target ID	The iSCSI target ID
iSCSI Name	The iSCSI name of the host bus adapter
Virtual Storage Machine S/N	The serial number of the virtual storage machine No value is output when a virtual storage machine is not specified.

Add Host Group

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band OPEN,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Add Host Group
++Port=1A,Host Group ID=0x0001,Host Group Name=XXXXXX,
Virtual Storage Machine S/N=23456
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port to which a host group is added When a virtual storage machine is specified, the port name of the virtual storage machine is output.
Host Group ID	The host group ID to be added
Host Group Name	The name of the host group to be added
Virtual Storage Machine S/N	The serial number of the virtual storage machine No value is output when a virtual storage machine is not specified.

Add Host Group(iSCSI)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Add Host Group(iSCSI)
```

```
++Port=1A,Target Alias=XXXXXX,iSCSI Name=YYYYYYYY,Auth Mode=Chap,
Chap Mutual=Enable,Virtual Storage Machine S/N=23456
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port to which the host group is added When a virtual storage machine is specified, the port name of the virtual storage machine is output.
Target Alias	The alias to be added
iSCSI Name	The iSCSI name to be added
Auth Mode	The setting status of the CHAP authentication mode Chap: CHAP authentication is enabled None: CHAP authentication is disabled Both: Connection is available both with and without CHAP authentication
Chap Mutual	CHAP authentication is unidirectional or bidirectional Enable: Set to bidirectional authentication mode Disable: Set to the unidirectional authentication mode
Virtual Storage Machine S/N	The serial number of the virtual storage machine No value is output when a virtual storage machine is not specified.

Add Journal(Ldev)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Add Journal(Ldev)
++JNL=0x001,JNL Kind=Open,MP Blade ID=0,Timer Type=
++LDEV(LDKC:CU:LDEV)
={0x00:0xAA:0xBB,0x00:0xCC:0xDD,……,0x00:0xEE:0xFF},
Num. of LDEVs=4
```

Detailed Information

Item	Description
Command	The command name
JNL	The journal number
JNL Kind	The journal kind Open: Open system, MF: Mainframe system
MP Blade ID	The MP blade ID

Item	Description
	No value is output when a journal volume is added to the existing journal group.
Timer Type	The clock type used for consistency time System: The system clock of the main frame host on the primary site Local: No system clock is used. None: The system clock of the main frame host on the primary site when data is copied from the storage system on the secondary site to the one on the primary site No value is output if JNL Kind is Open.
LDEV(LDKC:CU:LDEV)	The LDEV IDs of journal volumes to be created
Num. of LDEVs	The number of journal volumes to be created

Add Ldev

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Add Ldev
++PG=1-1,LDEV(LDKC:CU:LDEV)=0x00:0xAA:0xBB,Emulation=OPEN-3,
Size=200 Capacity,Location=10000000,MP Blade ID=0,T10PI=Disable
```

Detailed Information

Item	Description
Command	The command name
PG	The parity group number to which an LDEV to be created belongs If the LDEV to be created is an external volume, "E" is added on the top of the parity group number.
LDEV(LDKC:CU:LDEV)	The LDEV ID of an LDEV to be created
Emulation	The type of emulation
Size	The capacity and method for specifying the capacity of an LDEV to be created *Specifying the capacity* • Capacity: Specify a capacity by the byte or block. Units, byte or block, are not output. If a capacity is specified by the kilobyte, megabyte, gigabyte, or terabyte, the capacity is output on a byte basis. • Offset-Capacity: Specify a capacity by the byte or block, and then the storage system corrects the capacity.

Item	Description
	Units, byte or block, are not output. If a capacity is specified by the kilobyte, megabyte, gigabyte, or terabyte, the capacity is output on a byte basis. • Cylinder: Specify a capacity by the cylinder. • ALL Capacity: All free space is assigned to the LDEV capacity. The capacity value is not output. For details, see the section describing CV size calculation in *Provisioning Guide for Open Systems*.
Location	The starting point of an LDEV to be created in the parity group or external volume group
MP Blade ID	The MP blade ID
T10PI	The setting status of T10 PI attribute Enable: Enabled, Disable: Disabled

Add Ldev(Dynamic Provisioning)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Add Ldev(Dynamic Provisioning)
++Pool ID=127,LDEV(LDKC:CU:LDEV)=0x00:0xAA:0xBB,SSID=0x6500,
Emulation=OPEN-V,Size=200 Capacity,MP Blade ID=0,CLPR=1,
TSE=Enable,Full Allocation=Enable,
Data Direct Mapping LDEV(LDKC:CU:LDEV)=,T10PI=Enable,
Capacity Saving=Deduplication Compression
```

Detailed Information

Item	Description
Command	The command name
Pool ID	The pool number of a pool to which a virtual volume of Dynamic Provisioning to be created belongs No value is output when the data direct mapping attribute is enabled.
LDEV(LDKC:CU:LDEV)	The LDEV ID of an LDEV to be created
SSID	The SSID
Emulation	The type of emulation
Size	The capacity and method for specifying the capacity of an LDEV to be created *Specifying the capacity* • Capacity: Specify a capacity by the byte or block.

Item	Description
	Units, byte or block, are not output. If a capacity is specified by the kilobyte, megabyte, gigabyte, or terabyte, the capacity is output on a byte basis. • Offset-Capacity: Specify a capacity by the byte or block, and then the storage system corrects the capacity. Units, byte or block, are not output. If a capacity is specified by the kilobyte, megabyte, gigabyte, or terabyte, the capacity is output on a byte basis. • Cylinder: Specify a capacity by the cylinder. • ALL Capacity: All free space is assigned to the LDEV capacity. The capacity value is not output. For details, see the section describing CV size calculation in *Provisioning Guide for Open Systems*.
MP Blade ID	The MP blade ID of an LDEV to be created
CLPR	The CLPR ID
TSE	The setting status of TSE attribute Enable: Enabled, Disable: Disabled
Full Allocation	The setting status of the full allocation Enable: Enabled, Disable: Disabled
Data Direct Mapping LDEV(LDKC:CU:LDEV)	The LDEV ID of a pool volume with the data direct mapping attribute when the data direct mapping attribute is enabled. No value is output when the data direct mapping attribute is disabled.
T10PI	The setting status of T10 PI attribute Enable: Enabled, Disable: Disabled
Capacity Saving	The status of the capacity saving setting Disable: Capacity saving is disabled, Compression: Compression, Deduplication Compression: Deduplication and compression

Add Ldev(Snapshot)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Add Ldev(Snapshot)
++LDEV(LDKC:CU:LDEV)=0x00:0xAA:0xBB,Emulation=OPEN-V,
Size=200 Capacity,MP Blade ID=0,CLPR=1,T10PI=Disable
```

Detailed Information

Item	Description
Command	The command name

Item	Description
LDEV(LDKC:CU:LDEV)	The LDEV ID of an LDEV to be created
Emulation	The emulation type
Size	The capacity and method for specifying the capacity of an LDEV to be created *Specifying the capacity* • Capacity: Specify a capacity by the byte or block. Units, byte or block, are not output. If a capacity is specified by the kilobyte, megabyte, gigabyte, or terabyte, the capacity is output on a byte basis. • Offset-Capacity: Specify a capacity by the byte or block, and then the storage system corrects the capacity. Units, byte or block, are not output. If a capacity is specified by the kilobyte, megabyte, gigabyte, or terabyte, the capacity is output on a byte basis. • Cylinder: Specify a capacity by the cylinder. • ALL Capacity: All free space is assigned to the LDEV capacity. The capacity value is not output. For details, see the section describing CV size calculation in *Provisioning Guide for Open Systems*.
MP Blade ID	The MP blade ID of an LDEV to be created
CLPR	The CLPR ID
T10PI	The setting status of T10 PI attribute Enable: Enabled, Disable: Disabled

Add LUN

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band OPEN,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Add LUN
++Port=1A,Host Group ID=0x0FE,LUN=0,
LDEV(LDKC:CU:LDEV)=0x00:0xAA:0xBB,Virtual Storage Machine S/N=23456,
Command Device=Enable
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port to which an LU is added When a virtual storage machine is specified, the port name of the virtual storage machine is output.
Host Group ID	The ID of a host group to which an LU is added

Item	Description
LUN	The LU number to be added
LDEV(LDKC:CU:LDEV)	The LDEV ID of an LDEV to be set as an LU
Virtual Storage Machine S/N	The serial number of the virtual storage machine No value is output when a virtual storage machine is not specified.
Command Device	The setting status of the command device attribute Enable: Enabled, Disable: Disabled

Add Path

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Add Path
++Port=1B,WWN=XXXXXXXXXXXXXXXX,Path Group ID=1
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port to be connected to the external storage system
WWN	The WWN of the external storage system
Path Group ID	The path group ID of the external volume

Add RCU

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Add RCU
++S/N=12345,MCU=0xAAAA,RCU=0xBBBB,Controller ID=7,MCU Port=1A,
RCU Port=1B,SSID=0x0123,Path Gr. ID=0
```

Detailed Information

Item	Description
Command	The command name
S/N	The serial number of the remote storage system

Item	Description
MCU	The CU number of the local storage system "Free" is output when CU Free is specified.
RCU	The CU number of the remote storage system "Free" is output when CU Free is specified.
Controller ID	The controller ID of the remote storage system 5: USP V/VM, 6: VSP, 7: VSP G1000/G1500 and VSP F1500, 18: VSP Gx00, VSP Fx00, 19: HUS VM
MCU Port	The port name of the local storage system
RCU Port	The port name of the remote storage system
SSID	The SSID of the remote storage system
Path Gr. ID	The path group ID of the remote storage system No value is output when CU Free is not specified.

Add RCU iSCSI Port

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Add RCU iSCSI Port
++S/N=12345,Controller ID=18,MCU Port=3B,RCU Port=4B,TCP Port=3260,
IP Address=192.168.0.169
```

Detailed Information

Item	Description
Command	The command name
S/N	The serial number of the remote storage system
Controller ID	The controller ID of the remote storage system 7: VSP G1000/G1500 and VSP F1500, 18: VSP Gx00, VSP Fx00, 19: HUS VM
MCU Port	The name of the port on the local storage system
RCU Port	The name of the port on the remote storage system
TCP Port	The TCP port number
IP Address	The IP address of the port on the remote storage system

Add RCU Path

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Add RCU Path
++S/N=12345,MCU=0xAAAA,RCU=0xBBBB,MCU Port=1A,RCU Port=1B,
SSID=0x0123,Controller ID=7,Path Gr. ID=0
```

Detailed Information

Item	Description
Command	The command name
S/N	The serial number of the remote storage system
MCU	The CU number of the local storage system "Free" is output when CU Free is specified.
RCU	The CU number of the remote storage system "Free" is output when CU Free is specified.
MCU Port	The port name of the local storage system to be added
RCU Port	The port name of the remote storage system to be added
SSID	The SSID of the remote storage system
Controller ID	The controller ID of the remote storage system 5: USP V/VM, 6: VSP, 7: VSP G1000/G1500 and VSP F1500, 18: VSP Gx00, VSP Fx00, 19: HUS VM
Path Gr. ID	The path group ID of the remote storage system No value is output when CU Free is not specified.

Add Resource(Group)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Add Resource(Group)
++Resource Group=AAAAAAAA,Controller ID=7,S/N=23456
```

Detailed Information

Item	Description
Command	The command name
Resource Group	The name of a resource group to be created
Controller ID	The controller ID of the virtual storage machine

Item	Description
	5: USP V/VM, 6: VSP, 7: VSP G1000/G1500 and VSP F1500, 18: VSP Gx00, VSP Fx00, 19: HUS VM No output when a virtual storage machine is not specified.
S/N	The serial number of the virtual storage machine No output when a virtual storage machine is not specified.

Add Resource(Resource Name)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Add Resource(Resource Name)
++Resource Group ID=123456,Resource Group Name=XXXXXXXXX
```

Detailed Information

Item	Description
Command	The command name
Resource Group ID	The number of the resource group whose name is changed
Resource Group Name	The newly changed resource group name

Add Resource/Delete Resource

Example: when the resource of the operation target is LDEV

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Add Resource/Delete Resource
++Resource Group ID=123456,LDEV(LDKC:CU:LDEV)=0x00:0xAA:0xBB
```

Detailed Information

Item	Description
Command	The command name
Resource Group ID	The number of a resource group to be registered or deleted
LDEV(LDKC:CU:LDEV)	The LDEV ID of an LDEV to be registered or deleted This item is output when the resource of the operation target is LDEV
PG	The number of a parity group to be registered or deleted This item is output when the resource of the operation target is the parity group or external volume group.

Item	Description
Port	The name of a port to be registered or deleted This item is output when the resource of the operation target is Port or Host Group
Host Group ID	The ID of a host group to be registered or deleted This item is output when the resource of the operation target is Host Group

Add Snap Pool

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Add Snap Pool
++Pool ID=10,Pool Name=XXXXXXXX,User Threshold(%)=85
++LDEV(LDKC:CU:LDEV)={0x00:0xAA:0xBB,0x00:0xCC:0xDD,……,
0x00:0xEE:0xFF},Num. of LDEVs=4
```

Detailed Information

Item	Description
Command	The command name
Pool ID	The pool number of a pool for Thin Image to be created
Pool Name	The pool name of a pool for Thin Image to be created No value is output if a pool name is not specified.
User Threshold(%)	The user defined threshold
LDEV(LDKC:CU:LDEV)	The LDEV IDs of pool volumes
Num. of LDEVs	The number of pool volumes

Add Snapshot

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Add Snapshot
++Snapshot Group=SSSSSSSS,Pool ID=2,
P-VOL(LDKC:CU:LDEV)=0x00:0xAA:0xBB,S-VOL(LDKC:CU:LDEV)=0x00:0xCC:
0xDD,
Virtual Storage Machine S/N=23456,Range=Group,
S-VOL Storage Machine S/N=12345,S-VOL Actual Controller ID=7,Add
Mode=Cascade
```

Detailed Information

Item	Description
Command	The command name
Snapshot Group	The name of a snapshot group
Pool ID	The pool ID of a pool to which a pair to be registered belongs
P-VOL(LDKC:CU:LDEV)	The LDEV ID of the primary volume for a pair to be registered When a virtual storage machine is specified, the LDEV ID of the virtual storage machine is output.
S-VOL(LDKC:CU:LDEV)	The LDEV ID of the secondary volume for a pair to be registered No output when a secondary volume is not specified
Virtual Storage Machine S/N	The serial number of the virtual storage machine No value is output when a virtual storage machine is not specified.
Range	The range for splitting pairs Volume: Only the pair is split. Group: All pairs in the group including the pair are split.
S-VOL Storage Machine S/N	The serial number of the actual storage system to which the secondary volume belongs
S-VOL Actual Controller ID	The controller ID of the actual storage system to which the secondary volume belongs 5: USP V/VM, 6: VSP, 7: VSP G1000/G1500 and VSP F1500, 18: VSP Gx00, VSP Fx00, 19: HUS VM
Add Mode	The mode of the pair to be registered Cascade: cascade configuration, Clone: cloned pair You can configure the cascade configuration, also when the "Clone" is specified.

Add SPM Group

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Add SPM Group
++Port=1A,WWN=XXXXXXXXXXX,SPM Group=AAAAAAAAA,Nickname=
```

Detailed Information

Item	Description
Command	The command name
Port	The port name to which the SPM target WWN to be registered to the SPM group belongs

Item	Description
WWN	The SPM target WWN to be registered to the SPM group No value is output when the Nickname is output.
SPM Group	The name of the SPM group to which the SPM target WWN is registered
Nickname	The SPM name (nickname) for the WWN No value is output when the WWN value is output.

Add SPM Host Group

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Add SPM Host Group
++Port=1A,SPM Group=XXXXXXXXXXX,Host Group Name=AAAAAAAAA
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port for the host group to which the WWN to be set to the SPM group is registered
SPM Group	The name of an SPM group to be set
Host Group Name	The name of a host group to which the WWN to be set to the SPM group is registered

Add SPM WWN

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Add SPM WWN
++Port=1A,WWN=XXXXXXXXXXX,Nickname=AAAAAAAAA
```

Detailed Information

Item	Description
Command	The command name
Port	The port name to which the WWN belongs
WWN	The WWN

Item	Description
Nickname	The SPM name (nickname) for the WWN

Add SSID

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Add SSID
++S/N=12345,MCU=0xAAAA,RCU=0xBBBB,Controller ID=7,SSID=0xCCCC
```

Detailed Information

Item	Description
Command	The command name
S/N	The serial number of the remote storage system
MCU	The CU number of the local storage system
RCU	The CU number of the remote storage system
Controller ID	The controller ID of the remote storage system 5: USP V/VM, 6: VSP, 7: VSP G1000/G1500 and VSP F1500, 18: VSP Gx00, VSP Fx00, 19: HUS VM
SSID	The SSID to be added

Add WWN

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Add WWN
++Port=1A,Host Group ID=0x0FE,WWN=XXXXXXXXXXXXXXXX,
Virtual Storage Machine S/N=23456
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port to which a WWN is set When a virtual storage machine is specified, the port name of the virtual storage machine is output.
Host Group ID	The ID of a host group to which the WWN is set

Item	Description
WWN	The WWN to be set
Virtual Storage Machine S/N	The serial number of the virtual storage machine No value is output when a virtual storage machine is not specified.

Check External Storage Group

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Check External Storage Group
++PG=E11111-1
```

Detailed Information

Item	Description
Command	The command name
PG	The external volume group number

Check External Storage Path

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Check External Storage Path
++Port=1B,WWN=XXXXXXXXXXXXXXXX,Path Group ID=1
```

Detailed Information

Item	Description
Command	The command name
Port	The name of the port to be connected to the external storage system
WWN	The WWN of the external storage system
Path Group ID	The path group ID of the external volume

CTQM

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=CTQM
++LDEV(CU:LDEV)=0x12:0x34,MU=5,Virtual Storage Machine S/N=23456,
Suspend Status=Suspend,CTQM=EOM
```

Detailed Information

Item	Description
Command	The command name
LDEV(CU:LDEV)	The CU number and the LDEV number of the primary or secondary volume shared by a pair that is included in the consistency group for executing the command When a virtual storage machine is specified, the CU number and the LDEV number of the virtual storage machine is output.
MU	The MU number of the pair to which the LDEV belongs
Virtual Storage Machine S/N	The serial number of the virtual storage machine No value is output when a virtual storage machine is not specified.
Suspend Status	The instruction to the journal in the suspend status Suspend: Suspended Full Suspend: Full and suspended Obstacle Suspend: Suspended due to an error
CTQM	The synchronization status in the suspend status CTQM: Synchronization is underway. EOM: Synchronization is complete.

Delete CHAP User

Example 1: Deleting the CHAP user name on the initiator side

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Delete CHAP User
++Port=1A,Target ID=0x00,Initiator CHAP User=AAAAAAA,
Virtual Storage Machine S/N=23456
```

Detailed Information 1: Deleting the CHAP user name on the initiator side

Item	Description
Command	The command name
Port	The name of a port to which an iSCSI target, from which CHAP users are deleted, belongs
Target ID	The iSCSI target ID
Initiator CHAP User	The CHAP user name on the initiator side
Virtual Storage Machine S/N	The serial number of the virtual storage machine No value is output when a virtual storage machine is not specified.

Example 2: Deleting the CHAP user name on the target side

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Delete CHAP User
++Port=1A,Target ID=0x00,Target CHAP User=AAAAAAA,
Virtual Storage Machine S/N=23456
```

Detailed Information 2: Deleting the CHAP user name on the target side

Item	Description
Command	The command name
Port	The name of a port to which an iSCSI target, from which CHAP users are deleted, belongs
Target ID	The iSCSI target ID
Target CHAP User	The CHAP user name on the target side
Virtual Storage Machine S/N	The serial number of the virtual storage machine No value is output when a virtual storage machine is not specified.

Delete Copy Group

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Delete Copy Group
++Copy Group=AAAAAAAA
```

Detailed Information

Item	Description
Command	The command name
Copy Group	The name of a copy group to be deleted

Delete Device Group

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Delete Device Group
++Device Group=AAAAAAAA
++LDEV(LDKC:CU:LDEV)={0x00:0xAA:0xBB,0x00:0xCC:0xDD,……,
0x00:0xEE:0xFF},Num. of LDEVs=4
```

Detailed Information

Item	Description
Command	The command name
Device Group	The name of a device group from which LDEVs are deleted
LDEV(LDKC:CU:LDEV)	The LDEV ID of an LDEV to be deleted from the device group
Num. of LDEVs	The number of LDEVs to be deleted from the device group

Delete External Group

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Delete External Group
++PG=E11111-1
```

Detailed Information

Item	Description
Command	The command name
PG	The external volume group number

Delete External iSCSI Name

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Delete External iSCSI Name
++Port=3B,iSCSI Name=iqn.1994-04.jp.co.hitachi:rsd.r80.t.00001.4b000,
IP Address=192.168.0.169
```

Detailed Information

Item	Description
Command	The command name
Port	The name of the port to which the iSCSI initiator belongs
iSCSI Name	The iSCSI name
IP Address	The IP address of the port on the external storage system

Delete HBA iSCSI

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Delete HBA iSCSI
++Port=1A,Target ID=0x00,iSCSI Name=XXXXXXXXXXXXXXXX,
Virtual Storage Machine S/N=23456
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port from which iSCSI targets are deleted When a virtual storage machine is specified, the port name of the virtual storage machine is output.
Target ID	The iSCSI target ID
iSCSI Name	The iSCSI name of the host bus adapter
Virtual Storage Machine S/N	The serial number of the virtual storage machine No value is output when a virtual storage machine is not specified.

Delete Host Group

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Delete Host Group
++Port=1A,Host Group ID=0x003,,Virtual Storage Machine S/N=23456
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port from which a host group is deleted When a virtual storage machine is specified, the port name of the virtual storage machine is output.
Host Group ID	The ID of a host group to be deleted
Blank item	Nothing is output due to unused.
Virtual Storage Machine S/N	The serial number of the virtual storage machine No value is output when a virtual storage machine is not specified.

Delete Journal

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Delete Journal
++JNL=0xAAA
```

Detailed Information

Item	Description
Command	The command name
JNL	The number of a journal to be deleted

Delete Journal(Ldev)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Delete Journal(Ldev)
++JNL=0xAAA
```

```
++LDEV(LDKC:CU:LDEV)
={0x00:0xAA:0xBB,0x00:0xCC:0xDD,……,0x00:0xEE:0xFF},
Num. of LDEVs=4
```

Detailed Information

Item	Description
Command	The command name
JNL	The journal number of a journal from which journal volumes are deleted
LDEV(LDKC:CU:LDEV)	The LDEV ID of a journal volume to be deleted
Num. of LDEVs	The number of journal volumes to be deleted

Delete Ldev

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Delete Ldev
++LDEV(LDKC:CU:LDEV)=0x00:0xAA:0xBB
```

Detailed Information

Item	Description
Command	The command name
LDEV(LDKC:CU:LDEV)	The LDEV ID of an LDEV to be deleted

Delete LUN

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Delete LUN
++Port=1A,Host Group ID=0x0FE,LUN=2047,
LDEV(LDKC:CU:LDEV)=0x00:0xAA:0xBB,
Virtual Storage Machine S/N=23456
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port from which an LU is deleted

Item	Description
	When a virtual storage machine is specified, the port name of the virtual storage machine is output.
Host Group ID	The ID of a host group from which an LU is deleted
LUN	The LU number to be deleted
LDEV(LDKC:CU:LDEV)	The LDEV ID of an LDEV to be deleted
Virtual Storage Machine S/N	The serial number of the virtual storage machine No value is output when a virtual storage machine is not specified.

Delete Path

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Delete Path
++Port=1B,WWN=XXXXXXXXXXXXXXXX,Path Group ID=1
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port to be connected to the external storage system
WWN	The WWN of the external storage system
Path Group ID	The path group ID of the external volume

Delete Pool

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Delete Pool
++Pool ID=10
```

Detailed Information

Item	Description
Command	The command name
Pool ID	The pool number of a pool to be deleted

Delete Pool(Ldev)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Delete Pool(Ldev)
++Pool ID=10
++LDEV(LDKC:CU:LDEV)={0x00:0xAA:0xBB,0x00:0xCC:0xDD,……,
0x00:0xEE:0xFF},Num. of LDEVs=4
```

Detailed Information

Item	Description
Command	The command name
Pool ID	The pool ID of a pool whose capacity is to be decreased
LDEV(LDKC:CU:LDEV)	The LDEV IDs of pool volumes to be deleted from the pool
Num. of LDEVs	The number of pool volumes to be deleted from the pool

Delete RCU

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Delete RCU
++S/N=12345,MCU=0xAAAA,RCU=0xBBBB,SSID=0x0123,Controller ID=7,
Path Gr. ID=0
```

Detailed Information

Item	Description
Command	The command name
S/N	The serial number of the remote storage system
MCU	The CU number of the local storage system "Free" is output when CU Free is specified.
RCU	The CU number of the remote storage system "Free" is output when CU Free is specified.
SSID	The SSID of the remote storage system
Controller ID	The controller ID of the remote storage system 5: USP V/VM, 6: VSP, 7: VSP G1000/G1500 and VSP F1500, 18: VSP Gx00, VSP Fx00, 19: HUS VM
Path Gr. ID	The path group ID of the remote storage system No value is output when CU Free is not specified.

Delete RCU iSCSI Port

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Delete RCU iSCSI Port
++S/N=12345,Controller ID=18,MCU Port=3B,RCU Port=4B
```

Detailed Information

Item	Description
Command	The command name
S/N	The serial number of the remote storage system
Controller ID	The controller ID of the remote storage system 7: VSP G1000/G1500 and VSP F1500, 18: VSP Gx00, VSP Fx00, 19: HUS VM
MCU Port	The port name of the local storage system
RCU Port	The port name of the remote storage system

Delete RCU Path

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Delete RCU Path
++S/N=12345,MCU=0xAAAA,RCU=0xBBBB,MCU Port=1A,RCU Port=1B,
SSID=0x0123,Controller ID=7,Path Gr. ID=0
```

Detailed Information

Item	Description
Command	The command name
S/N	The serial number of the remote storage system
MCU	The CU number of the local storage system "Free" is output when CU Free is specified.
RCU	The CU number of the remote storage system "Free" is output when CU Free is specified.
MCU Port	The port name of the local storage system
RCU Port	The port name of the remote storage system
SSID	The SSID of the remote storage system
Controller ID	The controller ID of the remote storage system

Item	Description
	5: USP V/VM, 6: VSP, 7: VSP G1000/G1500 and VSP F1500, 18: VSP Gx00, VSP Fx00, 19: HUS VM
Path Gr. ID	The path group ID of the remote storage system No value is output when CU Free is not specified.

Delete Resource(Group)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Delete Resource(Group)
++Resource Group ID=123456
```

Detailed Information

Item	Description
Command	The command name
Resource Group ID	The number of the resource group to be deleted

Delete Snapshot

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Delete Snapshot
++P-VOL(LDKC:CU:LDEV)=0x00:0xAA:0xBB,MU=1,
Virtual Storage Machine S/N=23456
```

Detailed Information

Item	Description
Command	The command name
P-VOL(LDKC:CU:LDEV)	The LDEV ID of the primary volume of a pair to be deleted When a virtual storage machine is specified, the LDEV ID of the virtual storage machine is output.
MU	The MU number of the pair to be deleted
Virtual Storage Machine S/N	The serial number of the virtual storage machine No value is output when a virtual storage machine is not specified.

Delete Snapshot(Tree)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Delete Snapshot(Tree)
++ROOT-VOL(LDKC:CU:LDEV)=0x00:0xAA:0xBB,
Virtual Storage Machine S/N=23456
```

Detailed Information

Item	Description
Command	The command name
ROOT-VOL(LDKC:CU:LDEV)	The LDKC, CU, and LDEV numbers of the root volume to be deleted When a virtual storage machine is specified, the LDEV ID of the virtual storage machine is output.
Virtual Storage Machine S/N	The serial number of the virtual storage machine No value is output when a virtual storage machine is not specified.

Delete SPM Group

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Delete SPM Group
++Port=1A,SPM Group=XXXXXXXXXXX
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port to which the WWN to be deleted from the SPM group belongs
SPM Group	The name of an SPM group from which the WWN is deleted

Delete SPM Host Group

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
```

```
+Command=Delete SPM Host Group
++Port=1A,Host Group Name=XXXXXXXXXXXX
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port to which the WWN to be deleted from the SPM group belongs
Host Group Name	The name of a host group to which the WWN to be deleted from the SPM group belongs

Delete SPM WWN

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Delete SPM WWN
++Port=1A,WWN=XXXXXXXXXXXX
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port to which the WWN to be deleted from the SPM target belongs
WWN	The WWN to be deleted from the SPM target

Delete SPM WWN(Nickname)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Delete SPM WWN(Nickname)
++Port=1A,Nickname=XXXXXXXXXXXX
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port to which the WWN to be deleted from the SPM target belongs

Item	Description
Nickname	The SPM name (nickname) of the WWN to be deleted from the SPM target

Delete SSID

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Delete SSID
++S/N=12345,MCU=0xAAAA,RCU=0xBBBB,SSID=0xCCCC
```

Detailed Information

Item	Description
Command	The command name
S/N	The serial number of the remote storage system
MCU	The CU number of the local storage system
RCU	The CU number of the remote storage system
SSID	The SSID to be deleted

Delete WWN

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Delete WWN
++Port=1A,Host Group ID=0x0FE,WWN=XXXXXXXXXXXXXXXX,
Virtual Storage Machine S/N=23456
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port from which a WWN is deleted When a virtual storage machine is specified, the port name of the virtual storage machine is output.
Host Group ID	The ID of a host group from which the WWN is deleted
WWN	The WWN to be deleted

Item	Description
Virtual Storage Machine S/N	The serial number of the virtual storage machine No value is output when a virtual storage machine is not specified.

Disconnect External Group

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Disconnect External Group
++PG=E11111-1
```

Detailed Information

Item	Description
Command	The command name
PG	The external volume group number

Disconnect Path

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Disconnect Path
++Port=1B,WWN=XXXXXXXXXXXXXXXX,Path Group ID=1
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port to be connected to the external storage system
WWN	The WWN of the external storage system
Path Group ID	The path group ID of the external volume

Extend Ldev

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
```

```
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Extend Ldev
++LDEV(LDKC:CU:LDEV)=0x00:0xAA:0xBB,
Virtual Storage Machine S/N=23456,Size=200 Capacity
```

Detailed Information

Item	Description
Command	The command name
LDEV(LDKC:CU:LDEV)	The LDEV ID of the virtual volume for Dynamic Provisioning to be extended When a virtual storage machine is specified, the LDEV ID of the virtual storage machine is output.
Virtual Storage Machine S/N	The serial number of the virtual storage machine No value is output when a virtual storage machine is not specified.
Size	The capacity and method for specifying the capacity of an LDEV to be created *Specifying the capacity* • Capacity: Specify a capacity by the byte or block. Units, byte or block, are not output. If a capacity is specified by the kilobyte, megabyte, gigabyte, or terabyte, the capacity is output on a byte basis. • Offset-Capacity: Specify a capacity by the byte or block, and then the storage system corrects the capacity. Units, byte or block, are not output. If a capacity is specified by the kilobyte, megabyte, gigabyte, or terabyte, the capacity is output on a byte basis. • Cylinder: Specify a capacity by the cylinder. For details, see the section describing CV size calculation in *Provisioning Guide for Open Systems*.

Initialize Ldev(Format)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Initialize Ldev(Format)
++LDEV(LDKC:CU:LDEV)=0x00:0xAA:0xBB,Format Option=Normal
```

Detailed Information

Item	Description
Command	The command name
LDEV(LDKC:CU:LDEV)	The LDEV ID of an LDEV to be formatted

Item	Description
Format Option	The format options Normal: Normal format, Quick: Quick format

Initialize Ldev(Shredding)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Initialize Ldev(Shredding)
++LDEV(LDKC:CU:LDEV)=0x00:0xAA:0xBB,Data=00-FF-00
```

Detailed Information

Item	Description
Command	The command name
LDEV(LDKC:CU:LDEV)	The LDEV ID of an LDEV whose data is to be deleted
Data	The data pattern used for deleting the data 00-FF-00: Default pattern Random: Random value 0xXXXXXXXX: User defined value

Initialize Ldev(Stop Shredding)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Initialize Ldev(Stop Shredding)
++LDEV(LDKC:CU:LDEV)=0x00:0xAA:0xBB
```

Detailed Information

Item	Description
Command	The command name
LDEV(LDKC:CU:LDEV)	The LDEV ID of an LDEV in which deletion of its data is to be stopped

Initialize Pool

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,196,,
[Config
Command],,,Accept,from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,
Seq.=xxxxxxxxxx
+Command=Initialize Pool
++Pool ID=10,Operation=Initialize Deduplication
```

Detailed Information

Item	Description
Command	The command name
Pool ID	The pool ID of the pool to be initialized
Operation	The operation Initialize Deduplication: Initializes the deduplication system data volume and one or more volumes in which deduplicated data exists.

Map Resource(LDEV)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Map Resource(LDEV)
++LDEV(LDKC:CU:LDEV)=0x00:0xAA:0xBB,
Map LDEV(LDKC:CU:LDEV)=0x00:0xCC:0xDD,SSID=0x0123,
Emulation=AAAAAA
```

Detailed Information

Item	Description
Command	The command name
LDEV(LDKC:CU:LDEV)	The LDEV ID of the actual volume
Map LDEV(LDKC:CU:LDEV)	The LDEV ID of the virtual volume assigned to the actual volume "Reserve" is output if the reservation attribute of global-active device is set on the LDEV ID of the volume used as a secondary volume of a global-active device pair.
SSID	The SSID of a virtual volume
Emulation	The emulation type of a virtual volume

Map Resource(Port)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Map Resource(Port)
++Port=1A,Map Port=1E
```

Detailed Information

Item	Description
Command	The command name
Port	The port name of the actual port
Map Port	The name of the virtual port assigned to the actual port

Map Snapshot

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Map Snapshot
++P-VOL(LDKC:CU:LDEV)=0x00:0xAA:0xBB,
S-VOL(LDKC:CU:LDEV)=0x00:0xCC:0xDD,
MU=1,Virtual Storage Machine S/N=23456,
S-VOL Storage Machine S/N=12345,S-VOL Actual Controller ID=7
```

Detailed Information

Item	Description
Command	The command name
P-VOL(LDKC:CU:LDEV)	The LDEV ID of the primary volume When a virtual storage machine is specified, the LDEV ID of the virtual storage machine is output.
S-VOL(LDKC:CU:LDEV)	The LDEV ID of the secondary volume When a virtual storage machine is specified, the LDEV ID of the virtual storage machine is output.
MU	The MU number of the mapped snapshot
Virtual Storage Machine S/N	The serial number of the virtual storage machine No value is output when a virtual storage machine is not specified.
S-VOL Storage Machine S/N	The serial number of the actual storage system to which the secondary volume belongs

Item	Description
S-VOL Actual Controller ID	The controller ID of the actual storage system to which the secondary volume belongs 5: USP V/VM, 6: VSP, 7: VSP G1000/G1500 and VSP F1500, 18: VSP Gx00, VSP Fx00, 19: HUS VM

Modify CLPR

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Modify CLPR
++PG=1-1,CLPR=0
```

Detailed Information

Item	Description
Command	The command name
PG	The number of a parity group for CLPR to be migrated The parity group number with "E" on the top of the name indicates that the parity group contains an external volume
CLPR	The CLPR ID of the target of migration

Modify External Group(ALUA Switch)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Modify External Group(ALUA Switch)
++PG=E101-3,ALUA Switch=Enable
```

Detailed Information

Item	Description
Command	The command name
PG	The external volume group number
ALUA Switch	The setting status of the ALUA mode Enable: Enabled, Disable: Disabled

Modify External Group(Cache Inflow)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Modify External Group(Cache Inflow)
++PG=E11111-1,Cache Inflow=Enable
```

Detailed Information

Item	Description
Command	The command name
PG	The external volume group number
Cache Inflow	The inflow control setting of the cache of the external volume. Enable: Enabled, Disable: Disabled

Modify External Group(Cache Mode)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Modify External Group(Cache Mode)
++PG=E11111-1,Cache Mode=Enable
```

Detailed Information

Item	Description
Command	The command name
PG	The external volume group number
Cache Mode	The cache mode to be set Enable: The cache mode is enabled Disable: The cache mode is disabled Through: Cache through mode Write Sync: Write synchronous mode

Modify External Group(Load Balance Mode)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Modify External Group(Load Balance Mode)
++PG=E11111-1,Load Balance Mode=Extend
```

Detailed Information

Item	Description
Command	The command name
PG	The external volume group number
Load Balance Mode	The load balance mode to be set Normal: Standard round robin Extend: Extended round robin Disable: Disabled

Modify External Group(MP Blade)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Modify External Group(MP Blade)
++PG=E11111-1,MP Blade ID=0
```

Detailed Information

Item	Description
Command	The command name
PG	The external volume group number
MP Blade ID	The MP blade ID to be allocated to a target volume

Modify Host Group(Access Priority)

Modify Host Group(Access Priority) is an audit log generated when a command operation is performed with the DKCMAIN program version earlier than 80-04-0X-XX/XX.

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Modify Host Group(Access Priority)
++Port=1A,Host Group ID=0x0FE,Virtual Storage Machine S/N=23456
```

Detailed Information

Item	Description
Command	The command name

Item	Description
Port	The name of the port on which the asymmetric access states is set When a virtual storage machine is specified, the port name of the virtual storage machine is output.
Host Group ID	The ID of the host group that uses the port on which the asymmetric access states is set When a virtual storage machine is specified, the host group ID of the virtual storage machine is output.
Virtual Storage Machine S/N	The serial number of the virtual storage machine No value is output when a virtual storage machine is not specified.

Modify Host Group(Host Mode)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Modify Host Group(Host Mode)
++Port=1A,Host Group ID=0x0FE,Virtual Storage Machine S/N=23456,
Mode=0x0A,Auth Mode=Chap,Chap Mutual=Disable
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port to which a host group for the host mode to be set belongs When a virtual storage machine is specified, the port name of the virtual storage machine is output.
Host Group ID	The ID of a host group for which the host mode is set
Virtual Storage Machine S/N	The serial number of the virtual storage machine No value is output when a virtual storage machine is not specified.
Mode	The host mode For details about the host mode, see *Provisioning Guide for Open Systems*.
Auth Mode	The authentication mode Chap: CHAP authentication is enabled None: CHAP authentication is disabled Both: Connection is available both with and without CHAP authentication
Chap Mutual	CHAP authentication is unidirectional or bidirectional

Item	Description
	Enable: Set to bidirectional authentication mode Disable: Set to the unidirectional authentication mode

Modify Host Group(Host Mode Option)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Modify Host Group(Host Mode Option)
++Port=1A,Host Group ID=0x0FE,Virtual Storage Machine S/N=23456,
Mode=0x0A,Option[0:31]=0x80000000,Option[32:63]=0x80000000,
Option[64:95]=0x80000000,Option[96:127]=0x80000000,Auth Mode=Chap,
Chap Mutual=Disable
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port to which a host group for the host mode option to be changed belongs When a virtual storage machine is specified, the port name of the virtual storage machine is output.
Host Group ID	The ID of a host group whose host mode option is changed
Virtual Storage Machine S/N	The serial number of the virtual storage machine No value is output when a virtual storage machine is not specified.
Mode	The host mode For details about the host mode, see *Provisioning Guide for Open Systems*.
Option[0:31]	Values of host mode options from 0 to 31 bits
Option[32:63]	Values of host mode options from 32 to 63 bits
Option[64:95]	Values of host mode options from 64 to 95 bits
Option[96:127]	Values of host mode options from 96 to 127 bits
Auth Mode	The authentication mode Chap: CHAP authentication is enabled None: CHAP authentication is disable Both: Connection is available both with and without CHAP authentication
Chap Mutual	CHAP authentication is unidirectional or bidirectional Enable: Set to bidirectional authentication mode Disable: Set to the unidirectional authentication mode

Modify Initiator CHAP User

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Modify Initiator CHAP User
++Port=2B,CHAP User=user1
```

Detailed Information

Item	Description
Command	The command name
Port	The name of the port to which the iSCSI initiator belongs
CHAP User	The CHAP user name to be set for Secret

Modify Journal

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Modify Journal
++JNL=0xAAA,Timer Type=System,Use of Cache=Use,
Inflow Control=Enable,Data Over flow Watch(s)=600,MU=0,
Copy Pace=Medium,Path blockade watch timer Transfer=Enable,
Path blockade watch timer(m)=60
```

Detailed Information

Item	Description
Command	The command name
JNL	The number of a journal whose options to be changed
Timer Type	The clock type used for consistency time System: The system clock of the main frame host on the primary site Local: No system clock is used. None: The system clock of the main frame host on the primary site when data is copied from the storage system on the secondary site to the one on the primary site
Use of Cache	Indicates whether journal data in the restore journal is stored in cache or not Not Use: Not stored in cache, Use: Stored in cache
Inflow Control	The setting status of data inflow Enable: Enabled, Disable: Disabled

Item	Description
Data Over flow Watch(s)	The time for data over flow to be watched: 0 to 600 seconds
MU	The MU number
Copy Pace	The data transfer speed for copy operation Low: Low speed, Medium: Medium speed, High: High speed
Path blockade watch timer Transfer	The setting status of the path blockade watch timer Enable: Enabled, Disable: Disabled
Path blockade watch timer(m)	The path blockade watch time: 1 to 60 minutes If the value is 0, the path blockade watch timer is disabled.

Modify Journal(MP Blade)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Modify Journal(MP Blade)
++JNL=0xAAA,MP Blade ID=1
```

Detailed Information

Item	Description
Command	The command name
JNL	The number of a journal to be modified
MP Blade ID	The MP Blade ID to be assigned to a target journal

Modify Ldev(ALUA)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Modify Ldev(ALUA)
++LDEV(LDKC:CU:LDEV)=0x00:0xAA:0xBB,ALUA=Disable
```

Detailed Information

Item	Description
Command	The command name
LDEV(LDKC:CU:LDEV)	The ID of the LDEV on which the ALUA mode is set or canceled

Item	Description
ALUA	The setting status of the ALUA mode Enable: Enabled, Disable: Disabled

Modify Ldev(Blocked)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Modify Ldev(Blocked)
++LDEV(LDKC:CU:LDEV)=0x00:0xAA:0xBB
```

Detailed Information

Item	Description
Command	The command name
LDEV(LDKC:CU:LDEV)	The LDEV ID of an LDEV to be blocked

Modify Ldev(Capacity Saving)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,196,,
[Config
Command],,,Accept,from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,
Seq.=xxxxxxxxxx
+Command=Modify Ldev(Capacity Saving)
++LDEV(LDKC:CU:LDEV)=0x00:0xAA:0xBB,Capacity Saving=Deduplication
Compression
```

Detailed Information

Item	Description
Command	The command name
LDEV(LDKC:CU:LDEV)	The LDEV ID of the LDEV for which capacity saving is to be set
Capacity Saving	The status of the capacity saving setting Disable: Capacity saving is disabled, Compression: Compression, Deduplication Compression: Deduplication and compression

Modify Ldev(CLPR)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Modify Ldev(CLPR)
++LDEV(LDKC:CU:LDEV)=0x00:0xAA:0xBB,CLPR=31
```

Detailed Information

Item	Description
Command	The command name
LDEV(LDKC:CU:LDEV)	The LDEV ID of an LDEV in which the CLPR is changed
CLPR	The ID of the CLPR to be changed

Modify Ldev(Command Device)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Modify Ldev(Command Device)
++LDEV(LDKC:CU:LDEV)=0x00:0xAA:0xBB,Command Device=Enable,
Security=Enable,UserAuth=Disable,DeviceGroup=Disable
```

Detailed Information

Item	Description
Command	The command name
LDEV(LDKC:CU:LDEV)	The LDEV ID of an LDEV to be set
Command Device	The setting status of the command device attribute Enable: Enabled, Disable: Disabled
Security	The setting status of the command device security Enable: Enabled, Disable: Disabled
UserAuth	The setting status of the user authentication Enable: Enabled, Disable: Disabled
DeviceGroup	The setting status of the device group definition Enable: Enabled, Disable: Disabled

Modify Ldev(Discard Zero Page)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Modify Ldev(Discard Zero Page)
++LDEV(LDKC:CU:LDEV)=0x00:0xAA:0xBB
```

Detailed Information

Item	Description
Command	The command name
LDEV(LDKC:CU:LDEV)	The LDEV ID of an LDEV from which the zero data page is discarded

Modify Ldev(Full Allocation)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Modify Ldev(Full Allocation)
++LDEV(LDKC:CU:LDEV)=0x00:0x01:0x02,Full Allocation=Disable
```

Detailed Information

Item	Description
Command	The command name
LDEV(LDKC:CU:LDEV)	The LDEV ID of an LDEV for which Full Allocation is set to be enabled or disabled
Full Allocation	The setting status of Full Allocation Enable: Full Allocation is enabled. Disable: Full Allocation is disabled.

Modify Ldev(MP Blade)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Modify Ldev(MP Blade)
++LDEV(LDKC:CU:LDEV)=0x00:0xAA:0xBB,MP Blade ID=7
```

Detailed Information

Item	Description
Command	The command name
LDEV(LDKC:CU:LDEV)	The LDEV ID of an LDEV to which an MP Blade is assigned
MP Blade ID	The ID of the MP Blade to which the LDEV is assigned

Modify Ldev(Nickname)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Modify Ldev(Nickname)
++LDEV(LDKC:CU:LDEV)=0x00:0xAA:0xBB,Nickname=AAAAAAAAAA
```

Detailed Information

Item	Description
Command	The command name
LDEV(LDKC:CU:LDEV)	The LDEV ID of an LDEV on which a name is designated
Nickname	The name to be designated to the LDEV

Modify Ldev(Quorum Disable)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Modify Ldev(Quorum Disable)
++LDEV(LDKC:CU:LDEV)=0x00:0x01:0x02
```

Detailed Information

Item	Description
Command	The command name
LDEV(LDKC:CU:LDEV)	The LDEV ID of the volume whose setting as a quorum disk used by global-active device is released

Modify Ldev(Quorum Enable)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Modify Ldev(Quorum Enable)
++LDEV(LDKC:CU:LDEV)=0x00:0x01:0x02,Quorum Disk ID=1,
Controller ID=7,S/N=12345
```

Detailed Information

Item	Description
Command	The command name
LDEV(LDKC:CU:LDEV)	The LDEV ID of the volume to be set as a quorum disk used by global-active device
Quorum Disk ID	The ID of the quorum disk used by global-active device to be set
Controller ID	The controller ID of the storage system on which the quorum disk used by global-active device is set 5: USP V/VM, 6: VSP, 7: VSP G1000/G1500 and VSP F1500, 18: VSP Gx00, VSP Fx00, 19: HUS VM
S/N	The serial number of the storage system on which the quorum disk used by global-active device is set

Modify Ldev(Restore)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Modify Ldev(Restore)
++LDEV(LDKC:CU:LDEV)=0x00:0xAA:0xBB
```

Detailed Information

Item	Description
Command	The command name
LDEV(LDKC:CU:LDEV)	The LDEV ID of an LDEV to be restored

Modify Ldev(SSID)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
```

```
+Command=Modify Ldev(SSID)
++LDEV(LDKC:CU:LDEV)=0x00:0xAA:0xBB,SSID=0x0123
```

Detailed Information

Item	Description
Command	The command name
LDEV(LDKC:CU:LDEV)	The LDEV ID of an LDEV to which the SSID is set
SSID	The SSID to be set

Modify Ldev(Tier)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Modify Ldev(Tier)
++LDEV(LDKC:CU:LDEV)=0x00:0xAA:0xBB,Tier Relocation=Enable,
Tiering Policy=Level1,New Page Assignment Tier=High
```

Detailed Information

Item	Description
Command	The command name
LDEV(LDKC:CU:LDEV)	The LDEV ID of an LDEV to which the tier is relocated
Tier Relocation	The setting status of the tier relocation Enable: Relocated, Disable: Not relocated
Tiering Policy	The tiering policy ID is output in the format of "Level*ID*". All is output when all tiers are used at relocation. A hyphen (-) is output for the value when Tier Relocation is disabled.
New Page Assignment Tier	The tier when a new page is assigned High: High performance tier Middle: Medium performance tier Low: Low performance tier

Modify Local Replica Opt

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Modify Local Replica Opt
```

```
++Option Type=Open,Option=Enable
++Option ID={1,2,25},Num. of IDs=3
```

Detailed Information

Item	Description
Command	The command name
Option Type	The local replica option type to be set Open: Local replica options for ShadowImage, Thin Image, Volume Migration, and nondisruptive migration MF: Local replica options for ShadowImage for Mainframe, Compatible FlashCopy® V2, Compatible Software for IBM® FlashCopy® SE, and Volume Migration
Option	The setting status of the local replica option Enable: Enabled, Disable: Disabled
Option ID	The IDs of the specified local replica options For details of the local replica option ID, see *Hitachi ShadowImage® User Guide*, *Hitachi ShadowImage® for Mainframe User Guide*, *Hitachi Thin Image User Guide*, and *Hitachi Compatible FlashCopy® User Guide*.
Num. of IDs	The number of IDs of the specified local replica options

Modify LUN(Asymmetric Access)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Modify LUN(Asymmetric Access)
++Port=1A,Host Group ID=0x001,Virtual Storage Machine S/N=23456,
Asymmetric Access State=Active Optimized
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port whose setting is modified When a virtual storage machine is specified, the port name of the virtual storage machine is output.
Host Group ID	The ID of a host group whose setting is modified When a virtual storage machine is specified, the host group ID of the virtual storage machine is output.
Virtual Storage Machine S/N	The serial number of the virtual storage machine No value is output when a virtual storage machine is not specified.

Item	Description
Asymmetric Access State	The setting status of the asymmetric access states Active Optimized: Prioritized, Active Non Optimized: Not prioritized

Modify Parity Group

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Modify Parity Group
++PG=1-1,Accelerated Compression=Disable
```

Detailed Information

Item	Description
Command	The command name
PG	The parity group number
Accelerated Compression	The setting status of the Accelerated Compression for a parity group Enable: Enabled, Disable: Disabled

Modify Pool Attribute

Modify Pool Attribute is an audit log generated when a command operation is performed with the DKCMAIN program version earlier than 80-04-0X-XX/XX.

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Modify Pool Attribute
++Pool ID=10,Attribute=DP
```

Detailed Information

Item	Description
Command	The command name
Pool ID	The pool ID of a pool whose attribute is to be changed
Attribute	The pool attribute after the change DP: Dynamic Provisioning DT: Dynamic Tiering

Modify Pool(Data Direct Mapping)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Modify Pool(Data Direct Mapping)
++Pool ID=10,Data Direct Mapping=Enable
```

Detailed Information

Item	Description
Command	The command name
Pool ID	The ID of the pool on which Data Direct Mapping is set
Data Direct Mapping	The setting status of Data Direct Mapping Enable: Data Direct Mapping is enabled. Disable: Data Direct Mapping is disabled.

Modify Pool(Deduplication)

Example (When assigning the deduplication system data volume)

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,196,,
[Config
Command],,,Accept,from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,
Seq.=xxxxxxxxxx
+Command=Modify Pool(Deduplication)
++Pool ID=10,Deduplication=Yes
++{LDEV(LDKC:CU:LDEV),SSID}=[{0x00:0xAA:0xBB,0x6500}],Num. of LDEVs=1
```

Example (When not assigning the deduplication system data volume)

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,196,,
[Config
Command],,,Accept,from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,
Seq.=xxxxxxxxxx
+Command=Modify Pool(Deduplication)
++Pool ID=10,Deduplication=No
```

Detailed Information

Item	Description
Command	The command name
Pool ID	The pool ID of the pool to which the deduplication system data volume is to be assigned
Deduplication	Whether to assign the deduplication system data volume

Item	Description
	Yes: Assigns the volume. No: Does not assign the volume.
LDEV(LDKC:CU:LDEV)	The LDEV IDs for LDEVs to be set as the deduplication system data volume If Deduplication is No, this index is not output.
SSID	The SSID to be set for the deduplication system data volume If Deduplication is No, this index is not output. If the option is not specified or auto is specified, a hyphen (-) is output.
Num. of LDEVs	The number of deduplication system data volumes to be created If Deduplication is No, this index is not output.

Modify Pool(Restore)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Modify Pool(Restore)
++Pool ID=10
```

Detailed Information

Item	Description
Command	The command name
Pool ID	The pool ID of a pool to be restored

Modify Pool(Threshold)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Modify Pool(Threshold)
++Pool ID=10,Warning Threshold(%)=85,
High water mark Threshold(%)=85,Subscription(%)=65530,
Monitor Mode=-,Blocking Mode=pool_full
```

Detailed Information

Item	Description
Command	The command name
Pool ID	The pool ID of a pool whose threshold is to be changed

Item	Description
Warning Threshold(%)	The warning threshold of the usage rate of a pool
High water mark Threshold(%)	The depletion threshold of the usage rate of a pool
Subscription(%)	The maximum reserve rate of virtual volumes for the pool capacity Unlimited is output as a value when the reserve rate is unlimited.
Monitor Mode	The monitor mode period: Monitoring periodically continuous: Monitoring continuously realtime_tiering: The active flash function is enabled. non_realtime_tiering: The active flash function is disabled. A hyphen (-) is output for the value when Blocking Mode option is specified.
Blocking Mode	The blocking mode pool_full: Read and write to the virtual volume are not available when the pool is full. When the pool is blocked, read and write to the virtual volume are available. pool_vol_blockade: Read and write to the virtual volume are not available when the pool is blocked. When the pool is full, read and write to the virtual volume are available. full_or_blockade: Read and write to the virtual volume are not available when the pool is full or blocked. no_blocking: Read and write to the virtual volume are available even if the pool is full or blocked.

Modify Pool(TierOpt)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Modify Pool(TierOpt)
++Pool ID=10,Tier=1,Tier Ratio(%)=2,Tier Buffer Rate(%)=40,
Attribute=DP
```

Detailed Information

Item	Description
Command	The command name
Pool ID	The ID of a pool to be modified

Item	Description
Tier	The tier to be modified
Tier Ratio(%)	The rate of space for new allocation per tier
Tier Buffer Rate(%)	The buffer rate for relocation per tier
Attribute	The pool attribute after the change DP: Dynamic Provisioning, DT: Dynamic Tiering

Modify Port

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Modify Port
++Port=1A,Speed(Gbps)=8,Fibre. Address=1,Fabric=Enable,
Connection=FC-AL,Switch=Enable,,Virtual Storage Machine S/N=23456
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port whose setting is to be changed When a virtual storage machine is specified, the port name of the virtual storage machine is output.
Speed(Gbps)	The host speed of a port
Fibre. Address	The address of the Fibre Channel Port
Fabric	The setting status of the fabric switch Enable: Enabled, Disable: Disabled
Connection	The topology of the Fabric switch FC-AL: FC-AL (Fibre Channel-Arbitrated Loop) is selected P-to-P: Point-to-Point is selected
Switch	The setting status of the LUN security Enable: Enabled, Disable: Disabled
Blank item	Nothing is output due to unused.
Virtual Storage Machine S/N	The serial number of the virtual storage machine No value is output when a virtual storage machine is not specified.

Modify Port(Attribute)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Modify Port(Attribute)
++Port=1A,Attribute=Target
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port whose attribute is to be changed
Attribute	The attribute after the change Target: Target port Initiator: Initiator port External: External port RCU Target: RCU Target port

Modify Port(iSCSI)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Modify Port(iSCSI)
++Port=1A,Speed(Gbps)=8,Security Switch=Enable,
Ethernet MTU(byte)=1500,VLAN Tagging Mode=Enable,VLAN ID=100,
New VLAN ID=200,IPv4 Address=127.0.0.1,Subnet Mask=255.255.255.0,
Default Gateway=10.0.0.4,IPv6 Mode=Enable,
LinkLocal Addressing Mode=Enable,
IPv6 LinkLocal Address=fe80:0:0:0:199a:b948:0fbc:a148,
Global Addressing Mode=Manual,
IPv6 Global Address=fe80:0:0:0:199a:b948:0fbc:a149,
IPv6 Global Address 2=fe81:0:0:0:199a:b948:0fbc:a14a,
IPv6 Default Gateway=fe80:0:0:0:199a:b948:0fbc:a14b,
TCP Port=25,Selective ACK Mode=Enable,
Delayed ACK Mode=Disable,Window Scale(K)=128,
Keep Alive Timer(s)=30,iSNS Server=Disable,iSNS Server IP=127.0.0.1,
iSNS Server TCP Port=26,Virtual Storage Machine S/N=23456
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port whose settings are modified

Item	Description
	When a virtual storage machine is specified, the port name of the virtual storage machine is output.
Speed(Gbps)	The port host speed: Auto, 1, 2, 4, 8, 10, or 16
Security Switch	The setting status of the security switch Enable: Enabled, Disable: Disabled
Ethernet MTU(byte)	The value of Ethernet MTU (maximum transmission unit): 1500, 4500, or 9000 *
VLAN Tagging Mode	The VLAN tagging mode* Enable: Enabled, Disable: Disabled No value is output when VLAN ID is deleted.
VLAN ID	The VLAN ID before modification* No value is output when VLAN ID is added. For a VLAN ID to be deleted, the VLAN ID (1 to 4094) to be deleted is output. For a VLAN ID to be modified, the VLAN ID (1 to 4094) to be modified is output.
New VLAN ID	The VLAN ID after modification* For a VLAN ID to be added, the added VLAN ID (1 to 4094) is output. For a VLAN ID to be deleted, no value is output. For a VLAN ID to be modified, the modified VLAN ID (1 to 4094) is output.
IPv4 Address	The IPv4 address*
Subnet Mask	The subnet mask of the IPv4*
Default Gateway	The default gateway of the IPv4*
IPv6 Mode	The IPv6 setting status* Enable: Enabled, Disable: Disabled
LinkLocal Addressing Mode	The input mode of the link local address* Auto: Automatic input, Manual: Manual input No value is output when IPv6 Mode is disabled.
IPv6 LinkLocal Address	The IPv6 link local address* No value is output when IPv6 Mode is disabled or Link Local Addressing Mode is Auto.
Global Addressing Mode	The input mode of the global address and the global address 2* Auto: Automatic input, Manual: Manual input No value is output when IPv6 Mode is disabled.
IPv6 Global Address	The IPv6 global address* No value is output when IPv6 Mode is disabled or Link Local Addressing Mode is Auto.

Item	Description
IPv6 Global Address 2	The IPv6 global address 2* No value is output when IPv6 Mode is disabled or Link Local Addressing Mode is Auto.
IPv6 Default Gateway	The IPv6 default gateway* No value is output when IPv6 Mode is disabled.
TCP Port	The TCP port number*
Selective ACK Mode	The setting status of Selective ACK Mode* Enable: Enabled, Disable: Disabled
Delayed ACK Mode	The setting status of Delayed ACK Mode* Enable: Enabled, Disable: Disabled
Window Scale(K)	The TCP window size: 64, 128, 256, 512, or 1024*
Keep Alive Timer(s)	The setting status of Keep Alive Ttimer*
iSNS Server	The setting status of iSNS Server* Enable: Enabled, Disable: Disabled
iSNS Server IP	The IP address of the iSNS server*
iSNS Server TCP Port	The TCP port number of the iSNS server*
Virtual Storage Machine S/N	The serial number of the virtual storage machine No value is output when a virtual storage machine is not specified.
*For settings other than port attributes, the user setting values are output even if options are omitted.	

Modify Port(T10PI)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Modify Port(T10PI)
++Port=1A,T10PI=Enable
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port for which T10 PI mode is set When a virtual storage machine is specified, the port name of the virtual storage machine is output.
T10PI	The setting status of the T10 PI mode

Item	Description
	Enable: Enabled; Disable: Disabled

Modify Quorum

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00, Out-of-band,uid=user-name,196,,
[Config
Command],,,Accept,from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,
Seq.=xxxxxxxxxx
+Command=Modify Quorum
++Quorum Disk ID=1, Read Response Guaranteed Time=15
```

Detailed Information

Item	Description
Command	The command name
Quorum Disk ID	Indicates the ID of a global-active device quorum disk whose Read Response Guaranteed Time When Quorum Disk Blocked value will be updated.
Read Response Guaranteed Time	Indicates the updated value of Read Response Guaranteed Time When Quorum Disk Blocked for global-active device in seconds.

Modify RCU

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Modify RCU
++S/N=12345,MCU=0xAAAA,RCU=0xBBBB,SSID=0x0123,Controller ID=7,
Path Gr. ID=0,Min.Path=1,Round Trip Time(ms)=30,RIO MIH(s)=3,
FREEZE=Enable
```

Detailed Information

Item	Description
Command	The command name
S/N	The serial number of the remote storage system
MCU	The CU number of the local storage system "Free" is output when CU Free is specified.
RCU	The CU number of the remote storage system "Free" is output when CU Free is specified.

Item	Description
SSID	The SSID of the remote storage system No value is output when CU Free is specified.
Controller ID	The controller ID of the remote storage system 5: USP V/VM, 6: VSP, 7: VSP G1000/G1500 and VSP F1500, 18: VSP Gx00, VSP Fx00, 19: HUS VM No value is output when CU Free is not specified.
Path Gr. ID	The path group ID of the remote storage system No value is output when CU Free is not specified.
Min.Path	The minimum number of paths between the local storage system and remote storage system
Round Trip Time(ms)	The round trip time: the delayed time for the remote I/O round trip
RIO MIH(s)	The value of the RIO MTH (remote I/O missing interrupt handler) timer: The wait time for data copy from the local storage system to the remote storage system to be complete
FREEZE	The setting status of the CGROUP (FREEZE/RUN) PPRC TSO command Enable: Enabled, Disable: Disabled

Modify Snapshot(Clone)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00, Out-of-band,uid=user-name,1,,
[Config
Command],,,Accept,from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,
Seq.=xxxxxxxxxx
+Command=Modify Snapshot(Clone)
++P-VOL(LDKC:CU:LDEV)=0x00:0xAA:0xBB,
MU=1,Copy Pace=Medium,Virtual Storage Machine S/N=23456,Range=Group
```

Detailed Information

Item	Description
Command	The command name
P-VOL(LDKC:CU:LDEV)	The LDEV ID of the primary volume shared by a pair to be cloned When a virtual storage machine is specified, the LDEV ID of the virtual storage machine is output.
MU	The MU number of the pair to be cloned
Copy Pace	The copy speed Faster: High speed, Medium: Medium speed, Slower: Low speed

Item	Description
Virtual Storage Machine S/N	The serial number of the virtual storage machine No value is output when a virtual storage machine is not specified.
Range	The range for cloned pairs Volume: The pair to be cloned Group: All pairs in the group including the pair is cloned

Modify Snapshot(Restore)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Modify Snapshot(Restore)
++P-VOL(LDKC:CU:LDEV)=0x00:0xAA:0xBB,MU=1,
Virtual Storage Machine S/N=23456
```

Detailed Information

Item	Description
Command	The command name
P-VOL(LDKC:CU:LDEV)	The LDEV ID of the primary volume shared by a pair to be restored When a virtual storage machine is specified, the LDEV ID of the virtual storage machine is output.
MU	The MU number of the pair to be restored
Virtual Storage Machine S/N	The serial number of the virtual storage machine No value is output when a virtual storage machine is not specified.

Modify Snapshot(Resync)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Modify Snapshot(Resync)
++P-VOL(LDKC:CU:LDEV)=0x00:0xAA:0xBB,MU=1,
Virtual Storage Machine S/N=23456
```

Detailed Information

Item	Description
Command	The command name
P-VOL(LDKC:CU:LDEV)	The LDEV ID of the primary volume shared by a pair to be resynchronized When a virtual storage machine is specified, the LDEV ID of the virtual storage machine is output.
MU	The MU number of the pair to be resynchronized
Virtual Storage Machine S/N	The serial number of the virtual storage machine No value is output when a virtual storage machine is not specified.

Modify Snapshot(Split)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Modify Snapshot(Split)
++P-VOL(LDKC:CU:LDEV)=0x00:0xAA:0xBB,MU=1,
Virtual Storage Machine S/N=23456,Range=Group
```

Detailed Information

Item	Description
Command	The command name
P-VOL(LDKC:CU:LDEV)	The LDEV ID of the primary volume shared by a pair to be split When a virtual storage machine is specified, the LDEV ID of the virtual storage machine is output.
MU	The MU number of the pair to be split
Virtual Storage Machine S/N	The serial number of the virtual storage machine No value is output when a virtual storage machine is not specified.
Range	The range for splitting pairs Volume: The pair to be split Group: All pairs in the group including the pair is split

Modify SPM Group

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
```

```
+Command=Modify SPM Group
++Port=1A,SPM Group=XXXXXXXXXXXX,Priority=Prio,Limit=100 IOPS
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port to which the SPM group, for which SPM information is set, belongs
SPM Group	The name of an SPM group for which SPM information is set
Priority	The attribute after the WWN is modified Prio: Prioritized WWN, Non-Prio: Not prioritized WWN
Limit	The threshold value for the WWN when Priority is Prio The upper limit value for the WWN when Priority is Non-Prio The unit is I/O rate (IOPS) or transfer rate (KB/s) If MB is specified at the command option, the value calculated on the basis of 1MB=1024KB is output.

Modify SPM Host Group

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Modify SPM Host Group
++Port=1A,Host Group Name=XXXXXXXXXXXX,Priority=Prio,
Limit=100 IOPS
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port to which the SPM group, for which SPM information is set, belongs
Host Group Name	The name of a host group to which the SPM group, for which SPM information is set, belongs
Priority	The attribute after the WWN is modified Prio: Prioritized WWN, Non-Prio: Not prioritized WWN
Limit	The threshold value for the WWN when Priority is Prio The upper limit value for the WWN when Priority is Non-Prio The unit is I/O rate (IOPS) or transfer rate (KB/s) If MB is specified at the command option, the value calculated on the basis of 1MB=1024KB is output.

Modify SPM WWN

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Modify SPM WWN
++Port=1A,WWN=XXXXXXXXXXXX,Priority=Prio,Limit=100 IOPS
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port to which the WWN, for which the SPM information is set, belongs
WWN	The WWN for which the SPM information is set
Priority	The attribute after the WWN is modified Prio: Prioritized WWN, Non-Prio: Not prioritized WWN
Limit	The threshold value for the WWN when Priority is Prio The upper limit value for the WWN when Priority is Non-Prio The unit is I/O rate (IOPS) or transfer rate (KB/s) If MB is specified at the command option, the value calculated on the basis of 1MB=1024KB is output.

Modify SPM WWN(Nickname)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Modify SPM WWN(Nickname)
++Port=1A,Nickname=XXXXXXXXXXXX,Priority=Prio,Limit=100 IOPS
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port to which the WWN, for which SPM information is set, belongs
Nickname	The SPM name (nickname) of the WWN for which SPM information is set
Priority	The attribute after the WWN is modified Prio: Prioritized WWN, Non-Prio: Not prioritized WWN
Limit	The threshold value for the WWN when Priority is Prio

Item	Description
	The upper limit value for the WWN when Priority is Non-Prio The unit is I/O rate (IOPS) or transfer rate (KB/s) If MB is specified at the command option, the value calculated on the basis of 1MB=1024KB is output.

Monitor Pool

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Monitor Pool
++Pool ID=10
```

Detailed Information

Item	Description
Command	The command name
Pool ID	The pool number of a pool to be monitored

Paircreate

Paircreate is an audit log generated when a command operation is performed with the DKCMAIN program version earlier than 80-04-0X-XX/XX.

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Paircreate
++Copy Kind=Remote
++P-VOL(Port-LUN-LDEV)=1A-2047-0x1A,
S-VOL(Port-LUN-LDEV)=1B-3-0x3B,
MCU S/N=12345,MCU SSID=0x6500,RCU S/N=22364,RCU SSID=0x3001,
Virtual Storage Machine S/N=23456
```

Detailed Information

Item	Description
Command	The command name
Copy Kind	Indicates whether the copy kind is Local copy or Remote copy Local: Local copy, Remote: Remote copy
P-VOL(Port-LUN-LDEV)*	The port number, the LU number, and the LDEV number of the primary volume

Item	Description
	The port number and the LU number show the expanded LU of Command Control Interface
S-VOL(Port-LUN-LDEV)*	The port number, the LU number, and the LDEV number of the secondary volume The port number and the LU number show the expanded LU of Command Control Interface
MCU S/N*	The serial number of the local storage system
MCU SSID*	The SSID to which a volume on the local storage system belongs For Local copy, the SSID to which the primary volume belongs
RCU S/N*	The serial number of the remote storage system For Local copy, the same value as that of MCU S/N is output.
RCU SSID*	The SSID to which a volume on the remote storage system belongs For Local copy, the SSID to which the secondary volume belongs
Virtual Storage Machine S/N	The serial number of the virtual storage machine No value is output when a virtual storage machine is not specified.
*When a virtual storage machine is specified, the value of the virtual storage machine is output.	

Paircreate(LocalCopy)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Paircreate(LocalCopy)
++Copy Kind=Local
++P-VOL(Port-LUN-LDEV)=1A-2047-0x1A,
S-VOL(Port-LUN-LDEV)=1B-3-0x3B,MCU S/N=12345,MCU SSID=0x6500,
RCU S/N=12345,RCU SSID=0x6500,
Virtual Storage Machine S/N=23456,
Copy Pace(TRK)=1,Range=Group,CTG ID=100,Split Mode=Normal,
S-VOL Hidden Mode=Enable,Pool ID(TI)=10,
Device Option=Enable
```

Detailed Information

Item	Description
Command	The command name
Copy Kind	The local copy Local is output as the fixed value.

Item	Description
P-VOL(Port-LUN-LDEV)*	The port number, the LU number, and the LDEV number of the primary volume The port number and the LU number show the expanded LU of Command Control Interface
S-VOL(Port-LUN-LDEV)*	The port number, the LU number, and the LDEV number of the secondary volume The port number and the LU number show the expanded LU of Command Control Interface
MCU S/N*	The serial number of the local storage system
MCU SSID*	The SSID to which the primary volume belongs
RCU S/N*	The same value as that of MCU S/N is output.
RCU SSID*	The SSID to which the secondary volume belongs
Virtual Storage Machine S/N	The serial number of the virtual storage machine No value is output when a virtual storage machine is not specified.
Copy Pace(TRK)	The track size for copy
Range	Specifies a range of pairs to be created Device: Specifies by the device Group: Specifies by the consistency group
CTG ID	The consistency group ID
Split Mode	The split mode when ShadowImage pairs are split Normal: The pair is split normally. Quick: The pair is split quickly. If it is not specified at the command option or the pair is other than ShadowImage one, a hyphen (-) is output.
S-VOL Hidden Mode	Indicates whether the secondary volume is hidden after a ShadowImage pair is created Enable: Hides the secondary volume Disable: Not hides the secondary volume Disable is output for pairs other than ShadowImage ones.
Pool ID(TI)	The pool ID of Thin Image pairs 0 (zero) is output for pairs other than Thin Image ones.
Device Option	Indicates whether the volume name defined in the configuration definition file is used Enable: Used, Disable: Not used
*When a virtual storage machine is specified, the value of the virtual storage machine is output.	

Paircreate(RemoteCopy)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Paircreate(RemoteCopy)
++Copy Kind=Remote
++P-VOL(Port-LUN-LDEV)=1A-2047-0x1A,
S-VOL(Port-LUN-LDEV)=1B-3-0x3B,
MCU S/N=12345,MCU SSID=0x6500,RCU S/N=22364,RCU SSID=0x3001,
Virtual Storage Machine S/N=23456,
Write Permission(Update Copy Error)=Enable,
Write Permission(RCU Suspend Failure)=Enable,
Initial Copy=None,Copy Pace(TRK)=1,JNL ID Option=Disable,
CTG ID=100,CTG Mode(Multi)=Disable,
Paircreate Mode(Diff)=Normal,CTG Option=Enable,
CTO Option=Enable,Inflow Control=Disable,Offloading Timer(s)=,
M-JNL=,R-JNL=,Quorum Disk ID=,Device Option=Enable
```

Detailed Information

Item	Description
Command	The command name
Copy Kind	The remote copy Remote is output as the fixed value.
P-VOL(Port-LUN-LDEV)*	The port number, the LU number, and the LDEV number of the primary volume The port number and the LU number show the expanded LU of Command Control Interface
S-VOL(Port-LUN-LDEV)*	The port number, the LU number, and the LDEV number of the secondary volume The port number and the LU number show the expanded LU of Command Control Interface
MCU S/N*	The serial number of the local storage system
MCU SSID*	The SSID to which a volume on the local storage system belongs
RCU S/N*	The serial number of the remote storage system
RCU SSID*	The SSID to which a volume on the remote storage system belongs
Virtual Storage Machine S/N	The serial number of the virtual storage machine No value is output when a virtual storage machine is not specified.
Write Permission(Update Copy Error)	The setting status of write permission if an error occurs during update copy Enable: Enabled, Disable: Disabled

Item	Description
Write Permission(RCU Suspend Failure)	The setting status of permission to write to the local storage system if the suspension operation cannot be performed on the remote storage system Enable: Enabled, Disable: Disabled
Initial Copy	The type of pair creation Entire: Creates pairs and copies data from the primary volume to the secondary volume None: Creates pairs and does not copy data from the primary volume to the secondary volume
Copy Pace(TRK)	The track size for copy
JNL ID Option	Indicates whether an option (-jp or -js) is specified for a journal ID Enable: Specified, Disable: Not specified Disable is output for pairs other than Universal Replicator ones
CTG ID	The consistency group ID
CTG Mode(Multi)	Indicates whether pairs are specified for consistency groups across multiple storage systems Enable: Specified, Disable: Not specified Disable is output for pairs other than Universal Replicator ones.
Paircreate Mode(Diff)	The pair creation mode Normal: Normal mode, Diff: Difference mode Normal is output for pairs other than Universal Replicator ones.
CTG Option	Indicates whether the consistency group option (-fg) is specified Enable: Specified, Disable: Not specified
CTO Option	Indicates whether the CTO option (-cto) is specified Enable: Specified, Disable: Not specified
Inflow Control	The setting status of the inflow control mode Enable: Enabled, Disable: Disabled No value is output when the CTO option is not specified.
Offloading Timer(s)	The time out value for the inflow control in seconds No value is output when the CTO option is not specified or the inflow control mode is disabled.
M-JNL	The master journal number No value is output for pairs other than Universal Replicator ones.
R-JNL	The restore journal number No value is output for pairs other than Universal Replicator ones.
Quorum Disk ID	The Quorum Disk ID No value is output for pairs other than global-active device ones.

Item	Description
Device Option	Indicates whether the volume name defined in the configuration definition file is used Enable: Used, Disable: Not used
*When a virtual storage machine is specified, the value of the virtual storage machine is output.	

Pairresync

Pairresync is an audit log generated when a command operation is performed with the DKCMAIN program version earlier than 80-04-0X-XX/XX.

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Pairresync
++Copy Kind=Local
++P-VOL(Port-LUN-LDEV)=1A-2047-0x1A,
S-VOL(Port-LUN-LDEV)=1B-3-0x3B,
MCU S/N=12345,MCU SSID=0x6500,RCU S/N=12345,RCU SSID=0x6500,
Resync Type=Reverse,Virtual Storage Machine S/N=23456
```

Detailed Information

Item	Description
Command	The command name
Copy Kind	Indicates whether the copy kind is Local copy or Remote copy Local: Local copy, Remote: Remote copy
P-VOL(Port-LUN-LDEV)*	The port number, the LU number, and the LDEV number of the primary volume The port number and the LU number show the expanded LU of Command Control Interface No value is output when the pair operation is performed by Command Control Interface from the remote storage system
S-VOL(Port-LUN-LDEV)*	The port number, the LU number, and the LDEV number of the secondary volume The port number and the LU number show the expanded LU of Command Control Interface
MCU S/N*	The serial number of the local storage system No value is output when the pair operation is performed by Command Control Interface from the remote storage system
MCU SSID*	The SSID to which a volume on the local storage system belongs No value is output when the pair operation is performed by Command Control Interface from the remote storage system

Item	Description
	For Local copy, the SSID to which the primary volume belongs
RCU S/N*	The serial number of the remote storage system For Local copy, the same value as that of MCU S/N is output.
RCU SSID*	The SSID to which a volume on the remote storage system belongs For Local copy, the SSID to which the secondary volume belongs
Resync Type	Indicates the direction of resynchronizing a pair Normal: Normal direction (Primary volume to secondary volume) Reverse: Reverse direction (Secondary volume to primary volume.) Normal is output when the Copy Kind is Remote.
Virtual Storage Machine S/N	The serial number of the virtual storage machine No value is output when a virtual storage machine is not specified.
*When a virtual storage machine is specified, the value of the virtual storage machine is output.	

Pairresync(LocalCopy)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Pairresync(LocalCopy)
++Copy Kind=Local
++P-VOL(Port-LUN-LDEV)=1A-2047-0x1A,
S-VOL(Port-LUN-LDEV)=1B-3-0x3B,MCU S/N=12345,MCU SSID=0x6500,
RCU S/N=12345,RCU SSID=0x6500,Resync Type=Reverse,
Virtual Storage Machine S/N=23456,Copy Pace(TRK)=1,
Pair Target Range=Device,CTG ID=100,Split Mode=Normal,
Device Option=Enable
```

Detailed Information

Item	Description
Command	The command name
Copy Kind	The local copy Local is output as the fixed value.
P-VOL(Port-LUN-LDEV)*	The port number, the LU number, and the LDEV number of the primary volume The port number and the LU number show the expanded LU of Command Control Interface
S-VOL(Port-LUN-LDEV)*	The port number, the LU number, and the LDEV number of the secondary volume

Item	Description
	The port number and the LU number show the expanded LU of Command Control Interface
MCU S/N*	The serial number of the local storage system
MCU SSID*	The SSID to which the primary volume belongs
RCU S/N*	The same value as that of MCU S/N is output.
RCU SSID*	The SSID to which the secondary volume belongs
Resync Type	Indicates the direction of resynchronizing a pair Normal: Normal direction (Primary volume to secondary volume) Reverse: Reverse direction (Secondary volume to primary volume)
Virtual Storage Machine S/N	The serial number of the virtual storage machine No value is output when a virtual storage machine is not specified.
Copy Pace(TRK)	The track size for copy
Pair Target Range	Specifies the range of pairs to be resynchronized Device: Specifies by the device Group: Specifies by the consistency group
CTG ID	The consistency group ID
Split Mode	The split mode when pairs are split Normal: The pair is split normally. Quick: The pair is split quickly. If it is not specified at the command option, a hyphen (-) is output.
Device Option	Indicates whether the volume name defined in the configuration definition file is used Enable: Used, Disable: Not used
*When a virtual storage machine is specified, the value of the virtual storage machine is output.	

Pairresync(RemoteCopy)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Pairresync(RemoteCopy)
++Copy Kind=Remote
++P-VOL(Port-LUN-LDEV)=1A-2047-0x1A,
S-VOL(Port-LUN-LDEV)=1B-3-0x3B,MCU S/N=12345,MCU SSID=0x6500,
RCU S/N=12345,RCU SSID=0x3001,
Virtual Storage Machine S/N=23456,
Write Permission(Update Copy Error)=Enable,
Write Permission(RCU Suspend Failure)=Enable,
```

```
Copy Pace(TRK)=1,JNL ID Option=Disable,CTG ID=100,
Resync-SWAP=Disable,CTG Mode(Multi)=Enable,CTG Option=Enable,
CTO Option=Enable,Inflow Control=Disable,
Offloading Timer(s)=1,Device Option=Enable
```

Detailed Information

Item	Description
Command	The command name
Copy Kind	The remote copy Remote is output as the fixed value.
P-VOL(Port-LUN-LDEV)*	The port number, the LU number, and the LDEV number of the primary volume The port number and the LU number show the expanded LU of Command Control Interface
S-VOL(Port-LUN-LDEV)*	The port number, the LU number, and the LDEV number of the secondary volume The port number and the LU number show the expanded LU of Command Control Interface No value is output when the option "-swaps" or "-swapp" is specified.
MCU S/N*	The serial number of the local storage system
MCU SSID*	The SSID to which a volume on the local storage system belongs
RCU S/N*	The serial number of the remote storage system No value is output when the option "-swaps" or "-swapp" is specified.
RCU SSID*	The SSID to which a volume on the remote storage system belongs
Virtual Storage Machine S/N	The serial number of the virtual storage machine No value is output when a virtual storage machine is not specified.
Write Permission(Update Copy Error)	The setting status of write permission if an error occurs during update copy Enable: Enabled, Disable: Disabled Enable is output when the option "-swaps" or "-swapp" is specified.
Write Permission(RCU Suspend Failure)	The setting status of permission to write to the local storage system if the suspension operation cannot be performed on the remote storage system Enable: Enabled, Disable: Disabled Enable is output when the option "-swaps" or "-swapp" is specified.
Copy Pace(TRK)	The track size for copy
JNL ID Option	Indicates whether an option (-jp or -js) is specified for a journal ID

Item	Description
	Enable: Specified, Disable: Not specified Disable is output for pairs other than Universal Replicator ones.
CTG ID	The consistency group ID No value is output when the option "-swaps" or "-swapp" is specified.
Resync-SWAP	Indicates whether an option (-swaps or -swapp) is specified Enable: Specified, Disable: Not specified
CTG Mode(Multi)	Indicates whether pairs are specified for consistency groups across multiple storage systems Enable: Specified, Disable: Not specified Disable is output for pairs other than Universal Replicator ones.
CTG Option	Indicates whether the consistency group option (-fg) is specified Enable: Specified, Disable: Not specified If the option "-swaps" or "-swapp" is specified, Disable is output for Universal Replicator pair.
CTO Option	Indicates whether the CTO option (-cto) is specified Enable: Specified, Disable: Not specified
Inflow Control	The setting status of the inflow control mode Enable: Enabled, Disable: Disabled No value is output when the CTO option is not specified.
Offloading Timer(s)	The time out value for the inflow control in seconds No value is output when the CTO option is not specified or the inflow control mode is disabled.
Device Option	Indicates whether the volume name defined in the configuration definition file is used Enable: Used, Disable: Not used
*When a virtual storage machine is specified, the value of the virtual storage machine is output.	

Pairsplit

Pairsplit is an audit log generated when a command operation is performed with the DKCMAIN program version earlier than 80-04-0X-XX/XX.

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Pairsplit
++Copy Kind=Local
++P-VOL(Port-LUN-LDEV)=1A-2047-0x1A,
S-VOL(Port-LUN-LDEV)=1B-3-0x3B,
MCU S/N=12345,MCU SSID=0x6500,RCU S/N=12345,RCU SSID=0x6500,
Range=LU,Virtual Storage Machine S/N=23456
```

Detailed Information

Item	Description
Command	The command name
Copy Kind	Indicates whether the copy kind is Local copy or Remote copy Local: Local copy, Remote: Remote copy
P-VOL(Port-LUN-LDEV)*	The port number, the LU number, and the LDEV number of the primary volume The port number and the LU number show the expanded LU of Command Control Interface No value is output when the pair operation is performed by Command Control Interface from the remote storage system
S-VOL(Port-LUN-LDEV)*	The port number, the LU number, and the LDEV number of the secondary volume The port number and the LU number show the expanded LU of Command Control Interface
MCU S/N*	The serial number of the local storage system No value is output when the pair operation is performed by Command Control Interface from the remote storage system
MCU SSID*	The SSID to which a volume on the local storage system belongs No value is output when the pair operation is performed by Command Control Interface from the remote storage system For Local copy, the SSID to which the primary volume belongs
RCU S/N*	The serial number of the remote storage system The same value as that of MCU S/N is output for Local copy.
RCU SSID*	The SSID to which a volume on the remote storage system belongs For Local copy, the SSID to which the secondary volume belongs
Range	The range of pair split Group: Split by the device group unit LU: Split by the LU unit
Virtual Storage Machine S/N	The serial number of the virtual storage machine No value is output when a virtual storage machine is not specified.
*When a virtual storage machine is specified, the value of the virtual storage machine is output.	

Pairsplit(LocalCopy)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Pairsplit(LocalCopy)
```

```
++Copy Kind=Local
++P-VOL(Port-LUN-LDEV)=1A-2047-0x1A,
S-VOL(Port-LUN-LDEV)=1B-3-0x3B,MCU S/N=12345,MCU SSID=0x6500,
RCU S/N=12345,RCU SSID=0x6500,Range=LU,
Virtual Storage Machine S/N=23456,Suspend Mode=Normal,
Split Mode=Normal,Copy Pace(TRK)=1,S-VOL Hidden Mode=Enable,
Pool ID(TI)=10
```

Detailed Information

Item	Description
Command	The command name
Copy Kind	The local copy Local is output as the fixed value.
P-VOL(Port-LUN-LDEV)*	The port number, the LU number, and the LDEV number of the primary volume The port number and the LU number show the expanded LU of Command Control Interface
S-VOL(Port-LUN-LDEV)*	The port number, the LU number, and the LDEV number of the secondary volume The port number and the LU number show the expanded LU of Command Control Interface
MCU S/N*	The serial number of the local storage system
MCU SSID*	The SSID to which the primary volume belongs
RCU S/N*	The same value as that of MCU S/N is output.
RCU SSID*	The SSID to which the secondary volume belongs
Range	The range of pair split Group: Split by the device group unit LU: Split by the LU unit
Virtual Storage Machine S/N	The serial number of the virtual storage machine No value is output when a virtual storage machine is not specified.
Suspend Mode	Indicates whether ShadowImage pairs are forcibly suspended at an error Normal: Not suspended, Force: Forcibly suspended If it is not specified at the command option or the pair is other than ShadowImage one, Normal is output.
Split Mode	The split mode when ShadowImage pairs are split Normal: The pair is split normally. Quick: The pair is split quickly. If it is not specified at the command option or the pair is other than ShadowImage one, a hyphen (-) is output.
Copy Pace(TRK)	The track size for copy
S-VOL Hidden Mode	Indicates whether the secondary volume is hidden after a ShadowImage pair is created

Item	Description
	Enable: Hides the secondary volume Disable: Not hides the secondary volume If it is not specified at the command option or the pair is other than ShadowImage one, a hyphen (-) is output.
Pool ID(TI)	The pool ID ofThin Image. If it is not paircreate –split operation, 0 (zero) is output.
*When a virtual storage machine is specified, the value of the virtual storage machine is output.	

Pairsplit(RemoteCopy)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Pairsplit(RemoteCopy)
++Copy Kind=Remote
++P-VOL(Port-LUN-LDEV)=1A-2047-0x1A,
S-VOL(Port-LUN-LDEV)=1B-3-0x3B,MCU S/N=12345,MCU SSID=0x6500,
RCU S/N=22364,RCU SSID=0x3001,Range=LU,
Virtual Storage Machine S/N=23456,
Suspend Status=P-VOL Failure,
S-VOL Write Permission (Suspend)=Disable,
P-VOL Write Permission (Force Suspend)=Disable,
Side File Liberation Kind=Flush,Rewind=Normal Suspend,
CTG ID=100,CTG Option=Disable
```

Detailed Information

Item	Description
Command	The command name
Copy Kind	The remote copy Remote is output as the fixed value.
P-VOL(Port-LUN-LDEV)*	The port number, the LU number, and the LDEV number of the primary volume The port number and the LU number show the expanded LU of Command Control Interface No value is output when the option "-RS" is specified.
S-VOL(Port-LUN-LDEV)*	The port number, the LU number, and the LDEV number of the secondary volume The port number and the LU number show the expanded LU of Command Control Interface
MCU S/N*	The serial number of the local storage system No value is output when the option "-RS" is specified.

Item	Description
MCU SSID*	The SSID to which a volume on the local storage system belongs
RCU S/N*	The serial number of the remote storage system
RCU SSID*	The SSID to which a volume on the remote storage system belongs
Range	The range of pair split Group: Split by the device group unit LU: Split by the LU unit
Virtual Storage Machine S/N	The serial number of the virtual storage machine No value is output when a virtual storage machine is not specified.
Suspend Status	Indicates whether the primary volume is writable after splitting a TrueCopy pair. P-VOL Failure: Not writable S-VOL Suspend: Writable S-VOL Suspend is output for pairs other than TrueCopy ones.
S-VOL Write Permission (Suspend)	Indicates whether the writing to the secondary volume is enabled in the suspend status Enable: Enabled, Disable: Disabled
P-VOL Write Permission (Force Suspend)	Indicates whether the writing to the primary volume is enabled in the forcible suspend status Enable: Enabled, Disable: Disabled
Side File Liberation Kind	The liberation kind of the side file Flush: Flush is specified. Purge: Purge is specified.
Rewind	Rewinds from SSWS to PSUS/PSUE Normal Suspend: Normal suspend SSWS Rewind: Rewound to PSUS/PSUE
CTG ID	The consistency group ID No value is output when the consistency group option "-fg" is not specified.
CTG Option	Indicates whether the consistency group option (-fg) is specified Enable: Specified, Disable: Not specified
*When a virtual storage machine is specified, the value of the virtual storage machine is output.	

Pairsplit-S

Pairsplit-S is an audit log generated when a command operation is performed with the DKCMAIN program version earlier than 80-04-0X-XX/XX.

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Pairsplit-S
++Copy Kind=Local
++P-VOL(Port-LUN-LDEV)=1A-2047-0x1A,
S-VOL(Port-LUN-LDEV)=1B-3-0x3B,
MCU S/N=12345,MCU SSID=0x6500,RCU S/N=12345,RCU SSID=0x6500,
Virtual Storage Machine S/N=23456
```

Detailed Information

Item	Description
Command	The command name
Copy Kind	Indicates whether the copy kind is Local copy or Remote copy Local: Local copy, Remote: Remote copy
P-VOL(Port-LUN-LDEV)*	The port number, the LU number, and the LDEV number of the primary volume The port number and the LU number show the expanded LU of Command Control Interface No value is output when the pair operation is performed by Command Control Interface from the remote storage system
S-VOL(Port-LUN-LDEV)*	The port number, the LU number, and the LDEV number of the secondary volume The port number and the LU number show the expanded LU of Command Control Interface
MCU S/N*	The serial number of the local storage system No value is output when the pair operation is performed by Command Control Interface from the remote storage system
MCU SSID*	The SSID to which a volume on the local storage system belongs No value is output when the pair operation is performed by Command Control Interface from the remote storage system For Local copy, the SSID to which the primary volume belongs
RCU S/N*	The serial number of the remote storage system For Local copy, the same value as that of MCU S/N is output.
RCU SSID*	The SSID to which a volume on the remote storage system belongs For Local copy, the SSID to which the secondary volume belongs
Virtual Storage Machine S/N	The serial number of the virtual storage machine No value is output when a virtual storage machine is not specified.
*When a virtual storage machine is specified, the value of the virtual storage machine is output.	

Pairsplit-S(LocalCopy)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Pairsplit-S(LocalCopy)
++Copy Kind=Local
++P-VOL(Port-LUN-LDEV)=1A-2047-0x1A,
S-VOL(Port-LUN-LDEV)=1B-3-0x3B,
MCU S/N=12345,MCU SSID=0x6500,RCU S/N=12345,RCU SSID=0x6500,
Virtual Storage Machine S/N=23456,Delete Range=LU
```

Detailed Information

Item	Description
Command	The command name
Copy Kind	The local copy Local is output as the fixed value.
P-VOL(Port-LUN-LDEV)*	The port number, the LU number, and the LDEV number of the primary volume The port number and the LU number show the expanded LU of Command Control Interface
S-VOL(Port-LUN-LDEV)*	The port number, the LU number, and the LDEV number of the secondary volume The port number and the LU number show the expanded LU of Command Control Interface
MCU S/N*	The serial number of the local storage system
MCU SSID*	The SSID to which the primary volume belongs
RCU S/N*	The same value as that of MCU S/N is output.
RCU SSID*	The SSID to which the secondary volume belongs
Virtual Storage Machine S/N	The serial number of the virtual storage machine No value is output when a virtual storage machine is not specified.
Delete Range	The range for deleting pairs Group: Deletes pairs by the device group LU: deletes pairs by the LU
*When a virtual storage machine is specified, the value of the virtual storage machine is output.	

Pairsplit-S(RemoteCopy)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
```

```
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Pairsplit-S(RemoteCopy)
++Copy Kind=Remote
++P-VOL(Port-LUN-LDEV)=1A-2047-0x1A,
S-VOL(Port-LUN-LDEV)=1B-3-0x3B,MCU S/N=12345,MCU SSID=0x6500,
RCU S/N=22364,RCU SSID=0x3001,
Virtual Storage Machine S/N=23456,,Delete Range=LU,
Force=Enable,Invisible=Enable,Type=P-VOL
```

Detailed Information

Item	Description
Command	The command name
Copy Kind	The remote copy Remote is output as the fixed value.
P-VOL(Port-LUN-LDEV)*	The port number, the LU number, and the LDEV number of the primary volume The port number and the LU number show the expanded LU of Command Control Interface No value is output when the option "-R" is specified.
S-VOL(Port-LUN-LDEV)*	The port number, the LU number, and the LDEV number of the secondary volume The port number and the LU number show the expanded LU of Command Control Interface
MCU S/N*	The serial number of the local storage system No value is output when the option "-R" is specified.
MCU SSID*	The SSID to which a volume on the local storage system belongs
RCU S/N*	The serial number of the remote storage system
RCU SSID*	The SSID to which a volume on the remote storage system belongs
Virtual Storage Machine S/N	The serial number of the virtual storage machine No value is output when a virtual storage machine is not specified.
Blank item	Nothing is output due to unused.
Delete Range	The range for deleting pairs Group: Deletes pairs by the device group LU: deletes pairs by the LU
Force	Indicates whether the setting for deleting pairs forcibly is enabled Enable: Pairs are forcibly deleted. Disable: Pairs are not forcibly deleted.
Invisible	Indicates whether hosts can access the volume after pairs are deleted Enable: The virtual LDEV ID is deleted from the volume on the local storage system not to be accessed by hosts.

Item	Description
	Disable: The virtual LDEV ID is not deleted from the volume on the local storage system to be accessed by hosts.
Type	The type of volumes of pairs to be deleted P-VOL: Primary volume, S-VOL: Secondary volume
*When a virtual storage machine is specified, the value of the virtual storage machine is output.	

Raidvchkset(Data Retention Utility)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Raidvchkset(Data Retention Utility)
++Guard Type=inv svd,Retention Term=365,
Virtual Storage Machine S/N=23456
```

Detailed Information

Item	Description
Command	The command name
Guard Type	The guard type to be specified for volumes by using Data Retention Utility inv: Invisible mode to be set sz0: Zero Read Cap mode to be set rwd: Protection from reading/writing wtd: Protection from writing svd: Protection from copying program products - (hyphen): Released from all protection modes If svd is specified along with a different guard type, two values separated by a space are displayed.
Retention Term	The retention term (days) A hyphen (-) is output for the value if it is not specified by the command option.
Virtual Storage Machine S/N	The serial number of the virtual storage machine No value is output when a virtual storage machine is not specified.

Reallocate Pool(Start)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
```

```
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Reallocate Pool(Start)
++Pool ID=10
```

Detailed Information

Item	Description
Command	The command name
Pool ID	The pool number of a pool in which the manual tier relocation is performed

Reallocate Pool(Stop)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Reallocate Pool(Stop)
++Pool ID=10
```

Detailed Information

Item	Description
Command	The command name
Pool ID	The pool number of a pool in which the manual tier relocation is interrupted

Rename Pool

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Rename Pool
++Pool ID=AA,Pool Name=XXXXXXX
```

Detailed Information

Item	Description
Command	The command name
Pool ID	The pool number of a pool to be renamed
Pool Name	The pool name after the change

Replace Snapshot

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Replace Snapshot
++Snapshot Group=ABCDEF,S-VOL(LDKC:CU:LDEV)=0x00:0xCC:0xDD,
MU=1,Virtual Storage Machine S/N=23456
```

Detailed Information

Item	Description
Command	The command name
Snapshot Group	The Snapshot Group name. The value is output only when Snapshot Group is specified.
S-VOL(LDKC:CU:LDEV)	The LDEV ID of the secondary volume. When a virtual storage machine is specified, the LDEV ID of the virtual storage machine is output.
MU	The MU number. The value is output only when an MU number is specified.
Virtual Storage Machine S/N	The serial number of the virtual storage machine No value is output when a virtual storage machine is not specified.

Reset CHAP User

Example 1: Resetting the secret of the CHAP user on the initiator side

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Reset CHAP User
++Port=1A,Target ID=0x00,Initiator CHAP User=AAAAAAA,
Virtual Storage Machine S/N=23456
```

Detailed Information 1: Resetting the secret of the CHAP user on the initiator side

Item	Description
Command	The command name
Port	The name of a port to which iSCSI targets belong
Target ID	The iSCSI target ID
Initiator CHAP User	The CHAP user name on the initiator side

Item	Description
Virtual Storage Machine S/N	The serial number of the virtual storage machine No output when a virtual storage machine is not specified

Example 2: Resetting the secret of the CHAP user on the target side

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Reset CHAP User
++Port=1A,Target ID=0x00,Target CHAP User=AAAAAAA,
Virtual Storage Machine S/N=23456
```

Detailed Information 2: Resetting the secret of the CHAP user on the target side

Item	Description
Command	The command name
Port	The name of a port to which iSCSI targets belong
Target ID	The iSCSI target ID
Target CHAP User	The CHAP user name on the target side
Virtual Storage Machine S/N	The serial number of the virtual storage machine No output when a virtual storage machine is not specified

Reset Command Status

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Reset Command Status
```

Detailed Information

Item	Description
Command	The command name

Reset Ldev Priority

Example 1: Deleting priority information from a combination of an LDEV and WWNs

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
```

```
+Command=Reset Ldev Priority
++LDEV(LDKC:CU:LDEV)=0x00:0xAA:0xBB
++WWN={AAAAAAAAA,BBBBBBBBB,……,DDDDDDDD},Num. of WWNs=10
++Priority Type=WWN
```

Detailed Information 1: Deleting priority information from a combination of an LDEV and WWNs

Item	Description
Command	The command name
LDEV(LDKC:CU:LDEV)	The LDEV ID of an LDEV from which the priority information is deleted.
WWN	The WWN from which priority information is deleted
Num. of WWNs	The number of WWNs from which priority information is deleted
Priority Type	The target from which priority information is deleted WWN: A combination of WWNs and an LDEV

Example 2: Deleting priority information from a combination of an LDEV and iSCSI names

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,196,,
[Config
Command],,,Accept,from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,
Seq.=xxxxxxxxxx
+Command=Reset Ldev Priority
++LDEV(LDKC:CU:LDEV)=0x00:0xAA:0xBB
++iSCSI Name={iqn.z1,iqn.z2,……,iqn.z10},Num. of iSCSI Names=10
++Priority Type=iSCSI
```

Detailed Information 2: Deleting priority information from a combination of an LDEV and iSCSI names

Item	Description
Command	The command name
LDEV(LDKC:CU:LDEV)	The LDEV ID of an LDEV from which the priority information is deleted.
iSCSI Name	The iSCSI name from which priority information is deleted
Num. of iSCSI Names	The number of iSCSI names from which priority information is deleted
Priority Type	The target from which priority information is deleted iSCSI: A combination of iSCSI names and an LDEV

Reset WWN

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Reset WWN
++Port=1A,Host Group ID=0x0FE,WWN=XXXXXXXXXXXXXXXX,
Virtual Storage Machine S/N=23456
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port to which a WWN, on which the nickname is deleted, belongs When a virtual storage machine is specified, the port name of the virtual storage machine is output.
Host Group ID	The ID of a host group to which a WWN, on which the nickname is deleted, belongs
WWN	The WWN on which the nickname is deleted
Virtual Storage Machine S/N	The serial number of the virtual storage machine No value is output when a virtual storage machine is not specified.

Set CHAP User

Example 1: Setting the secret of the CHAP user on the initiator side

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Set CHAP User
++Port=1A,Target ID=0x00,Initiator CHAP User=AAAAAAA,
Virtual Storage Machine S/N=23456
```

Detailed Information 1: Setting the secret of the CHAP user on the initiator side

Item	Description
Command	The command name
Port	The name of a port to which iSCSI targets belong
Target ID	The iSCSI target ID
Initiator CHAP User	The CHAP user name on the initiator side
Virtual Storage Machine S/N	The serial number of the virtual storage machine

Item	Description
	No value is output when a virtual storage machine is not specified.

Example 2: Setting the secret of the CHAP user on the target side

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Set CHAP User
++Port=1A,Target ID=0x00,Target CHAP User=AAAAAAA,
Virtual Storage Machine S/N=23456
```

Detailed Information 2: Setting the secret of the CHAP user on the target side

Item	Description
Command	The command name
Port	The name of a port to which iSCSI targets belong
Target ID	The iSCSI target ID
Target CHAP User	The CHAP user name on the target side
Virtual Storage Machine S/N	The serial number of the virtual storage machine No value is output when a virtual storage machine is not specified.

Set HBA iSCSI

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Set HBA iSCSI
++Port=1A,Target ID=0x00,iSCSI Name=XXXXXXXXXXXXXXXX,
iSCSI Nickname=VVVVVVVVVVVVVVV,Virtual Storage Machine S/N=23456
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port to which iSCSI targets belong
Target ID	The iSCSI target ID
iSCSI Name	The iSCSI name of a host bus adapter for which a nickname is set No value is output when the nickname is deleted.

Item	Description
iSCSI Nickname	The specified nickname
Virtual Storage Machine S/N	The serial number of the virtual storage machine No value is output when a virtual storage machine is not specified.

Set Ldev Priority

Example 1: Setting priority information for a combination of an LDEV and WWNs

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Set Ldev Priority
++LDEV(LDKC:CU:LDEV)=0x00:0xAA:0xBB
++{WWN,Priority,Limit}=[{AAAAAAAAA,Non-Prio,10 IOPS}……],
Num. of WWNs=10
++Priority Type=WWN
```

Detailed Information 1: Setting priority information for a combination of an LDEV and WWNs

Item	Description
Command	The command name
LDEV(LDKC:CU:LDEV)	The LDEV ID of an LDEV to which the definition of priority is set
WWN	The WWN for which the priority information is set
Priority	The setting status of priority information to be set for the WWN Prio: Prioritized, Non-Prio: Not prioritized
Limit	The upper limit value of the WWN when Priority is Non-Prio The unit is I/O rate (IOPS) or transfer rate (MB/s)
Num. of WWNs	The number of WWNs to be set
Priority Type	The target for which priority information is set WWN: A combination of WWNs and an LDEV

Example 2: Setting priority information for a combination of an LDEV and iSCSI names

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,196,,
[Config
Command],,,Accept,from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,
Seq.=xxxxxxxxxx
+Command=Set Ldev Priority
++LDEV(LDKC:CU:LDEV)=0x00:0xAA:0xBB
++{iSCSI Name,Priority,Limit}=[{iqn.z1,Non-Prio,10 IOPS}……],
```

```
Num. of iSCSI Names=10
++Priority Type=iSCSI
```

Detailed Information 2: Setting priority information for a combination of an LDEV and iSCSI names

Item	Description
Command	The command name
LDEV(LDKC:CU:LDEV)	The LDEV ID of an LDEV to which the definition of priority is set
iSCSI Name	The iSCSI name for which priority information is set
Priority	The setting status of priority information to be set for the iSCSI name Prio: Prioritized, Non-Prio: Not prioritized
Limit	The upper limit value of the iSCSI name when Priority is Non-Prio The unit is I/O rate (IOPS) or transfer rate (MB/s)
Num. of iSCSI Names	The number of iSCSI names for which priority information is set
Priority Type	The target for which priority information is set iSCSI: A combination of iSCSI names and an LDEV

Set WWN

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Set WWN
++Port=1A,Host Group ID=0x0FE,WWN=XXXXXXXXXXXXXXXX,
Nickname=AAAAAAA,Virtual Storage Machine S/N=23456
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port to which a WWN, on which the nickname is set, belongs When a virtual storage machine is specified, the port name of the virtual storage machine is output.
Host Group ID	The ID of a host group to which a WWN, in which the nickname is set, belongs
WWN	The WWN on which the nickname is set
Nickname	The nickname to be set
Virtual Storage Machine S/N	The serial number of the virtual storage machine

Item	Description
	No value is output when a virtual storage machine is not specified.

Stop Monitor Pool

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Stop Monitor Pool
++Pool ID=10
```

Detailed Information

Item	Description
Command	The command name
Pool ID	The pool number of a pool, the monitoring of which is stopped

Unmap Resource(LDEV)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Unmap Resource(LDEV)
++LDEV(LDKC:CU:LDEV)=0x00:0xAA:0xBB,
Map LDEV(LDKC:CU:LDEV)=0x00:0xCC:0xDD
```

Detailed Information

Item	Description
Command	The command name
LDEV(LDKC:CU:LDEV)	The LDEV ID of the actual volume
Map LDEV(LDKC:CU:LDEV)	The LDEV ID of the virtual volume to be unassigned from the actual volume "Reserve" is output if the reservation attribute of global-active device set on the LDEV ID of the volume that is used as a secondary volume of a global-active device pair is released.

Unmap Resource(Port)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Unmap Resource(Port)
++Port=1A,Map Port=1E
```

Detailed Information

Item	Description
Command	The command name
Port	The port name of the actual port
Map Port	The name of the virtual port whose assignment to the actual port is released

Unmap Snapshot

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,Out-of-band,uid=user-name,
196,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Unmap Snapshot
++P-VOL(LDKC:CU:LDEV)=0x00:0xAA:0xBB,
S-VOL(LDKC:CU:LDEV)=0x00:0xCC:0xDD,
MU=1,Virtual Storage Machine S/N=23456
```

Detailed Information

Item	Description
Command	The command name
P-VOL(LDKC:CU:LDEV)	The LDEV ID of the primary volume. These values are output only when a primary volume is specified. When a virtual storage machine is specified, the volume number of the virtual storage machine is output.
S-VOL(LDKC:CU:LDEV)	The LDEV ID of the secondary volume. These values are output only when a secondary volume is specified. When a virtual storage machine is specified, the volume number of the virtual storage machine is output.
MU	The MU number. The value is output only when the primary volume is specified.

Item	Description
Virtual Storage Machine S/N	The serial number of the virtual storage machine No value is output when a virtual storage machine is not specified.

Config Command (Mainframe system)

The following shows examples and descriptions of the audit logs when a storage system receives commands sent from hosts for mainframe system, computers using CCI, or hosts using Business Continuity Manager.

Business Continuity Manager

Add CTG

Example 1: when the copy type is SIMF

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,In-band MF,uid=user-name,
,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Add CTG
++I/F Version=0x40
++Copy Type=SIMF,CTG=0x00
```

Example 2: when the copy type is TCMF

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,In-band MF,uid=user-name,
,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Add CTG
++I/F Version=0x40
++Copy Type=TCMF,CTG=0x00,SCP Time(Sec.)=119
```

Detailed Information

Item	Description
Command	The command name
I/F Version	The command interface version
Copy Type	The copy type of the consistency group which is a target of registration or changing options SIMF: ShadowImage for Mainframe, TCMF: TrueCopy for Mainframe
CTG	The consistency group ID which is a target of registration or changing options
SCP Time(Sec.)	The SCP (Stage Change Pending) delay time This item is output only when Copy Type is TCMF

Add Pair

Example 1: when the copy type is SIMF

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,In-band MF,uid=user-name,
,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Add Pair
++Copy Type=SIMF,I/F Version=0x09,Execute Type=Cmd. Device,
S-VOL Check=Enable
++P-VOL(CU:LDEV)=0x00:0x00,S-VOL(CU:LDEV)=0x00:0x02,
MCU S/N=32652,MCU SSID=0x1B60,RCU S/N=32652,RCU SSID=0x1B60,,,
Copy Kind=,Copy Pace=Normal,CTG=0x17,Initial Copy=None
```

Example 2: when the copy type is TCMF

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,In-band MF,uid=user-name,
,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Add Pair
++Copy Type=TCMF,I/F Version=0x40,Execute Type=Cmd. Device,
S-VOL Check=Enable
++P-VOL(CU:LDEV)=0x00:0x00,S-VOL(CU:LDEV)=0x00:0x05,
MCU S/N=32652,MCU SSID=0x1B60,RCU S/N=32653,RCU SSID=0x1B60,,,
Fence Level=Never,Initial Copy=None,Copy Pace=Normal,,SCP=Enable,
CTG Attribute=CTG,Time Stamp=Enable,P-CTG=0x11,S-CTG=0x11
```

Example 3: when the copy type is URMF

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,In-band MF,uid=user-name,
,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Add Pair
++Copy Type=URMF,I/F Version=0x11,Execute Type=Cmd. Device,
S-VOL Check=Disable
++P-VOL(CU:LDEV)=0x00:0x00,S-VOL(CU:LDEV)=0x00:0x01,
MCU S/N=32652,MCU SSID=0x1B60,RCU S/N=32653,RCU SSID=0x1B60,
M-JNLG=0x000,R-JNLG=0x003,Mirror ID=1,Path Gr. ID=,Error Level=,
Initial Copy=Delta
```

Detailed Information

Item	Description
Output items common to Example 1 to Example 3	
Command	The command name
Copy Type	The copy type SIMF: ShadowImage for Mainframe, TCMF: TrueCopy for Mainframe, URMF: Universal Replicator for Mainframe
I/F Version	The command interface version
Execute Type	The volume type for executing the command Receive Device: LDEV which receives the command Cmd. Device: Command device

Item	Description
S-VOL Check	The setting status of the option for confirming the use condition of the secondary volume Enable: Enabled, Disable: Disabled
P-VOL(CU:LDEV)	The CU number and the LDEV number of the primary volume
S-VOL(CU:LDEV)	The CU number and the LDEV number of the secondary volume
MCU S/N	The serial number of the local storage system
MCU SSID	The SSID to which a volume on the local storage system belongs The SSID to which the primary volume belongs for operating ShadowImage for Mainframe pairs
RCU S/N	The serial number of the remote storage system The same value as MCU S/N is output for operating ShadowImage for Mainframe pairs
RCU SSID	The SSID to which a volume on the remote storage system belongs The SSID to which the secondary volume belongs for operating ShadowImage for Mainframe pairs
Output items when Copy Type is SIMF	
Blank item	Nothing is output due to unused.
Blank item	Nothing is output due to unused.
Copy Kind	The operation after creating pairs Normal: Copy, Suspend: Suspend No value is output if I/F Version is less than 0x10.
Copy Pace	The copy speed Normal: Normal, Slow: Slow
CTG	The consistency group ID No value is output if I/F Version is less than 0x04. No value is output if it is not specified at the command option.
Initial Copy	Type of the pair creation operation Entire: Creates pairs and copies data from the primary volume to the secondary volume. None: Creates pairs but does not copy data from the primary volume to the secondary volume. No value is output if I/F Version is less than 0x46.
Output items when Copy Type is TCMF	
Blank item	Nothing is output due to unused.
Blank item	Nothing is output due to unused.
Fence Level	The fence level to be set (conditions where the local storage system rejects write operations to the primary volume) Never: Can write to the primary volume even if the pair is split.

Item	Description
	Data: Cannot write to the primary volume when update copying fails. Status: Cannot write to the primary volume only when the storage system of the primary site cannot change the pair status of the secondary volume to PSUE
Initial Copy	The type of the pair creation operation Entire: Creates pairs and copies data from the primary volume to the secondary volume None: Creates pairs but does not copy data from the primary volume to the secondary volume
Copy Pace	The copy speed Normal: Normal, Slow: Slow
Blank item	Nothing is output due to unused.
SCP	The setting status of SCP (Stage Change Pending) time change Enable: Enabled, Disable: Disabled No value is output if I/F Version is less than 0x04. No value is output if CTG Attribute is Open/MF CTG.
CTG Attribute	The consistency group attribute Open/MF CTG: Consistency group common to Open/Mainframe CTG: Consistency group for Mainframe No value is output if I/F Version is 0x30 or less than 0x22. No value is output if values of P-CTG and S-CTG are not output.
Time Stamp	The transfer setting status of host time stamps to the secondary volume when creating pairs Enable: Enabled, Disable: Disabled No value is output if I/F Version is 0x20 or less than 0x16.
P-CTG	The consistency group number of the local storage system No value is output if I/F Version is less than 0x04. No value is output if the pair does not belong to the consistency group.
S-CTG	The consistency group number of the remote storage system No value is output if I/F Version is less than 0x04. No value is output if the pair does not belong to the consistency group.
Output items when Copy Type is URMF	
M-JNLG	The journal group number of the local storage system
R-JNLG	The journal group number of the remote storage system
Mirror ID	The mirror ID
Path Gr. ID	The path group ID No value is output if I/F Version is less than 0x33.
Error Level	The range of the pair split at failure occurrence

Item	Description
	Group: All pairs in the same mirror as the pair to be operated are split LU: Only the pair to be operated is split No value is output if I/F Version is less than 0x12.
Initial Copy	The type of the pair creation operation Entire: Creates pairs and copies data from the primary volume to the secondary volume None: Creates pairs but does not copy data from the primary volume to the secondary volume Delta: Creates delta resync pairs

Add RCU

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,In-band MF,uid=user-name,
,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Add RCU
++I/F Version=0x11,Execute Type=Cmd. Device
++MCU S/N=32652,MCU SSID=0x0000,RCU S/N=12345,RCU SSID=0x0000,
Controller ID=7,Path Gr. ID=,Range=CU
++{MCU Port,RCU Port,RCU CU}=[{2B,3C,0x00}],Num. of Paths=1
```

Detailed Information

Item	Description
Command	The command name
I/F Version	The command interface version
Execute Type	The volume type for executing the command Receive Device: LDEV which receives the command Cmd. Device: Command device No value is output if I/F Version is less than 0x11 or if Range is System.
MCU S/N	The serial number of the local storage system
MCU SSID	The SSID to which a volume on the local storage system belongs No value is output if Range is System.
RCU S/N	The serial number of the remote storage system
RCU SSID	The SSID to which a volume on the remote storage system belongs No value is output if Range is System.
Controller ID	The controller ID of the remote storage system 5: USP V/VM, 6: VSP, 7: VSP G1000/G1500 and VSP F1500

Item	Description
Path Gr. ID	The path group ID No value is output if I/F Version is less than 0x11 or if Range is CU.
Range	The connecting mode to RCU CU: CU connection, System: Storage system connection No value is output if I/F Version is less than 0x11.
MCU Port	The port name of the local storage system
RCU Port	The port name of the remote storage system
RCU CU	The CU number of the remote storage system No value is output if Range is System.
Num. of Paths	The number of paths to be created

At-time Split

Example 1: when the copy type is SIMF

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,In-band MF,uid=user-name,
,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=At-time Split
++I/F Version=0x40
++Copy Type=SIMF,Kind=Set,CTG=0x10,
Command ID=0,Suspend Time=2015/11/18 18:58:48,Timeout=3
```

Example 2: when the copy type is URMF

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,In-band MF,uid=user-name,
,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=At-time Split
++I/F Version=0x40
++Copy Type=URMF,Kind=Set,CTG=0x10,
P-VOL(CU:LDEV)=0x00:0x00,Command ID=0,
Suspend Time=2015/11/18 18:55:52,Suspend Type=Steady,Timeout=,
Reserve Time=2
```

Detailed Information

Item	Description
Command	The command name
I/F Version	The command interface version
Copy Type	The copy type SIMF: ShadowImage for Mainframe, URMF: Universal Replicator for Mainframe
Kind	The operation kind

Item	Description
	Set: Setting of a suspend reservation Reset: Releasing of a suspend reservation
CTG	The consistency group ID which is a target of a suspend reservation
P-VOL(CU:LDEV)	The CU number and LDEV number of the primary volume shared by a Universal Replicator for Mainframe pair and ShadowImage for Mainframe pair This item is output only when Copy Type is URMF.
Command ID	The ID assigned to the At-time Split command arbitrarily No value is output when Kind is Reset.
Suspend Time	The reserved suspend time No value is output when Kind is Reset.
Suspend Type	The suspend type Steady: Normal suspend, Quick: High-speed suspend This item is output only when Copy Type is URMF
Timeout	If Copy Type is SIMF, the time difference in minutes from the command issuance time to the start of suspension time is indicated. If Copy Type is URMF, the timeout time in minutes is indicated. No value is output when Kind is Reset or when the timeout is not specified if Copy Type is URMF.
Reserve Time	The time difference from the command issuance time to the reservation time is output in minutes No value is output when Kind is Reset. This item is output only when Copy Type is URMF

Build Command Device

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,In-band MF,uid=user-name,
,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Build Command Device
++I/F Version=0x10
++VOL(CU:LDEV)=0x00:0x06,APID=0x1234
```

Detailed Information

Item	Description
Command	The command name
I/F Version	The command interface version
VOL(CU:LDEV)	The CU number and the LDEV number of the volume to be allocated as a command device

Item	Description
APID	The application ID

Change Tier Option

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,In-band MF,uid=user-name,
,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Change Tier Option
++I/F Version=0x41
++LDEV(CU:LDEV)=0x00:0x00,Parameter Check=Enable,
Execute Type=Cmd. Device,SSID=0x1B60,S/N=32652,
Tiering Policy=Enable,Tiering Policy Level=0,Relocation=Start,
New Page Assignment Tier=Middle,Relocation Priority=Default
```

Detailed Information

Item	Description
Command	The command name
I/F Version	The command interface version
LDEV(CU:LDEV)	The CU number and the LDEV number of a volume whose storage tier is to be changed
Parameter Check	The setting status of the prior confirmation Enable: Enabled, Disable: Disabled
Execute Type	The volume type for executing the command Receive Device: LDEV which receives the command Cmd. Device: Command device
SSID	The SSID to which the volume to be operated belongs
S/N	The serial number of the storage system to be operated
Tiering Policy	The availability of the tiering policy level change Enable: Changed, Disable: Not changed
Tiering Policy Level	The tiering policy ID to be changed No value is output when Tiering Policy is Disable.
Relocation	The tier relocation command (Start or Stop) A hyphen (-) is output for the value if it is not specified at the command option
New Page Assignment Tier	The new page assignment tier High: High performance tier, Middle: Middle performance tier, Low: Low performance tier A hyphen (-) is output for the value if it is not specified at the command option
Relocation Priority	The tier relocation priority

Item	Description
	Prioritize: Prioritized, Default: Normal A hyphen (-) is output for the value if it is not specified at the command option

Delete Command Device

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,In-band MF,uid=user-name,
,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Delete Command Device
++I/F Version=0x10
++VOL(CU:LDEV)=0x00:0x06,APID=0x1234
```

Detailed Information

Item	Description
Command	The command name
I/F Version	The command interface version
VOL(CU:LDEV)	The CU number and the LDEV number of the volume, allocation for which as a command device is to be released
APID	The application ID

Delete CTG

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,In-band MF,uid=user-name,
,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Delete CTG
++I/F Version=0x40
++Copy Type=TCMF,CTG=0x01
```

Detailed Information

Item	Description
Command	The command name
I/F Version	The command interface version
Copy Type	The copy type of the consistency group to be deleted SIMF: ShadowImage for Mainframe, TCMF: TrueCopy for Mainframe,
CTG	The consistency group ID to be deleted

Delete Pair

Example 1: when the copy type is SIMF or TCMF

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,In-band MF,uid=user-name,
,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Delete Pair
++Copy Type=TCMF,I/F Version=0x40,Execute Type=Receive Device
++P-VOL(CU:LDEV)=0x00:0x00,S-VOL(CU:LDEV)=0x00:0x05,
MCU S/N=32652,MCU SSID=0x1B60,RCU S/N=32653,RCU SSID=0x1B60,
CTG=
```

Example 2: when the copy type is URMF

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,In-band MF,uid=user-name,
,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Delete Pair
++Copy Type=URMF,I/F Version=0x40,Execute Type=Cmd. Device
++P-VOL(CU:LDEV)=0x00:0x00,S-VOL(CU:LDEV)=0x00:0x01,
MCU S/N=32652,MCU SSID=0x1B60,RCU S/N=32653,RCU SSID=0x1B60,
Range=LU
```

Detailed Information

Item	Description
Command	The command name
Copy Type	The copy type SIMF: ShadowImage for Mainframe, TCMF: TrueCopy for Mainframe, URMF: Universal Replicator for Mainframe
I/F Version	The command interface version
Execute Type	The volume type for executing the command Receive Device: LDEV which receives the command Cmd. Device: Command device
P-VOL(CU:LDEV)	The CU number and the LDEV number of the primary volume
S-VOL(CU:LDEV)	The CU number and the LDEV number of the secondary volume
MCU S/N	The serial number of the local storage system
MCU SSID	The SSID to which a volume on the local storage system belongs The SSID to which the primary volume belongs for operating ShadowImage for Mainframe pairs
RCU S/N	The serial number of the remote storage system The same value as MCU S/N is output for operating ShadowImage for Mainframe pairs
RCU SSID	The SSID to which a volume on the remote storage system belongs

Item	Description
	The SSID to which the secondary volume belongs for operating ShadowImage for Mainframe pairs
CTG	The consistency group ID No value is output if the pair deletion is not specified by the group. No value is output when Copy Type is SIMF and I/F Version is less than 0x04. This item is output only when Copy Type is SIMF or TCMF
Range	The range of volumes to be deleted LU: The volume to be operated Group: All volumes in the consistency group to which the volume to be operated belongs EXCTG: All volumes belonging to the extended consistency group This item is output only when Copy Type is URMF

Delete RCU

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,In-band MF,uid=user-name,
,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Delete RCU
++I/F Version=0x11,Execute Type=Cmd. Device
++MCU S/N=32652,MCU SSID=0x1B60,RCU S/N=12345,RCU SSID=0x0000,
Controller ID=,Path Gr. ID=,Range=CU
```

Detailed Information

Item	Description
Command	The command name
I/F Version	The command interface version
Execute Type	The volume type for executing the command Receive Device: LDEV which receives the command Cmd. Device: Command device No value is output if I/F Version is less than 0x11 or if Range is System.
MCU S/N	The serial number of the local storage system
MCU SSID	The SSID to which a volume on the local storage system belongs No value is output if Range is System.
RCU S/N	The serial number of the remote storage system
RCU SSID	The SSID to which a volume on the remote storage system belongs

Item	Description
	No value is output if Range is System.
Controller ID	The controller ID of the remote storage system 5: USP V/VM, 6: VSP, 7: VSP G1000/G1500 and VSP F1500 No value is output if I/F Version is less than 0x11 or if Range is CU.
Path Gr. ID	The path group ID No value is output if I/F Version is less than 0x11 or if Range is CU.
Range	The connecting mode to RCU CU: CU connection, System: Storage system connection No value is output if I/F Version is less than 0x11.

EXCTG

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,In-band MF,uid=user-name,
,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=EXCTG
++I/F Version=0x13
++EXCTG=0x01,Command=Add,Mirror ID=0x01
++{Slv S/N,Slv Controller ID,JNLG,Slv Cmd DEV(CU:LDEV)}=
[{32652,7,0x004,}],Num. of JNLGs=1
```

Detailed Information

Item	Description
Command	The command name
I/F Version	The command interface version
EXCTG	The extended consistency group ID
Command	Indicates whether to register or delete the extended consistency group Add: Register, Delete: Delete
Mirror ID	The mirror ID
Slv S/N	The serial number of the remote storage system
Slv Controller ID	The controller ID of the remote storage system 5: USP V/VM, 6: VSP, 7: VSP G1000/G1500 and VSP F1500
JNLG	The journal group number
Slv Cmd DEV(CU:LDEV)	The CU number and the LDEV number of the command device for the remote storage system No value is output if the remote storage system is used as a super DKC.

Item	Description
Num. of JNLGs	The number of journal groups

FREEZE

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,In-band MF,uid=user-name,
,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=FREEZE
++I/F Version=0x40
++VOL(CU:LDEV)=0x00:0x00,CTG=0x11,Execute Type=Receive Device,
Release Time(ms)=5000
```

Detailed Information

Item	Description
Command	The command name
I/F Version	The command interface version
VOL(CU:LDEV)	The CU number and the LDEV number of the volume which is a target of FREEZE
CTG	The consistency group ID which is a target of FREEZE
Execute Type	The volume type for executing the command Receive Device: LDEV which receives the command Cmd. Device: Command device
Release Time(ms)	The time to release FREEZE Default is output if it is not specified at the command option

Remote DKC Control

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,In-band MF,uid=user-name,
,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Remote DKC Control
++I/F Version=0x40
++S/N=02584,SSID=0x1701,VOL(CU:LDEV)=0x01:0x13,,
```

Detailed Information

Item	Description
Command	The command name
I/F Version	The command interface version

Item	Description
S/N	The serial number of the storage system for executing the command
SSID	The SSID to which a volume for the storage system for executing the command belongs
VOL(CU:LDEV)	The CU number and the LDEV number of the volume for executing the command
Blank item	Nothing is output due to unused.
Blank item	Nothing is output due to unused.

Resume Pair

Example 1: when the copy type is SIMF

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,In-band MF,uid=user-name,
,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Resume Pair
++Copy Type=SIMF,I/F Version=0x04,Execute Type=Cmd. Device,
S-VOL Check=Enable
++P-VOL(CU:LDEV)=0x00:0x00,S-VOL(CU:LDEV)=0x00:0x02,
MCU S/N=32652,MCU SSID=0x1B60,RCU S/N=32652,RCU SSID=0x1B60,
Copy Pace=Slow,Resume Type=Steady,Resume Mode=Reverse,
Range=Group,CTG=0x7F
```

Example 2: when the copy type is TCMF

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,In-band MF,uid=user-name,
,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Resume Pair
++Copy Type=TCMF,I/F Version=0x31,Execute Type=Cmd. Device,
S-VOL Check=Enable
++P-VOL(CU:LDEV)=0x00:0x00,S-VOL(CU:LDEV)=0x00:0x02,
MCU S/N=32652,MCU SSID=0x1B60,RCU S/N=32653,RCU SSID=0x1B60,
Fence Level=,Copy Pace=Normal,Reverse Resync Mode=Enable,
Range=Group,Change CTG=Open/MF CTG,Time Stamp=Enable,
SCP=,CTG=0x7F
```

Example 3: when the copy type is URMF

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,In-band MF,uid=user-name,
,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Resume Pair
++Copy Type=URMF,I/F Version=0x40,Execute Type=Cmd. Device,
S-VOL Check=Enable
++P-VOL(CU:LDEV)=0x00:0x00,S-VOL(CU:LDEV)=0x00:0x01,
MCU S/N=32652,MCU SSID=0x1B60,RCU S/N=32653,RCU SSID=0x1B60,
Error Stop=,Reverse Resync Mode=Disable,Range=Group,
Error Level=,Mode=Delta
```

Detailed Information

Item	Description
Output items common to Example 1 to Example 3	
Command	The command name
Copy Type	The copy type SIMF: ShadowImage for Mainframe, TCMF: TrueCopy for Mainframe, URMF: Universal Replicator for Mainframe
I/F Version	The command interface version
Execute Type	The volume type for executing the command Receive Device: LDEV which receives the command Cmd. Device: Command device
S-VOL Check	The setting status of the option for confirming the use condition of the secondary volume Enable: Enabled, Disable: Disabled No value is output when Copy Type is URMF and Mode is Suspend.
P-VOL(CU:LDEV)	The CU number and the LDEV number of the primary volume
S-VOL(CU:LDEV)	The CU number and the LDEV number of the secondary volume
MCU S/N	The serial number of the local storage system
MCU SSID	The SSID to which a volume on the local storage system belongs The SSID to which the primary volume belongs for operating ShadowImage for Mainframe pairs
RCU S/N	The serial number of the remote storage system The same value as MCU S/N is output for operating ShadowImage for Mainframe pairs
RCU SSID	The SSID to which a volume on the remote storage system belongs The SSID to which the secondary volume belongs for operating ShadowImage for Mainframe pairs
Output items when Copy Type is SIMF	
Copy Pace	The copy speed Normal: Normal, Slow: Slow
Resume Type	The pair resynchronization type Steady: Normal resync, Quick: High-speed resync
Resume Mode	The pair resynchronization direction Normal: Normal direction (from the primary volume to the secondary volume) Reverse: Reverse direction (from the secondary volume to the primary volume)

Item	Description
Range	The pair resynchronization range LU: Only the pair to be operated Group: All pairs in the consistency group to which the pair to be operated belongs No value is output if I/F Version is less than 0x04.
CTG	The consistency group ID No value is output if I/F Version is less than 0x04. No value is output if Range is LU.
Output items when Copy Type is TCMF	
Fence Level	The fence level to be set (conditions where the local storage system rejects write operations to the primary volume) Never: Can write to the primary volume even if the pair is split. Data: Cannot write to the primary volume when update copying fails. Status: Cannot write to the primary volume only when the storage system of the primary site cannot change the pair status of the secondary volume to PSUE No value is output if Range is Group.
Copy Pace	The copy speed Normal: Normal, Slow: Slow
Reverse Resync Mode	The setting status of the reverse resync mode Enable: Enabled, Disable: Disabled No value is output if I/F Version is less than 0x03.
Range	The pair resynchronization range LU: Only the pair to be operated Group: All pairs in the consistency group to which the pair to be operated belongs No value is output if I/F Version is less than 0x04.
Change CTG	The setting status of the change mode of the consistency group attribute None: Not changed Open/MF CTG: Changes to the consistency group common to Open/Mainframe CTG: Changes to the consistency group for the Mainframe No CTG: Changes to a pair that does not belong to the consistency group No value is output if I/F Version is 0x30 or less than 0x22.
Time Stamp	The transfer setting status of host time stamps to the secondary volume when resynchronizing pairs Enable: Enabled, Disable: Disabled No value is output if I/F Version is 0x20 or less than 0x16.
SCP	The setting status of SCP (Stage Change Pending) time change Enable: Enabled, Disable: Disabled

Item	Description
	No value is output if I/F Version is 0x30 or less than 0x22. No value is output if Change CTG is not CTG.
CTG	The consistency group ID No value is output if I/F Version is less than 0x04. The consistency group ID of the pair change destination when Change CTG is Open/MF CTG or CTG No value is output if Range is Group and Change CTG is No CTG. No value is output if Range is LU and Change CTG is None or No CTG.
Output items when Copy Type is URMF	
Error Stop	The setting status of the status change suppression when an error occurs Enable: Enabled, Disable: Disabled No value is output if I/F Version is less than 0x13. A value is output only when Mode is Delta or Delta(Force) and Range is LU.
Reverse Resync Mode	The setting status of the reverse resync mode Enable: Enabled, Disable: Disabled
Range	The pair resynchronization range Group: All pairs in the same mirror as the pair to be operated LU: Only the pair to be operated EXCTG: All pairs in the extended consistency group to which the pair to be operated belongs
Error Level	The range of the pair split at failure occurrence Group: All pairs in the same mirror as the pair to be operated are split LU: Only the pair to be operated is split No value is output if I/F Version is less than 0x12. No value is output if Range is Group.
Mode	The copy mode Normal: Normal Suspend: Suspend Delta: Delta resync Delta(Force): Forcible delta resync No value is output if I/F Version is less than 0x13.

RUN

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,In-band MF,uid=user-name,
,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=RUN
```

```
++I/F Version=0x40
++VOL(CU:LDEV)=0x00:0x00,CTG=0x11,Execute Type=Receive Device
```

Detailed Information

Item	Description
Command	The command name
I/F Version	The command interface version
VOL(CU:LDEV)	The CU number and the LDEV number of the volume which is a target of RUN
CTG	The consistency group ID which is a target of RUN
Execute Type	The volume type for executing the command Receive Device: LDEV which receives the command Cmd. Device: Command device

Set Interface

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,In-band MF,uid=user-name,
,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Set Interface
++I/F Version=0x40
++APID=0x1234,I/F=0x0001,Local Cmd. Device=
```

Detailed Information

Item	Description
Command	The command name
I/F Version	The command interface version
APID	The application ID
I/F	The Interface number between the application and the storage system
Local Cmd. Device	The CU number and the LDEV number of the command device of the local storage system when using TPF (Transaction Processing Facility) No value is output if TPF is not used. No value is output if I/F Version is less than 0x33.

Start Calculation(Pair Sync)

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,In-band MF,uid=user-name,
,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
```

```
+Command=Start Calculation(Pair Sync)
++Copy Type=URMF,I/F Version=0x11,Execute Type=Cmd. Device,
++P-VOL(CU:LDEV)=0x00:0x00,S-VOL(CU:LDEV)=0x00:0x01,MCU S/N=32652,
MCU SSID=0x1B60,RCU S/N=32652,RCU SSID=0x1B60,Timeout=3
```

Detailed Information

Item	Description
Command	The command name
Copy Type	The copy type TCMF: TrueCopy for Mainframe, URMF: Universal Replicator for Mainframe A request to a TrueCopy for Mainframe pair is not supported, so TCMF is not output.
I/F Version	The command interface version
Execute Type	The volume type for executing the command Receive Device: LDEV which receives the command Cmd. Device: Command device
P-VOL(CU:LDEV)	The CU number and the LDEV number of the primary volume
S-VOL(CU:LDEV)	The CU number and the LDEV number of the secondary volume
MCU S/N	The serial number of the local storage system
MCU SSID	The SSID to which a volume on the local storage system belongs
RCU S/N	The serial number of the remote storage system
RCU SSID	The SSID to which a volume on the remote storage system belongs
Timeout	The time difference in minutes from the command issuance time to the ending time of calculation of the percentage of synchronized data between P-VOL and S-VOL

Suspend Pair

Example 1: when the copy type is SIMF

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,In-band MF,uid=user-name,
,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Suspend Pair
++Copy Type=SIMF,I/F Version=0x40,Execute Type=Cmd. Device
++P-VOL(CU:LDEV)=0x00:0x00,S-VOL(CU:LDEV)=0x00:0x02,
MCU S/N=32652,MCU SSID=0x1B60,RCU S/N=32652,RCU SSID=0x1B60,
S-VOL Write=Enable,Suspend Type=Steady,Range=LU,CTG=
```

Example 2: when the copy type is TCMF

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,In-band MF,uid=user-name,
,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
```

```
+Command=Suspend Pair
++Copy Type=TCMF,I/F Version=0x31,Execute Type=Cmd. Device
++P-VOL(CU:LDEV)=0x00:0x00,S-VOL(CU:LDEV)=0x00:0x05,
MCU S/N=32652,MCU SSID=0x1B60,RCU S/N=32653,RCU SSID=0x1B60,
P-VOL Write=,S-VOL RD/WR=Disable,Swapping Mode=,
Reverse Resync Mode=Disable,Range=Group,CTG Attribute=CTG,
CTG=0x7F
```

Example 3: when the copy type is URMF

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,In-band MF,uid=user-name,
,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Suspend Pair
++Copy Type=URMF,I/F Version=0x40,Execute Type=Cmd. Device
++P-VOL(CU:LDEV)=0x00:0x00,S-VOL(CU:LDEV)=0x00:0x01,
MCU S/N=32652,MCU SSID=0x1B60,RCU S/N=32653,RCU SSID=0x1B60,
S-VOL RD/WR=Disable,Swapping Mode=,
Reverse Resync Mode=Disable,Range=Group,Suspend Mode=Purge,
CPU Time=
```

Detailed Information

Item	Description
Output items common to Example 1 to Example 3	
Command	The command name
Copy Type	The copy type SIMF: ShadowImage for Mainframe, TCMF: TrueCopy for Mainframe, URMF: Universal Replicator for Mainframe
I/F Version	The command interface version
Execute Type	The volume type for executing the command Receive Device: LDEV which receives the command Cmd. Device: Command device
P-VOL(CU:LDEV)	The CU number and the LDEV number of the primary volume
S-VOL(CU:LDEV)	The CU number and the LDEV number of the secondary volume
MCU S/N	The serial number of the local storage system
MCU SSID	The SSID to which a volume on the local storage system belongs The SSID to which the primary volume belongs for operating ShadowImage for Mainframe pairs
RCU S/N	The serial number of the remote storage system The same value as MCU S/N is output for operating ShadowImage for Mainframe pairs
RCU SSID	The SSID to which a volume on the remote storage system belongs The SSID to which the secondary volume belongs for operating ShadowImage for Mainframe pairs

Item	Description
Output items when Copy Type is SIMF	
S-VOL Write	Indicates whether the writing to the secondary volume is enabled Enable: Enabled, Disable: Disabled
Suspend Type	The suspend type Steady: Normal suspend, Quick: High-speed suspend
Range	The suspend range LU: Only the pair to be operated Group: All pairs in the consistency group to which the pair to be operated belongs No value is output if I/F Version is less than 0x04.
CTG	The consistency group ID No value is output if I/F Version is less than 0x04. No value is output if Range is LU.
Output items when Copy Type is TCMF	
P-VOL Write	Indicates whether the writing to the primary volume is enabled Enable: Enabled, Disable: Disabled No value is output if I/F Version is less than 0x10 or if Range is Group.
S-VOL RD/WR	Indicates whether the Read/Write access to the secondary volume is enabled Enable: Enabled, Disable: Disabled No value is output if I/F Version is less than 0x03.
Swapping Mode	The setting status of the swapping mode Enable: Enabled, Disable: Disabled No value is output if I/F Version is less than 0x44.
Reverse Resync Mode	The setting status of the reverse resync mode Enable: Enabled, Disable: Disabled No value is output if I/F Version is less than 0x03.
Range	The suspend range LU: Only the pair to be operated Group: All pairs in the consistency group to which the pair to be operated belongs No value is output if I/F Version is less than 0x04.
CTG Attribute	The consistency group attribute Open/MF CTG: Consistency group common to Open/Mainframe CTG: Consistency group for Mainframe No value is output if I/F Version is 0x30 or less than 0x22. No value is output if Range is LU.
CTG	The consistency group ID

Item	Description
	No value is output if I/F Version is less than 0x04. No value is output if Range is LU.
Output items when Copy Type is URMF	
S-VOL RD/WR	Indicates whether the Read/Write access to the secondary volume is enabled Enable: Enabled, Disable: Disabled
Swapping Mode	The setting status of the swapping mode Enable: Enabled, Disable: Disabled No value is output if I/F Version is less than 0x44.
Reverse Resync Mode	The setting status of the reverse resync mode Enable: Enabled, Disable: Disabled
Range	The suspend range LU: Only the pair to be operated Group: All pairs in the consistency group to which the pair to be operated belongs EXCTG: All pairs in the extended consistency group to which the pair to be operated belongs
Suspend Mode	Indicates how to handle updated data that is not reflected in the secondary volume Flush: The updated data is reflected when suspending a pair. Purge: The updated data is not reflected when suspending a pair. However, the updated data is reflected when the pair is resynchronized later.
CPU Time	The CPU time stamp value in the form of YYYY/MM/DD hh:mm:ss No value is output if Suspend Mode is Purge.

Suspend Pairs

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,In-band MF,uid=user-name,
,,[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=Suspend Pairs
++I/F Version=0x40
++CU=0x00,LDEV={0x02},Num. of LDEVs=1,S-VOL Write=Enable,
Suspend Type=Steady,Mode=PAIR & COPY(PD)
```

Detailed Information

Item	Description
Command	The command name
I/F Version	The command interface version

Item	Description
CU	The CU number of the secondary volume
LDEV	The LDEV number of the secondary volume
Num. of LDEVs	The number of secondary volumes
S-VOL Write	Indicates whether the writing to the secondary volume is enabled Enable: Enabled, Disable: Disabled
Suspend Type	The suspend type Steady: Normal suspend, Quick: High-speed suspend
Mode	The status of the pair to be suspended PAIR: Suspends only the pair in the Pair status PAIR & COPY (PD): Suspends the pending pair as well No value is output if I/F Version is less than 0x10.

M Series

DEL PATH

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,In-band MF,uid=user-name,,,
[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=DEL PATH
++MCU S/N=02584,MCU SSID=0x1700,RCU S/N=32653,RCU SSID=0x1701
```

Detailed Information

Item	Description
Command	The command name
MCU S/N	The serial number of the local storage system
MCU SSID	The SSID to which a volume on the local storage system belongs
RCU S/N	The serial number of the remote storage system
RCU SSID	The SSID to which a volume on the remote storage system belongs

EST PAIR

Example 1: when the copy type is SIMF

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,In-band MF,uid=user-name,,,
[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
```

```
+Command=EST PAIR
++P-VOL(LDEV)=0x03,S-VOL(LDEV)=0x02,MCU S/N=30176,MCU SSID=0xC804,
RCU S/N=30176,RCU SSID=0xC805,Copy Type=SIMF,Copy Msg=,
S-VOL Write=Enable,Online Chk=Disable,Force=,
Initial Copy=None(Suspend),NoDelay=Disable,Copy Pace=Normal
```

Example 2: when the copy type is TCMF

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,In-band MF,uid=user-name,,,
[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=EST PAIR
++P-VOL(LDEV)=0x02,S-VOL(LDEV)=0x02,MCU S/N=30176,MCU SSID=0xC804,
RCU S/N=30179,RCU SSID=0xC805,Copy Type=TCMF,Copy Msg=Disable,
Fence Level=Never,Online Chk=Disable,,Force=Disable,
Initial Copy=Diff,S-VOL Wr(PSUE)=Enable,NoDelay=Disable,
Copy Pace=High
```

Detailed Information

Item	Description
Output items common to Example 1 and Example 2	
Command	The command name
P-VOL(LDEV)	The LDEV number of the primary volume
S-VOL(LDEV)	The LDEV number of the secondary volume
MCU S/N	The serial number of the local storage system
MCU SSID	The SSID to which a volume on the local storage system belongs The SSID to which the primary volume belongs for operating ShadowImage for Mainframe pairs
RCU S/N	The serial number of the remote storage system The same value as MCU S/N is output for operating ShadowImage for Mainframe pairs
RCU SSID	The SSID to which a volume on the remote storage system belongs The SSID to which the secondary volume belongs for operating ShadowImage for Mainframe pairs
Copy Type	The program product name SIMF: ShadowImage for Mainframe, TCMF: TrueCopy for Mainframe
Output items when Copy Type is SIMF	
Copy Msg	The setting status of the message request Enable: Enabled, Disable: Disabled No value is output when Initial Copy is None(Suspend).
S-VOL Write	Indicates whether the writing to the secondary volume after the suspend is enabled Enable: Enabled, Disable: Disabled

Item	Description
	No value is output when Initial Copy is not None(Suspend).
Online Chk	The setting status of the online check Enable: Enabled, Disable: Disabled
Force	The setting status of the pair forcible recovery when the pair status is suspending Enable: Enabled, Disable: Disabled No value is output when Initial Copy is not Diff.
Initial Copy	The type of the pair creation operation None(Suspend): Creates pairs and suspends them without copying data from the primary volume to the secondary volume. Entire: Creates pairs and copies data from the primary volume to the secondary volume. Diff: Copies the difference between the primary volume and the secondary volume
NoDelay	The setting status of NoDelay Enable: Enabled, Disable: Disabled
Copy Pace	The copy speed Slow: Low, Normal: Normal
Output items when Copy Type is TCMF	
Copy Msg	The setting status of the message request Enable: Enabled, Disable: Disabled No value is output when Initial Copy is None.
Fence Level	The fence level to be set (conditions where the local storage system rejects write operations to the primary volume) Never: Can write to the primary volume even if the pair is split. Status: Cannot write to the primary volume only when the storage system of the primary site cannot change the pair status of the secondary volume to PSUE
Online Chk	The setting status of the online check Enable: Enabled, Disable: Disabled
Blank item	Nothing is output due to unused.
Force	The setting status of the pair forcible recovery when the pair is in suspending status Enable: Enabled, Disable: Disabled No value is output when Initial Copy is Diff.
Initial Copy	The type of the pair creation operation None: Creates pairs but does not copy data from the primary volume to the secondary volume Entire: Creates pairs and copies data from the primary volume to the secondary volume. Diff: Copies the difference between the primary volume and the secondary volume

Item	Description
	None(Suspend): Creates pairs and suspends them without copying data from the primary volume to the secondary volume.
S-VOL Wr(PSUE)	Indicates whether the writing to the secondary volume is enabled at the pair suspended error Enable: Enabled, Disable: Disabled
NoDelay	The setting status of NoDelay Enable: Enabled, Disable: Disabled
Copy Pace	The copy speed High: High speed Low: Low speed Default: Normal speed

EST PATH

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,In-band MF,uid=user-name,,,
[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=EST PATH
++MCU S/N=02584,MCU SSID=0x1700,RCU S/N=32653,RCU SSID=0x1701,
Controller ID=7
++{MCU Port,RCU Port,RCU CU}=[{1A,5A,0x01}],Num. of Paths=1
```

Detailed Information

Item	Description
Command	The command name
MCU S/N	The serial number of the local storage system
MCU SSID	The SSID to which a volume on the local storage system belongs
RCU S/N	The serial number of the remote storage system
RCU SSID	The SSID to which a volume on the remote storage system belongs
Controller ID	The controller ID of the remote storage system 5: USP V/VM, 6: VSP, 7: VSP G1000/G1500 and VSP F1500
MCU Port	The port name of the local storage system
RCU Port	The port name of the remote storage system
RCU CU	The CU number of the remote storage system
Num. of Paths	The number of paths to be created

SPLIT PAIRS

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,In-band MF,uid=user-name,,,
[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=SPLIT PAIRS
++S-VOL(CU:LDEV)={0x00:0x41,0x00:0x43},Num. of Pairs=2,
S-VOL Write=Enable,Suspend Type=Steady
```

Detailed Information

Item	Description
Command	The command name
S-VOL(CU:LDEV)	The CU number and the LDEV number of the secondary volume of the pair to be suspended
Num. of Pairs	The number of the secondary volumes of the pair to be suspended
S-VOL Write	Indicates whether the writing to the secondary volume after the suspend is enabled Enable: Enabled, Disable: Disabled
Suspend Type	The suspend type Steady: Normal suspend, Quick: High-speed suspend

SUSP PAIR

Example 1: when the copy type is SIMF

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,In-band MF,uid=user-name,,,
[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=SUSP PAIR
++P-VOL(LDEV)=0x02,S-VOL(LDEV)=0x02,MCU S/N=30176,MCU SSID=0xC804,
RCU S/N=30176,RCU SSID=0xC805,Copy Type=SIMF,S-VOL Write=Disable,
Suspend Type=Steady,Force=Disable,Suspend Status=S-SUS
```

Example 2: when the copy type is TCMF

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,In-band MF,uid=user-name,,,
[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=SUSP PAIR
++P-VOL(LDEV)=0x02,S-VOL(LDEV)=0x02,MCU S/N=30176,MCU SSID=0xC804,
RCU S/N=30179,RCU SSID=0xC805,Copy Type=TCMF,
Force=Disable,Suspend Status=S-SUS,CPU Time=2015/12/28 13:12:24
```

Detailed Information

Item	Description
Output items common to Example 1 and Example 2	
Command	The command name
P-VOL(LDEV)	The LDEV number of the primary volume
S-VOL(LDEV)	The LDEV number of the secondary volume
MCU S/N	The serial number of the local storage system
MCU SSID	The SSID to which a volume on the local storage system belongs The SSID to which the primary volume belongs for operating ShadowImage for Mainframe pairs
RCU S/N	The serial number of the remote storage system The same value as MCU S/N is output for operating ShadowImage for Mainframe pairs
RCU SSID	The SSID to which a volume on the remote storage system belongs The SSID to which the secondary volume belongs for operating ShadowImage for Mainframe pairs
Copy Type	The program product name SIMF: ShadowImage for Mainframe, TCMF: TrueCopy for Mainframe
Output items when Copy Type is SIMF	
S-VOL Write	Indicates whether the writing to the secondary volume after the suspend is enabled Enable: Enabled, Disable: Disabled
Suspend Type	The suspend type Steady: Normal suspend, Quick: High-speed suspend
Force	The setting status of the pair forcible suspension when the pair is in copying status Enable: Enabled, Disable: Disabled
Suspend Status	The suspend status P-SUS: P-VOL suspended by error S-SUS: S-VOL suspended Hold: State change pending
Output items when Copy Type is TCMF	
Force	The setting status of the pair forcible suspension when the pair is in copying status Enable: Enabled, Disable: Disabled
Suspend Status	The suspend status P-SUS: P-VOL obstacle suspend S-SUS: S-VOL suspend

Item	Description
	Hold: State change pending
CPU Time	The CPU time when suspending No value is output if it is not specified at the command option.

TERM PAIR

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,In-band MF,uid=user-name,,,
[Config Command],,,Accept,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+Command=TERM PAIR
++P-VOL(LDEV)=0x02,S-VOL(LDEV)=0x02,MCU S/N=30176,MCU SSID=0xC804,
RCU S/N=30179,RCU SSID=0xC805,Copy Type=SIMF,Force=Disable
```

Detailed Information

Item	Description
Command	The command name
P-VOL(LDEV)	The LDEV number of the primary volume
S-VOL(LDEV)	The LDEV number of the secondary volume
MCU S/N	The serial number of the local storage system
MCU SSID	The SSID to which a volume on the local storage system belongs The SSID to which the primary volume belongs for operating ShadowImage for Mainframe pairs
RCU S/N	The serial number of the remote storage system The same value as MCU S/N is output for operating ShadowImage for Mainframe pairs
RCU SSID	The SSID to which a volume on the remote storage system belongs The SSID to which the secondary volume belongs for operating ShadowImage for Mainframe pairs
Copy Type	The program product name SIMF: ShadowImage for Mainframe, TCMF: TrueCopy for Mainframe
Force	The setting status of the pair forcible suspension when the pair is in copying or suspending status Enable: Enabled, Disable: Disabled

FC-SP

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,In-band OPEN,<Host>,,,
[FC-SP],,,Normal end,from=xxxxxxxxxxxxxxxx,,Seq.=xxxxxxxxxx
```

User Auth

[User Auth] Login

Example 1: When login succeeded

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,In-band OPEN,uid=user-name,
195,,[User Auth],Login,,Normal end,from=xxxxxxxxxxxxxxx,
AP=0xXXXX,Seq.=xxxxxxxxxx
```

Example 2: When lockout occurred

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,In-band OPEN,uid=user-name,
195,,[User Auth],Login,,Error,from=xxxxxxxxxxxxxxx,
AP=0xXXXX,Seq.=xxxxxxxxxx
+Lockout=Yes
```

Detailed Information

Item	Description
Lockout	Indicates whether the user account is locked out or not Yes: Locked out, No: Not locked out

[User Auth] Logout

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,In-band OPEN,uid=user-name,
195,,[User Auth],Logout,,Normal end,from=xxxxxxxxxxxxxxx,
AP=0xXXXX,Seq.=xxxxxxxxxx
```

8

VSP G1000 audit log examples of PIN Deletion Tool operation

This topic provides examples and descriptions of the audit logs produced by the PIN Deletion Tool. For the detailed information of version numbers in log output examples, see Table 2-3 Format changes for each version number on page 2-10

- [PINDeletion] Delete

[PINDeletion] Delete

This log information indicates the completion of the PIN deletion operation, and does not indicate the completion of the PIN deletion processing.

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,SVP,uid=user-name,1,,
[PINDeletion],Delete,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+LDEV=[0x00:0x00:0x00,0x00:0x00:0x01],Num. of LDEVs=2
```

Detailed Information

Item	Description
LDKC:CU:LDEV	The LDKC, CU, and LDEV numbers
Num. of LDEVs	The number of set LDEVs

9

VSP Gx00 models, VSP Fx00 models audit logs

Audit log files can be used to monitor the security of Virtual Storage Platform G200, G400, G600, G800 (VSP Gx00 models) storage system and Virtual Storage Platform F400, F600, F800 (VSP Fx00 models) storage system. Because the audit log file records when and who has done what operation, it can be used for investigation when illegal settings are applied or failures occur on the storage system.

- Outline
- Acquisition/reference of audit logs


Outline

An audit log is a file to which histories of the operation performed on the storage system by a system constructor or system administrator, and of the program behavior due to the operation are output.

Because the audit log records when and who has done what operation, it can be used for investigation when illegal settings are applied or failures occur on VSP Gx00 models and VSP Fx00 models.

Also, information about a user who performs operations using commands etc., the audit event such as success or failure of the processing caused by the operations, and the targets of the operations and processing is stored in an audit log file, and the information is useful to audit the storage system.

The stored audit logs can be transferred to a syslog server on VSP Gx00 models and VSP Fx00 models.

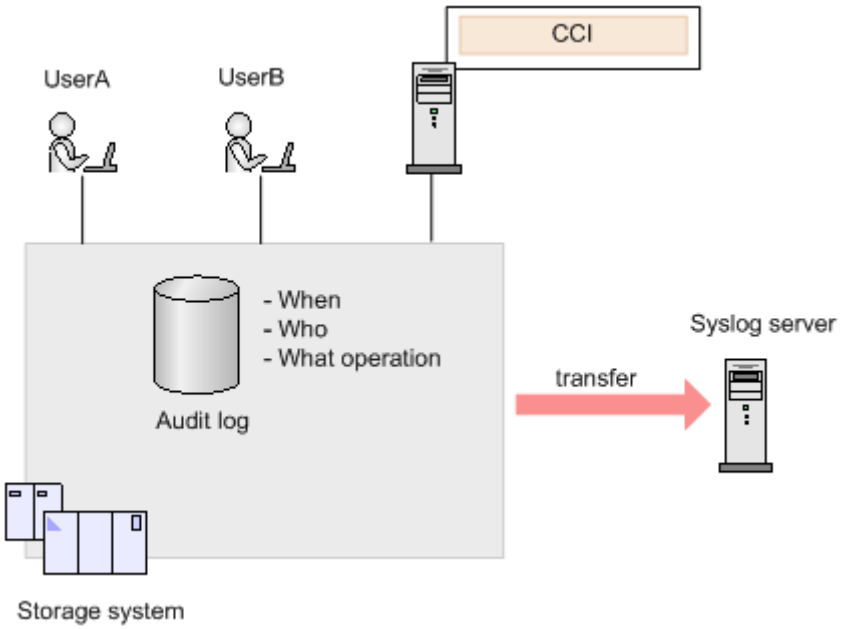

Acquisition/reference of audit logs

Audit logs are stored in either the SVP or the storage system. (Which one to store depends on the type of the audit logs.) To acquire or refer to the stored audit log, the log needs to be transferred to syslog servers.

Once transferring audit logs to syslog servers is set, audit logs stored in the SVP or the storage system are automatically transferred to syslog servers at all times. Refer to Related topics below for the procedure for transferring audit logs to syslog servers.

Note: The capacity for audit logs that can be stored in the SVP or the storage system is limited. When the stored audit logs reaches the maximum capacity, the oldest data is lost as it is overwritten by the newest data, so it is recommended to transfer audit logs to syslog servers.

When audit logs are not transferred or syslog servers are not used

If audit logs are not transferred to syslog servers due to a LAN failure etc., the logs are accumulated as a non-transferred log. Once non-transferred logs are accumulated, the icon showing the accumulated status in the window changes or a SIM is generated.

When syslog servers are not used, logs are accumulated as a non-transferred log, but the icon showing the accumulated status in the window does not change or a SIM is not generated.

Storage place of audit logs	Maximum number of lines[1]	When non-transferred logs are accumulated
SVP	250,000 lines	The icon shown in the upper right of the main window changes. • : The number of accumulated logs is below the threshold [2]. • : The number of accumulated logs reaches the threshold. • : Some audit logs are overwritten and a part of the data is lost because the file is full.
Storage system (GUM)	1,000 lines	A SIM is generated. • Reference code (7d03*xx* [3]): The number of accumulated logs reaches the threshold [2]. • Reference code (7d04*xx* [3]): Some audit logs are overwritten and some data are lost because the file is full.
Storage system (DKC)	VSP G200: 20,000 lines VSP G400, G600: 40,000 lines VSP F400, F600: 40,000 lines VSP G800: 140,000 lines VSP F800: 140,000 lines	

Notes:

1. The number of lines is an estimate, depending on the type of the log information.
2. The threshold is 70% of the maximum stored capacity of the audit logs. When the audit log file reaches the maximum capacity, the oldest data is lost as it is overwritten by the newest data (wrap around).
3. *xx*=00: Indicates an event occurred on the CTL1 side
   xx=01: Indicates an event occurred on the CTL2 side

Perform the following when non-transferred logs are accumulated.

- Export non-transferred logs.
  All stored audit logs including transferred logs are exported in this operation.
- Which operation window to be used depends on where the audit logs are stored. Refer to Related topics below for the procedure for exporting audit logs.

Type/contents of audit log	Stored place	Exporting operation window
• Logs of operations set by the management client (Except operations in the Maintenance Utility menu) • Operation logs of encryption keys for encrypting stored data • Execution logs of Remote Maintenance API	SVP	**Audit Log Properties** window
• Operation logs of Maintenance Utility • Maintenance operation logs of Maintenance PC • Event logs of encryption keys for encrypting stored data • Command logs received from a host or computers using CCI the storage system	Storage system (GUM and DKC)	**Audit Log Settings** window

- Eliminate the cause of the transfer failure to the syslog server, and then conduct a test transfer of syslogs to confirm that the transmission is recovered.

Note: Even if the transmission is recovered, audit logs generated during the transfer failure are not retransferred.

Related topics

- Descriptions on audit log settings and exporting audit logs in your Hardware Reference Guide.

10

VSP Gx00 models, VSP Fx00 models audit log file format

The audit log file is a text file in the syslog format. The audit log file has two types of formats: RFC3164-compliant and RFC5424-compliant. Select either one of them when setting for transferring audit log files to syslog servers or exporting audit log files.

An audit log file consists of the following fields: Audit log header, Audit log information (Basic Information), and Audit log information (Detailed Information), whose formats are respectively described in the following topics.

If an audit log file is to be transferred to the syslog server, syslog header information is included before the audit log header, which is described in this chapter. For details about the format of audit log files when audit log files are transferred to the syslog server, see Format of audit log files when audit log files are transferred to the syslog server on page 10-14.

- ☐ Audit log header format (RFC3164-compliant)
- ☐ Audit log header format (RFC5424-compliant)
- ☐ Audit log information format (Basic information)
- ☐ Audit log information format (Detailed information)
- ☐ Description of log examples in this manual
- ☐ Format of audit log files when audit log files are transferred to the syslog server

Audit log header format (RFC3164-compliant)



No.	Item	Description
1	Priority	The priority value given by the following formula is output, enclosed by < >. Priority value = 8 x Facility + Severity Facility is 17 (Fixed value). Severity takes the following values, depending on the type of the log information: • 4: Error (Abnormal end) or Warning (The operation partly ended abnormally or was aborted.) • 6: Informational (Normal end) For example, if Severity is Error, <140> is output for the priority value.

No.	Item	Description
2	Date, time[1]	The date and time are output in the format of MMM DD HH:MM:SS. (MMM: month, DD: day, HH: hour, MM: minute, SS: second) The abbreviation of months (Jan to Dec) is output to MMM. For the first to ninth day of a month, a space followed by the day is output to DD. For example, if it is the first day of a month, the output is " 1".
3	Detected location	"GUM" is output for a host name.
4	Program name	"Storage" is output for the detection entity identifier.
5	Unified specification identification	"CELFSS" is output for the unified specification identifier.
6		"1.1" is output for the revision number of the unified specification.
7	Message identification	The serial number of the syslog header information is output.
8		Message ID (No output because it is unused.)
9	Date, time#2[1]	The date, time, and the time difference from UTC (Universal Time Coordinated) are output in the format of YYYY-MMDDThh:mm:ss.s ±hh:mm. (YYYY: year, MM: month, DD: day, hh: hour, mm: minute, ss.s: second, hh: hour of the time difference, mm: minute of the time difference). However, if there is no time difference from UTC, "Z" is output for "±hh:mm" such as 2016-12-T23:06:58.0Z. "ss.s" (Output format of second) means the first decimal point is output.
10	Detection entity	"Storage" is output for the detection entity identifier.
11	Detected location	"GUM" is output as a host name.
12	Type of audit event	The category name of the audit event is output. The actual category names and examples of the events are as follows: • Authentication: Authentication etc. to RMI • ConfigurationAccess: Configuration from Device Manager - Storage Navigator, Maintenance PC, hosts or CCI • Maintenance: Configuration on Maintenance PC • ExternalService: Remote maintenance operation
13	Result of audit event	The result of the audit event is output as follows. • Success: Normal end (The operation ended normally.) • Failed: Error (xxxx-yyyy) (The operation ended abnormally.) • Failed: Warning (xxxx-yyyy) (The operation partly ended abnormally or was aborted.) "xxxx-yyyyy" shows an error code. This error code is not shown in the result of the audit event if the operation is performed from Maintenance PC or by the command from a host.
14	Subject identification	The user name is output in the format of "uid=user name". • "DKCMaintenance" is output for the operation from Maintenance PC.


No.	Item	Description
		• "Host" is output for the command from a host.
15	Hardware identification	The ID that identifies the model name of the product (HM800) and the serial number (six digit number: 400001 to 499999) are punctuated with a colon (:) and output. For example, "HM800:431234" is output if the serial number is 431234.
16	Generated location	No output because it is unused.
17	Related information	The location identification name configured in the Set Up Syslog Server for Audit Logs window is output.
18		FQDN (No output because it is unused.)
19		Redundancy identification information (No output because it is unused.)
20	Agent information	No output because it is unused.
21	Host identification	The identification information of a host sending requests is output as follows. • Operations of Device Manager - Storage Navigator: IP address (IPv4 or IPv6)[2, 3] • Operations of RMI AP IP address (IPv4 or IPv6) : When an IP address is specified by external application. host name: When a host name is specified by external application. • CCI operation A host name is output for authenticated hosts. A WWN is output for unauthenticated hosts. • A WWN is output for the FC-SP authentication. • No output for operation logs of RM AP and GUM AP. • No output for event logs on the encryption keys.
22	Request information	The port that sends requests (No output because it is unused.)
23		The host that receives requests (No output because it is unused.)
24		The port that receives requests (No output because it is unused.)
25	Collective operation identifier	The collective operation identifier is a serial number with which the operation is recognized as one operation even if it outputs multiple lines. The identifier is output only when the log identification information is "BasicLog."
26	Log type information	The log type information is output as follows: • BasicLog: Basic information • DetailLog: Detailed information

No.	Item	Description
27	Application identification	When commands are received from a host, the following are output. • ID that the host and storage system use internally • 0x0000: When receiving commands from other storage systems. • No output for events on FC-SP, Computers using CCI, or encryption keys.
28	Reserve	Reserve #2 (No output because it is unused.)

Notes:

1. If a LAN failure etc. occurs on the storage system, the data and time might be the accumulated time since January 1, 1970.
2. The IP address might indicate that of a proxy server or router, depending on the connected network configuration.
3. When IPv4 and IPv6 are available for communication from the management client to the SVP or management client, even if an IPv6 address of the SVP or management client is designated by the browser of the management client, IPv4 is used for communication by operations from the sub window of Device Manager - Storage Navigator, and an IPv4 address is output to the audit log.

Audit log header format (RFC5424-compliant)

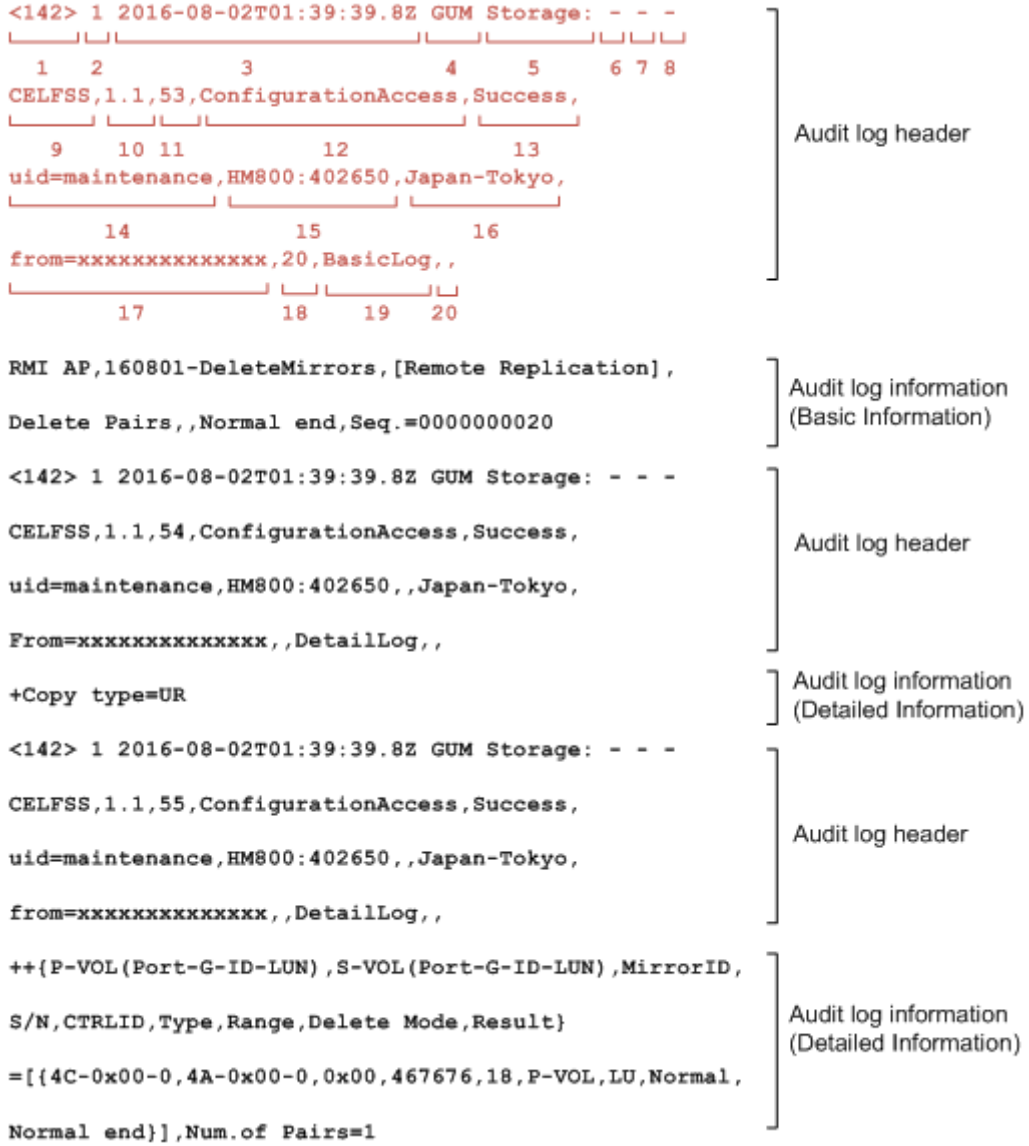

No.	Item	Description
1	Priority	The priority value given by the following formula is output, enclosed by < >. Priority value = 8 x Facility + Severity Facility is 17 (Fixed value). Severity takes the following values, depending on the type of the log information: • 4: Error (Abnormal end) or Warning (The operation partly ended abnormally or was aborted.) • 6: Informational (Normal end) For example, if Severity is Error, <140> is output for the priority value.
2	Version	"1" is output for the version number.

No.	Item	Description
3	Date, time[1]	The date, time, and the time difference from UTC (Universal Time Coordinated) are output in the format of YYYY-MMDDThh:mm:ss.s ±hh:mm. (YYYY: year, MM: month, DD: day, hh: time, mm: minute, ss.s: second, hh: hour of the time difference, mm: minute of the time difference). However, if there is no time difference from UTC, "Z" is output for "±hh:mm" such as 2016-12-T23:06:58.0Z. "ss.s" (Output format of second) means the first decimal point is output.
4	Detected location	"GUM" is output for a host name.
5	Program name	"Storage" is output for the detection entity identifier.
6	Process name	A hyphen (-) is output for the process name.
7	Message ID	A hyphen (-) is output for the message ID.
8	Structured data	A hyphen (-) is output for the structured data.
9	Unified specification identification	"CELFSS" is output for the unified specification identifier.
10		"1.1" is output for the revision number of the unified specification.
11	Message identification	The serial number of the syslog header information is output.
12	Type of audit event	The category name of the audit event is output. The actual category names and examples of the events are as follows: • Authentication: Authentication etc. to RMI • ConfigurationAccess: Configuration from Device Manager - Storage Navigator, Maintenance PC, hosts or CCI • Maintenance: Configuration on Maintenance PC • ExternalService: Remote maintenance operation
13	Result of audit event	The result of the audit event is output as follows. • Success: Normal end (The operation ended normally.) • Failed: Error (xxxx-yyyy) (The operation ended abnormally.) • Failed: Warning (xxxx-yyyy) (The operation partly ended abnormally or was aborted.) "xxxx-yyyyy" shows an error code. This error code is not shown in the result of the audit event if the operation is performed from Maintenance PC or by the command from a host.
14	Account identification	A user name is output in the format of "uid=user name". • "DKCMaintenance" is output for the operation from Maintenance PC. • "Host" is output for the commands from a host.
15	Hardware identification	The ID that identifies the model name of the product (HM800) and the serial number (six digit number: 400001 to 499999) are punctuated with a colon (:) and output. For example, "HM800:431234" is output if the serial number is 431234.

No.	Item	Description
16	Related information	The location identification name configured in the Set Up Syslog Server for Audit Logs window is output.
17	Host identification	The identification information of a host sending requests is output as follows. • Operations of Device Manager - Storage Navigator: IP address (IPv4 or IPv6)[2, 3] • Operations of RMI AP IP address (IPv4 or IPv6) : When an IP address is specified by external application. host name: When a host name is specified by external application. • CCI operation A host name is output for authenticated hosts. A WWN is output for unauthenticated hosts. • A WWN is output for the FC-SP authentication. • No output for operation logs of RM AP and GUM AP. • No output for event logs on the encryption keys.
18	Collective operation identifier	The collective operation identifier is a serial number with which the operation is recognized as one operation even if it outputs multiple lines. The identifier is output only when the log identification information is "BasicLog."
19	Log type information	The log type information is output as follows: • BasicLog: Basic information • DetailLog: Detailed information
20	Application identification	When commands are received from a host, the following are output. • ID that the host and storage system use internally • 0x0000: When receiving commands from other storage systems. • No output for events on FC-SP, Computers using CCI, or encryption keys.

Notes:

1. If a LAN failure etc. occurs on the storage system, the data and time might be the accumulated time since January 1, 1970.
2. The IP address might indicate that of a proxy server or router, depending on the connected network configuration.
3. When IPv4 and IPv6 are available for communication from the management client to the SVP or management client, even if an IPv6 address of the SVP or management client is designated by the browser of the management client, IPv4 is used for communication by operations from the sub window of Device Manager - Storage Navigator, and an IPv4 address is output to the audit log.

Audit log information format (Basic information)

The same format of the audit log information (Basic information) is used by RFC3164-compliant and RFC5424-compliant. Output values of audit log information (basic information) differ by the type of the history.

```
<142> Aug  2 01:39:39 GUM Storage: CELFSS,1.1,53,,
2016-08-02T01:39:39.8Z,Storage,GUM,ConfigurationAccess,
Success,uid=maintenance,HM800:402650,,
Japan-Tokyo,,,,from=xxxxxxxxxxxxx,,,,20,BasicLog,,,
```

Audit log header*

```
RMI AP,160801-DeleteMirrors,[Remote Replication],
   A           B                    C
Delete Pairs,,Normal end,Seq.=0000000020
   D         E     F           G
```

Audit log information (Basic Information)

```
<142> Aug  2 01:39:39 GUM Storage: CELFSS,1.1,54,,
2016-08-02T01:39:39.8Z,Storage,GUM,ConfigurationAccess,
Success,uid=maintenance,HM800:402650,,Japan-Tokyo,,,,
from=xxxxxxxxxxxxx,,,,,DetailLog,,,
```

Audit log header*

```
+Copy type=UR
```

Audit log information (Detailed Information)

```
<142> Aug  2 01:39:39 GUM Storage: CELFSS,1.1,55,,
2016-08-02T01:39:39.8Z,Storage,GUM,ConfigurationAccess,
Success,uid=maintenance,HM800:402650,,Japan-Tokyo,,,,
from=xxxxxxxxxxxxx,,,,,DetailLog,,,
```

Audit log header*

```
++{P-VOL(Port-G-ID-LUN),S-VOL(Port-G-ID-LUN),MirrorID,
S/N,CTRLID,Type,Range,Delete Mode,Result}
=[{4C-0x00-0,4A-0x00-0,0x00,467676,18,P-VOL,LU,Normal,
Normal end}],Num.of Pairs=1
```

Audit log information (Detailed Information)

Note* The audit log header format is compliant to RFC3164.

Type of history	Patten of output value
Operations configured by the management client or Maintenance PC	Pattern 1
Execution logs of remote maintenance API	
Operations on encryption keys for encrypting stored data	
Commands that the storage system received from hosts or computers using CCI	Pattern 2

Type of history	Patten of output value
Events on encryption keys for encrypting stored data	

Mark	Item	Pattern 1	Pattern 2
A	External interface name	• RMI AP: Logs of Remote Method Invocation Application (RMI AP) • MPC: Logs of Maintenance PC • GUM: Logs of Maintenance Utility • RM AP: Logs of Remote Maintenance Application (RM AP) • GUM AP: Logs of Maintenance Utility Application (GUM AP) • No output for Create File (Event name) of AuditLog (Function name).	• In-band OPEN: Host • Out-of-band: Computer using CCI • No output for events on encryption keys
B	Task name	• The task name is output to an operation log that is registered in the Device Manager - Storage Navigator tasks. • No task name is output to an operations log that is not registered in the Device Manager - Storage Navigator tasks.	No output.
C	Function name	The abbreviation of the name of the function performed during the setting operation from Device Manager - Storage Navigator, RMI AP or RM AP is output. The name of the maintenance window is output for the setting operation by Maintenance PC. For the relation between the function and the abbreviation of the output function name, see Device Manager - Storage Navigator and Maintenance PC operation on page 11-2	Commands received from the host are output as follows. • User Auth: User authentication command • FC-SP: Device authentication command • Config Command: Configuration change command "ENC" is output for events on encryption keys.
D	Operation name or event name	The operation name or event name that is unique to each function is output. For the relation between the GUI operation of each program product and the operation name output to audit logs, see Using Actions menu on page C-2 and the following sections. For the relation between the operation on Maintenance PC and the operation name output to audit logs, see Using Maintenance button on page E-2 and the following sections.	When the function name is "User Auth", the received command is output as follows. • Login: Receipt of the login command • Logout: Receipt of the logout command No output when commands, except for login or logout, are received.

Mark	Item	Pattern 1	Pattern 2
		For details of the event names, see Reproducing/losing Audit log on page 11-16.	When the function name is "ENC", the event name is output.
E	Parameter	When the configuration operation includes a parameter setting, the operation parameter is output. No detailed information is output to the parameter part of the basic information.	No output.
F	Result of operation or receiving commands	The results of the operations are output as follows. • Normal end: The operation ended normally. • Warning (xxxx-yyyyy): The operation partly ended abnormally or was aborted. • Error (xxxx-yyyyy): The operation ended abnormally. "xxxxx-yyyyyy" shows an error code. See *Hitachi Device Manager - Storage Navigator Messages* for the error codes. No error code is added to the result of the operation that is not a Device Manager - Storage Navigator operation.	The results of receiving commands are output as follows. • Normal end: User authentication or FC-SP authentication ended normally, or the event on encryption keys occurs. • Error: User authentication or FC-SP authentication ended abnormally. • Accept: Commands from a host are received. • Reject: Commands from a host are rejected.
G	Serial number	The serial number of stored log information is output. The serial number ranges from 0000000000 to 4294967295. When the log information reaches 4,294,967,295 counts, the serial number is reset to 0000000000.	

Audit log information format (Detailed information)

The same format of audit log information (Detailed information) is used by RFC3164-compliant and RFC5424-compliant.

The indexes and setting values that indicates the set items are output to the detailed information. There are two types of the detailed information format.

Detailed information format 1

Example:

```
+Copy Type=UR
++{P-VOL(Port-G-ID-LUN),S-VOL(Port-G-ID-LUN),MirrorID,
S/N,CTRLID,Type,Range,Delete Mode,Result}
=[{4C-0x00-0,4A-0x00-0,0x00,467676,18,P-VOL,LU,Normal,
Normal end}],Num. of Pairs=1
```

Symbol	Definition
+ and -	'+' or '-' displays at the beginning of a line. • '+' means the beginning of the index. The number of occurrences of '+' represents the number of indents. • '-' means that the line continues from the previous one.
=	Connects an index and a setting value.
[ ]	When there is more than one setting value for an index, the setting values are enclosed by [ ], and separated by a comma (,). *Example:* CU:LDEV=[0x00:0x00,0x00:0x01,0x00:0x02]
{ }	Details are enclosed by {}. *Example:* {Port,Fabric,Connection}=[{1E,ON,FC-AL},{3E,OFF,P-to-P}]
( )	Supplementary and additional information for setting values is enclosed by ( ). *Example:* {VOL(CU:LDEV),Result}={0x00:0x01,Error(xxxx-yyyy)}

Note: If there is an item that is not specified when entering commands or performing operations, a hyphen (-) is output for its setting value, no setting value is output, or the index itself is not output.

Detailed information format 2

Example:

```
+{iScsiPort[0]{
Port=1A,
iScsiTarget[0]{
  Id=0,Name="Name",Alias="Alias",UserAuthSwitch=Enable,
  Result=Normal end}}}
```

Note: Line feeds are added to make the example easy to see, while no line feed is added to the actual logs.

Symbol	Definition
+ and -	'+' or '-' displays at the beginning of a line. • '+' means the beginning of the index. The number of occurrences of '+' represents the number of indents. • '-' means that the line continues from the previous one.
{ }	The tiering relation is indicated by the following format. *Parent setting item*{*Child setting item 1*, *Child setting item 2*{*Grandchild setting item 2-1*, *Grand child setting item 2-2*,...},...}
=	Connects an index and a setting value.
[*x*]	For the log output by the command or operation in which multiple resources or items of the same type can be set at one time, the resource or item of the same type is indicated as follows. *Setting item*[*x*] (where *x* is a number: 0, 1, 2,...)

Note: If there is an item that is not specified when entering commands or performing operations, "null" is output for its setting value, or the index itself is not output.

Description of log examples in this manual


The log examples in this manual contain only the basic information and detailed information of audit log information.

An audit log header appears before the basic information and each detailed information respectively.

For Detailed information format 2 above, line feeds are added to make it easy to see, while no line feed is added to the actual logs.

Detailed information format 1

A log actually output

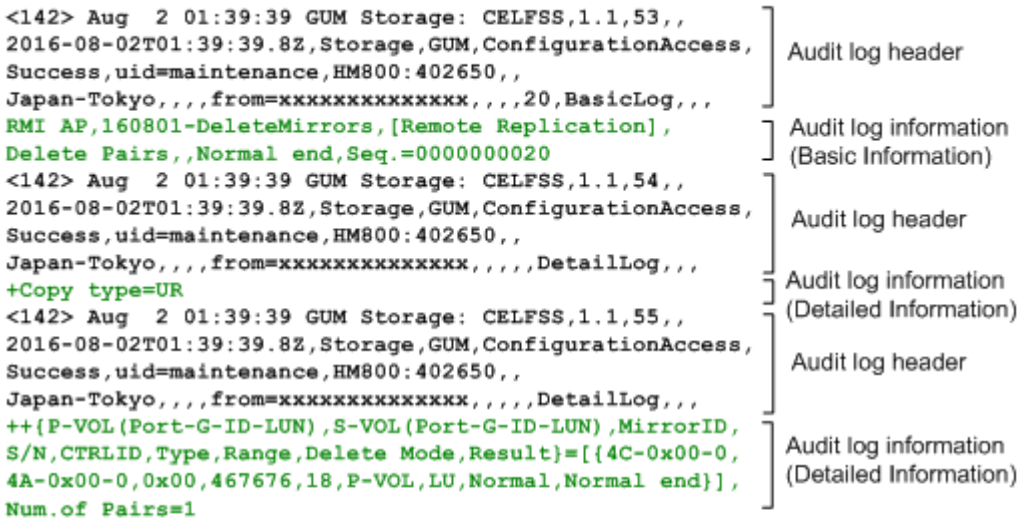

Description of the log example in this manual

```
RMI AP,160801-DeleteMirrors,[Remote Replication],
Delete Pairs,,Normal end,Seq.=0000000020
+Copy type=UR
++{P-VOL(Port-G-ID-LUN),S-VOL(Port-G-ID-LUN),MirrorID,
S/N,CTRLID,Type,Range,Delete Mode,Result}
=[{4C-0x00-0,4A-0x00-0,0x00,467676,18,P-VOL,LU,Normal,
Normal end}],Num.of Pairs=1
```

Detailed information format 2

A log actually output

```
<142> Aug  2 01:39:39 GUM Storage: CELFSS,1.1,53,,
2016-08-02T01:39:39.8Z,Storage,GUM,ConfigurationAccess,
Success,uid=maintenance,HM800:402650,,
Japan-Tokyo,,,,from=xxxxxxxxxxxxx,,,,20,BasicLog,,,
RMI AP,,[PROV],DeleteiScsiTarget,,Normal end,
Seq.=0000000020
<142> Aug  2 01:39:39 GUM Storage: CELFSS,1.1,54,,
2016-08-02T01:39:39.8Z,Storage,GUM,ConfigurationAccess,
Success,uid=maintenance,HM800:402650,,
Japan-Tokyo,,,,from=xxxxxxxxxxxxx,,,,,DetailLog,,,
+{iScsiPort[0]{Port=1A,iScsiTarget[0]{Id=0,
Result=Normal end}}}
```

Audit log header

Audit log information (Basic Information)

Audit log header

Audit log information (Detailed Information)


Description of the log example in this manual

```
RMI AP,,[PROV],DeleteiScsiTarget,,Normal end,
Seq.=0000000020
+{iScsiPort[0]{
  Port=1A,
  iScsiTarget[0]{
    Id=0,Result=Normal end}}}
```

Format of audit log files when audit log files are transferred to the syslog server

If an audit log file is to be transferred to the syslog server, syslog header information is included in the audit log file.

The following figure shows the format of audit log files when audit log files are transferred to the syslog server.

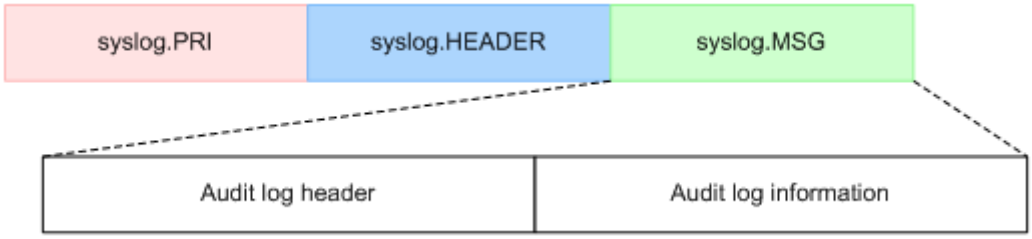

Part		Description
syslog.PRI		The same priority is set for syslog.PRI and for the audit log header.
syslog.HEADER		The syslog.HEADER includes the date and time when the syslog data was sent.
syslog.MSG	Audit log header*	See Audit log header format (RFC3164-compliant) on page 10-2 or Audit log header format (RFC5424-compliant) on page 10-6. The audit log header includes the date and time when the audit event occurred.


Part		Description
	Audit log information	See Audit log information format (Basic information) on page 10-9 and Audit log information format (Detailed information) on page 10-11.

*

If the format of the audit log header is RFC3164-compliant, syslog.PRI, syslog.HEADER, and syslog.MSG will be sent in an RFC3164-compliant format.

If the format of the audit log header is RFC5424-compliant, syslog.PRI, syslog.HEADER, and syslog.MSG will be sent in an RFC5424-compliant format.

The following figure shows an example of data when an audit log file is transferred the syslog server.

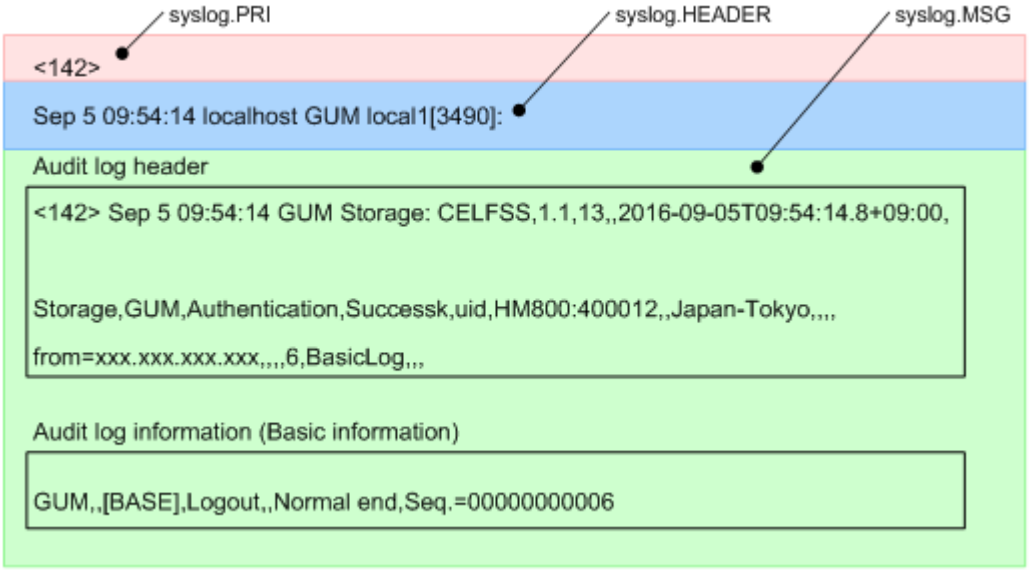

11

VSP Gx00 models, VSP Fx00 models audit logs quick reference

The event names and operation names output to audit log files by the operations of the management client or Maintenance PC are described.

- Audit Log Functions
- Device Manager - Storage Navigator and Maintenance PC operation
- Encryption Key operations
- Command received from hosts
- PIN Deletion Tool operation
- Reproducing/losing Audit log

Audit Log Functions

The following table lists the functions used in audit logging and provides their meanings.

Function name	Description
ACM	Audit log functions used for account management
AuditLog	Audit log functions used during audit logging
BASE	Audit log functions used during initial setup
Information	Audit log functions used during log related operations on Maintenance PC
Install	Audit log functions used during software or firmware installation
Local Replications	Audit Log functions used during local replication operations
Maintenance	Audit log functions used during general maintenance
Monitor	Audit log functions used to monitor process
PFM	Audit log functions used to monitor performance
PROV	Audit log functions used to provision the system
Remote Maintenance	Audit log functions used for Remote Maintenance application
Remote Replications	Audit log functions used during remote replication operations
SPM	Audit log functions used during Server Priority Manager operations
UVM	Audit log functions used during Universal Volume Manager operations
VM	Audit log functions used during Volume Migration operations
VPM	Audit log functions used during Virtual Partition Manager operations
VS	Audit log functions used during volume shredding operations

Device Manager - Storage Navigator and Maintenance PC operation

The storage system logs operations performed from management client or Maintenance PC. The following table lists the function/operation names as well as GUI operations that trigger logging. Functions are listed in alphabetical order.

Function Name	Operation Name	Corresponding GUI Operation
AuditLog	Send Test Message	Sending a test log to a Syslog server on the Audit Log Settings window
AuditLog	Set Up Syslog Serv	Configuring syslog servers in the Set Up Syslog Server for Audit Logs window

Function Name	Operation Name	Corresponding GUI Operation
ACM	AddUsersToUserGroup	Adding users to a user group
ACM	CreateUser	Creating a new user account
ACM	CreateUserGroup	Creating a new user group
ACM	DeleteUsers	Deleting user accounts
ACM	DeleteUserGroups	Deleting user groups
ACM	DisableUsers	Disabling users
ACM	EnableUsers	Enabling users
ACM	RemoveUsersFromUserGroup	Removing users from a user group
ACM	Set Login Message	Setting login message
ACM	UpdatePassword	Changing a password
ACM	UpdateUserAuthentication	Changing a user authentication mode
ACM	UpdateUserGroupAllResourceGrp	Changing assignment of all resource groups of a user group
ACM	UpdateUserGroupName	Changing a user group name
ACM	UpdateUserGroupResourceGrpBmp	Changing assignment of resource groups of a user group
ACM	UpdateUserGroupRole	Assigning roles to a user group or releasing assignment of roles
BASE	Advanced Settings	Editing advanced system settings
BASE	Create Conf Report	Creating configuration reports
BASE	Delete CVAE Info	Changing information from Command Suite
BASE	Delete Reports	Deleting configuration reports
BASE	Delete Tasks	Deleting tasks
BASE	Disable Auto Delete	Disabling Task Auto Delete
BASE	Edit Storage System	Editing storage system information
BASE	Enable Auto Delete	Enabling Task Auto Delete
BASE	Entry Tasks	Registering tasks to the storage system
BASE	HCSSO Authentication	Launching Device Manager - Storage Navigator from Hitachi Command Suite
BASE	HCSSO SetOneTimeKey	Issuing OneTimeKey from Hitachi Command Suite
BASE	Login	Logging in to Device Manager - Storage Navigator or Maintenance PC
BASE	Logout	Logging out from Device Manager - Storage Navigator or Maintenance PC
BASE	Resume Tasks	Resuming tasks
BASE	Set CVAE Info	Changing information from Command Suite

Function Name	Operation Name	Corresponding GUI Operation
BASE	Start Maintenance	Logging in to Maintenance PC
BASE	Suspend Tasks	Suspending tasks
BASE	Unlock Forcibly	Forcible unlocking
Information	Delete Log	Log-related operations on Maintenance PC
Information	ORM Value	Log-related operations on Maintenance PC
Information	Threshold Value	Log-related operations on Maintenance PC
Install	All Config	Maintenance on Maintenance PC
Install	Backup Config	Maintenance on Maintenance PC
Install	FlashDrive ORM Value	Maintenance on Maintenance PC
Install	Initialize ORM Value	Maintenance on Maintenance PC
Install	Machine Install Date	Maintenance on Maintenance PC
Install	NEW Installation	Maintenance on Maintenance PC
Install	Remove	Maintenance on Maintenance PC
Install	System Option	Maintenance on Maintenance PC
Install	System Tuning	Maintenance on Maintenance PC
Local Replication	Assign S-VOLs	Assigning secondary volumes of Thin Image pairs
Local Replication	Create Pairs	Creating pairs of ShadowImage or Thin Image
Local Replication	Delete Pairs	Deleting pairs of ShadowImage or Thin Image
Local Replication	Edit Options	Setting options for ShadowImage
Local Replication	Initialize	Initializing pairs of ShadowImage or Thin Image
Local Replication	Remove S-VOLs	Removing secondary volumes of Thin Image pairs
Local Replication	Resync Pairs	Resynchronizing pairs of ShadowImage or Thin Image
Local Replication	Split Pairs	Splitting pairs of ShadowImage or Thin Image
Local Replication	Suspend Pairs	Suspending ShadowImage pairs
Maintenance	Block	Maintenance from the Maintenance Utility menu
Maintenance	Block(Type Change)	Maintenance from the Maintenance Utility menu
Maintenance	Blockade	Maintenance on Maintenance PC
Maintenance	Boot System SafeMode	Maintenance from the Maintenance Utility menu

Function Name	Operation Name	Corresponding GUI Operation
Maintenance	Change SFP Type	Maintenance from the Maintenance Utility menu
Maintenance	Check Remove	Maintenance from the Maintenance Utility menu
Maintenance	Correction Copy	Maintenance on Maintenance PC
Maintenance	Create User	Maintenance from the Maintenance Utility menu
Maintenance	Delete Users	Maintenance from the Maintenance Utility menu
Maintenance	Disable Licenses	Maintenance from the Maintenance Utility menu
Maintenance	Edit Hypervisor Mode	Maintenance from the Maintenance Utility menu
Maintenance	Edit Login Message	Maintenance from the Maintenance Utility menu
Maintenance	Edit ReplacingNotice	Maintenance from the Maintenance Utility menu
Maintenance	Edit System Param	Maintenance from the Maintenance Utility menu
Maintenance	Edit UPS Mode	Maintenance from the Maintenance Utility menu
Maintenance	Edit User	Maintenance from the Maintenance Utility menu
Maintenance	Enable Licenses	Maintenance from the Maintenance Utility menu
Maintenance	Export Audit Logs	Maintenance from the Maintenance Utility menu
Maintenance	Force Rls SysLock	Maintenance from the Maintenance Utility menu
Maintenance	Install	Maintenance from the Maintenance Utility menu
Maintenance	Install NAS Firm	Maintenance from the Maintenance Utility menu
Maintenance	License Key Install	Maintenance from the Maintenance Utility menu
Maintenance	License Key Remove	Maintenance from the Maintenance Utility menu
Maintenance	MP Restore	Maintenance on Maintenance PC
Maintenance	Power Off Storage	Maintenance from the Maintenance Utility menu
Maintenance	Power On Storage	Maintenance from the Maintenance Utility menu
Maintenance	Reboot GUM	Maintenance from the Maintenance Utility menu
Maintenance	Remove	Maintenance from the Maintenance Utility menu
Maintenance	Remove NAS Firm	Maintenance from the Maintenance Utility menu
Maintenance	Reset DurationOfUse	Maintenance from the Maintenance Utility menu
Maintenance	Reset HUB	Maintenance from the Maintenance Utility menu
Maintenance	Reset Hypervisor	Maintenance from the Maintenance Utility menu
Maintenance	Reset Hypervisor NW	Maintenance from the Maintenance Utility menu
Maintenance	Reset NASFW	Maintenance from the Maintenance Utility menu
Maintenance	Restore	Maintenance from the Maintenance Utility menu or maintenance on Maintenance PC
Maintenance	Restore(Type Change)	Maintenance from the Maintenance Utility menu
Maintenance	Restore Data	Maintenance on Maintenance PC

Function Name	Operation Name	Corresponding GUI Operation
Maintenance	Select Cipher Suite	Maintenance from the Maintenance Utility menu
Maintenance	Select Login Window	Maintenance from the Maintenance Utility menu
Maintenance	Set Up Alert	Maintenance from the Maintenance Utility menu
Maintenance	Set Up Date & Time	Maintenance from the Maintenance Utility menu
Maintenance	Set Up Email	Maintenance using the Maintenance Utility applications (GUM AP) such as NAS Manager
Maintenance	Set Up Network Perm	Maintenance from the Maintenance Utility menu
Maintenance	Set Up Network Set	Maintenance from the Maintenance Utility menu
Maintenance	Set Up SNMP	Maintenance using the Maintenance Utility applications (GUM AP) such as NAS Manager
Maintenance	Set Up Syslog	Maintenance using the Maintenance Utility applications (GUM AP) such as NAS Manager
Maintenance	Set Up System Info	Maintenance from the Maintenance Utility menu
Maintenance	Stop Copy	Maintenance from the Maintenance Utility menu
Maintenance	Turn Off Locate LEDs	Maintenance from the Maintenance Utility menu
Maintenance	Turn On Locate LEDs	Maintenance from the Maintenance Utility menu
Maintenance	Update Cert Files	Maintenance from the Maintenance Utility menu
Maintenance	Update Firmware	Maintenance from the Maintenance Utility menu
Maintenance	UserAccount Backup	Maintenance from the Maintenance Utility menu
Maintenance	UserAccount Restore	Maintenance from the Maintenance Utility menu
Monitor	Monitoring Switch	Maintenance on Maintenance PC
PFM	Delete Unused WWNs	Performance Monitor
PFM	Edit CU Monitor Mode	Performance Monitor
PFM	Edit Monitoring SW	Performance Monitor
PFM	Edit WWN	Performance Monitor
PFM	Edit WWN MonitorMode	Performance Monitor
PROV	Add Hosts	• Adding hosts to specified host groups • Adding specified hosts to host groups
PROV	Add LUN Paths	• Mapping LU paths • Creating alternate LUN paths • Setting the same path as a selected LUN
PROV	Assign MP Unit	Assigning MP units
PROV	Block LDEVs	Blocking LDEVs
PROV	CalculateTieringMonitorData	Recalculating tier monitoring data from Hitachi Command Suite

Function Name	Operation Name	Corresponding GUI Operation
PROV	Create Host Groups	Creating host groups
PROV	Create LDEVs	Creating new LDEVs
PROV	Create Resource Grps	Creating resource groups
PROV	Create VDKC-Box	Creating a VDKC-Box from Hitachi Command Suite
PROV	Create/Expand Pools	• Creating new pools • Increasing pool capacity
PROV	CreateAlus	Creating an LDEV with the ALU attribute
PROV	CreateiScsiName	Adding hosts to selected iSCSI targets
PROV	CreateiScsiPath	• Adding iSCSI paths to external storage systems • Adding connections to remote storage systems
PROV	CreateiScsiTarget	Creating iSCSI targets
PROV	CreateLdev	Creating new internal or external volumes
PROV	CreateParityGroups	Creating parity groups
PROV	CreateRemoteChapUser	Adding CHAP users to selected iSCSI targets
PROV	CreateSlus	Creating an LDEV with the SLU attribute from Hitachi Command Suite
PROV	CreateTiPairsWithSlu	Creating Thin Image pairs using LDEVs with the SLU attribute from Hitachi Command Suite
PROV	CreateTiVolumes	Creating a secondary volume for Thin Image from Hitachi Command Suite
PROV	Delete Host Groups	Deleting host groups
PROV	Delete LDEVs	Deleting LDEVs
PROV	Delete Login WWNs	Deleting unnecessary WWNs
PROV	Delete LUN Paths	Removing LUN paths from LDEVs
PROV	Delete Resource Grps	Deleting resource groups
PROV	Delete VDKC-Box	Deleting a VDKC-Box from Hitachi Command Suite
PROV	DeleteAlus	Deleting an LDEV with the ALU attribute
PROV	DeleteiScsiInitiatorUser	Deleting the setting information of users with CHAP authentication on ports
PROV	DeleteiScsiName	Removing hosts from selected iSCSI targets
PROV	DeleteiScsiPath	• Deleting iSCSI paths to external storage systems • Deleting iSCSI paths when connections cannot be added to remote storage systems
PROV	DeleteiScsiTarget	Deleting iSCSI targets
PROV	DeleteLdev	Deleting internal or external volumes
PROV	DeleteLoginiScsiName	Deleting unnecessary iSCSI names

Function Name	Operation Name	Corresponding GUI Operation
PROV	DeleteParityGroups	Deleting parity groups
PROV	DeleteRemoteChapUser	Removing CHAP users from selected iSCSI targets
PROV	DeleteSlus	Deleting an LDEV with the SLU attribute from Hitachi Command Suite
PROV	DeleteTargetChapUser	Removing CHAP users assigned to iSCSI targets
PROV	DeleteTiVolumes	Deleting a secondary volume for Thin Image from Hitachi Command Suite
PROV	DRU Expiration Lock	Data Retention Utility
PROV	Edit Cmd Dev(Auth)	Editing command device settings
PROV	Edit Cmd Dev(DevGrp)	Editing command device settings
PROV	Edit Cmd Dev(Sec)	Editing command device settings
PROV	Edit Command Devices	Editing command device settings
PROV	Edit DRU Attribute	Data Retention Utility
PROV	Edit Full Allocation	Enabling or disabling the Full Allocation setting
PROV	Edit Host	Editing host settings
PROV	Edit Host Grps(Mode)	Editing host group settings
PROV	Edit Host Grps(Name)	Editing host group settings
PROV	Edit LDEVs(tier)	Editing LDEV settings
PROV	Edit LDEV Tier Rank	Editing the external LDEV tier ranks of pool volumes assigned to a pool
PROV	Edit MP Units	Editing MP unit settings
PROV	Edit Ports(Address)	Editing port settings
PROV	Edit Ports(Security)	Editing port settings
PROV	Edit Ports(Speed)	Editing port settings
PROV	Edit Ports(Topology)	Editing port settings
PROV	Edit Resource Grp	Editing resource groups
PROV	Edit Tiering Policy	Editing the tiering policy
PROV	Edit V-VOL Option	• Creating new LDEVs • Editing LDEV settings
PROV	Edit/Delete Pools	• Deleting pools • Editing pool settings
PROV	Edit/Delete UUIDs	• Changing UUIDs • Deleting UUIDs
PROV	EditiScsiInitiatorUser	Editing the setting information of users with CHAP authentication on ports

Function Name	Operation Name	Corresponding GUI Operation
PROV	EditiScsiName	Editing host settings
PROV	EditiScsiNickName	Editing host settings
PROV	EditiScsiTarget	Editing iSCSI target settings
PROV	EditiSNS	Editing port settings
PROV	EditPortInfo	Editing port settings
PROV	EditRemoteChapUser	Editing CHAP user settings
PROV	EditRemoteTargetUser	Editing iSCSI targets
PROV	EditT10piMode	Editing T10 PI mode settings on ports
PROV	EditTargetChapUser	Editing settings of CHAP users assigned to iSCSI targets
PROV	ExecBindingOperation	Binding or unbinding an LDEV with the SLU attribute to or from the LDEV with the ALU attribute
PROV	Expand V-VOLs	Increasing virtual volume capacity
PROV	ExpandSlus	Increasing capacity of an LDEV with the SLU attribute from Hitachi Command Suite
PROV	Format LDEVs	• Formatting LDEVs • Creating new LDEVs
PROV	Format LDEVs(Q)	• Quick formatting LDEVs • Creating new LDEVs
PROV	Initialize Pools	Initializing pools
PROV	LDEV Name	• Creating new LDEVs • Editing LDEVs
PROV	LdevForceRestore	Forcible restoration of LDEVs
PROV	MapSecondaryVolumeWithSlu	Mapping LDEVs with the SLU attribute to the secondary volumes of Thin Image pairs from Hitachi Command Suite
PROV	Monitor Pools	Starting the performance monitoring of a pool
PROV	Move Resources	• Adding resources to resource groups • Removing resources from resource groups
PROV	OperateSiPairsWithSlu	Operating ShadowImage pairs using LDEVs with the SLU attribute from Hitachi Command Suite
PROV	OperateTiPairsWithSlu	Operating Thin Image pairs using LDEVs with the SLU attribute from Hitachi Command Suite
PROV	Pool Name	• Setting pool names • Deleting pool names
PROV	Reclaim Zero Pages	Releasing pages in virtual volumes
PROV	Release HostReserved	Releasing Host-Reserved LUNs
PROV	Relocate Pool	Starting the tier relocation of a pool

Function Name	Operation Name	Corresponding GUI Operation
PROV	Remove Hosts	Removing hosts from host groups
PROV	Restore LDEVs	Restoring LDEVs
PROV	Restore Pools	Restoring pools
PROV	RevertTiPairsWithSlu	Reverting Thin Image pairs using LDEVs with the SLU attribute from Hitachi Command Suite
PROV	Set FCSP Host	• Creating host authentication information • Changing host authentication information • Deleting host authentication information
PROV	Set FCSP Port Info	• Setting port information • Setting default (User name/Secret)
PROV	Set FCSP Port Switch	Registering authentication information Authentication Mode: Bi-directional -> Unidirectional or Unidirectional -> Bi-directional Authentication (Port): Enable -> Disable or Disable -> Enable
PROV	Set FCSP Target	Registering or deleting authentication information Authentication (Host Group): Disable -> Enable or Enable -> Disable
PROV	Set PageTieringLevel	Setting the tiering policy per page
PROV	Set Virtual LDEV	• Editing virtualization management settings • Setting or releasing the GAD reserve attribute on a volume for the secondary volume of a global-active device pair
PROV	Shrink Pool	Decreasing pool capacity
PROV	StartParityGroupsFormat	Formatting parity groups
PROV	StartVerify	Verifying LDEVs
PROV	Stop Monitoring	Stopping the performance monitoring of a pool
PROV	Stop Reclm ZeroPages	Stopping releasing pages in virtual volumes
PROV	Stop Relocating	Stopping the tier relocation of a pool
PROV	Stop Shrinking Pool	Stopping decreasing pool capacity
PROV	StopFormat	Stopping formatting parity groups
PROV	StopVerify	Stopping verifying LDEVs
PROV	UnmapSecondaryVolumeWithSlu	Unmapping the secondary volumes of Thin Image pairs using LDEVs with the SLU attribute from Hitachi Command Suite
PROV	UpdateAluaMode	• Editing an LDEV • Creating pairs for global-active device • Resynchronizing pairs for TrueCopy, Universal Replicator, and global-active device

Function Name	Operation Name	Corresponding GUI Operation
		• Resynchronizing pairs for global-active device by the consistency group
PROV	UpdateAsymmetricAccessStatePerHG	Editing Asymmetric Access States settings
PROV	UpdateCopybackMode	Enabling or disabling copy-back mode
PROV	UpdateParityGroupSettings	Enabling or disabling accelerated compression
PROV	UpdateSpareDrives	Assigning as a spare drive or releasing a spare drive setting
Remote Maintenance	PS Control	Hi-track
Remote Maintenance	Reboot MP	Hi-track
Remote Maintenance	Reboot Port	Hi-track
Remote Replication	Add Path	Adding paths to remote storage systems
Remote Replication	Add Quorum Disk ID	Adding quorum disk IDs used by global-active device
Remote Replication	Add RCU	Adding connections to remote storage systems
Remote Replication	Change JNL Option	Changing the journal option for Universal Replicator
Remote Replication	Change Mirror Option	Changing the mirror option for Universal Replicator
Remote Replication	Change RCU Option	Changing the remote storage system options
Remote Replication	Create Pairs	Creating pairs of TrueCopy, Universal Replicator, and global-active device
Remote Replication	Delete Pairs	Deleting pairs of TrueCopy, Universal Replicator, and global-active device
Remote Replication	Delete Path	Removing paths from remote storage systems
Remote Replication	Del Quorum Disk ID	Deleting quorum disk IDs used by global-active device
Remote Replication	Delete RCU	Removing connections to remote storage systems
Remote Replication	Edit Options	Setting the remote replica options
Remote Replication	Edit Pair Options	Setting the pair options for TrueCopy or Universal Replicator
Remote Replication	Journal Owner	Setting the journal ownership for Universal Replicator

Function Name	Operation Name	Corresponding GUI Operation
Remote Replication	Journal Vol	Creating or deleting journals or assigning journal volumes of Universal Replicator
Remote Replication	R-Cmd.Dev.	Setting remote command devices of Universal Replicator
Remote Replication	Resync Pairs	Resynchronizing pairs of TrueCopy, Universal Replicator, and global-active device
Remote Replication	Split Pairs	Splitting pairs of TrueCopy or Universal Replicator
Remote Replication	Suspend Pairs	Suspending pairs for global-active device
Remote Replication	UpdateQuorumDisks	Editing the value of Read Response Guaranteed Time When Quorum Disk Blocked for global-active device.
SPM	Change SPMGrp	Server Priority Manager
SPM	Clear SPM Info	Server Priority Manager
SPM	Default Set	Server Priority Manager
SPM	Set All Prio Port	Server Priority Manager
SPM	Set All Prio WWN	Server Priority Manager
SPM	Set Ctrl Kind	Server Priority Manager
SPM	Set Prio Port	Server Priority Manager
SPM	Set Prio WWN	Server Priority Manager
SPM	SPMGrp Del/Chg	Server Priority Manager
SPM	Update Port WWN	Server Priority Manager
SPM	Update SPMGrp	Server Priority Manager
SPM	Update WWN	Server Priority Manager
UVM	Add External Volumes	Mapping external volumes
UVM	Assign MP Unit	Assigning MP units for external volumes
UVM	Delete ES VOLs	Releasing external volume mapping
UVM	Disconnect ES Paths	Disconnecting external paths
UVM	Disconnect ES VOLs	• Disconnecting external storage systems • Disconnecting external volumes
UVM	Edit ES Path Config	• Adding paths to external path groups • Deleting paths from external path groups • Changing priority among external paths
UVM	Edit ES VOLs	Editing external volume settings
UVM	Edit External WWNs / iSCSI Targets	• Editing external WWN parameters • Editing external iSCSI target parameters

Function Name	Operation Name	Corresponding GUI Operation
UVM	Reconnect ES Paths	Reconnecting external paths
UVM	Reconnect ES VOLs	• Reconnecting external storage systems • Reconnecting external volumes
VM	Del Migration Plans	Volume Migration
VM	Migrate Volumes	Volume Migration
VPM	Edit CLPR	Creating, adding, deleting, or editing CLPR Migrating parity groups to a different CLPR
VS	Abort Shredding	Stopping shredding LDEVs
VS	End Shredding	Ending shredding LDEVs
VS	Shred LDEVs	Shredding LDEVs

Related topics

- Chapter 12, VSP Gx00 models, VSP Fx00 models audit log examples on page 12-1
- Appendix C, VSP Gx00 models, VSP Fx00 models audit log user operations on page C-1
- Appendix E, Audit log Maintenance PC operations on page E-1

Encryption Key operations

The following tables show the function names, operation names and event names related to encryption keys for data encryption, and each item is listed in alphabetical order.

Table 11-1 Function Name and Operation Name

Function Name	Operation Name	Corresponding GUI Operation
ENC	Add keys to DKC	• Creating encryption keys • Configuring encryption environment settings
	Backup Keys	Backing up encryption keys on the key management server or backing up encryption keys as a file on the management client
	Backup Keys to File	Backing up encryption keys as a file on the management client
	Backup Keys to Serv	Backing up encryption keys on the key management server
	Create KEK Dynamic	• Configuring encryption environment settings • Updating key encryption keys
	Create Keys	• Creating encryption keys

Function Name	Operation Name	Corresponding GUI Operation
		• Configuring encryption environment settings
	Create Keys On Serv	• Creating encryption keys • Backing up encryption keys on the key management server • Configuring encryption environment settings
	Delete KEK Dynamic	• Configuring encryption environment settings • Updating key encryption keys
	Delete Keys	Deleting encryption keys
	Delete Keys on Serv	Deleting encryption keys backed up on the key management server
	DEK assign SpareDisk	Configuring encryption environment settings
	DEK delete	Configuring encryption environment settings
	Edit Encryption	Enabling/disabling the encryption in a parity group level
	Edit ENC Settings	Configuring encryption environment settings
	Edit Password Policy	Editing password policies for backing up encryption keys
	Register KEK Dynamic	• Configuring encryption environment settings • Updating key encryption keys
	Rekey CEK	• Configuring encryption environment settings • Updating certificate encryption keys
	Rekey KEK Dynamic	Updating key encryption keys
	Restore Keys	Restoring encryption keys from back up copies on the key management server or the management client
	Restore Keys fr File	Restoring encryption keys from back up copies on the management client
	Restore Keys fr Serv	Restoring encryption keys from back up copies on the key management server
	Retry KEK Dynamic	Reacquisition of key encryption keys
	Set Up Key Mng Serv	Configuring encryption environment settings
KEK Acquisition	Acquisition Key	Reacquisition of key encryption keys
	Set Key	

Table 11-2 Function Name and Event Name

Function Name	Event Name	Output Trigger
ENC	Change CEK Status	• When the encryption environment setting is configured from the initial setting. • When the certificate encryption key is updated. • When the encryption disk board is deleted or replaced.

Function Name	Event Name	Output Trigger
	Change DEK Status	• When the encryption environment setting is configured from the initial setting. • When the encryption environment setting is initialized. • When the data encryption is enabled/disabled. • When Dynamic sparing, Correction copy or Copy back is performed. • When the drive (Hard disk drive, SSD or FMD) is added, deleted or replaced after the encryption environmental setting is configured.
	Clear Keys	When the encryption environment setting is initialized.
	Create Keys	When the encryption key is created.
	Delete Keys	When the encryption key is deleted.
	Use Keys for CEK/KEK	• When the encryption environment setting is configured from the initial setting. • When the certificate encryption key is updated. • When the encryption disk board is added or replaced.

Related topics

- Chapter 13, VSP Gx00 models, VSP Fx00 models audit log examples of encryption key operations on page 13-1

Command received from hosts

The following table shows the function name output to audit log files when receiving commands from hosts.

Function Name	Description
Config Command	Indicates that a configuration command is received.
FC-SP	Indicates that the FC-SP authentication is completed.
User Auth	Indicates that a user authentication command is received.

Related topics

- Chapter 14, Audit log examples of commands received by VSP Gx00 models, VSP Fx00 models on page 14-1

PIN Deletion Tool operation

The following table shows the function name and the operation name related to PIN Deletion Tool.

Function Name	Operation Name	Corresponding GUI Operation
PINDeletion	Delete	PIN deletion operations by PIN deletion tool

Related topics

- Chapter 15, VSP Gx00 models, VSP Fx00 models audit log examples of PIN Deletion Tool operation on page 15-1

Reproducing/losing Audit log

The following table shows the function name, event name, and triggering events that are output when the audit log file is reproduced or lost. The event name, "Create File", is output only once when the audit log file is reproduced automatically.

Function Name	Event Name	Output Trigger
AuditLog	Create File	When abnormal files in the audit log are reproduced automatically.
AuditLog	DKCAuditLog was lost	When the audit log created by commands received from hosts is lost.

Related topics

- Chapter 12, VSP Gx00 models, VSP Fx00 models audit log examples on page 12-1

12

VSP Gx00 models, VSP Fx00 models audit log examples

This topic provides examples and descriptions of the audit logs produced by each function and operation that can be performed with Device Manager - Storage Navigator and Maintenance PC. The descriptions are listed alphabetically by function name and operation name.

- Audit Log Descriptions
- ACM Descriptions
- BASE Descriptions
- Information Descriptions
- Install Descriptions
- Local Replication Descriptions
- Maintenance Descriptions
- Monitor Descriptions
- Performance Monitor Descriptions
- Provisioning Descriptions
- Remote Maintenance Descriptions
- Remote Replication Descriptions
- Server Priority Manager Descriptions

- Universal Volume Manager Descriptions
- Volume Migration Descriptions
- Virtual Partition Manager Descriptions
- Volume Shredder Descriptions

Audit Log Descriptions

[AuditLog] Create File

Example

```
,,[AuditLog],Create File,SVP,Warning,Seq.=xxxxxxxxxx
```

Basic Information

Parameter	Description
SVP	Indicates that the following audit log files are regenerated. • Operations set by the management client • Operations on encryption keys for encrypting stored data • Execution logs of Remote Maintenance API
DKC	Indicates that the following audit log files are regenerated. • Commands that the storage system received from the host or computers using CCI • Events on encryption keys for encrypting stored data

[AuditLog] DKCAuditLog was lost

Example

```
MPC,,[AuditLog],DKCAuditLog was lost,,Error,Seq.=xxxxxxxxxx
```

[AuditLog] Send Test Message

Example

```
GUM,,[AuditLog],Send Test Message,,Normal end,Seq.=xxxxxxxxxx
```

[AuditLog] Set Up Syslog Serv

Example

```
GUM,,[AuditLog],Set Up Syslog Serv,,Normal end,Seq.=xxxxxxxxxx
+Syslog Transfer Protocol=xxxxxxx,
{Syslog Server,Server Enable,Type,Name,Port Number,
Client Certificate File Name,Root Certificate File Name,
Location Identification Name,Retry,Retry Interval}
=[{Primary,Enable,IPv4,xxxxx,65535,xxxx,xxxxx,xxxxx,Disable,xxx},
{Secondary,Enable,IPv4,xxxxx,65535,xxxx,xxxx,xxxx,Disable,xxx}],
Detail=Enable
```

Detailed Information

Item	Description
Syslog Transfer Protocol	The protocol to transfer audit log information to syslog servers (TLS1.2/RFC5424 or UDP/RFC3164).
Syslog Server	The server used to transfer audit log information to syslog servers. Primary: Primary server, Secondary: Secondary server
Server Enable	Indicates whether the syslog server setting is enabled or disabled. Enable: The setting is enabled. Disable: The setting is disabled.
Type	The type of the IP address of the syslog server (IPv4 or IPv6). A hyphen (-) is displayed if the setting of transferring audit logs to syslog servers is disabled.
Name	The IP address of the syslog server. A hyphen (-) is displayed if the setting of transferring audit logs to syslog servers is disabled.
Port Number	The port number to transfer audit logs to syslog servers. A hyphen (-) is displayed if the setting of transferring audit logs to syslog servers is disabled.
Client Certificate File Name	The name of the client certificate file used to transfer audit logs to syslog servers. A hyphen (-) is displayed, if the setting of transferring audit logs to syslog servers is disabled, or if UDP/RFC3164 is used as a transfer protocol.
Root Certificate File Name	The name of the root certificate file used to transfer audit logs to syslog servers. A hyphen (-) is displayed, if the setting of transferring audit logs to syslog servers is disabled, or if UDP/RFC3164 is used as a transfer protocol.
Location Identification Name	The name to identify a storage system when transferring audit logs to syslog servers.
Retry	Indicates whether to retry transferring if communication with syslog servers failed. Enable: Transfer is retried. Disable: Transfer is not retried. A hyphen (-) is displayed if UDP/RFC3164 is used as a transfer protocol.
Retry Interval	The interval of the retries of transferring. A hyphen (-) is displayed, if the setting of the retry is disabled or if UDP/RFC3164 is used as a transfer protocol.
Detail	Indicates whether the detailed information of audit logs is transferred to syslog servers. Enable: The information is transferred. Disable: The information is not transferred.

ACM Descriptions

[ACM] AddUsersToUserGroup

Example

```
RMI AP,,[ACM],AddUsersToUserGroup,,Normal end,Seq.=xxxxxxxxxx
+{UserGroup{
  Name="Group1"},
User[0]{
  Name="User1",Result=Normal end}}
```

Detailed Information

Item		Description
UserGroup		The information of the user group to which the user account is added
	Name	The user group name
User[x]		The information of the user account added to the user group
	Name	The user name
	Result	Result of the operation Normal end: normal end, Error(*xxxxx-yyyyyy*): Abnormal end *xxxxx*: part code, *yyyyyy*: error code

[ACM] CreateUser

Example

```
RMI AP,,[ACM],CreateUser,,Normal end,Seq.=xxxxxxxxxx
+{User{
  Name="User1",Authentication=Local,
  UserGroup[0]{
    Name="Group1"},
  AccountStatus=true}}
```

Detailed Information

Item			Description
User			The information of the created user account
	Name		The user name
	Authentication		The authentication method Local: Local authentication, External: External authentication
	UserGroup[x]		The information of the user group to which the user account belongs
		Name	The user group name

Item	Description
AccountStatus	The setting status of the user account true: Enabled, false: Disabled

[ACM] CreateUserGroup

Example

```
RMI AP,,[ACM],CreateUserGroup,,Normal end,Seq.=xxxxxxxxxx
+{UserGroup{
  Name="Group1",
  Role[0]{
    Name="Role1"},
  ResourceGroupBitmap={0},AllResourceGroup=true}}
```

Detailed Information

Item	Description
UserGroup	The information of the created user group
Name	The user group name
Role[x]	The information of the role assigned to the user group
Name	The role name
ResourceGroupBitmap	The resource group ID assigned to the user group
AllResourceGroup	Indicates whether all of the resource groups are assigned to the user groups true: Assigned, false: Not assigned

[ACM] DeleteUsers

Example

```
RMI AP,,[ACM],DeleteUsers,,Normal end,Seq.=xxxxxxxxxx
+{User[0]{
  Name="User1",Result=Normal end}}
```

Detailed Information

Item	Description
User[x]	The information of the deleted user account
Name	The user name
Result	Result of the operation Normal end: normal end, Error(*xxxxx-yyyyyy*): Abnormal end *xxxxx*: part code, *yyyyyy*: error code

[ACM] DeleteUserGroups

Example

```
RMI AP,,[ACM],DeleteUserGroups,,Normal end,Seq.=xxxxxxxxxx
+{UserGroup[0]{
  Name="Group1",Result=Normal end}}
```

Detailed Information

Item		Description
UserGroup[x]		The information of the deleted user group
	Name	The user group name
	Result	Result of the operation Normal end: normal end, Error(*xxxxx-yyyyyy*): Abnormal end *xxxxx*: part code, *yyyyyy*: error code

[ACM] DisableUsers

Example

```
RMI AP,,[ACM],DisableUsers,,Normal end,Seq.=xxxxxxxxxx
+{User[0]{
  Name="User1",Result=Normal end}}
```

Detailed Information

Item		Description
User[x]		The information of the disabled user account
	Name	The user name
	Result	Result of the operation Normal end: normal end, Error(*xxxxx-yyyyyy*): Abnormal end *xxxxx*: part code, *yyyyyy*: error code

[ACM] EnableUsers

Example

```
RMI AP,,[ACM],EnableUsers,,Normal end,Seq.=xxxxxxxxxx
+{User[0]{
  Name="User1",Result=Normal end}}
```

Detailed Information

Item		Description
User[x]		The information of the enabled user account
	Name	The user name
	Result	Result of the operation Normal end: normal end, Error(*xxxxx-yyyyyy*): Abnormal end *xxxxx*: part code, *yyyyyy*: error code

[ACM] RemoveUsersFromUserGroup

Example

```
RMI AP,,[ACM],RemoveUsersFromUserGroup,,Normal end,Seq.=xxxxxxxxxx
+{UserGroup{
  Name="Group1"},
User[0]{
  Name="User1",Result=Normal end}}
```

Detailed Information

Item		Description
UserGroup		The information of the user group from which the user account is removed
	Name	The user group name
User[x]		The information of the user account
	Name	The user name
	Result	Result of the operation Normal end: normal end, Error(*xxxxx-yyyyyy*): Abnormal end *xxxxx*: part code, *yyyyyy*: error code

[ACM] Set Login Message

Example

```
RMI AP,,[ACM],Set Login Message,,Normal end,Seq.=xxxxxxxxxx
+LoginMessageSentence=Login Message
```

Detailed Information

Item	Description
LoginMessageSentence	Indicates the sentence displayed on the login window of Device Manager - Storage Navigator

[ACM] UpdatePassword

Example

```
RMI AP,,[ACM],UpdatePassword,,Normal end,Seq.=xxxxxxxxxx
+{User{
  Name="User1"}}
```

Detailed Information

Item		Description
User		The information of the user account whose password is changed
	Name	The user name

[ACM] UpdateUserAuthentication

Example

```
RMI AP,,[ACM],UpdateUserAuthentication,,Normal end,Seq.=xxxxxxxxxx
+{User{
  Name="User1",Authentication=Local}}
```

Detailed Information

Item		Description
User		The information of the user account whose authentication method is changed
	Name	The user name
	Authentication	The authentication method Local: Local authentication, External: External authentication

[ACM] UpdateUserGroupAllResourceGrp

Example

```
RMI AP,,[ACM],UpdateUserGroupAllResourceGrp,,Normal end,
Seq.=xxxxxxxxxx
+{UserGroup{
  Name="Group1",AllResourceGroup=true}}
```

Detailed Information

Item		Description
UserGroup		The information of the user group whose All Resource Groups Assigned setting is changed
	Name	The user group name

Item		Description
	AllResourceGroup	Indicates whether all of the resource groups are assigned to the user groups true: Assigned, false: Not assigned

[ACM] UpdateUserGroupName

Example

```
RMI AP,,[ACM],UpdateUserGroupName,,Normal end,Seq.=xxxxxxxxxx
+{UserGroup{
  Name="Group1",NewName="Group2"}}
```

Detailed Information

Item		Description
UserGroup		The information of the user group
	Name	The user group name before change
	NewName	The user group name after change

[ACM] UpdateUserGroupResourceGrpBmp

Example

```
RMI AP,,[ACM],UpdateUserGroupResourceGrpBmp,,Normal end,
Seq.=xxxxxxxxxx
+{UserGroup{
  Name="Group1",ResourceGroupBitmap={0}}}
```

Detailed Information

Item		Description
UserGroup		The information of the user group whose resource group assignment is changed
	Name	The user group name
	ResourceGroupBitmap	The resource group ID assigned to the user group

[ACM] UpdateUserGroupRole

Example

```
RMI AP,,[ACM],UpdateUserGroupRole,,Normal end,Seq.=xxxxxxxxxx
+{UserGroup{
  Name="Group1",
  Role[0]{
    Name="Role1"}}}
```

Detailed Information

Item			Description
UserGroup			The information of the user group whose role assignment is changed
	Name		The user group name
	Role[x]		The information of the role
		Name	The role name

BASE Descriptions

[BASE] Advanced Settings

Example

```
RMI AP,Task Name,[BASE],Advanced Settings,,Normal end,
Seq.=xxxxxxxxxx
+{Option, Option Bit}
=[{Advanced System Setting, F000000000000000000000000000000
000000000000000000000000000000000000000000000000000000000000
000000000000000000000000000000000000000000000000000000000000
000000000000000000000000000000000000000000000000000000000000
000000000000000000000000000000000000000000000000000000000000}],
Num. of Modes=1024
```

Detailed Information

Item	Description
Option	Indicates the specified option Advanced System Setting: Advanced system setting of Device Manager - Storage Navigator
Option Bit	Indicates the specified option in hexadecimal
Num. of Modes	The number of modes

[BASE] Create Conf Report

Example

```
RMI AP,Task Name,[BASE],Create Conf Report,,Normal end,
Seq.=xxxxxxxxxx
++{ReportName,UserName,FolderName,StartTime}
={XXXXXXX,manager,YYYYYYYYYY,YYYYMMDDHHMMSS}
```

Detailed Information

Item	Description
ReportName	Name of the created configuration report
UserName	Name of the user who created the configuration report
FolderName	Folder name where the configuration report is output
StartTime	Starting date and time of the configuration report creation

[BASE] Delete CVAE Info

Example

```
RMI AP,,[BASE],Delete CVAE Info,,Normal end,Seq.=xxxxxxxxxx
+{ID}={0,1,2,3},Num. of IDs=4
```

Detailed Information

Item	Description
ID	ID (unique ID row by row) of the version information that was deleted
Num. of IDs	The number of IDs

[BASE] Delete Reports

Example

```
RMI AP,Task Name,[BASE],Delete Reports,,Normal end,
Seq.=xxxxxxxxxx
+{FolderName,Result}=[{XXXXXXXXX,Normal end},
{XXXXXXXXX,Normal end},{XXXXXXXXX,Normal end},
-{XXXXXXXXX,Normal end}],Num. of Reports=4
```

Detailed Information

Item	Description
FolderName	Folder name of the deleted configuration report.
Result	Result of the operation Normal end: normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: part code, *yyyyy*: error code
Num. of Reports	The number of deleted configuration reports

[BASE] Delete Tasks

Example

```
RMI AP,,[BASE],Delete Tasks,,Normal end,Seq.=xxxxxxxxxx
+{Task Name,Type,User Name,Submission Time,Result}
=[{20100101-EditStorageSystem,Edit Storage System,User01,
YYYY/MM/DD HH:MM:SS,Normal end},{20100101-CreateLdev,
Create LDEV,User02,YYYY/MM/DD HH:MM:SS,Normal end}],
Num. of Tasks=2
```

Detailed Information

Item	Description
Task Name	Name of the deleted task
Type	Type of the task
User Name	The user ID who deleted the task
Submission Time	Time when the task was registered
Result	Result of the operation Normal end: normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: part code, *yyyyy*: error code
Num. of Tasks	The number of deleted tasks

[BASE] Disable Auto Delete

Example

```
RMI AP,,[BASE],Disable Auto Delete,,Normal end,
Seq.=xxxxxxxxxx
+{Task Name,Type,User Name,Submission Time,Result}
=[{20100101-EditStorageSystem,Edit Storage System,User01,
YYYY/MM/DD HH:MM:SS,Normal end},{20100101-CreateLdev,
Create LDEV,User02,YYYY/MM/DD HH:MM:SS,Normal end}],
Num. of Tasks=2
```

Detailed Information

Item	Description
Task Name	The task name that the disable auto delete operation was performed
Type	Type of the task
User Name	ID of the user who performed the operation
Submission Time	Time when the task was registered
Result	Result of the operation Normal end: normal end, Error(*xxxx-yyyyy*): Abnormal end: *xxxx*: part code, *yyyyy*: error code

Item	Description
Num. of Tasks	Number of the target tasks.

[BASE] Edit Storage System

Example

```
RMI AP,Task Name,[BASE],Edit Storage System,,Normal end,
Seq.=xxxxxxxxxx
+{Name,Contact,Location}=[{XXXXX,XXXXX,XXXXX}],
Num. of SystemInfos=1
```

Detailed Information

Item	Description
Name	Name of the storage system
Contact	Administrator of the storage system
Location	Location of the storage system
Num. of SystemInfos	Number of the edited storage systems

[BASE] Enable Auto Delete

Example

```
RMI AP,,[BASE],Enable Auto Delete,,Normal end,
Seq.=xxxxxxxxxx
+{Task Name,Type,User Name,Submission Time,Result}
=[{20100101-EditStorageSystem,Edit Storage System,User01,
YYYY/MM/DD HH:MM:SS,Normal end},{20100101-CreateLdev,
Create LDEV,User02,YYYY/MM/DD HH:MM:SS,Normal end}],
Num. of Tasks=2
```

Detailed Information

Item	Description
Task Name	The task name that the enable auto delete operation was performed.
Type	The type of task
User Name	ID of the user who performed the operation
Submission Time	Time when the task was registered
Result	Result of the operation Normal end: normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: part code, *yyyyy*: error code
Num. of Tasks	Number of the target tasks

[BASE] Entry Tasks

This log is output when each task on the Device Manager - Storage Navigator menu is performed.

Example

```
RMI AP,Task Name,[BASE],Entry Tasks,,Normal end,Seq.=xxxxxxxxxx
+{Action Name}=[{xxxxxxx},{xxxxxxx},{xxxxxxx},{xxxxxxx},
{xxxxxxx}],Num. of Actions=5
```

Detailed Information

Item	Description
Action Name	The name of the performed action
Num. of Actions	The number of performed actions

[BASE] HCSSO Authentication

Example 1: When SSO authentication is succeeded

```
RMI AP,,[BASE],HCSSO Authentication,,Normal end,
Seq.=xxxxxxxxxx
```

Example 2: When SSO authentication failed

```
RMI AP,,[BASE],HCSSO Authentication,,Error(xxxxx-yyyyyy),
Seq.=xxxxxxxxxx
```

[BASE] HCSSO SetOneTimeKey

Example 1: When authentication failed in issuance of OneTimeKey

```
RMI AP,,[BASE],HCSSO SetOneTimeKey,Authentication,
Error(xxxxx-yyyyyy),Seq.=xxxxxxxxxx
```

Example 2: When the number of registered OneTimeKeys exceeds the maximum

```
RMI AP,,[BASE],HCSSO SetOneTimeKey,OneTimeKey EntryOver,
Error(xxxxx-yyyyyy),Seq.=xxxxxxxxxx
```

Basic Information

Parameter	Description
Authentication	The authentication failed in the issuance of OneTimeKey.
OneTimeKey EntryOver	The number of OneTimeKeys exceeded the maximum.

[BASE] Login

Example

```
RMI AP,,[BASE],Login,,Normal end,Seq.=xxxxxxxxxx
```

[BASE] Logout

Example

```
RMI AP,,[BASE],Logout,,Normal end,Seq.=xxxxxxxxxx
```

[BASE] Resume Tasks

Example

```
RMI AP,,[BASE],Resume Tasks,,Normal end,Seq.=xxxxxxxxxx
+{Task Name,Type,User Name,Submission Time,Result}
=[{20100101-EditStorageSystem,Edit Storage System,User01,
YYYY/MM/DD HH:MM:SS,Normal end},{20100101-CreateLdev,
Create LDEV,User02,YYYY/MM/DD HH:MM:SS,Normal end}],
Num. of Tasks=2
```

Detailed Information

Item	Description
Task Name	Name of the resumed task
Type	The type of task
User Name	The ID of the user who resumed the task
Submission Time	Time when the task was registered
Result	Result of the operation Normal end: normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: part code, *yyyyy*: error code
Num. of Tasks	The number of target tasks

[BASE] Set CVAE Info

Example

```
RMI AP,,[BASE],Set CVAE Info,,Normal end,Seq.=xxxxxxxxxx
+{ID,ProductName,VersionInfo,IPAddress,RegistryDate,
LastAccessDate,MemoRandom}
={1,DevMgr,6.0.0.-00,10.213.38.210,
01/23/2008 12:34:56,01/24/2008 16:54:02,MEMO SPACE},
Num. of CVAEInfos=1
+{LicenseInfo}={Core license,Full license,Expired},
Num. of LicenseInfos=3
```

Detailed Information

Item	Description
ID	ID (unique ID row by row) of the version information that was deleted
ProductName	Product name (Command Suite)
VersionInfo	Version Information
IPAddress	Network address information (IPv4, IPv6, and network name)
RegistryDate	Time stamp of initial registration
LastAccessDate	Time stamp of the final access
MemoRandom	Memo space information
Num. of CVAEInfos	The number of Command Suite messages
LicenseInfo	License information
Num. of LicenseInfos	The number of license messages

[BASE] Start Maintenance

Example

```
MPC,,[BASE],Start Maintenance,,Normal end,Seq.=xxxxxxxxxx
```

[BASE] Suspend Tasks

Example

```
RMI AP,,[BASE],Suspend Tasks,,Normal end,Seq.=xxxxxxxxxx
+{Task Name,Type,User Name,Submission Time,Result}
=[{20100101-EditStorageSystem,Edit Storage System,User01,
YYYY/MM/DD HH:MM:SS,Normal end},{20100101-CreateLdev,
Create LDEV,User02,YYYY/MM/DD HH:MM:SS,Normal end}],
Num. of Tasks=2
```

Detailed Information

Item	Description
Task Name	Name of the suspended task
Type	The type of task
User Name	Name of the user who suspended the task
Submission Time	Time when the task was registered.
Result	Result of the operation Normal end: normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: part code, *yyyyy*: error code

Item	Description
Num. of Tasks	Number of the target tasks

[BASE] Unlock Forcibly

Example

```
RMI AP,,[BASE],Unlock Forcibly,,Normal end,Seq.=xxxxxxxxxx
```

Information Descriptions

[Information] Delete Log

Example

```
MPC,,[Information],Delete Log,SIM,Normal end,Seq.=xxxxxxxxxx
```

Basic Information

Parameter	Description
SIM	Record of a deleted SIM log
SSB	Record of a deleted SSB log
Reset	Record of a deleted Reset log
Power Event	Record of a deleted Power Event log
Detail	Record of a deleted Detail log
Diagnosis	Record of a deleted Diagnosis log
Copy History	Record of a deleted Copy History log

[Information] ORM Value

Example 1: Changing the threshold of SAS

```
MPC,,[Information],ORM Value,Alter,Normal end,Seq.=xxxxxxxxxx
+Type=7days
+{Read Err.(Unrecovered),Read Err.(Recovered),
Seek Err.(Recovered),Seek Err.(Unrecovered),Not Ready,
Other Errors}={15,1.00e-008,100,10,10,10}
++PDEV=[HDD000-01,HDD000-02],Num. of PDEVs=2
```

Example 2: Changing the threshold of the SSD when drive type is other than SLxxx-MxxxSS

```
MPC,,[Information],ORM Value,Alter,Normal end,Seq.=xxxxxxxxxx
+Type=Total
```

```
+{Total Defect Count}={15}
++PDEV=[HDD000-01,HDD000-02],Num. of PDEVs=2
```

Example 3: Changing the threshold of the SSD when drive type is SLxxx-MxxxSS

```
MPC,,[Information],ORM Value,Alter,Normal end,Seq.=xxxxxxxxxx
+Type=Total
+{Total Defect Count,Used Endurance Indicator}={160000,(99,90)}
++PDEV=[HDD000-03],Num. of PDEVs=1
```

Example 4: Changing the threshold of the FMD when drive type is NFHxx-Pxxxxx

```
MPC,,[Information],ORM Value,Alter,Normal end,Seq.=xxxxxxxxxx
+Type=Today
+{Total Defect Count,Reboot Error,DMA Error,Memory Error,
Uncorrected Error,Used Endurance Indicator,Battery Error,
FMD Battery Life Indicator}={0,2,10,500,512,(0,0),1,0}
++PDEV=[HDD000-03],Num. of PDEVs=1
```

Example 5: Changing the threshold of the FMD when drive type is NFHxx-Qxxxxx

```
MPC,,[Information],ORM Value,Alter,Normal end,Seq.=xxxxxxxxxx
+Type=Today
+{Total Defect Count,Reboot Error,DMA Error,Memory Error,
Uncorrected Error,Used Endurance Indicator,Capacitor Error}=
{0,2,10,500,512,(0,0),1}
++PDEV=[HDD000-03],Num. of PDEVs=1
```

Example 6: Error Reset

```
MPC,,[Information],ORM Value,Error Reset,Normal end,
Seq.=xxxxxxxxxx
+PDEV=HDD000-01
```

Basic Information

Parameter	Description
Alter	Change the threshold of ORM (Online Read Margin)
Error Reset	Indicates Error Reset

Detailed Information

Item	Description
Type	The period of time to acquire the result of threshold diagnosis using the read diagnosis function Today: Current day only, 7days: 7 days, Total: Every operating days
Read Err. (Unrecovered)	The threshold of the Read Error (Unrecovered)

Item	Description
Read Err. (Recovered)	The threshold of the Read Error (Recovered)
Seek Err. (Recovered)	The threshold of the Seek Error (Recovered)
Seek Err. (Unrecovered)	The threshold of the Seek Error (Unrecovered)
Not Ready	The threshold of the Not Ready status.
Other Errors	The threshold of Other Errors.
Total Defect Count	The threshold of the Total Defect Count
Used Endurance Indicator	The threshold of the Used Endurance Indicator
Reboot Error	The threshold of the Reboot Error
DMA Error	The threshold of the DMA Error
Memory Error	The threshold of the Memory Error
Uncorrected Error	The threshold of the Uncorrected Error
Battery Error	The threshold of the Battery Error
FMD Battery Life Indicator	The threshold of the FMD Battery Life Indicator
Capacitor Error	The threshold of the Capacitor Error
PDEV	The mounting location of the PDEV (physical device) that is the target of Alter or error reset
Num. of PDEVs	The number of PDEVs (physical devices)

[Information] Threshold Value

Example 1: Changing the threshold

```
MPC,,[Information],Threshold Value,Alter,Normal end,
Seq.=xxxxxxxxxx
+Type=7days
+{Mechanical error(Recovered,Unrecd.),Media error(Recovered,
Unrecd.),Read/Write error(Recovered,Unrecd.),
Drive I/F error(Recovered,Unrecd.),
Controller hardware error(Recovered,Unrecd.),
Drive response late,SAS I/F error Port 0(Unrecd.),
SAS I/F error Port 1(Unrecd.),Port 0 error(Unrecd.),
Port 1 error(Unrecd.)}
={(150,60),(0,15),(150,30),(150,6),(150,6),0,6,6,12,12}
++PDEV=[HDD000-01,HDD000-02],Num. of PDEVs=2
```

Example 2: Error Reset

```
MPC,,[Information],Threshold Value,Error Reset,Normal end,
Seq.=xxxxxxxxxx
+PDEV=HDD000-01
```

Basic Information

Parameter	Description
Alter	Change the threshold of failed PDEV (physical device).
Error Reset	Indicates Error Reset.

Detailed Information

Item	Description
Type	The period of time to acquire the result of threshold diagnosis using the read diagnosis function. 7days: 7 days, Total: Every operating days
Mechanical error (Recovered, Unrecd.)	The threshold of the Mechanical error
Media error (Recovered, Unrecd.)	The threshold of the Media error
Read/Write error (Recovered, Unrecd.)	The threshold of the Read/Write error
Drive I/F error (Recovered, Unrecd.)	The threshold of the Drive I/F error
Controller hardware error (Recovered, Unrecd.)	The threshold of the Controller hardware error
Drive response late	The threshold of the Drive response late
SAS I/F error Port 0 (Unrecd.)	The threshold of the SAS I/F error Port 0
SAS I/F error Port 1 (Unrecd.)	The threshold of the SAS I/F error Port 1
Port 0 error (Unrecd.)	The threshold of the Port 0 error
Port 1 error (Unrecd.)	The threshold of the Port 1 error
PDEV	The mounting location of PDEV (physical device) that is the target of Alter or error reset

Item	Description
Num. of PDEVs	The number of PDEVs (physical devices)

Install Descriptions

[Install] All Config

Example

```
MPC,,[Install],All Config,,Normal end,Seq.=xxxxxxxxxx
+{New Ver.,Old Ver.}={xx-xx-xx/xx,xx-xx-xx/xx}
```

Detailed Information

Item	Description
New Ver.	The new version number.
Old Ver.	The old version number.

[Install] Backup Config

Example

```
MPC,,[Install],Backup Config,,Normal end,Seq.=xxxxxxxxxx
+Ver.=xx-xx-xx/xx
```

Detailed Information

Item	Description
Ver.	The version number of the configuration information to be backed up.

[Install] FlashDrive ORM Value

Example

```
MPC,,[Install],FlashDrive ORM Value,,Normal end,
Seq.=xxxxxxxxxx
+{Flash Drive Collective setting,Dynamic Sparing,Warning SIM}
={Valid,99,95}
+{FMD Battery Collective setting,Warning SIM}={Valid,95}
```

Detailed Information

Item	Description
Flash Drive Collective Setting	Indicates whether the flash drive collective setting information is valid or invalid Valid: Valid, Invalid: Invalid
Dynamic Sparing	The Dynamic Sparing threshold of flash drive
Warning SIM	The warning SIM threshold of flash drive
FMD Battery Collective setting	Indicates whether the FMD battery collective setting information is valid or invalid Valid: Valid, Invalid: Invalid
Warning SIM	The warning SIM threshold of FMD battery

[Install] Initialize ORM Value

Example

```
MPC,,[Install],Initialize ORM Value,,Normal end,Seq.=xxxxxxxxxx
```

[Install] Machine Install Date

Example

```
MPC,,[Install],Machine Install Date,,Normal end,Seq.=xxxxxxxxxx
+Date=YYYY/MM/DD HH:mm
```

Detailed Information

Item	Description
Date	Indicates the date and the time of the setting in "YYYY/MM/DD HH:mm" format (YYYY: year, MM: month, DD: day, HH: hour, mm: minute).

[Install] NEW Installation

New Installation outputs operation logs in Example 1 and Example 2 when configuration information of the new version is installed by the Maintenance PC. However, the operation log in Example 2 is not output when operation is stopped before starting the installation process.

Example 1

```
MPC,,[Install],NEW Installation,,Normal end,Seq.=xxxxxxxxxx
+{New Ver.}={xx-xx-xx/xx}
```

Detailed Information 1

Item	Description
New Ver.	New version number of the configuration information

Example 2

```
MPC,,[Install],NEW Installation,,Normal end,Seq.=xxxxxxxxxx
+Mode=Auto Define Configuration
```

Detailed Information 2

Item	Description
Mode	Type of the installation

[Install] Remove

Example 1 (Removing the cache memory: VSP G200)

```
MPC,,[Install],Remove,,Normal end,Seq.=xxxxxxxxxx
+{CTL,CMG0,CFM-1/2,Battery}
=[{CTL1/2,4GB x 4,BM10,Basic}],Num. of CTLs=1
+{CLPR,Cache size}=[{CLPR0,84992}],Num. of CLPRs=1
```

Example 2 (Removing the cache memory: VSP G400, G600, G800 and VSP F400, F600, F800)

```
MPC,,[Install],Remove,,Normal end,Seq.=xxxxxxxxxx
+{CTL,CMG0,CMG1,CFM-10/20,CFM-11/21,Battery}
=[{CTL1/2,8GB x 8,8GB x 8,BM20,BM20,Basic & Option}],Num. of CTLs=1
+{CLPR,Cache size}=[{CLPR0,84992}],Num. of CLPRs=1
```

Detailed Information

Item	Description
CTL	Mounted location of the cache memory in PCB
CMG0	DIMM capacity of CMG0
CMG1	DIMM capacity of CMG1
CFM-1/2	Type of the cache flash memory of CFM-1/2
CFM-10/20	Type of the cache flash memory of CFM-10/20
CFM-11/21	Type of the cache flash memory of CFM-11/21
Battery	Mounted pattern of the battery Basic: Only Basic is mounted. Basic & Option: Both Basic and Option are mounted. Basic & NAS: Basic battery and a battery for NAS module are mounted.

Item	Description
	Basic & Option & NAS: Basic/Option batteries and a battery for NAS module are mounted.
Num. of CTLs	Number of CTLs
CLPR	CLPR name
Cache size	Cache capacity allocated to CLPRs
Num. of CLPRs	Number of CLPRs

[Install] System Option

Example

```
MPC,,[Install],System Option,,Normal end,Seq.=xxxxxxxxxx
+Spare Disk Recover=Full Speed
+Disk Copy Pace=Slower
+Copy Operation(Correction Copy)=OFF
+Copy Operation(Dynamic Sparing)=OFF
+Link Failure Threshold=10
+{LDKC:CU:LDEV,Destage}=[{0x00:0x00:0x00,OFF}],
Num. of LDEVs=1
+{LPR,Cache Tuning}=[{System,Level5}],Num. of LPRs=1
+{LPR,Command Control}=[{System,10}],Num. of LPRs=1
+{LPR,Mode,Set}=[{System,0,ON}],Num. of Modes=1
+Debug Mode=Set
```

Detailed Information

Item	Description
Spare Disk Recover	Indicates the setting status of Spare Disk Recover. Interleave: Give priority to the access from the host while executing copy process, Full speed: Give priority to the copy process.
Disk Copy Pace	Indicates the setting status of Disk Copy Pace. Slower: Low speed, Medium: Medium speed, Faster: High speed
Copy Operation (Correction Copy)	Indicates the setting status of Copy Operation (Correction Copy). ON: Execute Correction Copy, OFF: Do not execute Correction Copy
Copy Operation (Dynamic Sparing)	Indicates the setting status of Copy Operation (Dynamic Sparing). ON: Execute Dynamic Sparing, OFF: Do not execute Dynamic Sparing
Link Failure Threshold	The threshold to report link failure
LDKC:CU: LDEV	The LDKC number, the CU number, and the LDEV number
Destage	Indicates the setting status of Destage. ON: Execute write through operation (report the completion of the writing to the host after the writing to the disk drive has completed).

Item	Description
	OFF: Do not execute write through operation (report the completion of the writing to the host when the data is written in the cache memory).
Num. of LDEVs	The number of LDEVs
LPR	The LPR name
Cache Tuning	The level of Cache Tuning
Num. of LPRs	The number of LPRs
Command Control	Command Control
Mode	The local mode number
Set	The setting status. ON: Set, Off: Release
Num. of Modes	The number of local modes.
Debug Mode	Setting executed from the debug window (Set: fix).
Note: Only the changed items will be output.	

[Install] System Tuning

Example

```
MPC,,[Install],System Tuning,,Normal end,Seq.=xxxxxxxxxx
+Serial No.=400001
```

Detailed Information

Item	Description
Serial No.	Serial number of the storage system

Local Replication Descriptions

[Local Replication] Assign S-VOLs

Example

```
RMI AP,Task Name,[Local Replication],Assign S-VOLs,,Normal end,
Seq.=xxxxxxxxxx
+Copy Type=TI
++{P-VOL(LDKC:CU:LDEV),S-VOL(LDKC:CU:LDEV),PoolID,MU,
Snapshot Group,Result}
=[{0xXX:0xAA:0xBB,0xYY:0xCC:0xDD,0,1,SnapshotSet1,Normal end},
{0xXX:0xAA:0xBB,0xYY:0xCC:0xDD,0,,SnapshotSet2,Error(xxxx-yyyy)}],
Num. of Pairs=2
```

Detailed Information

Item	Description
Copy Type	The program product name for this operation TI: Thin Image
P-VOL (LDKC:CU:LDEV)	The LDKC number, the CU number and the LDEV number of the primary volume
S-VOL (LDKC:CU:LDEV)	The LDKC number, the CU number and the LDEV number of the assigned secondary volume No output if a secondary volume is not specified during the assigning operation.
PoolID	The pool ID of the assigned secondary volume
MU	The mirror unit number of the assigned secondary volume No output if a mirror unit number is not specified during the assigning operation.
Snapshot Group	The snapshot group name
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code
Num. of Pairs	The number of pairs to which secondary volumes are assigned

[Local Replication] Create Pairs

Example 1: Copy type is SI

```
RMI AP,Task Name,[Local Replication],Create Pairs,,Normal end,
Seq.=xxxxxxxxxx
+Copy Type=SI,Copy Pace=Faster,Split Type=Non Split
++{P-VOL(LDKC:CU:LDEV),S-VOL(LDKC:CU:LDEV),MU,Result}
=[{0xXX:0xAA:0xBB,0xYY:0xCC:0xDD,0,Normal end},
{0xX:0xAA:0xBB,0xY:0xCC:0xDD,1,Error(xxxx-yyyyy)}],
Num. of Pairs=2
```

Example 2: Copy type is TI

```
RMI AP,Task Name,[Local Replication],Create Pairs,,Normal end,
Seq.=xxxxxxxxxx
+Copy Type=TI
++{P-VOL(LDKC:CU:LDEV),S-VOL(LDKC:CU:LDEV),PoolID,MU,
Snapshot Group,Result}
=[{0xXX:0xAA:0xBB,0xYY:0xCC:0xDD,0,1,SnapshotSet1,Normal end},
{0xXX:0xAA:0xBB,0xYY:0xCC:0xDD,0,,SnapshotSet2,
Error(xxxx-yyyyy)}],
Num. of Pairs=2
```

Detailed Information

Item	Description
Copy Type	The program product name for this operation SI: ShadowImage, TI: Thin Image
Copy Pace	The copy speed Faster: High speed, Medium; Medium speed, Slower: Low speed This item is output only when the copy type is SI.
Split Type	The split type Non Split: Does not split the pair, Quick Split: Pair split by background copy, Steady Split: Pair split by update copy This item is output only when the copy type is SI.
P-VOL (LDKC:CU:LDEV)	The LDKC number, the CU number and the LDEV number of the primary volume in the created pair
S-VOL (LDKC:CU:LDEV)	The LDKC number, the CU number and the LDEV number of the secondary volume in the created pair No output if Copy Type is TI, and a secondary volume is not specified during the pair creation operation.
PoolID	The pool ID of the secondary volume of the created pair This item is output only when the copy type is TI.
MU	The mirror unit number of the created pair When Copy Type is TI, the value of this item is not output if a mirror unit number is not specified while creating the pair.
Snapshot Group	The snapshot group name This item is output only when the copy type is TI.
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code
Num. of Pairs	The number of created pairs

[Local Replication] Delete Pairs

Example 1: Copy type is SI

```
RMI AP,Task Name,[Local Replication],Delete Pairs,,Normal end,
Seq.=xxxxxxxxxx
+Copy Type=SI
++{P-VOL(LDKC:CU:LDEV),S-VOL(LDKC:CU:LDEV),Result}
=[{0xXX:0xAA:0xBB,0xYY:0xCC:0xDD,Normal end},
{0xX:0xAA:0xBB,0xYY:0xCC:0xDD,Error(xxxx-yyyyy)}],
Num. of Pairs=2
```

Example 2: Copy type is TI

```
RMI AP,Task Name,[Local Replication],Delete Pairs,,Normal end,
Seq.=xxxxxxxxxx
+Copy Type=TI
```

```
++{P-VOL(LDKC:CU:LDEV),S-VOL(LDKC:CU:LDEV),MU,Result}
=[{0xXX:0xAA:0xBB,0xYY:0xCC:0xDD,,Normal end},
{0xX:0xAA:0xBB,,1,Error(xxxx-yyyyy)}],Num. of Pairs=2
```

Detailed Information

Item	Description
Copy Type	The program product name for this operation SI: ShadowImage, TI: Thin Image
P-VOL (LDKC:CU:LDEV)	The LDKC number, the CU number and the LDEV number of the primary volume in the deleted pair
S-VOL (LDKC:CU:LDEV)	The LDKC number, the CU number and the LDEV number of the secondary volume in the deleted pair No output if Copy Type is TI, and a secondary volume is not specified during the pair deletion operation.
MU	The mirror unit number of the deleted pair The index and value of this item are output only when Copy Type is TI. However, the value of this item is not output if a mirror unit is not specified during the pair deletion operation.
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code
Num. of Pairs	The number of deleted pairs

[Local Replication] Edit Options

Example

```
RMI AP,Task Name,[Local Replication],Edit Options,,Normal end,
Seq.=xxxxxxxxxx
+Copy Type=SI
++Swap & Freeze=Enable,HOST I/O Performance=Enable,
Reserve03=Enable,(snip),
Nondisruptive Migration Data Consistency=Enable,(snip),
Copy Pace Ext. Slower1=Disable,Copy Pace Ext. Slower2=Disable,
Copy Pace Ext.None=Disable,Reserve23=Disable,
Quick/Steady Split Multiplexing (ShadowImage)=Enable,
Reverse Copy Multiplexing (ShadowImage)=Enable,(snip),
Reserve32=Disable
```

Detailed Information

Item	Description
Copy Type	The program product name for this operation SI: ShadowImage
Swap & Freeze	Indicates whether the Swap & Freeze option is enabled or disabled. Enable: Enabled, Disable: Disabled

Item	Description
Host I/O Performance	Indicates whether the Host I/O Performance option is enabled or disabled. Enable: Enabled, Disable: Disabled
Nondisruptive Migration Data Consistency	Indicates whether the Nondisruptive Migration Data Consistency option is enabled or disabled. Enable: Enabled, Disable: Disabled
Copy Pace Ext. Slower1	Indicates whether the Copy Pace Ext. Slower1 option is enabled or disabled. Enable: Enabled, Disable: Disabled
Copy Pace Ext. Slower2	Indicates whether the Copy Pace Ext. Slower2 option is enabled or disabled. Enable: Enabled, Disable: Disabled
Copy Pace Ext. None	Indicates whether the Copy Pace Ext. None option is enabled or disabled. Enable: Enabled, Disable: Disabled
Quick/Steady Split Multiplexing (ShadowImage)	Indicates whether the Quick/Steady Split Multiplexing (ShadowImage) option is enabled or disabled. Enable: Enabled, Disable: Disabled
Reverse Copy Multiplexing (ShadowImage)	Indicates whether the Reverse Copy Multiplexing (ShadowImage) option is enabled or disabled. Enable: Enabled, Disable: Disabled
Reserve *X*	Reserved items X is a number: 03 to 15, 17 to 19, 23, or 26 to 32.

[Local Replication] Initialize

Example

```
RMI AP,Task Name,[Local Replication],Initialize,,Normal end,
Seq.=xxxxxxxxxx
```

[Local Replication] Remove S-VOLs

Example

```
RMI AP,Task Name,[Local Replication],Remove S-VOLs,,Normal end,
Seq.=xxxxxxxxxx
+Copy Type=TI
++{P-VOL(LDKC:CU:LDEV),S-VOL(LDKC:CU:LDEV),PoolID,MU,
Snapshot Group,Result}
=[{0xXX:0xAA:0xBB,0xYY:0xCC:0xDD,0,1,SnapshotSet1,Normal end},
{0xXX:0xAA:0xBB,0xYY:0xCC:0xDD,0,,SnapshotSet2,Error(xxxx-yyyy)}],
Num. of Pairs=2
```

Detailed Information

Item	Description
Copy Type	The program product name for this operation TI: Thin Image
P-VOL (LDKC:CU:LDEV)	The LDKC number, the CU number and the LDEV number of the primary volume No output if a primary volume is not specified during the secondary volume removal operation.
S-VOL (LDKC:CU:LDEV)	The LDKC number, the CU number and the LDEV number of the removed secondary volume No output if a secondary volume is not specified during the secondary volume removal operation.
PoolID	The pool ID of the removed secondary volume
MU	The mirror unit number of the removed secondary volume No output if a mirror unit is not specified during the secondary volume removal operation.
Snapshot Group	The snapshot group name
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code
Num. of Pairs	The number of pairs whose secondary volumes are removed

[Local Replication] Resync Pairs

Example 1: Copy type is SI

```
RMI AP,Task Name,[Local Replication],Resync Pairs,,Normal end,
Seq.=xxxxxxxxxx
+Copy Type=SI,Copy Pace=Medium,Resync Type=Normal Copy
++{P-VOL(LDKC:CU:LDEV),S-VOL(LDKC:CU:LDEV),Result}
=[{0xXX:0xAA:0xBB,0xYY:0xCC:0xDD,Normal end},
{0xX:0xAA:0xBB,0xY:0xCC:0xDD,Error(xxxx-yyyyy)}],
Num. of Pairs=2
```

Example 2: Copy type is TI

```
RMI AP,Task Name,[Local Replication],Resync Pairs,,Normal end,
Seq.=xxxxxxxxxx
+Copy Type=TI,Resync Type=Reverse Copy
++{P-VOL(LDKC:CU:LDEV),S-VOL(LDKC:CU:LDEV),MU,Result}
=[{0xXX:0xAA:0xBB,0xYY:0xCC:0xDD,,Normal end},
{0xX:0xAA:0xBB,,1,Error(xxxx-yyyyy)}],Num. of Pairs=2
```

Detailed Information

Item	Description
Copy Type	The program product name for this operation SI: ShadowImage, TI: Thin Image
Copy Pace	The copy speed Faster: High speed, Medium; Medium speed, Slower: Low speed This item is output only when the copy type is SI.
Resync Type	The resynchronization type Normal Copy: Normal resynchronization, Quick Resync: High speed resynchronization, Reverse Copy: Reverse resynchronization, Quick Restore: High speed restore
P-VOL (LDKC:CU:LDEV)	The LDKC number, the CU number and the LDEV number of the primary volume in the resynchronized pair
S-VOL (LDKC:CU:LDEV)	The LDKC number, the CU number and the LDEV number of the secondary volume in the resynchronized pair When Copy Type is TI, the values of the secondary volume are not output if the value of MU is output.
MU	The mirror unit number of the resynchronized pair The index and value of this item are output only when Copy Type is TI. However, the value of this item is not output if those of the secondary volume are output.
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code
Num. of Pairs	The number of resynchronized pairs

[Local Replication] Split Pairs

Example 1: Copy type is SI

```
RMI AP,Task Name,[Local Replication],Split Pairs,,Normal end,
Seq.=xxxxxxxxxx
+Copy Type=SI,Copy Pace=Faster,Split Type=Steady Split
++{P-VOL(LDKC:CU:LDEV),S-VOL(LDKC:CU:LDEV),Result}
=[{0xXX:0xAA:0xBB,0xYY:0xCC:0xDD,Normal end},
{0xX:0xAA:0xBB,0xY:0xCC:0xDD,Error(xxxx-yyyyy)}],
Num. of Pairs=2
```

Example 2: Copy type is TI

```
RMI AP,Task Name,[Local Replication],Split Pairs,,Normal end,
Seq.=xxxxxxxxxx
+Copy Type=TI
++{P-VOL(LDKC:CU:LDEV),S-VOL(LDKC:CU:LDEV),MU,Result}
=[{0xXX:0xAA:0xBB,0xYY:0xCC:0xDD,,Normal end},
{0xXX:0xAA:0xBB,,1,Error(xxxx-yyyyy)}],Num. of Pairs=2
```

Detailed Information

Item	Description
Copy Type	The program product name for this operation SI: ShadowImage, TI: Thin Image
Copy Pace	The copy speed Faster: High speed, Medium; Medium speed, Slower: Low speed This item is output only when the copy type is SI.
Split Type	The split type Quick Split: Pair split by background copy, Steady Split: Pair split by update copy This item is output only when the copy type is SI.
P-VOL (LDKC:CU:LDEV)	The LDKC number, the CU number and the LDEV number of the primary volume in the split pair
S-VOL (LDKC:CU:LDEV)	The LDKC number, the CU number and the LDEV number of the secondary volume in the split pair No output if Copy Type is TI, and a secondary volume is not specified during the pair splitting operation.
MU	The mirror unit number of the split pair The index and value of this item are output only when Copy Type is TI. However, the value of this item is not output if a mirror unit is not specified during the pair splitting operation.
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code
Num. of Pairs	The number of split pairs

[Local Replication] Suspend Pairs

Example

```
RMI AP,Task Name,[Local Replication],Suspend Pairs,,Normal end,
Seq.=xxxxxxxxxx
+Copy Type=SI
++{P-VOL(LDKC:CU:LDEV),S-VOL(LDKC:CU:LDEV),Result}
=[{0xXX:0xAA:0xBB,0xYY:0xCC:0xDD,Normal end},
{0xX:0xAA:0xBB,0xY:0xCC:0xDD,Error(xxxx-yyyyy)}],
Num. of Pairs=2
```

Detailed Information

Item	Description
Copy Type	The program product name for this operation SI: ShadowImage

Item	Description
P-VOL (LDKC:CU:LDEV)	The LDKC number, the CU number and the LDEV number of the primary volume in the suspended pair
S-VOL (LDKC:CU:LDEV)	The LDKC number, the CU number and the LDEV number of the secondary volume in the suspended pair
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code
Num. of Pairs	The number of suspended pairs

Maintenance Descriptions

[Maintenance] Block

Example 1: Blocking CTLs, ENCs or CFMs when replacing

```
GUM,,[Maintenance],Block,,Normal end,Seq.=xxxxxxxxxx
+Location=xxx,Forcibly run without safety checks=Enable
```

Detailed Information 1

Item	Description
Location	The mounted position of the CTL, ENC or CFM (CTLx, ENCxx-xx or CFM-xx) to be blocked. When replacing a FAN or CM, the mounting position of the CTL on which the FAN or CM is mounted is output to block the CTL.
Forcibly run without safety checks	Indicates whether the forcible replacement function without safety checks is enabled or disabled. However, a hyphen (-) is output except when a user with the Support Personnel role operates from the MPC.

Example 2: Blocking of BKMFs or BKMs when replacing

```
GUM,,[Maintenance],Block,,Normal end,Seq.=xxxxxxxxxx
+Location=xxx,Forcibly run without safety checks=Enable
```

Detailed Information 2

Item	Description
Location	The mounted position of the BKMF* or BKM* (BKMF-xx or BKM-x) to be blocked
Forcibly run without safety checks	Indicates whether the forcible replacement function without safety checks is enabled or disabled.

Item	Description
	However, a hyphen (-) is output except when a user with the Support Personnel role operates from the MPC.
* BKMF is the part name of VSP G400, G600, G800 and VSP F400, F600, F800. BKM is the part name of VSP G200.	

Example 3: Blocking CHBs or DKBs when replacing

```
GUM,,[Maintenance],Block,,Normal end,Seq.=xxxxxxxxxx
+Location=xxxxxx,Forcibly block=Disable,Type=xxxxxx,
Forcibly run without safety checks=Enable
```

Detailed Information 3

Item	Description
Location	Mounted position of the CHB or DKB to be blocked (CHB-xx or DKB-xx)
Forcibly block	Indicates whether the function to forcibly block the CHB or DKB is enabled or disabled*
Type	Type of the part of the CHB or DKB to be blocked
Forcibly run without safety checks	Indicates whether the forcible replacement function without safety checks is enabled or disabled*
* A hyphen (-) is output except when a user with the Support Personnel role operates from the MPC.	

Example 4: Blocking PECBs, SWPKs, or PCPs when replacing

```
GUM,,[Maintenance],Block,,Normal end,Seq.=xxxxxxxxxx
+Location=xxx,Forcibly block=Disable,
Forcibly run without safety checks=Enable
```

Detailed Information 4

Item	Description
Location	Mounted position of the PECB, SWPK, or PCP to be blocked (PECB-xx, SWPKx, or PCPx)
Forcibly block	Indicates whether the function to forcibly block the PECB, SWPK, or PCP is enabled or disabled*
Forcibly run without safety checks	Indicates whether the forcible replacement function without safety checks is enabled or disabled*
* A hyphen (-) is output except when a user with the Support Personnel role operates from the MPC.	

Example 5: Blocking drives when replacing

```
GUM,,[Maintenance],Block,,Normal end,Seq.=xxxxxxxxxx
+Location=xxx,Spare Copy=ON,
Forcibly run without safety checks=Enable,
Forcibly restore the drive after replaced=Enable,
Skip DKU Inline=Enable,Skip firmware update of HDD=Disable
```

Detailed Information 5

Item	Description
Location	Mounted position of the drive (HDDxx-xx) to be blocked
Spare Copy	Whether data is evacuated to a spare drive when replacing the drive
Forcibly run without safety checks	Indicates whether the forcible replacement function without safety checks is enabled or disabled*
Forcibly restore the drive after replaced	Indicates whether the function to forcibly restore drives after they are replaced is enabled or disabled*
Skip DKU Inline	Indicates whether the function to skip DKU Inline is enabled or disabled*
Skip firmware update of HDD	Indicates whether the function to skip the drive firmware update is enabled or disabled*
* A hyphen (-) is output except when a user with the Support Personnel role operates from the MPC.	

Example 6: Blocking HFBs when replacing

```
GUM,,[Maintenance],Block,,Normal end,Seq.=xxxxxxxxxx
+Location=xxx,Forcibly block=Disable,
Forcibly run without safety checks=Enable
```

Detailed Information 6

Item	Description
Location	Mounted position of the HFB (CHB-1A/1B/1C/1D or CHB-2A/2B/2C/2D) to be blocked
Forcibly block	Indicates whether the function to forcibly block the HFB is enabled or disabled.*
Forcibly run without safety checks	Indicates whether the forcible replacement function without safety checks is enabled or disabled.*
* A hyphen (-) is output except when a user with the Support Personnel role operates from the MPC.	

[Maintenance] Block(Type Change)

Example 1: Blocking CTLs along with CTL type change when replacing

```
GUM,,[Maintenance],Block(Type Change),,Normal end,Seq.=xxxxxxxxxx
+Location=xxx,Forcibly run without safety checks=Enable
```

Detailed Information 1

Item	Description
Location	Mounted position of the CTL (CTLx) to be blocked
Forcibly run without safety checks	Indicates whether the function to forcibly change the type without safety checks is enabled or disabled. However, a hyphen (-) is output except when a user with the Support Personnel role operates from the MPC.

Example 2: Blocking CMs along with CM type change when replacing

```
GUM,,[Maintenance],Block(Type Change),,Normal end,Seq.=xxxxxxxxxx
+Cache Size=xxxxxxxx,Forcibly run without safety checks=Enable
```

Detailed Information 2

Item	Description
Cache Size	Cache size of the blocked cache memory
Forcibly run without safety checks	Indicates whether the function to forcibly change the type without safety checks is enabled or disabled. However, a hyphen (-) is output except when a user with the Support Personnel role operates from the MPC.

Example 3: Blocking DKBs along with DKB type change when replacing

```
GUM,,[Maintenance],Block(Type Change),,Normal end,Seq.=xxxxxxxxxx
+Location=xxx,Forcibly block=Disable,Type=xxxxxx,
Forcibly run without safety checks=Enable
```

Detailed Information 3

Item	Description
Location	Mounted position of the DKB (DKB-xx) to be blocked
Forcibly block	Indicates whether the function to forcibly block the DKB is enabled or disabled*
Type	Type of the part of the DKB to be blocked

Item	Description
Forcibly run without safety checks	Indicates whether the function to forcibly change the type without safety checks is enabled or disabled*
* A hyphen (-) is output except when a user with the Support Personnel role operates from the MPC.	

Example 4: Blocking CHBs along with CHB type change when replacing

```
GUM,,[Maintenance],Block(Type Change),,Normal end,Seq.=xxxxxxxxxx
+Location=CHB-xx,Forcibly block=Disable,Type=xxxxxx,
Forcibly run without safety checks=Disable
```

Detailed Information 4

Item	Description
Location	Mounted position of the CHB (CHB-xx) to be blocked
Forcibly block	Indicates whether the function to forcibly block the CHB is enabled or disabled*
Type	Type of the part of the CHB to be blocked
Forcibly run without safety checks	Indicates whether the function to forcibly change the type without safety checks is enabled or disabled*
* A hyphen (-) is output except when a user with the Support Personnel role operates from the MPC.	

[Maintenance] Blockade

Example

```
MPC,,[Maintenance],Blockade,,Normal end,Seq.=xxxxxxxxxx
+PCB=[CHB-1A],Num. of PCBs=1
```

Detailed Information

Item	Description
PCB	Mounted position of the PCB (CHB, DKB or CTL) to be blocked
Num. of PCBs	Number of the PCBs to be blocked

[Maintenance] Boot System SafeMode

Example

```
GUM,,[Maintenance],Boot System SafeMode,,Normal end,Seq.=xxxxxxxxxx
```

[Maintenance] Change SFP Type

Example

```
GUM,,[Maintenance],Change SFP Type,System,Normal end,Seq.=xxxxxxxxxx
```

Basic Information

Parameter	Description
System	SFP type change of the system

[Maintenance] Check Remove

Example

```
GUM,,[Maintenance],Check Remove,,Normal end,Seq.=xxxxxxxxxx
+Drives=[HDDxx-xx,HDDxx-xx,HDDxx-xx],Num of Drives=3
```

Detailed Information

Item	Description
Drives	The mounting position of the drive the removal of which is checked.
Num of Drives	The number of drives the removal of which is checked.

[Maintenance] Correction Copy

Example

```
MPC,,[Maintenance],Correction Copy,,Normal end,Seq.=xxxxxxxxxx
+PDEV=HDD00-00
```

Detailed Information

Item	Description
PDEV	The mounting location of the PDEV (physical device)

[Maintenance] Create User

Example

```
GUM,,[Maintenance],Create User,,Normal end,Seq.=xxxxxxxxxx
+User Name=xxxx,User Groups=[xxx,xxx,xxx],Account Status=Disable,
Authentication=Local
```

Detailed Information

Item	Description
User Name	The name of a created user.
User Groups	The name of the user group to which the user belongs.
Account Status	Indicates whether the user account is enabled or disabled. Enable: The user account is enabled. Disable: The user account is disabled.
Authentication	Indicates the authentication method. Local: Authentication by a local account in the storage system, External: External authentication

[Maintenance] Delete Users

Example

```
GUM,,[Maintenance],Delete Users,,Normal end,Seq.=xxxxxxxxxx
+User=[xxx,xxx,xxx],Num of Users=3
```

Detailed Information

Item	Description
User	The name of a deleted user.
Num of Users	The number of deleted users.

[Maintenance] Disable Licenses

Example

```
GUM,,[Maintenance],Disable Licenses,,Normal end,Seq.=xxxxxxxxxx
+{Program Product Name,Enable}=
[{xxx,Disable},{xxx,Disable}],Num of Licenses=2
```

Detailed Information

Item	Description
Program Product Name	The name of the target program product
Enable	Indicates whether the license of the program product is enabled or disabled. Enable: The license is enabled. Disable: The license is disabled.
Num of Licenses	The number of target program products

[Maintenance] Edit Hypervisor Mode

Example

```
GUM,,[Maintenance],Edit Hypervisor Mode,,Normal end,Seq.=xxxxxxxxxx
+Edit Unified Hypervisor Maintenance Mode=Enable
```

Detailed Information

Item	Description
Edit Unified Hypervisor Maintenance Mode	Indicates the status of the unified hypervisor maintenance mode Enable: The maintenance mode is enabled. Disable: The maintenance mode is disabled.

[Maintenance] Edit Login Message

Example

```
GUM,,[Maintenance],Edit Login Message,,Normal end,Seq.=xxxxxxxxxx
+Login Message=Enable
```

Detailed Information

Item	Description
Login Message	Indicates the display status of the login message Enable: The login message is displayed. Disable: The login message is not displayed.

[Maintenance] Edit ReplacingNotice

Example

```
GUM,,[Maintenance],Edit ReplacingNotice,,Normal end,Seq.=xxxxxxxxxx
+Replacing Notice for Air Filter=xxx
```

Detailed Information

Item	Description
Replacing Notice for Air Filter	Indicates whether the replacing notice for the air filter is enabled or disabled Enable: Replacing notice is enabled. Disable: Replacing notice is disabled.

[Maintenance] Edit System Param

Example

```
GUM,,[Maintenance],Edit System Param,,Normal end,Seq.=xxxxxxxxxx
+Auto Define Configuration Mode=Disable,
A jumper used for initial installation (CEMD)=Enable,
A jumper used for a storage system boot for initial IP address
settings (CEDT)=Disable,
A jumper used for cache memory volatilization (VOJP)=Disable
```

Detailed Information

Item	Description
Auto Define Configuration Mode	Indicates whether the ADC (auto define configuration) mode is enabled or disabled Enable: ADC mode is enabled. Disable: ADC mode is disabled.
A jumper used for initial installation (CEMD)	Indicates whether CEMD (jumper settings for the initial installation) is enable or disabled Enable: CEMD is enabled. Disable: CEMD is disabled.
A jumper used for a storage system boot for initial IP address settings (CEDT)	Indicates whether CEDT (jumper settings for booting the storage system in the initial IP address setting) is enabled or disabled Enable: CEDT is enabled. Disable: CEDT is disabled.
A jumper used for cache memory volatilization (VOJP)	Indicates whether VOJP (jumper settings for volatilizing cache memory) is enabled or disabled Enable: VOJP is enabled. Disable: VOJP is disabled.

[Maintenance] Edit UPS Mode

Example

```
GUM,,[Maintenance],Edit UPS Mode,,Normal end,Seq.=xxxxxxxxxx
+UPS Mode=xxxx
```

Detailed Information

Item	Description
UPS Mode	The UPS mode that is set. Standard Mode: Standard mode UPS Interlock Mode 1: UPS interlocking mode 1 UPS Interlock Mode 2: UPS interlocking mode 2 UPS Interlock Mode 3: UPS interlocking mode 3

[Maintenance] Edit User

Example

```
GUM,,[Maintenance],Edit User,,Normal end,Seq.=xxxxxxxxxx
+User Name=xxx,User Groups=[xxx,xxx,xxx],Account Status=Disable,
Authentication=Local
```

Detailed Information

Item	Description
User Name	The user name for settings.
User Groups	The group name to which the user belongs.
Account Status	Indicates whether the user account is enabled or disabled. Enable: User account is enabled. Disable: User account is disabled.
Authentication	The authentication method. Local: Authentication by a local account in the storage system, External: External authentication

[Maintenance] Enable Licenses

Example

```
GUM,,[Maintenance],Enable Licenses,,Normal end,Seq.=xxxxxxxxxx
+{Program Product Name,Enable}
=[{xxx,Enable},{xxx,Enable}],Num of Licenses=2
```

Detailed Information

Item	Description
Program Product Name	The name of the target program product
Enable	Indicates whether the license of the program product is enabled or disabled. Enable: The license is enabled. Disable: The license is disabled.
Num of Licenses	The number of target program products

[Maintenance] Export Audit Logs

Example

```
GUM,,[Maintenance],Export Audit Logs,,Normal end,Seq.=xxxxxxxxxx
```

[Maintenance] Force Rls SysLock

Example

```
GUM,,[Maintenance],Force Rls SysLock,,Normal end,Seq.=xxxxxxxxxx
```

[Maintenance] Install

Example 1: Installing SMs

```
GUM,,[Maintenance],Install,,Normal end,Seq.=xxxxxxxxxx
+Shared Memory Function=[xxxxxxxx,xxxxxxxx]
```

Detailed Information 1

Item	Description
Shared Memory Function	Names of the shared memories (all the mounted shared memories including installed shared memories)

Example 2: Installing CHBs or DKBs

```
GUM,,[Maintenance],Install,,Normal end,Seq.=xxxxxxxxxx
+Location=[xxx,xxx],Type=xxxx,
Forcibly run without safety checks=Enable
```

Detailed Information 2

Item	Description
Location	Mounted position of the installed CHB or DKB (CHB-xx or DKB-xx)
Type	Type of the part of the installed CHB or DKB
Forcibly run without safety checks	Indicates whether the forcible installation function without safety checks is enabled or disabled. However, a hyphen (-) is output except when a user with the Support Personnel role operates from the MPC.

Example 3: Installing channel board boxes

```
GUM,,[Maintenance],Install,,Normal end,Seq.=xxxxxxxxxx
+Module Type=Channel Board Box,
Location=[PECB-xx,PECB-xx,PECB-xx,PECB-xx],
Num of PECBs=4,Expansion Mode=1:2,
Forcibly run without safety checks=Enable
```

Detailed Information 3

Item	Description
Module Type	Type of the installed module Outputs Channel Board Box as a fixed parameter.

Item	Description
Location	Mounted position of the installed PECB (PECB-xx)
Num of PECBs	The number of the installed PECBs
Expansion Mode	The expansion mode (1:2)
Forcibly run without safety checks	Indicates whether the forcible installation function without safety checks is enabled or disabled. However, a hyphen (-) is output except when a user with the Support Personnel role operates from the MPC.

Example 4: Installing drive boxes

```
GUM,,[Maintenance],Install,,Normal end,Seq.=xxxxxxxxxx
+{Location,Type}=[{DB-xx,xxx},{DB-xx,xxx},{DB-xx,xxx}],
Num of Drive Boxes=3,
Forcibly run without safety checks=Enable
```

Detailed Information 4

Item	Description
Location	Mounted position of the installed drive box (DB-xx or DB-xx&xx)
Type	Type of the part of the installed drive box
Num of Drive Boxes	Number of the installed drive boxes
Forcibly run without safety checks	Indicates whether the forcible installation function without safety checks is enabled or disabled. However, a hyphen (-) is output except when a user with the Support Personnel role operates from the MPC.

Example 5: Installing drives

```
GUM,,[Maintenance],Install,,Normal end,Seq.=xxxxxxxxxx
+Drives=[HDDxx-xx,HDDxx-xx,HDDxx-xx],Num of Drives=3,
Forcibly run without safety checks=Enable
```

Detailed Information 5

Item	Description
Drives	Mounted position of the installed drive
Num of Drives	Number of the installed drives
Forcibly run without safety checks	Indicates whether the forcible installation function without safety checks is enabled or disabled. However, a hyphen (-) is output except when a user with the Support Personnel role operates from the MPC.

Example 6: Installing HFBs

```
GUM,,[Maintenance],Install,,Normal end,Seq.=xxxxxxxxxx
+Location=[CHB-1A/1B/1C/1D,CHB-2A/2B/2C/2D],
Forcibly run without safety checks=Enable
```

Detailed Information 6

Item	Description
Location	Mounted position of the installed HFB (CHB-1A/1B/1C/1D or CHB-2A/2B/2C/2D)
Forcibly run without safety checks	Indicates whether the forcible installation function without safety checks is enabled or disabled. However, a hyphen (-) is output except when a user with the Support Personnel role operates from the MPC.

[Maintenance] Install NAS Firm

Example 1: New installation to a parity group

```
GUM,,[Maintenance],Install NAS Firm,,Normal end,Seq.=xxxxxxxxxx
+Installation Type=New Installation,Parity Group ID=XXX,
Selected Version=XXX,Forcibly run without safety checks=Enable
```

Detailed Information 1

Item	Description
Installation Type	The type of NAS unified firmware installation New Installation: The first installation
Parity Group ID	The parity group ID of NAS unified firmware
Selected Version	The installed version of NAS unified firmware
Forcibly run without safety checks	Indicates whether the forcible installation function without safety checks is enabled or disabled. However, a hyphen (-) is output except when a user with the Support Personnel role operates from the MPC.

Example 2: New installation to a pool

```
GUM,,[Maintenance],Install NAS Firm,,Normal end,Seq.=xxxxxxxxxx
+Installation Type=New Installation,Pool ID=XXX,
Selected Version=XXX,Forcibly run without safety checks=Enable,
Full Allocation=Enable
```

Detailed Information 2

Item	Description
Installation Type	The type of NAS unified firmware installation New Installation: The first installation
Pool ID	The pool ID of NAS unified firmware
Selected Version	The installed version of NAS unified firmware
Forcibly run without safety checks	Indicates whether the forcible installation function without safety checks is enabled or disabled. However, a hyphen (-) is output except when a user with the Support Personnel role operates from the MPC.
Full Allocation	Indicates the setting status of the Full Allocation. Enable: Full Allocation is enabled. Disable: Full Allocation is disabled.

Example 3: Re-installation

```
GUM,,[Maintenance],Install NAS Firm,,Normal end,Seq.=xxxxxxxxxx
+Installation Type=Re-installation,Target Controller Board=XXX,
Current Version=XXX,Selected Version=XXX
```

Detailed Information 3

Item	Description
Installation Type	The type of NAS unified firmware installation Re-installation: Not the first installation
Target Controller Board	The CTL on which NAS unified firmware is to be installed
Current Version	The current version of NAS unified firmware on the CTL before re-installation
Selected Version	The installed version of NAS unified firmware

[Maintenance] License Key Install

Example 1: Specifying a key code

```
GUM,,[Maintenance],License Key Install,,Normal end,,Seq.=xxxxxxxxxx
+License Key Code=xxx
```

Detailed Information 1

Item	Description
License Key Code	The license key code entered when installing a program product.

Example 2: Specifying a license key file

```
GUM,,[Maintenance],License Key Install,,Normal end,,Seq.=xxxxxxxxxx
+License Key File=xxx
```

Detailed Information 2

Item	Description
License Key File	The license key file name entered when installing program products.

[Maintenance] License Key Remove

Example

```
GUM,,[Maintenance],License Key Remove,,Normal end,,Seq.=xxxxxxxxxx
+Program Product Name=[xxxx,xxx,xxx],Num of License Keys=3
```

Detailed Information

Item	Description
Program Product Name	The name of the uninstalled program product.
Num of License Keys	The number of uninstalled license keys.

[Maintenance] MP Restore

Example

```
MPC,,[Maintenance],MP Restore,,Normal end,Seq.=xxxxxxxxxx
+MP=[MP08-2MC],Num. of MPs=1
```

Detailed Information

Item	Description
MP	The identity of the microprocessor
Num. of MPs	The number of microprocessors that were restored

[Maintenance] Power Off Storage

Example

```
GUM,,[Maintenance],Power Off Storage,,Normal end,Seq.=xxxxxxxxxx
+PS Control=OFF
```

Detailed Information

Item	Description
PS Control	The storage system is powered off.

[Maintenance] Power On Storage

Example

```
GUM,,[Maintenance],Power On Storage,,Normal end,Seq.=xxxxxxxxxx
+PS Control=ON
```

Detailed Information

Item	Description
PS Control	The storage system is powered on.

[Maintenance] Reboot GUM

Example

```
GUM,,[Maintenance],Reboot GUM,,Normal end,Seq.=xxxxxxxxxx
+Forcibly run without safety checks=ON
```

Detailed Information

Item	Description
Forcibly run without safety checks	Indicates whether the setting for forcibly rebooting a GUM without safety checks is applied. However, a hyphen (-) is output except when a user with the Support Personnel role operates from the MPC.

[Maintenance] Remove

Example 1: Removing SMs

```
GUM,,[Maintenance],Remove,,Normal end,Seq.=xxxxxxxxxx
+Shared Memory Function=[xxxxxxxx,xxxxxxxx]
```

Detailed Information 1

Item	Description
Shared Memory Function	Names of the shared memories (all the mounted shared memories including removed shared memories)

Example 2: Removing CHBs or DKBs

```
GUM,,[Maintenance],Remove,,Normal end,Seq.=xxxxxxxxxx
+Location=[xxx,xxx],Type=xxxx,
Forcibly run without safety checks=Enable,Forcibly block=Enable
```

Detailed Information 2

Item	Description
Location	Mounted position of the removed CHB or DKB (CHB-xx or DKB-xx)
Type	Type of the part of the removed CHB or DKB
Forcibly run without safety checks	Indicates whether the forcible removal function without safety checks is enabled or disabled.*
Forcibly block	Indicates whether the function to forcibly block the CHB or DKB is enabled or disabled.*
* A hyphen (-) is output except when a user with the Support Personnel role operates from the MPC.	

Example 3: Removing channel board boxes

```
GUM,,[Maintenance],Remove,,Normal end,Seq.=xxxxxxxxxx
Module Type=Channel Board Box,Location=[PECB-xx,PECB-xx],
Num of PECBs=2,Forcibly run without safety checks=Enable
```

Detailed Information 3

Item	Description
Module Type	Type of the removed module Outputs Channel Board Box as a fixed parameter
Location	Mounted position of the removed PECB (PECB-xx)
Num of PECBs	The number of the removed PECBs
Forcibly run without safety checks	Indicates whether the forcible removal function without safety checks is enabled or disabled. However, a hyphen (-) is output except when a user with the Support Personnel role operates from the MPC.

Example 4: Removing drive boxes

```
GUM,,[Maintenance],Remove,,Normal end,Seq.=xxxxxxxxxx
+{Location,Type}=[{DB-xx, xxx},{DB-xx, xxx},{DB-xx, xxx}],
Num of Drive Boxes=3
```

Detailed Information 4

Item	Description
Location	Mounted position of the removed Drive Box (DB-xx or DB-xx&xx)
Type	Type of the part of the removed drive box
Num of Drive Boxes	Number of the removed drive boxes

Example 5: Removing drives

```
GUM,,[Maintenance],Remove,,Normal end,Seq.=xxxxxxxxxx
+Drives=[HDDxx-xx,HDDxx-xx,HDDxx-xx],Num of Drives=3,
Forcibly run without safety checks=Enable
```

Detailed Information 5

Item	Description
Drives	Mounted position of the removed drive
Num of Drives	Number of the removed drives
Forcibly run without safety checks	Indicates whether the forcible removal function without safety checks is enabled or disabled. However, a hyphen (-) is output except when a user with the Support Personnel role operates from the MPC.

Example 6: Removing HFBs

```
GUM,,[Maintenance],Remove,,Normal end,Seq.=xxxxxxxxxx
+Location=[CHB-1A/1B/1C/1D,CHB-2A/2B/2C/2D],Forcibly block=xxx,
Forcibly run without safety checks=Enable
```

Detailed Information 6

Item	Description
Location	Mounted position of the removed HFB (CHB-1A/1B/1C/1D,CHB-2A/2B/2C/2D)
Forcibly block	Indicates whether the function to forcibly remove the HFB is enabled or disabled.*
Forcibly run without safety checks	Indicates whether the forcible removal function without safety checks is enabled or disabled.*

Item	Description
* A hyphen (-) is output except when a user with the Support Personnel role operates from the MPC.	

[Maintenance] Remove NAS Firm

Example

```
GUM,,[Maintenance],Remove NAS Firm,,Normal end,Seq.=xxxxxxxxxx
```

[Maintenance] Reset DurationOfUse

Example

```
GUM,,[Maintenance],Reset DurationOfUse,,Normal end,Seq.=xxxxxxxxxx
```

[Maintenance] Reset HUB

Example

```
GUM,,[Maintenance],Reset HUB,,Normal end,Seq.=xxxxxxxxxx
```

[Maintenance] Reset Hypervisor

Example

```
GUM,,[Maintenance],Reset Hypervisor,,Normal end,Seq.=xxxxxxxxxx
+Location=CTL1,Forcibly run without safety checks=Enable
```

Detailed Information

Item	Description
Location	The CTL on which the unified hypervisor is reset
Forcibly run without safety checks	Indicates whether the forcible reset function of the unified hypervisor without safety checks is enabled or disabled. However, a hyphen (-) is output except when a user with the Support Personnel role operates from the MPC.

[Maintenance] Reset Hypervisor NW

Example

```
GUM,,[Maintenance],Reset Hypervisor NW,,Normal end,Seq.=xxxxxxxxxx
+Location=CTL1,Forcibly run without safety checks=Enable
```

Detailed Information

Item	Description
Location	The CTL on which the hypervisor network module is reset
Forcibly run without safety checks	Indicates whether the forcible reset function of the hypervisor network module without safety checks is enabled or disabled. However, a hyphen (-) is output except when a user with the Support Personnel role operates from the MPC.

[Maintenance] Reset NASFW

Example

```
GUM,,[Maintenance],Reset NASFW,,Normal end,Seq.=xxxxxxxxxx
+Location=CTL1,Forcibly run without safety checks=Enable
```

Detailed Information

Item	Description
Location	The CTL on which the NAS unified firmware is reset
Forcibly run without safety checks	Indicates whether the forcible reset function of the NAS unified firmware without safety checks is enabled or disabled. However, a hyphen (-) is output except when a user with the Support Personnel role operates from the MPC.

[Maintenance] Restore

Example 1: Restoring PCBs

```
MPC,,[Maintenance],Restore,,Normal end,Seq.=xxxxxxxxxx
+PCB=[CHB-1A],Num. of PCBs=1
```

Detailed Information 1

Item	Description
PCB	The mounting position of the PCB to be restored (CHB, DKB or CTL).
Num. of PCBs	The number of the PCBs to be restored.

Example 2: Restoring CTL, ENC or CFM when replacing

```
GUM,,[Maintenance],Restore,,Normal end,Seq.=xxxxxxxxxx
+Location=xxx
```

Detailed Information 2

Item	Description
Location	The mounting position of the CTL, ENC or CFM (CTLx, ENCxx-xx or CFM-xx) to be restored. When replacing a FAN or Cache Memory, the mounting position of the CTL on which the FAN or Cache Memory is mounted is output to restore the CTL.

Example 3: Restoring cache memories when replacing

```
GUM,,[Maintenance],Restore,,Normal end,Seq.=xxxxxxxxxx
+Cache Size=xxxxxxxx,CFM Type for CFM10/20=xxx,
CFM Type for CFM11/21=xxx
```

Detailed Information 3

Item	Description
Cache Size	The cache size of the restored cache memory.
CFM Type for CFM10/20	The part type of the added CFM-10/20. A hyphen (-) is displayed if CFM-10/20 is not replaced or mounted.
CFM Type for CFM11/21	The part type of the added CFM-11/21. A hyphen (-) is displayed if CFM-11/21 is not replaced or mounted.

Example 4: Restoring CHBs or DKBs when replacing

```
GUM,,[Maintenance],Restore,,Normal end,Seq.=xxxxxxxxxx
+Location=xxx,Type=xxxxxx
```

Detailed Information 4

Item	Description
Location	The mounting position of the CHB or DKB to be restored (CHB-xx or DKB-xx).
Type	The part type of the CHB or DKB to be restored.

Example 5: Restoring PECBs, SWPKs, or PCPs when replacing

```
GUM,,[Maintenance],Restore,,Normal end,Seq.=xxxxxxxxxx
+Location=xxx
```

Detailed Information 5

Item	Description
Location	The mounting position of the PECB, SWPK, or PCP to be restored (PECB-xx, SWPKx, or PCPx).

Example 6: Restoring HFBs when replacing

```
GUM,,[Maintenance],Restore,,Normal end,Seq.=xxxxxxxxxx
+Location=xxx
```

Detailed Information 6

Item	Description
Location	The mounting position of the HFB to be restored (CHB-1A/1B/1C/1D or CHB-2A/2B/2C/2D).

[Maintenance] Restore(Type Change)

Example 1: Restoring CTLs along with CTL type change when replacing

```
GUM,,[Maintenance],Restore(Type Change),,Normal end,Seq.=xxxxxxxxxx
+Location=xxx,Type=xxxxxx
```

Detailed Information 1

Item	Description
Location	The mounting position of the CTL to be restored (CTLx).
Type	The part type of the CTL to be restored.

Example 2: Restoring CMs along with CM type change when replacing

```
GUM,,[Maintenance],Restore(Type Change),,Normal end,Seq.=xxxxxxxxxx
+Cache Size=xxxxxxxx,CFM Type for CFM10/20=xxx,
CFM Type for CFM11/21=xxx
```

Detailed Information 2

Item	Description
Cache Size	The cache size of the cache memory to be restored.
CFM Type for CFM10/20	The part type of the CFM-10/20 to be added. A hyphen (-) is displayed if CFM-10/20 is not replaced or mounted.
CFM Type for CFM11/21	The part type of the CFM-11/21 to be added. A hyphen (-) is displayed if CFM-11/21 is not replaced or mounted.

Example 3: Restoring DKBs along with DKB type change when replacing

```
GUM,,[Maintenance],Restore(Type Change),,Normal end,Seq.=xxxxxxxxxx
+Location=xxx,Type=xxxxxx
```

Detailed Information 3

Item	Description
Location	The mounting position of the DKB to be restored (DKB-xx).
Type	The part type of the DKB to be restored.

Example 4: Restoring CHBs along with CHB type change when replacing

```
GUM,,[Maintenance],Restore(Type Change),,Normal end,Seq.=xxxxxxxxxx
+Location=CHB-xx,Type=xxxxxx
```

Detailed Information 4

Item	Description
Location	The mounting position of the CHB to be restored (CHB-xx).
Type	The part type of the CHB to be restored.

[Maintenance] Restore Data

Example

```
MPC,,[Maintenance],Restore Data,,Normal end,Seq.=xxxxxxxxxx
+PDEV=HDD00-00
```

Detailed Information

Item	Description
PDEV	The mounting location of the PDEV

[Maintenance] Select Cipher Suite

Example

```
GUM,,[Maintenance],Select Cipher Suite,,Normal end,Seq.=xxxxxxxxxx
+Cipher Suite=xxxx
```

Detailed Information

Item	Description
Cipher Suite	The name of the encryption suite used for the specified communication.

[Maintenance] Select Login Window

Example

```
GUM,,[Maintenance],Select Login Window,,Normal end,Seq.=xxxxxxxxxx
+Login Window=Link Selection
```

Item	Description
Login Window	The login window that is set to be initially displayed Link Selection: The window to select which to log in to Maintenance Utility or NAS Manager Maintenance Utility: Maintenance Utility window NAS Manager: NAS Manager window

[Maintenance] Set Up Alert

Example 1: SNMP v1 or SNMP v2c

```
GUM,,[Maintenance],Set Up Alert,,Normal end,Seq.=xxxxxxxxxx
+Notification Alert=Host Report,Email Notice=Enable,
{Attribute,Email Address}
=[{To,aaa@example.com},{Cc,bbb@example.com}],
Email Address (From)=yyy@example.com,
Email Address (Reply To)=zzz@example.com,
Description to Notify=XXXXXXXXXXX,Mail Server Type=IPv4,
Mail Server Name=XXXXXXXXX,SMTP Authentication=Enable,
SMTP Authentication Account=XXXX,
Syslog Transfer Protocol=TLS1.2/RFC5452,
{Syslog Server,Server Enable,Type,Name,Port Number,
Client Certificate File Name,Root Certificate File Name,
Location Identification Name,Retry,Retry Interval}
=[{Primary,Enable,IPv4,xxxxx,65535,YYYYY,ZZZZ,ZZZZ,Disable,555},
{Secondary,Enable,IPv4,xxxxx,65535,YYYYY,ZZZZ,ZZZZ,Disable,555}],
SNMP Agent=Enable,SNMP Version=v1
+Send Trap to Community Name=AAA
++IP Address=[192.168.0.1,192.168.0.2]
+Send Trap to Community Name=BBB
++IP Address=[192.168.1.1,192.168.1.2]
+Request Authentication Setting Community Name=AAA
++Requests Permitted IP Address=[192.168.0.10,192.168.0.12]
+Request Authentication Setting Community Name=BBB
++Requests Permitted IP Address=[192.168.1.10,192.168.1.12],
Storage System Name=xxx,Contact=xxx,Location=xxx
```

Detailed Information 1

Item	Description
Notification Alert	The destination of the alert. All: All the hosts, Host Report: Only the hosts to which SIMs are set to be reported
Email Notice	Indicates whether notification by email is enabled. Enable: The notification is enabled.

Item	Description
	Disable: The notification is disabled.
Attribute	The attribute (To, Cc or Bcc) of the destination email address.
Email Address	The destination email addresses. A hyphen (-) is displayed if notification by email is disabled.
Email Address (From)	The sender email address. A hyphen (-) is displayed if notification by email is disabled.
Email Address (Reply To)	The email address to reply. A hyphen (-) is displayed if notification by email is disabled.
Description to Notify	The additional information at the top of the body of the error notification message by email. A hyphen (-) is displayed if notification by email is disabled or the Description to Notify is not set.
Mail Server Type	The type of Mail Server Name (Identifier(Domain), IPv4 or IPv6).
Mail Server Name	The host name or the IP address of the mail server.
SMTP Authentication	Indicates whether the SMTP authentication is enabled. Enable: The authentication is enabled. Disable: The authentication is disabled.
SMTP Authentication Account	The SMTP authentication account. A hyphen (-) is displayed if the SMTP authentication is disabled.
Syslog Transfer Protocol	The type of the syslog transfer protocol (TLS1.2/RFC5424 or UDP/RFC3164).
Syslog Server	The syslog server to be set. Primary: Primary syslog server, Secondary: Secondary syslog server
Server Enable	Indicates whether the syslog server is enabled. Enable: The syslog server is enabled. Disable: The syslog server is disabled.
Type	The type of the IP address of the syslog server (IPv4 or IPv6). A hyphen (-) is displayed if the syslog server is disabled.
Name	The IP address of the syslog server to which SIMs are sent. A hyphen (-) is displayed if the syslog server is disabled.
Port Number	The port number used to communicate with the syslog server. A hyphen (-) is displayed if the syslog server is disabled.
Client Certificate File Name	The name of the client certificate file. A hyphen (-) is displayed, if the syslog servers is disabled or if UDP/RFC3164 is used as a transfer protocol.
Root Certificate File Name	The name of the root certificate file. A hyphen (-) is displayed, if the syslog servers is disabled or if UDP/RFC3164 is used as a transfer protocol.

Item	Description
Location Identification Name	The location identification name entered during the setting operation.
Retry	Indicates whether to retry if transferring to syslog servers failed. Enable: Transfer is retried. Disable: Transfer is not retried. A hyphen (-) is displayed if UDP/RFC3164 is used as a transfer protocol.
Retry Interval	The interval of the retries of transferring. A hyphen (-) is displayed, if the setting of the retry is disabled or if UDP/RFC3164 is used as a transfer protocol.
SNMP Agent	The setting status of the SNMP agent. Enable: SNMP trap is notified. Disable: SNMP trap is not notified.
SNMP Version	The SNMP protocol version
Send Trap to Community Name	The community name to which SNMP traps are sent. A hyphen (-) is displayed if the SNMP trap is not notified.
IP Address	The IP address added to the community to which SNMP traps are sent. A hyphen (-) is displayed if the SNMP trap is not notified.
Request Authentication Setting Community Name	The community name added to the request authentication setting. A hyphen (-) is displayed if this item is not set in the request authentication setting.
Requests Permitted IP Address	The IP address added to the community to permit requests. A hyphen (-) is displayed if this item is not set in the request authentication setting.
Storage System Name	The storage system name entered during the setting operation. A hyphen (-) is displayed if the SNMP trap is not notified.
Contact	The contact information entered during the setting operation. A hyphen (-) is displayed if the SNMP trap is not notified.
Location	The installation location of the storage system entered during the setting operation. A hyphen (-) is displayed if the SNMP trap is not notified.

Example 2: SNMP v3

```
GUM,,[Maintenance],Set Up Alert,,Normal end,Seq.=xxxxxxxxxx
+Notification Alert=Host Report,Email Notice=Enable,
{Attribute,Email Address}
=[{To,aaa@example.com},{Cc,bbb@example.com}],
Email Address (From)=yyy@example.com,
Email Address (Reply To)=zzz@example.com,
Description to Notify=XXXXXXXXXXXX,Mail Server Type=IPv4,
Mail Server Name=XXXXXXXXX,SMTP Authentication=Enable,
```

```
SMTP Authentication Account=XXXX,
Syslog Transfer Protocol=TLS1.2/RFC5452,
{Syslog Server,Server Enable,Type,Name,Port Number,
Client Certificate File Name,Root Certificate File Name,
Location Identification Name,Retry,Retry Interval}
=[{Primary,Enable,IPv4,xxxxx,65535,YYYYY,ZZZZ,ZZZZ,Disable,555},
{Secondary,Enable,IPv4,xxxxx,65535,YYYYY,ZZZZ,ZZZZ,Disable,555}],
SNMP Agent=Enable,SNMP Version=v3,
{Send Trap to IP Address,User Name,Authentication Mode,
Authentication Protocol,Encryption Mode,Encryption Protocol}
=[{192.168.0.1,AAA,Enable,SHA,Enable,AES},
{192.168.0.1,AAA,Enable,SHA,Enable,AES},
{192.168.0.1,AAA,Enable,SHA,Enable,AES}],
{Request Authentication Setting User Name,Authentication Mode,
Authentication Protocol,Encryption Mode,Encryption Protocol}
=[{BBB,Enable,SHA,Enable,AES},{CCC,Enable,SHA,Enable,AES},
{DDD,Enable,SHA,Enable,AES}],
Storage System Name=xxx,Contact=xxx,Location=xxx
```

Detailed Information 2

Item	Description
Notification Alert	The destination of the alert. All: All the hosts, Host Report: Only the hosts to which SIMs are set to be reported
Email Notice	Indicates whether notification by email is enabled. Enable: The notification is enabled. Disable: The notification is disabled.
Attribute	The attribute (To, Cc or Bcc) of the destination email address.
Email Address	The destination email addresses. A hyphen (-) is displayed if notification by email is disabled.
Email Address (From)	The sender email address. A hyphen (-) is displayed if notification by email is disabled.
Email Address (Reply To)	The email address to reply. A hyphen (-) is displayed if notification by email is disabled.
Description to Notify	The additional information at the top of the body of the error notification message by email. A hyphen (-) is displayed if notification by email is disabled or the Description to Notify is not set.
Mail Server Type	The type of Mail Server Name (Identifier(Domain), IPv4 or IPv6).
Mail Server Name	The host name or the IP address of the mail server.
SMTP Authentication	Indicates whether the SMTP authentication is enabled. Enable: The authentication is enabled. Disable: The authentication is disabled.
SMTP Authentication Account	The SMTP authentication account. A hyphen (-) is displayed if the SMTP authentication is disabled.

Item	Description
Syslog Transfer Protocol	The type of the syslog transfer protocol (TLS1.2/RFC5424 or UDP/RFC3164).
Syslog Server	The syslog server to be set. Primary: Primary syslog server, Secondary: Secondary syslog server
Server Enable	Indicates whether the syslog server is enabled. Enable: The syslog server is enabled. Disable: The syslog server is disabled.
Type	The type of the IP address of the syslog server (IPv4 or IPv6). A hyphen (-) is displayed if the syslog server is disabled.
Name	The IP address of the syslog server to which SIMs are sent. A hyphen (-) is displayed if the syslog server is disabled.
Port Number	The port number used to communicate with the syslog server. A hyphen (-) is displayed if the syslog server is disabled.
Client Certificate File Name	The name of the client certificate file. A hyphen (-) is displayed, if the syslog servers is disabled or if UDP/RFC3164 is used as a transfer protocol.
Root Certificate File Name	The name of the root certificate file. A hyphen (-) is displayed, if the syslog servers is disabled or if UDP/RFC3164 is used as a transfer protocol.
Location Identification Name	The location identification name entered during the setting operation.
Retry	Indicates whether to retry if transferring to syslog servers failed. Enable: Transfer is retried. Disable: Transfer is not retried. A hyphen (-) is displayed if UDP/RFC3164 is used as a transfer protocol.
Retry Interval	The interval of the retries of transferring. A hyphen (-) is displayed, if the setting of the retry is disabled or if UDP/RFC3164 is used as a transfer protocol.
SNMP Agent	The setting status of the SNMP agent. Enable: SNMP trap is notified. Disable: SNMP trap is not notified.
SNMP Version	The SNMP protocol version
Send Trap to IP Address	The IP address to which traps are sent. A hyphen (-) is displayed if the SNMP trap is not notified.
User Name	The user name set to the SNMP trap destination. A hyphen (-) is displayed if the SNMP trap is not notified.
Authentication Mode	The authentication mode status set to the SNMP trap destination. Enable: Authentication mode is enabled.

Item	Description
	Disable: Authentication mode is disabled. A hyphen (-) is displayed if the SNMP trap is not notified.
Authentication Protocol	The authentication protocol set to the SNMP trap destination: SHA or MD5 A hyphen (-) is displayed if SNMP traps are not notified or if the authentication mode of the SNMP trap destination is disabled.
Encryption Mode	The encryption mode status set to the SNMP trap destination. Enable: Encryption mode is enabled. Disable: Encryption mode is disabled. A hyphen (-) is displayed if the SNMP trap is not notified.
Encryption Protocol	The encryption protocol set to the SNMP trap destination: AES or DES A hyphen (-) is displayed if SNMP traps are not notified or if the encryption mode of the SNMP trap destination is disabled.
Request Authentication Setting User Name	The user name set to the request authentication setting. A hyphen (-) is displayed if the request authentication is not set.
Authentication Mode	The authentication mode status of the user set to the request authentication. Enable: Authentication mode is enabled. Disable: Authentication mode is disabled. A hyphen (-) is displayed if this item is not set in the request authentication setting.
Authentication Protocol	The authentication protocol of the user set to the request authentication: SHA or MD5 A hyphen (-) is displayed if this item is not set or if the authentication mode is disabled in the request authentication setting.
Encryption Mode	The encryption mode status of the user set to the request authentication. Enable: Encryption mode is enabled. Disable: Encryption mode is disabled. A hyphen (-) is displayed if this item is not set in the request authentication setting.
Encryption Protocol	The encryption protocol of the user set to the request authentication: AES or DES A hyphen (-) is displayed if this item is not set or if the encryption mode is disabled in the request authentication setting.
Storage System Name	The storage system name entered during the setting operation. A hyphen (-) is displayed if the SNMP trap is not notified.
Contact	The contact information entered during the setting operation. A hyphen (-) is displayed if the SNMP trap is not notified.
Location	The installation location of the storage system entered during the setting operation.

Item	Description
	A hyphen (-) is displayed if the SNMP trap is not notified.

Example 3: Alert notification setting from an application except Maintenance Utility

```
GUM,,[Maintenance],Set Up Alert,,Normal end,Seq.=xxxxxxxxxx
+Notification Alert=Host Report,Email Notice=Enable,
{Attribute,Email Address}
=[{To,aaa@example.com},{Cc,bbb@example.com}],
Email Address (From)=yyy@example.com,
Email Address (Reply To)=zzz@example.com,
Description to Notify=XXXXXXXXXXXX,Mail Server Type=IPv4,
Mail Server Name=XXXXXXXXX,SMTP Authentication=Enable,
SMTP Authentication Account=XXXX,
Syslog Transfer Protocol=TLS1.2/RFC5452,
{Syslog Server,Server Enable,Type,Name,Port Number,
Client Certificate File Name,Root Certificate File Name,
Location Identification Name,Retry,Retry Interval}
=[{Primary,Enable,IPv4,xxxxx,65535,YYYYY,ZZZZ,ZZZZ,Disable,555},
{Secondary,Enable,IPv4,xxxxx,65535,YYYYY,ZZZZ,ZZZZ,Disable,555}],
{SNMP Community Name,IP Address}
=[{AAA,192.168.0.1},{AAA,192.168.0.1},{AAA,192.168.0.1}],
SNMP Agent=Enable,SNMP Manager=[192.168.0.1,xxx],
Storage System Name=xxx,Contact=xxx,Location=xxx
```

Detailed Information 3

Item	Description
Notification Alert	The destination of the alert. All: All the hosts, Host Report: Only the hosts to which SIMs are set to be reported
Email Notice	Indicates whether notification by email is enabled. Enable: The notification is enabled. Disable: The notification is disabled.
Attribute	The attribute (To, Cc or Bcc) of the destination email address.
Email Address	The destination email addresses. A hyphen (-) is displayed if notification by email is disabled.
Email Address (From)	The sender email address. A hyphen (-) is displayed if notification by email is disabled.
Email Address (Reply To)	The email address to reply. A hyphen (-) is displayed if notification by email is disabled.
Description to Notify	The additional information at the top of the body of the error notification message by email. A hyphen (-) is displayed if notification by email is disabled or the Description to Notify is not set.
Mail Server Type	The type of Mail Server Name (Identifier(Domain), IPv4 or IPv6).

Item	Description
Mail Server Name	The host name or the IP address of the mail server.
SMTP Authentication	Indicates whether the SMTP authentication is enabled. Enable: The authentication is enabled. Disable: The authentication is disabled.
SMTP Authentication Account	The SMTP authentication account. A hyphen (-) is displayed if the SMTP authentication is disabled.
Syslog Transfer Protocol	The type of the syslog transfer protocol (TLS1.2/RFC5424 or UDP/RFC3164).
Syslog Server	The syslog server to be set. Primary: Primary syslog server, Secondary: Secondary syslog server
Server Enable	Indicates whether the syslog server is enabled. Enable: The syslog server is enabled. Disable: The syslog server is disabled.
Type	The type of the IP address of the syslog server (IPv4 or IPv6). A hyphen (-) is displayed if the syslog server is disabled.
Name	The IP address of the syslog server to which SIMs are sent. A hyphen (-) is displayed if the syslog server is disabled.
Port Number	The port number used to communicate with the syslog server. A hyphen (-) is displayed if the syslog server is disabled.
Client Certificate File Name	The name of the client certificate file. A hyphen (-) is displayed, if the syslog servers is disabled or if UDP/RFC3164 is used as a transfer protocol.
Root Certificate File Name	The name of the root certificate file. A hyphen (-) is displayed, if the syslog servers is disabled or if UDP/RFC3164 is used as a transfer protocol.
Location Identification Name	The location identification name entered during the setting operation.
Retry	Indicates whether to retry if transferring to syslog servers failed. Enable: Transfer is retried. Disable: Transfer is not retried. A hyphen (-) is displayed if UDP/RFC3164 is used as a transfer protocol.
Retry Interval	The interval of the retries of transferring A hyphen (-) is displayed, if the setting of the retry is disabled or if UDP/RFC3164 is used as a transfer protocol.
SNMP Community Name	The name of the community of the SNMP trap destination. A hyphen (-) is displayed if the SNMP trap is not notified.
IP Address	The IP address added to the community to which SNMP traps are sent.

Item	Description
	A hyphen (-) is displayed if the SNMP trap is not notified.
SNMP Agent	The setting status of the SNMP agent. Enable: SNMP trap is notified. Disable: SNMP trap is not notified.
SNMP Manager	The IP address of the SNMP manager. A hyphen (-) is displayed if the SNMP trap is not notified.
Storage System Name	The storage system name entered during the setting operation. A hyphen (-) is displayed if the SNMP trap is not notified.
Contact	The contact information entered during the setting operation. A hyphen (-) is displayed if the SNMP trap is not notified.
Location	The installation location of the storage system entered during the setting operation. A hyphen (-) is displayed if the SNMP trap is not notified.

[Maintenance] Set Up Date & Time

Example

```
GUM,,[Maintenance],Set Up Date & Time,,Normal end,Seq.=xxxxxxxxxx
+Use NTP Server=Yes,NTP Server=[xxxxxxx,xxxxxx],
UTC Timezone=Osaka/Sapporo/Tokyo,Date & Time=YYYY/MM/DD HH:MM,
SynchronizingTime=HH:MM,
Automatically adjust clock for daylight saving changes=Enable
```

Detailed Information

Item	Description
Use NTP Server	Indicates whether to use the NTP server for the automatic time setting of the storage system. Yes: NTP server is used. No: NTP server is not used.
NTP Server	The IP address (IPv4 or IPv6) or host name of the NTP server. No value is output when NTP server is not used.
UTC Timezone	The timezone of the Coordinated Universal Time.
Date & Time	The date and time in the format of YYYY/MM/DD HH:MM. (YYYY: year, MM: month, DD: day, HH: hour, MM: minute)
SynchronizingTime	The execution time of the time correction function using NTP server. If NTP server is not used, the default value (00:00) is output.
Automatically adjust clock for daylight saving changes	The status of automatic adjustment for daylight saving time (DST) setting Enable: The clock is automatically adjusted to DST.

Item	Description
	Disable: The clock is not automatically adjusted to DST.
Update Now	The setting status of the time correction function using NTP server Enable: The clock is adjusted at the setting operation. Then, the clock is adjusted at the setting time every day. Disable: The clock is not adjusted at setting operation. This item is output only when it is set using Maintenance Utility applications (GUM AP) such as NAS Manager.

[Maintenance] Set Up Email

Example

```
GUM AP,,[Maintenance],Set Up Email,,Normal end,Seq.=xxxxxxxxxx
+Email Notice=Enable,{Attribute,Email Address}=[{To,aaa@example.com},
{To,bbb@example.com}],Email Address (From)=yyy@example.com,
Email Address (Reply To)=zzz@example.com,
Description to Notify=XXXXXXXXXXX,Mail ServerType=IPv4,
Mail Server Name=XXXXXXXXX
```

Detailed Information

Item	Description
Email Notice	Indicates whether notification by email is enabled. Enable: The notification is enabled. Disable: The notification is disabled.
Attribute	The attribute (To, Cc or Bcc) of the destination email address A hyphen (-) is output if this item is not set.
Email Address	The destination email addresses A hyphen (-) is output if this item is not set.
Email Address (From)	The sender email address
Email Address (Reply To)	The email address to reply to
Description to Notify	The additional information at the top of the body of the error notification message by email The item is not output if this item is not set.
Mail Server Type	The type of Mail Server Name (Identifier(Domain), IPv4 or IPv6).
Mail Server Name	The host name or the IP address of the mail server.

[Maintenance] Set Up Network Perm

Example

```
GUM,,[Maintenance],Set Up Network Perm,,Normal end,Seq.=xxxxxxxxxx
+HTTP Blocking=Disable,
Block Command Control Interface Communication Port=Disable,
Block Command Control Interface Encrypted Communication Port=Disable
```

Detailed Information

Item	Description
HTTP Blocking	Indicates the setting status of Block HTTP Port Enable: Enabled, Disable: Disabled
Block Command Control Interface Communication Port	Indicates the setting status of Block Command Control Interface Communication Port Enable: Enabled, Disable: Disabled
Block Command Control Interface Encrypted Communication Port	Indicates the setting status of Block Command Control Interface Encrypted Communication Port Enable: Enabled, Disable: Disabled

[Maintenance] Set Up Network Set

Example

```
GUM,,[Maintenance],Set Up Network Set,,Normal end,Seq.=xxxxxxxxxx
+{Location,Configuration,Mode,Address,Subnet Mask,
Subnet Prefix Length,Default Gateway,DNS Server 1,DNS Server 2,
DNS Server 3}=[{CTL1,IPv4,Enable,xxx.xxx.xxx.xxx,xxx.xxx.xxx.xxx,
-,xxx.xxx.xxx.xxx,xxx.xxx.xxx.xxx,xxx.xxx.xxx.xxx,xxx.xxx.xxx.xxx},
{CTL2,IPv4,Enable,xxx.xxx.xxx.xxx,xxx.xxx.xxx.xxx,-,
xxx.xxx.xxx.xxx,xxx.xxx.xxx.xxx,xxx.xxx.xxx.xxx,xxx.xxx.xxx.xxx},
-{CTL1,IPv6,Enable,xxxxxxxxxx,-,64,
xxxxxxxxxx,xxxxxxxxxx,xxxxxxxxxx,xxxxxxxxxx},
{CTL2,IPv6,Enable,xxxxxxxxxx,-,64,
xxxxxxxxxx,xxxxxxxxxx,xxxxxxxxxx,xxxxxxxxxx}],
-Network Connection Mode=Auto-Negotiation,
Maintenance Port Address=[xxx.xxx.xxx.xxx,xxx.xxx.xxx.xxx],
Num. of Maintenance Port Addresses=2,
Internal Network=[xxx.xxx.xxx.xxx,xxx.xxx.xxx.xxx],
DNS Domain Name=[xxx],DNS Search Order=[xxx,xxx,xxx,xxx,xxx,xxx],
Num. of Orders=6,
Forcibly run without safety checks=Enable
```

Detailed Information

Item	Description
Location	CTL to be operated (CTL1 or CTL2)
Configuration	Type of the IP address (IPv4 or IPv6)

Item	Description
Mode	Whether the IPv4 or the IPv6 configuration is enable or disable Enable: The configuration is enabled. Disable: The configuration is disabled.
Address	IP address
Subnet Mask	Subnet mask When the value of the Configuration is IPv6, a hyphen (-) is output.
Subnet Prefix Length	Length of the subnet prefix When the value of the Configuration is IPv4, a hyphen (-) is output.
Default Gateway	IP address of the default gateway
DNS Server 1	IP address of the DNS server 1
DNS Server 2	IP address of the DNS server 2
DNS Server 3	IP address of the DNS server 3
Network Connection Mode	Mode of the network connection
Maintenance Port Address	IP address of the maintenance port
Num. of Maintenance Port Addresses	The number of maintenance port IP addresses
Internal Network	IP address for the internal network
DNS Domain Name	Domain name that is set to GUM A hyphen (-) is output if this item is not set.
DNS Search Order	Domain suffixes that are set in the order of DNS search A hyphen (-) is output if this item is not set.
Num. of Orders	The number of domain suffixes that are set in the order of DNS search
Forcibly run without safety checks	Indicates whether the function to forcibly set up the network without safety checks is enabled or disabled. However, a hyphen (-) is output except when a user with the Support Personnel role operates from the MPC.

[Maintenance] Set Up SNMP

Example 1: SNMP v1 or SNMP v2c

```
GUM AP,,[Maintenance],Set Up SNMP,,Normal end,Seq.=xxxxxxxxxx
+SNMP Agent=Enable,SNMP Version=v1,
{Send Trap to Community Name,IP Address}
=[{AAA, 192.168.0.1,192.168.0.2},{BBB,192.168.1.1,192.168.1.2}],
{Request Authentication Setting Community Name,
Requests Permitted IP Address}=[{AAA,192.168.0.10,192.168.0.12},
{BBB, 192.168.1.10,192.168.1.12}],Storage System Name=xxx,
Contact=xxx,Location=xxx
```

Detailed Information 1

Item	Description
SNMP Agent	The setting status of the SNMP agent. Enable: SNMP trap is notified. Disable: SNMP trap is not notified.
SNMP Version	The SNMP protocol version
Send Trap to Community Name	The community name to which SNMP traps are sent.
IP Address	The IP address added to the community to which SNMP traps are sent.
Request Authentication Setting Community Name	The community name set to the request authentication setting.
Requests Permitted IP Address	The IP address added to the community to permit requests.
Storage System Name	The storage system name entered during the setting operation.
Contact	The contact information entered during the setting operation.
Location	The installation location of the storage system entered during the setting operation.

Example 2: SNMP v3

```
GUM AP,,[Maintenance],Set Up SNMP,,Normal end,Seq.=xxxxxxxxxx
+SNMP Agent=Enable,SNMP Version=v3,
{Send Trap to IP Address,User Name,Authentication Mode,
Authentication Protocol,Encryption Mode,Encryption Protocol}
=[{192.168.0.1,AAA,Enable,SHA,Enable,AES},
{192.168.0.1,AAA,Enable,SHA,Enable,AES},
{192.168.0.1,AAA,Enable,SHA,Enable,AES}],
-{Request Authentication Setting User Name,Authentication Mode,
Authentication Protocol,Encryption Mode,Encryption Protocol}
=[{BBB,Enable,SHA,Enable,AES},{CCC,Enable,SHA,Enable,AES},
{DDD,Enable,SHA,Enable,AES}],Storage System Name=xxx,Contact=xxx,
Location=xxx
```

Detailed Information 2

Item	Description
SNMP Agent	The setting status of the SNMP agent. Enable: SNMP trap is notified. Disable: SNMP trap is not notified.
SNMP Version	The SNMP protocol version
Send Trap to IP Address	The IP address to which traps are sent.

Item	Description
User Name	The user name set to the SNMP trap destination.
Authentication Mode	The authentication mode status set to the SNMP trap destination. Enable: Authentication mode is enabled. Disable: Authentication mode is disabled.
Authentication Protocol	The authentication protocol set to the SNMP trap destination: SHA or MD5
Encryption Mode	The encryption mode status set to the SNMP trap destination. Enable: Encryption mode is enabled. Disable: Encryption mode is disabled.
Encryption Protocol	The encryption protocol set to the SNMP trap destination: AES or DES
Request Authentication Setting User Name	The user name set to the request authentication setting.
Authentication Mode	The authentication mode status of the user set to the request authentication. Enable: Authentication mode is enabled. Disable: Authentication mode is disabled.
Authentication Protocol	The authentication protocol of the user set to the request authentication: SHA or MD5
Encryption Mode	The encryption mode status of the user set to the request authentication. Enable: Encryption mode is enabled. Disable: Encryption mode is disabled.
Encryption Protocol	The encryption protocol of the user set to the request authentication: AES or DES
Storage System Name	The storage system name entered during the setting operation.
Contact	The contact information entered during the setting operation.
Location	The installation location of the storage system entered during the setting operation.

[Maintenance] Set Up Syslog

Example

```
GUM AP,,[Maintenance],Set Up Syslog,,Normal end,Seq.=xxxxxxxxxx
+Syslog Transfer Protocol=TLS1.2/RFC5452,
{Syslog Server,Server Enable,Type,Name,Port Number,
Client Certificate File Name,Root Certificate File Name,
Location Identification Name,Retry,Retry Interval}
=[{Primary,Enable,IPv4,xxxxx,65535,YYYYY,ZZZZ,ZZZZ,Enable,555},
{Secondary,Enable,IPv4,xxxxx,65535,YYYYY,ZZZZ,ZZZZ,Enable,555}]
```

Detailed Information

Item	Description
Syslog Transfer Protocol	The type of the syslog transfer protocol (TLS1.2/RFC5424 or UDP/RFC3164).
Syslog Server	The syslog server to be set. Primary: Primary syslog server, Secondary: Secondary syslog server
Server Enable	Indicates whether the syslog server is enabled. Enable: The syslog server is enabled. Disable: The syslog server is disabled.
Type	The type of the IP address of the syslog server (IPv4 or IPv6).
Name	The IP address of the syslog server to which SIMs are sent.
Port Number	The port number used to communicate with the syslog server.
Client Certificate File Name	The name of the client certificate file.
Root Certificate File Name	The name of the root certificate file.
Location Identification Name	The location identification name entered during the setting operation.
Retry	Indicates whether to retry if transfer to syslog servers fails. Enable: Transfer is retried. Disable: Transfer is not retried.
Retry Interval	The retry interval in seconds if transfer to syslog servers fails

[Maintenance] Set Up System Info

Example

```
GUM,,[Maintenance],Set Up System Info,,Normal end,Seq.=xxxxxxxxxx
+Storage System Name=xxx,Contact=xxx,Location=xxx
```

Detailed Information

Item	Description
Storage System Name	The storage system name entered during the setting operation.
Contact	The contact information entered during the setting operation.
Location	The installation location of the storage system entered during the setting operation.

[Maintenance] Stop Copy

Example

```
GUM,,[Maintenance],Stop Copy,,Normal end,Seq.=xxxxxxxxxx
+Location=HDDxx-xx
```

Detailed Information

Item	Description
Location	The mounting position of the drive whose copying process is stopped

[Maintenance] Turn Off Locate LEDs

Example

```
GUM,,[Maintenance],Turn Off Locate LEDs,,Normal end,
Seq.=xxxxxxxxxx
+Mode=OFF,Locations=[DB-xx,DB-xx,DB-xx],Num of Locations=3
```

Detailed Information

Item	Description
Mode	Indicates the locate LED is turned off.
Location	The mounting position of the drive box (DB-xx or DB-xx&xx) that is set to turn off the locate LED.
Num of Locations	The number of the drive boxes that are set to turn off the locate LED.

[Maintenance] Turn On Locate LEDs

Example

```
GUM,,[Maintenance],Turn On Locate LEDs,,Normal end,
Seq.=xxxxxxxxxx
+Mode=ON,Locations=[DB-xx,DB-xx,DB-xx],Num of Locations=3
```

Detailed Information

Item	Description
Mode	Indicates the locate LED is turned on.
Location	The mounting position of the drive box (DB-xx or DB-xx&xx) that is set to turn on the locate LED.
Num of Locations	The number of drive boxes that are set to turn on the locate LED.

[Maintenance] Update Cert Files

Example

```
GUM,,[Maintenance],Update Cert Files,,Normal end,
Seq.=xxxxxxxxxx
+Certificate=Web Server,File=XXXX
```

Detailed Information

Item	Description
Certificate	The certificate file (Web Server certificate or Connect to SVP certificate) to be updated.
File	The name of the updated certificate file

[Maintenance] Update Firmware

Example

```
GUM,,[Maintenance],Update Firmware,,Normal end,Seq.=xxxxxxxxxx
+Firmware File=xxx,Firmware Selection=xxx,Update Type=xxxx,
Reboot Pattern=xxx
```

Detailed Information

Item	Description
Firmware File	Name of the firmware file used to update the firmware
Firmware Selection	Firmware to be updated All: Updates all firmware installed in the storage system GUM Only: Updates the GUM firmware only
Update Type	Whether the firmware is updated online or offline Online Update: updated online, Offline Update: updated offline
Reboot Pattern	Type of the reboot (how the MP units are rebooted when all firmware installed in the storage system is updated online) By 1/2: Reboots a 1/2 of the total at one time until everything is rebooted By 1/4: Reboots a 1/4 of the total at one time until everything is rebooted By 1/8: Reboots a 1/8 of the total at one time until everything is rebooted By One: Reboots everything at one time

[Maintenance] UserAccount Backup

Example

```
GUM,,[Maintenance],UserAccount Backup,,Normal end,
Seq.=xxxxxxxxxx
```

[Maintenance] UserAccount Restore

Example

```
GUM,,[Maintenance],UserAccount Restore,,Normal end,
Seq.=xxxxxxxxxx
```

Monitor Descriptions

[Monitor] Monitoring Switch

Example

```
MPC,,[Monitor],Monitoring Switch,Enable,Normal end,Seq.=xxxxxxxxxx
```

Basic Information

Parameter	Description
Enable	Monitoring the DKC running information is enabled.
Disable	Monitoring the DKC running information is disabled.

Performance Monitor Descriptions

[PFM] Delete Unused WWNs

Example

```
RMI AP,Task Name,[PFM],Delete Unused WWNs,,Normal end,
Seq.=xxxxxxxxxx
```

[PFM] Edit CU Monitor Mode

Example

```
RMI AP,Task Name,[PFM],Edit CU Monitor Mode,Enable,Normal end,
Seq.=xxxxxxxxxx
+[LDKC:CU] = [0x00:0x00,0x00:0x01,0x00:0x02],Num. of CUs = 3
```

Basic Information

Parameter	Description
Enable	The monitored CU is enabled

Detailed Information

Item	Description
LDKC:CU	The ID of the monitored CU The logical DKC number and the CU number are separated by colons and arranged in this order.

[PFM] Edit Monitoring SW

Example

```
RMI AP,Task Name,[PFM],Edit Monitoring SW,Enable 60sec,
Normal end,Seq.=xxxxxxxxxx
```

Basic Information

Parameter	Description
Enable XXsec	Monitoring is enabled and the gathering interval is set as XX sec
Disable	Monitoring is disabled

[PFM] Edit WWN

Example

```
RMI AP,Task Name,[PFM],Edit WWN,,Normal end,Seq.=xxxxxxxxxx
+{Update Mode,HBA WWN,Change WWN Name,Change HBA WWN}
=[{Change HBA WWN,0xXXXXXXXXXXXXXXXX,,0xXXXXXXXXXXXXXXXX},
{Change WWN Name,0xXXXXXXXXXXXXXXXX,
XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX,
}],Num. of WWNs=2
```

Detailed Information

Item	Description
Update Mode	The changing mode of WWN. Change HBA WWN: Change of HBA WWN, Change WWN Name: Change of WWN name.
HBA WWN	The name of HBA WWN.
Change WWN Name	The new WWN name (if changed)

Item	Description
Change HBA WWN	The name of changed HBA WWN.
Num. of WWNs	The number of changed WWNs.

[PFM] Edit WWN MonitorMode

Example

```
RMI AP,Task Name,[PFM],Edit WWN MonitorMode,,Normal end,
Seq.=xxxxxxxxxx
+{Mode,HBA WWN,WWN Name}={Add WWN,0xXXXXXXXXXXXXXXX,
XXXXXXXXXXXXXXX
```

Item	Description
HostGrpID	The host group number where the host is registered
WWN	Indicates WWN of the host bus adapter for the host registered in the host group. WWN is a 16-digit number in the hexadecimal format.
Nickname	The nickname of the host bus adapter for the host registered in the host group
Num. of WWNs	The number of registered hosts (WWN)

[PROV] Add LUN Paths

Example

```
RMI AP,Task Name,[PROV],Add LUN Paths,,Normal end,Seq.=xxxxxxxxxx
+{Port,HostGrpID,LUN,LDKC:CU:LDEV}
=[{XX,0xXXX,XXXX,0xXX:0xXX:0xXX},
{XX,0xXXX,XXXX,0xXX:0xXX:0xXX},
{XX,0xXXX,XXXX,0xXX:0xXX:0xXX}],Num. of Paths=3
```

Detailed Information

Item	Description
Port	The name of the port to which the host group belongs
HostGrpID	The host group number linked to the logical volume
LUN	Indicates LUN of the logical volume linked to the host group
LDKC:CU:LDEV	The LDKC, CU, and LDEV numbers of the logical volume linked to the host group
Num. of Paths	The number of LU paths set

[PROV] Assign MP Unit

Example

```
RMI AP,Task Name,[PROV],Assign MP Unit,,Normal end,
Seq.=xxxxxxxxxx
+{LDKC:CU:LDEV,MP Unit ID,Result}
=[{0xXX:0xXX:0xXX,XX,Normal end},
{0xXX:0xXX:0xXX,XX,Normal end}],Num. of LDEVs=2
```

Detailed Information

Item	Description
LDKC:CU:LDEV	The LDKC number, the CU number, and the LDEV number
MP Unit ID	The MP Unit ID of the migration target
Result	The result of operation

Item	Description
	Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code
Num. of LDEVs	The number of specified logical volumes

[PROV] Block LDEVs

Example

```
RMI AP,Task Name,[PROV],Block LDEVs,,Normal end,Seq.=xxxxxxxxxx
+LDKC:CU:LDEV=[0x00:0x00:0x01,0x00:0x00:0x02,0x00:0x00:0x03,
0x00:0x00:0x04,0x00:0x00:0x05,0x00:0x00:0x06,0x00:0x00:0x07,
0x00:0x00:0x08,0x00:0x00:0x09,0x00:0x00:0x0A],
Num. of LDEVs=10
```

Detailed Information

Item	Description
LDKC:CU:LDEV	The LDKC number, the CU number, and the LDEV number
Num. of LDEVs	The number of LDEVs being blocked

[PROV] CalculateTieringMonitorData

Example

```
RMI AP,,[PROV],CalculateTieringMonitorData,,Normal end,
Seq.=xxxxxxxxxx
+{TieringMoniterDataOperation{
  RelocationOption=Enable,
    Pool{
      Id=2}}}
```

Detailed Information

Item			Description
TieringMoniterDataOperation			The setting information for recalculating the tier relocation using the monitoring data
	RelocationOption		The setting information on the tier relocation option Disable: Tier relocation is not started. Enable: Tier relocation is immediately started. null: Tier relocation is not started.
	Pool		The pool information
		Id	The pool number

[PROV] Create Host Groups

Example

```
RMI AP,Task Name,[PROV],Create Host Groups,,Normal end,
Seq.=xxxxxxxxxx
+{Port,HostGrpID,HostGrpName}=[{XX,0xXXX,XXXXXXXXXXXXXXXX},
{XX,0xXXX,XXXXXXXXXXXXXXXX}],Num. of Host Groups=2
```

Detailed Information

Item	Description
Port	The name of the port where the host group has been added
HostGrpID	The host group number newly added
HostGrpName	The name of the host group newly added
Num. of Host Groups	The number of host groups added

[PROV] Create LDEVs

Create LDEVs is output when volumes of Thin Image or DP-VOLs are created. CreateLdev is output when internal or external volumes are created.

Example 1: Creating Thin Image volumes

```
RMI AP,Task Name,[PROV],Create LDEVs,Snapshot,Normal end,
Seq.=xxxxxxxxxx
+{Pool ID,LDKC:CU:LDEV,LDEVCapa(blocks),Emulation,CLPR,SSID,
MP Unit ID,T10 PI,Result}
=[{-,0x00:0x00:0x00,96000,,0,,Auto,Enable,Normal end},
{-,0x00:0x01:0x00,96000,,0,,Auto,Enable,Normal end}],
Num. of LDEVs=2
```

Example 2: Creating DP-VOLs

```
RMI AP,Task Name,[PROV],Create LDEVs,Thin Provisioning,Normal end,
Seq.=xxxxxxxxxx
+{Pool ID,LDKC:CU:LDEV,LDEVCapa(blocks),Emulation,CLPR,SSID,
MP Unit ID,Attribute,Full Allocation,Data Direct Mapping,
Data Direct Mapped LDEV(LDKC:CU:LDEV),T10 PI,Capacity Saving,Result}
=[{1,0x00:0x00:0x00,96000,,0,,Auto,,Enable,Enable,
0x00:0x10:0x00,Enable,Compression,Normal end},
{1,0x00:0x01:0x00,96000,,0,,Auto,,Disable,Disable,
-,Disable,Disabled,Normal end}],Num. of LDEVs=2
```

Basic Information for Example 1 and 2

Item	Description
Snapshot	Operating for the Thin Image volumes.
Thin Provisioning	Operating for the Dynamic Provisioning virtual volumes.

Detailed Information for Example 1 and 2

Item	Description
Pool ID	The pool ID of a related pool volume For a Snapshot volume, a hyphen (-) is output, because you specify no setting about a related volume when you create V-Vols for Snapshot.
LDKC:CU:LDEV	The logical DKC, CU, and LDEV numbers of the created V-Vols These numbers are separated by colons and arranged in this order.
LDEVCapa (blocks)	The capacity of the created V-Vols in blocks
Emulation	Not output because this item is not used.
CLPR	The CLPR ID of the created V-Vol
SSID	Not output because this item is not used.
MP Unit ID	MP Unit ID specified for the V-Vol. When an MP Unit ID is specified automatically, "Auto" is output.
Attribute	Not output because this item is not used.
Full Allocation	Indicates the setting status of the Full Allocation Enable: Full Allocation is enabled. Disable: Full Allocation is disabled. This item is output for Dynamic Provisioning volumes only.
Data Direct Mapping	Indicates the setting status of Data Direct Mapping for the created V-Vol Enable: Data Direct Mapping is enabled. Disable: Data Direct Mapping is disabled. This item is output for Dynamic Provisioning volumes only.
Data Direct Mapped LDEV(LDKC:CU:LDEV)	Indicates the LDEV ID of the pool volume with Data Direct Mapping enabled that composes a pool associated with the created V-Vol A hyphen (-) is output if Data Direct Mapping is disabled on the created V-Vol. This item is output for Dynamic Provisioning volumes only.
T10 PI	Indicates the setting status of the T10 PI attribute Enable: T10 PI is enabled. Disable: T10 PI is disabled.
Capacity Saving	Indicates the setting status of Capacity Saving Compression: Compression Deduplication and Compression: Deduplication and Compression Disabled: Capacity Saving is disabled.
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code
Num. of LDEVs	The number of created V-Vols

[PROV] Create Resource Grps

Example

```
RMI AP,Task Name,[PROV],Create Resource Grps,,Normal end,
Seq.=xxxxxxxxxx
+{VDKC-Box ID,Resource Group ID,Resource Group Name,Result}
=[{0,1,RSG1,Normal end},{0,2,RSG2,Normal end}],
Num. of Resource Groups=2
```

Detailed Information

Item	Description
VDKC-Box ID	The number of the VDKC-Box to which the created resource group belongs. A hyphen (-) is output when the creating operation failed.
Resource Group ID	The number of the created resource group. A hyphen (-) is output when the creating operation failed
Resource Group Name	The resource group name of the created resource group
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code
Num. of Resource Groups	The number of created resource groups

[PROV] Create VDKC-Box

Example

```
RMI AP,Task Name,[PROV],Create VDKC-Box,,Normal end,Seq.=xxxxxxxxxx
+{VDKC-Box ID,Model,SerialNo,Result}={1,0x0400,28528,Normal end}
++{VDKC-Box ID,Resource Group ID,Resource Group Name,Result}
=[{1,1,RSG1,Normal end},{1,2,RSG2,Normal end}],Num. of Resource
Groups=2
```

Detailed Information

Item	Description
VDKC-Box ID	The number of the created VDKC-Box. A hyphen (-) is output when the creating operation failed.
Model	The model of the created VDKC-Box
SerialNo	The serial number of the created VDKC-Box
Result	The result of the VDKC-Box operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code

Item	Description
VDKC-Box ID	The number of the VDKC-Box to which the created resource group belongs. A hyphen (-) is output when the creating operation failed.
Resource Group ID	The number of the created resource group. A hyphen (-) is output when the creating operation failed.
Resource Group Name	The resource group name of the created resource group
Result	The result of the resource group operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code
Num. of Resource Groups	The number of created resource groups

[PROV] Create/Expand Pools

Example

```
RMI AP,Task Name,[PROV],Create/Expand Pools,,Normal end,
Seq.=xxxxxxxxxx
+{Pool ID,Pool Type,Multi Tier Pool,Warning Threshold(%),
Depletion Threshold(%),Subscription Limit(%),
Protect V-VOLs when I/O fails to Blocked Pool VOL,
Protect V-VOLs when I/O fails to Full Pool,
Tier Management,Cycle Time,Monitoring Period,Monitoring Mode,
Relocation Speed,Data Direct Mapping,Pool Result,Execute Command}
=[{1,Dynamic Provisioning,Enable,20,70,100,Yes,Yes,Auto,24,
00:00-23:59,Continuous Mode,3,Disable,Normal end,Create}],
Num. of Pools=1
++{LDKC:CU:LDEV,External LDEV Tier Rank,LDEV Result}
=[{0x00:0x00:0x00,Middle/Internal,Normal end},
{0x00:0x00:0x01,Middle/Internal,Normal end},
{0x00:0x00:0x02,Middle/Internal,Normal end}],Num. of LDEVs=3
```

Detailed Information

Item	Description
Pool ID	The pool ID of the created or expanded pool
Pool Type	The pool type. Dynamic Provisioning: Dynamic Provisioning, Thin Image: Thin Image
Multi Tier Pool	The setting status of the multi-tier mode and active flash function for the created or expanded pool Enable(Active Flash): Both Dynamic Tiering and active flash are enabled. Enable: Dynamic Tiering is enabled and active flash is disabled. Disable: Both Dynamic Tiering and active flash are disabled. If Pool Type is Thin Image, a hyphen (-) is output.

Item	Description
Warning Threshold(%)	The warning threshold of the usage rate of the created pool. The unit is indicated as a percentage. If Execute Command is Expand, a hyphen (-) is output.
Depletion Threshold(%)	The depletion threshold of the usage rate of the created pool. The unit is indicated as a percentage. If Pool Type is Thin Image, if the depletion threshold is not specified, or if Execute Command is Expand, a hyphen (-) is output.
Subscription Limit(%)	The reserve amount of the created pool. The unit is percent (%). If the reserve amount is not specified, it outputs "Unlimited". If Pool Type is Thin Image, or if Execute Command is Expand, a hyphen (-) is output.
Protect V-VOLs when I/O fails to Blocked Pool VOL	Indicates whether the setting of the protect access attribute on the virtual volume is enabled or disabled when the pool is blocked. Yes: Enabled, No: Disabled If Pool Type is not Dynamic Provisioning, or if Execute Command is Expand, a hyphen (-) is output.
Protect V-VOLs when I/O fails to Full Pool	Indicates whether the setting of the protect access attribute on the virtual volume is enabled or disabled when the pool is full. Yes: Enabled, No: Disabled If Pool Type is not Dynamic Provisioning, or if Execute Command is Expand, a hyphen (-) is output.
Tier Management	The auto control mode of the created or expanded pool Auto: Auto, Manual: Manual If Multi Tier Pool is not Enable, a hyphen (-) is output.
Cycle Time	The cycle of performance monitoring for the created pool 0.5: every thirty minutes, 1: every one hour, 2: every two hours, 4: every four hours, 8: every eight hours, 24: every twenty-four hours If Tier Management is not Auto, or if Execute Command is Expand, a hyphen (-) is output.
Monitoring Period	The monitoring period of the pool. Format: "H1:M1-H2:M2" H1: The time when the monitoring starts (hour) M1: The time when the monitoring starts (minute) H2: The time when the monitoring ends (hour) M2: The time when the monitoring ends (minute). If Cycle Time is not 24, or if Execute Command is Expand, a hyphen (-) is output.
Monitoring Mode	The monitoring mode Continuous Mode: Continuous mode, Period Mode: Period mode If Multi Tier Pool is not Enable, or if Execute Command is Expand, a hyphen (-) is output.
Relocation Speed	The relocation speed 1: Slowest, 2: Slower, 3: Normal, 4: Faster, 5: Fastest

Item	Description
	If Multi Tier Pool is not Enable, or if Execute Command is Expand, a hyphen (-) is output.
Data Direct Mapping	Indicates the setting status of Data Direct Mapping Enable: Data Direct Mapping is enabled. Disable: Data Direct Mapping is disabled. If Execute Command is Expand, a hyphen (-) is output.
Pool Result	The result of pool creation or expansion Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end, Not Execute: Not Executed *xxxx*: Part code, *yyyyy*: Error code
Execute Command	The executed operation Create: Pools are created. Expand: Pools are expanded. If Pool Result is not Normal end, a hyphen (-) is output.
Num. of Pools	The number of created or expanded pools
LDKC:CU:LDEV	The LDKC number, the CU number and the LDEV number of the pool volume assigned to the created or expanded pool
External LDEV Tier Rank	The external LDEV tier rank of the pool volume assigned to the created or expanded pool High: An external volume (High) Middle/Internal: An external volume (Middle) or an internal volume Low: An external volume (Low)
LDEV Result	The result of creating or expanding pools per pool volume Normal end: Normal end, Error(*xxxx-yyyy*): Abnormal end, Not Execute: Not Executed *xxxx*: Part code, *yyyy*: Error code
Num. of LDEVs	The number of created or expanded pool volume.

[PROV] CreateAlus

Example

```
RMI AP,Task Name,[PROV],CreateAlus,,Normal end,Seq.=xxxxxxxxxx
+{Alus[0]{
  LdevId=0x00:0x00:0xBC,Result=Normal end,MpUnitId=Auto,
  Clpr{
    Id=0},
  Id="60-06-0E-81-30-76-D9-30-76-D9-00-00-00-00-00-BC"}}
```

Detailed Information

Item	Description
Alus[x]	The setting information of the created LDEV with the ALU attribute
LdevId	The LDEV ID
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end, Not Execute: Not Executed *xxxx*: Part code, *yyyyy*: Error code
MpUnitId	The MP Unit ID "Auto" indicates the auto assignment is enabled.
Clpr	The CLPR setting information
Id	The CLPR ID
Id	The ALU ID

[PROV] CreateiScsiName

Example

```
RMI AP,,[PROV],CreateiScsiName,,Normal end,Seq.=xxxxxxxxxx
+{iScsiPort[0]{
  Port=1A,
  iScsiTarget[0]{
    Id=0,
    RemoteiScsiName[0]{
      Name="Name",NickName="NickName",Result=Normal end}}}}
```

Detailed Information

Item	Description
iScsiPort[x]	The setting information of the port
Port	The port ID to be set
iScsiTarget[x]	The iSCSI target information
Id	The iSCSI target ID
RemoteiScsiName[x]	The information of the iSCSI name of the host bus adapter
Name	The iSCSI name of the host bus adapter
NickName	The host name (nick name) "null" is output if this item is not set or changed.
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code

[PROV] CreateiScsiPath

Example

```
RMI AP,,[PROV],CreateiScsiPath,,Normal end,Seq.=xxxxxxxxxx
+{ConnectionTest=true,
iScsiPath[0]{
  iScsiPort{
    Port=1A},
  RemoteiScsiPort{
    Function=UVM,IpType=IPv4,Ipv4Address=192.168.0.101,
    Ipv6Address=0:0:0:0:0:0:0:0,TcpPortNumber=3260,
    RemoteiScsiTarget{
      Name="iqn.1994-04.jp.co.hitachi.h8m.t.00001.3a000",
      iScsiUser{
        AuthSwitch=None,AuthMode=Unidirectional,UserId="CHAPUser"}}},
  Result=Normal end}}
```

Detailed Information

Item	Description
ConnectionTest	Indicates whether to perform the connection test after creating iSCSI paths true: Test is performed. false: Test is not performed.
iScsiPath[x]	The path information between the iSCSI port on the local storage system and the iSCSI target on the remote storage system
iScsiPort	The information of the iSCSI port on the local storage system
Port	The Port ID
RemoteiScsiPort	The information of the iSCSI port on the remote storage system
Function	Function that uses the created iSCSI path UVM: Universal Volume Manager RemoteReplication: Remote Replication
IpType	The type of the IP address IPv4: IPv4 address, IPv6: IPv6 address
IPv4Address	The IPv4 address*
IPv6Address	The IPv6 address*
TcpPortNumber	The TCP port number
RemoteiScsiTarget	The iSCSI target information
Name	The iSCSI name
iScsiUser	The user authentication information
AuthSwitch	Indicates whether the CHAP authentication method is enabled or disabled*

Item	Description
None: CHAP is disabled. CHAP: CHAP is enabled.	
AuthMode	Indicates the CHAP authentication mode* Unidirectional: CHAP is one-way. Mutual: CHAP is two-way.
UserId	The CHAP user name*
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code
* "null" is output if this item is not set or changed.	

[PROV] CreateiScsiTarget

Example

```
RMI AP,,[PROV],CreateiScsiTarget,,Normal end,Seq.=xxxxxxxxxx
+{iScsiPort[0]{
  Port=1A,
  iScsiTarget[0]{
    Id=0,Name="Name",Alias="Alias",UserAuthSwitch=Enable,
    AuthMode=Unidirectional,Result=Normal end}}}
```

Detailed Information

Item	Description
iScsiPort[x]	The setting information of the port
Port	The port ID to be set
iScsiTarget[x]	The iSCSI target information
Id	The iSCSI target ID
Name	The iSCSI target name
Alias	The iSCSI target alias
UserAuthSwitch	The setting status of the CHAP user authentication Enable: Enabled, Disable: Disabled, UseHostSetting: Using host settings
AuthMode	The authentication mode. Unidirectional: One-way, Mutual: Two-way
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code

[PROV] CreateLdev

CreateLdev is output when internal or external volumes are created. Create LDEVs is output when volumes of Thin Image or DP-VOLs are created.

Example

```
RMI AP,,[PROV],CreateLdev,,Normal end,Seq.=xxxxxxxxxx
+{LogicalDevice[0]{
  ID=0x00:0x00:0x00,ParityGroupID=1-1,ExternalGroupID=null,
  Emulation=OPEN-V,Capacity(Block)=96000,Position=0,
  MpUnitId=0,T10pi=true,Result=Normal end}}
```

Detailed Information

Item		Description
LogicalDevice[x]		The setting information of the LDEV
	ID	The LDEV ID
	ParityGroupID	The parity group ID to which the LDEV belongs "null" is output if an external volume is created.
	ExternalGroupID	The external volume group ID to which the LDEV belongs "null" is output if an internal volume is created.
	Emulation	The emulation type
	Capacity(Block)	The capacity
	Position	The LDEV ID (Initial number)
	MpUnitId	The MP unit ID assigned to the LDEV
	T10pi	Indicates the setting status of the T10 PI attribute true: T10 PI is enabled. false: T10 PI is disabled.
	Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code

[PROV] CreateParityGroups

Example 1: Interleaved parity groups not being included

```
RMI AP,,[PROV],CreateParityGroups,,Normal end,Seq.=xxxxxxxxxx
+{ParityGroup[0]{
  ID=1-1,RAIDLevel=2D+2D,
  CachePartition{
    CLPR=0},
  Encryption=true,Copy-backMode=true,Accelerated Compression=true,
  Emulation=OPEN-V,
  Drive[0]{
    Location=HDD0-0},
  Result=Normal end}}
```

Detailed Information

Item	Description
ParityGroup[x]	The setting information of the parity group
ID	The parity group ID
RAIDLevel	The RAID level
CachePartition	The CLPR information
CLPR	The CLPR ID
Encryption	The setting status of encryption true: Enabled, false: Disabled
Copy-backMode	The setting status of the copy-back mode true: Enabled, false: Disabled
Accelerated Compression	The setting status of the accelerated compression true: Enabled, false: Disabled
Emulation	The emulation type
Drive[x]	The information of the drive configuring the parity group
Location	The mounting position of the drive
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code

Example 2: Interleaved parity groups being included

```
RMI AP,,[PROV],CreateParityGroups,,Normal end,Seq.=xxxxxxxxxx
+{ParityGroup[0]{
  ID=1-1,RAIDLevel=2D+2D,
  CachePartition{
    CLPR=0},
  Encryption=true,Copy-backMode=true,Accelerated Compression=true,
  Emulation=OPEN-V,
  Drive[0]{
    Location=HDD0-0},
  Result=Normal end},
Concatenate[0]{
  ParityGroup[0]{
    ID=1-1},
  ParityGroup[1]{
    ID=1-2}}}
```

Detailed Information

Item	Description
ParityGroup[x]	The setting information of the parity group
ID	The parity group ID
RAIDLevel	The RAID level

Item	Description
CachePartition	The CLPR information
CLPR	The CLPR ID
Encryption	The setting status of encryption true: Enabled, false: Disabled
Copy-backMode	The setting status of the copy-back mode true: Enabled, false: Disabled
Accelerated Compression	The setting status of the accelerated compression true: Enabled, false: Disabled
Emulation	The emulation type
Drive[x]	The information of the drive configuring the parity group
Location	The mounting position of the drive
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code
Concatenate[x]	The information of the interleaved parity group
ParityGroup[x]	The information of the parity groups that make up the interleaved parity group
ID	The parity group ID

[PROV] CreateRemoteChapUser

Example

```
RMI AP,,[PROV],CreateRemoteChapUser,,Normal end,Seq.=xxxxxxxxxx
+{iScsiPort[0]{
  Port=1A,
  iScsiTarget[0]{
    Id=0,
    RemoteiScsiUser[0]{
      ChapUserId="ChapUserId",Result=Normal end}}}}
```

Detailed Information

Item	Description
iScsiPort[x]	The setting information of the port
Port	The port ID to be set
iScsiTarget[x]	The iSCSI target information
Id	The iSCSI target ID
RemoteiScsiUser[x]	The user information of the CHAP authentication
ChapUserId	The user ID of the CHAP authentication

Item	Description
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code

[PROV] CreateSlus

Example

```
RMI AP,,[PROV],CreateSlus,,Normal end,Seq.=xxxxxxxxxx
+{Slus[0]{
  LdevId=0x00:0x00:0xBC,Result=Normal end,Capacity=8388608,
  MpUnitId=Auto,
  Clpr{
    Id=0},
  Pool{
    Id=9},
  Id="60-06-0E-81-30-76-D9-30-76-D9-00-00-00-00-00-BC",
  FullAllocation=false}}
```

Detailed Information

Item	Description
Slus[x]	The setting information of the created LDEV with the SLU attribute
LdevId	The LDEV ID
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end, Not Execute: Not Executed *xxxx*: Part code, *yyyyy*: Error code
Capacity	The capacity
MpUnitId	The MP Unit ID "Auto" indicates the auto assignment is enabled.
Clpr	The CLPR setting information
Id	The CLPR ID
Pool	The pool setting information
Id	The pool number
Id	The SLU ID
FullAllocation	Indicates the setting status of the Full Allocation true: Full Allocation is enabled. false: Full Allocation is disabled.

[PROV] CreateTiPairsWithSlu

Example

```
RMI AP,,[PROV],CreateTiPairsWithSlu,,Normal end,
Seq.=xxxxxxxxxx
+{TiPairs[0]{
  PrimaryVolume{
    Slu{
      Id="60-06-0E-81-30-00-32-30-00-32-00-00-00-00-30-00"},
    Ldev{
      Id=0x00:0x30:0x00}},
  AccessAttribute=ReadOnly,FastClone=false,
  Pool{
    Id=2},
  Result=Normal end,MirrorUnit=3,
  SnapshotSlu{
    Id="60-06-0E-81-30-00-32-30-00-32-00-00-80-00-00-00"}}}
```

Detailed Information

Item	Description
TiPairs[x]	The setting information of the created Thin Image pair
PrimaryVolume	The setting information of the primary volume
Slu	The SLU information
Id	The SLU ID
Ldev	The LDEV information
Id	The LDEV ID
AccessAttribute	The access attribute FullAccess: Read/Write, ReadOnly: Read Only
FastClone	The setting status of the fast clone for the snapshot true: Enabled, false: Disabled
Pool	The pool information
Id	The pool number
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end, Not Execute: Not Executed *xxxx*: Part code, *yyyyy*: Error code
MirrorUnit	The mirror unit number
SnapshotSlu	The SLU information of the secondary volume
Id	The SLU ID

[PROV] CreateTiVolumes

Example

```
RMI AP,,[PROV],CreateTiVolumes,,Normal end,Seq.=xxxxxxxxxx
+{TiVolumes[0]{
  LdevId=0x00:0x00:0xBC,Result=Normal end,Capacity=8388608,
  MpUnitId=Auto,
  Clpr{
    Id=0}}}
```

Detailed Information

Item			Description
TiVolumes[x]			The setting information of the created secondary volume for Thin Image
	LdevId		The LDEV ID
	Result		The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end, Not Execute: Not Executed *xxxx*: Part code, *yyyyy*: Error code
	Capacity		The capacity
	MpUnitId		The MP Unit ID "Auto" indicates the auto assignment is enabled.
	Clpr		The CLPR setting information
		Id	The CLPR ID

[PROV] Delete Host Groups

Example

```
RMI AP,Task Name,[PROV],Delete Host Groups,,Normal end,
Seq.=xxxxxxxxxx
+{Port,HostGrpID}
=[{XX,0xXXX},{XX,0xXXX}],Num. of Host Groups=2
```

Detailed Information

Item	Description
Port	The name of the port to which the deleted or initialized host group belonged
HostGrpID	The host group number deleted or initialized
Num. of Host Groups	The number of host groups deleted or initialized

[PROV] Delete LDEVs

Delete LDEVs is output when volumes of Thin Image or DP-VOLs are deleted. DeleteLdev is output when internal or external volumes are deleted.

Example 1: Deleting Thin Image volumes

```
RMI AP,Task Name,[PROV],Delete LDEVs,Snapshot,Normal end,
Seq.=xxxxxxxxxx
+{LDKC:CU:LDEV, Result}=[{0x00: 0x00: 0x00, Normal end},
{0x00: 0x01: 0x00, Normal end},
{0x00: 0x02: 0x00, Normal end}],
Num. of LDEVs=3
```

Example 2: Deleting DP-VOLs

```
RMI AP,Task Name,[PROV],Delete LDEVs,Thin Provisioning,Normal end,
Seq.=xxxxxxxxxx
+{LDKC:CU:LDEV, Result}=[{0x00: 0x00: 0x00, Normal end},
{0x00: 0x01: 0x00, Normal end},
{0x00: 0x02: 0x00, Normal end}],
Num. of LDEVs=3
```

Basic Information for Example 1 and 2

Item	Description
Snapshot	Operating for the Thin Image volumes.
Thin Provisioning	Operating for the Dynamic Provisioning virtual volumes.

Detailed Information for Example 1 and 2

Item	Description
LDKC:CU:LDEV	The logical DKC, CU, and LDEV numbers of the deleted V-Vols These numbers are separated by colons and arranged in this order.
Result	The result of operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *where xxxx*: Part code, *yyyyy*: Error code
Num. of LDEVs	The number of deleted V-Vols

[PROV] Delete Login WWNs

Example

```
RMI AP,Task Name,[PROV],Delete Login WWNs,,Normal end,
Seq.=xxxxxxxxxx
+{Port,Delete WWN}
=[{XX,0xXXXXXXXXXXXXXXXX},{XX,0xXXXXXXXXXXXXXXXX}],
Num. of WWNs=2
```

Detailed Information

Item	Description
Port	The port name where the host of deleted WWN was connected
Delete WWN	The deleted WWN. WWN is a 16-digit number in the hexadecimal format.
Num. of WWNs	The number of WWNs deleted

[PROV] Delete LUN Paths

Example

```
RMI AP,Task Name,[PROV],Delete LUN Paths,,Normal end,
Seq.=xxxxxxxxxx
+{Port,HostGrpID,LUN}
=[{XX,0xXXX,XXXX},{XX,0xXXX,XXXX},{XX,0xXXX,XXXX}],
Num. of Paths=3
```

Detailed Information

Item	Description
Port	The name of the port to which the host group belongs
HostGrpID	The host group number where the LU path is deleted
LUN	Indicates LUN where the LU path assignment is cancelled
Num. of Paths	The number of LU paths deleted

[PROV] Delete Resource Grps

Example

```
RMI AP,Task Name,[PROV],Delete Resource Grps,,Normal end,
Seq.=xxxxxxxxxx
+{VDKC-Box ID,Resource Group ID,Result}
=[{0,1,Normal end},{0,2,Normal end}],Num. of Resource Groups=2
```

Detailed Information

Item	Description
VDKC-Box ID	The number of the VDKC-Box to which the deleted resource group belongs
Resource Group ID	The number of the deleted resource group
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code

Item	Description
Num. of Resource Groups	The number of deleted resource groups

[PROV] Delete VDKC-Box

Example

```
RMI AP,,Task Name,[PROV],Delete VDKC-Box,,Normal end,Seq.=xxxxxxxxxx
+{VDKC-Box ID,Result}=[{1,Normal end}],Num. of VDKC-Boxes=1
```

Detailed Information

Item	Description
VDKC-Box ID	The number of the deleted VDKC-Box
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code
Num. of VDKC-Boxes	The number of deleted VDKC-Boxes

[PROV] DeleteAlus

Example

```
RMI AP,Task Name,[PROV],DeleteAlus,,Normal end,Seq.=xxxxxxxxxx
+{Alus[0]{
  Id="60-06-0E-81-30-76-D9-30-76-D9-00-00-00-00-00-49",
  Result=Normal end,LdevId=0x00:0x00:0x49}}
```

Detailed Information

Item		Description
Alus[x]		The setting information of the deleted LDEV with the ALU attribute
	Id	The ALU ID
	Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end, Not Execute: Not Executed *xxxx*: Part code, *yyyyy*: Error code
	LdevId	The LDEV ID

[PROV] DeleteiScsiInitiatorUser

Example

```
RMI AP,,[PROV],DeleteiScsiInitiatorUser,,Normal end,Seq.=xxxxxxxxxx
+{iScsiPort[0]{
  Port=1A,Result=Normal end}}
```

Detailed Information

Item		Description
iScsiPort[x]		The setting information of the port
	Port	The port ID to be set
	Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code

[PROV] DeleteiScsiName

Example

```
RMI AP,,[PROV],DeleteiScsiName,,Normal end,Seq.=xxxxxxxxxx
+{iScsiPort[0]{
  Port=1A,
  iScsiTarget[0]{
    Id=0,
    RemoteiScsiName[0]{
      Name="Name",Result=Normal end}}}}
```

Detailed Information

Item			Description
iScsiPort[x]			The setting information of the port
	Port		The port ID to be set
	iScsiTarget[x]		The iSCSI target information
		Id	The iSCSI target ID
		RemoteiScsiName[x]	The information of the iSCSI name of the host bus adapter
		Name	The iSCSI name of the host bus adapter
		Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code

[PROV] DeleteiScsiPath

Example

```
RMI AP,,[PROV],DeleteiScsiPath,,Normal end,Seq.=xxxxxxxxxx
+{iScsiPath[0]{
  iScsiPort{
    Port=1A},
  RemoteiScsiPort{
    Function=UVM,IpType=IPv4,Ipv4Address=192.168.0.101,
    Ipv6Address=0:0:0:0:0:0:0:0,
    RemoteiScsiTarget{
      Name="iqn.1994-04.jp.co.hitachi.h8m.t.00001.3a000"}},
  Result=Normal end}}
```

Detailed Information

Item	Description
iScsiPath[x]	The path information between the iSCSI port on the local storage system and the iSCSI target on the remote storage system
iScsiPort	The information of the iSCSI port on the local storage system
Port	The port ID
RemoteiScsiPort	The information of the iSCSI port on the remote storage system
Function	Function that uses the iSCSI path UVM: Universal Volume Manager RemoteReplication: Remote Replication
IpType	The type of the IP address IPv4: IPv4 address, IPv6: IPv6 address
IPv4Address	The IPv4 address*
IPv6Address	The IPv6 address*
RemoteiScsiTarget	The iSCSI target information
Name	The iSCSI name
Result	The result of the operation Normal end: Normal end, Error(*xxxx*-*yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code
* "null" is output if this item is not set.	

[PROV] DeleteiScsiTarget

Example

```
RMI AP,,[PROV],DeleteiScsiTarget,,Normal end,Seq.=xxxxxxxxxx
+{iScsiPort[0]{
  Port=1A,
  iScsiTarget[0]{
    Id=0,Result=Normal end}}}
```

Detailed Information

Item			Description
iScsiPort[x]			The setting information of the port
	Port		The port ID to be set
	iScsiTarget[x]		The iSCSI target information
		Id	The iSCSI target ID
		Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code

[PROV] DeleteLdev

DeleteLdev is output when internal or external volumes are deleted. Delete LDEVs is output when volumes of Thin Image or DP-VOLs are deleted.

Example

```
RMI AP,,[PROV],DeleteLdev,,Normal end,Seq.=xxxxxxxxxx
+{LogicalDevice[0]{
  ID=0x00:0x00:0x00,ParityGroupID=1-1,ExternalGroupID=null,
  Result=Normal end}}
```

Detailed Information

Item		Description
LogicalDevice[x]		The setting information of the LDEV
	ID	The LDEV ID
	ParityGroupID	The parity group ID to which the LDEV belongs "null" is output if an external volume is deleted.
	ExternalGroupID	The external volume group ID to which the LDEV belongs "null" is output if an internal volume is deleted.
	Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code

[PROV] DeleteLoginiScsiName

Example

```
RMI AP,,[PROV],DeleteLoginiScsiName,,Normal end,Seq.=xxxxxxxxxx
+{iScsiPort[0]{
  Port=1A,Result=Normal end}}
```

Detailed Information

Item		Description
iScsiPort[x]		The setting information of the port
	Port	The port ID to be set
	Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code

[PROV] DeleteParityGroups

Example

```
RMI AP,,[PROV],DeleteParityGroups,,Normal end,Seq.=xxxxxxxxxx
+{ParityGroup[0]{
  ID=1-1,Result=Normal end}}
```

Detailed Information

Item		Description
ParityGroup[x]		The setting information of the parity group
	ID	The parity group ID
	Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code

[PROV] DeleteRemoteChapUser

Example

```
RMI AP,,[PROV],DeleteRemoteChapUser,,Normal end,Seq.=xxxxxxxxxx
+{iScsiPort[0]{
  Port=1A,
  iScsiTarget[0]{
    Id=0,
    RemoteiScsiUser[0]{
      ChapUserId="ChapUserId",Result=Normal end}}}}
```

Detailed Information

Item	Description
iScsiPort[x]	The setting information of the port
Port	The port ID to be set
iScsiTarget[x]	The iSCSI target information
Id	The iSCSI target ID
RemoteiScsiUser[x]	The user information of the CHAP authentication
ChapUserId	The user ID of the CHAP authentication
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code

[PROV] DeleteSlus

Example

```
RMI AP,,[PROV],DeleteSlus,,Normal end,Seq.=xxxxxxxxxx
+{Slus[0]{
  Id="60-06-0E-81-30-76-D9-30-76-D9-00-00-00-00-00-49",
  Result=Normal end,LdevId=0x00:0x00:0x49}}
```

Detailed Information

Item	Description
Slus[x]	The setting information of the deleted LDEV with the SLU attribute
Id	The SLU ID
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end, Not Execute: Not Executed *xxxx*: Part code, *yyyyy*: Error code
LdevId	The LDEV ID

[PROV] DeleteTargetChapUser

Example

```
RMI AP,,[PROV],DeleteTargetChapUser,,Normal end,Seq.=xxxxxxxxxx
+{iScsiPort[0]{
  Port=1A,
  iScsiTarget[0]{
    Id=0,ChapUserId="ChapUserId",Result=Normal end}}}
```

Detailed Information

Item			Description
iScsiPort[x]			The setting information of the port
	Port		The port ID to be set
	iScsiTarget[x]		The iSCSI target information
		Id	The iSCSI target ID
		ChapUserId	The user ID of the CHAP authentication
		Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code

[PROV] DeleteTiVolumes

Example

```
RMI AP,,[PROV],DeleteTiVolumes,,Normal end,Seq.=xxxxxxxxxx
+{TiVolumes[0]{
  LdevId=0x00:0x10:0x00,Result=Normal end}}
```

Detailed Information

Item		Description
TiVolumes[x]		The setting information of the deleted secondary volume for Thin Image
	LdevId	The LDEV ID
	Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end, Not Execute: Not Executed *xxxx*: Part code, *yyyyy*: Error code

[PROV] DRU Expiration Lock

Example

```
RMI AP,,[PROV],DRU Expiration Lock,SYSTEM:Enable,Normal end,
Seq.=xxxxxxxxxx
```

Basic Information

Parameter	Description
SYSTEM:Enable	The expiration-lock setting is enabled in the storage system
SYSTEM:Disable	The expiration-lock setting is disabled in the storage system

[PROV] Edit Cmd Dev(Auth)

Example

```
RMI AP,Task Name,[PROV],Edit Cmd Dev(Auth),,Normal end,
Seq.=xxxxxxxxxx
+{LDKC:CU:LDEV,UserAuth}=[{0xXX:0xXX:0xXX,Disable},
{0xXX:0xXX:0xXX,Enable}],Num. of LDEVs=2
```

Detailed Information

Item	Description
LDKC:CU:LDEV	The LDKC, CU, and LDEV numbers of the logical volume where the command device authentication setting is changed
UserAuth	Indicates whether the command device authentication setting is enabled or disabled. Disable or Enable will appear.
Num. of LDEVs	The number of logical volumes where the command device authentication setting is changed

[PROV] Edit Cmd Dev(DevGrp)

Example

```
RMI AP,Task Name,[PROV],Edit Cmd Dev(DevGrp),,Normal end,
Seq.=xxxxxxxxxx
+{LDKC:CU:LDEV,DevGrpDef}
=[{0xXX:0xXX:0xXX,Disable},{0xXX:0xXX:0xXX,Enable}],
Num. of LDEVs=2
```

Detailed Information

Item	Description
LDKC:CU:LDEV	The LDKC, CU, and LDEV numbers of the logical volume where the device groups setting is changed
DevGrpDef	Indicates whether the device groups setting is enabled or disabled. Disable or Enable will appear
Num. of LDEVs	The number of logical volumes where the device groups setting is changed

[PROV] Edit Cmd Dev(Sec)

Example

```
RMI AP,Task Name,[PROV],Edit Cmd Dev(Sec),,Normal end,
Seq.=xxxxxxxxxx
+{LDKC:CU:LDEV,CommandDevSec}
=[{0xXX:0xXX:0xXX,Disable},{0xXX:0xXX:0xXX,Enable}],
Num. of LDEVs=2
```

Detailed Information

Item	Description
LDKC:CU:LDEV	The LDKC, CU, and LDEV numbers of the logical volume where the command device security setting is changed
CommandDevSec	Indicates whether the command device security setting is enabled or disabled. Disable or Enable will appear.
Num. of LDEVs	The number of logical volumes that the command device security setting is changed

[PROV] Edit Command Devices

Example

```
RMI AP,Task Name,[PROV],Edit Command Devices,,Normal end,
Seq.=xxxxxxxxxx
+{LDKC:CU:LDEV,CommandDev}=[{0xXX:0xXX:0xXX,Disable},
{0xXX:0xXX:0xXX,Enable}],Num. of LDEVs=2
```

Detailed Information

Item	Description
LDKC:CU:LDEV	The LDKC, CU, and LDEV numbers of the logical volume where the command device setting is changed
CommandDev	Indicates whether the command device setting is enabled or disabled. Disable or Enable will appear.
Num. of LDEVs	The number of logical volumes where the command device setting is changed

[PROV] Edit DRU Attribute

Example

```
RMI AP,,[PROV],Edit DRU Attribute,,Normal end,Seq.=xxxxxxxxxx
+{LDKC:CU:LDEV,Attribute,RT,Result}
=[{0x00:0x00:0x01,0x80,100,Normal end},
{0x00:0x00:0x02,0x82,Unlimited,Error(9605-8122)},
{0x00:0x00:0x03,0x81,200,Normal end},
{0x00:0x00:0x03,0x81,xxxx,Normal end}],
Num. of LDEVs=XXX
```

Detailed Information

Item	Description
LDKC:CU:LDEV	The LDKC, CU, and LDEV numbers of the logical volume where the attribute is set

Item	Description
Attribute	The set attribute in hexadecimal. Each bit (0–7) of 1 byte corresponds to the setting item. 1 is assigned to each bit when the setting is enabled and 0 (zero) is assigned to each bit when the setting is disabled. Each bit represents the following attributes: • Bit 0: Mounting of LDEV (fixed to 1) • Bit 1: Setting of S-VOL Disable • Bit 2: Setting of Zero Read Cap mode • Bit 3: Setting of Invisible mode • Bit 4: Setting of reserve • Bit 5: Fixed to 0 (zero)* • Bit 6: Setting of Read Only attribute* • Bit 7: Setting of Protect attribute* When 0x88 is output to the attribute, for example, Read/Write attribute is set to the logical volume to show that the reserve setting has been enabled. A hyphen (-) is output when a setting is not changed.
RT	The number of days set in Retention Term. A hyphen (-) is output when setting is not changed.
Result	The result of operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *where xxxx*: Part code, *yyyyy*: Error code
Num. of LDEVs	The number of logical volumes where the attribute has been set
*When bit 5, 6, and 7 are all 0 (zero), Read/Write has been set.	

[PROV] Edit Full Allocation

Example

```
RMI AP,Task Name,[PROV],Edit Full Allocation,,Normal end,
Seq.=xxxxxxxxxx
+{Pool ID,LDKC:CU:LDEV,Full Allocation,Result}
=[{0,0x00:0x00:0x00,Enable,Normal end}],Num. of VOLs=1
```

Detailed Information

Item	Description
Pool ID	The pool ID associated with the virtual volume of Dynamic Provisioning
LDKC:CU:LDEV	The LDEV ID of the virtual volume of Dynamic Provisioning
Full Allocation	Indicates the setting status of the Full Allocation Enable: Full Allocation is enabled. Disable: Full Allocation is disabled.

Item	Description
Result	The result of operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *where xxxx*: Part code, *yyyyy*: Error code
Num. of VOLs	The number of virtual volumes of Dynamic Provisioning whose page reservation settings were changed

[PROV] Edit Host

Example

```
RMI AP,Task Name,[PROV],Edit Host,,Normal end,Seq.=xxxxxxxxxx
+{Port,HostGrpID,WWN,Change WWN,Change Nickname}
=[{XX,0xXXX,0xXXXXXXXXXXXXXXXX,0xXXXXXXXXXXXXXXXX,
XXXXXXXXXXXXXXXX}],
Num. of WWNs=1
```

Detailed Information

Item	Description
Port	The name of the port where the host is connected
HostGrpID	The host group number on which the host with WWN or nickname of the host bus adapter being changed is registered
WWN	Indicates WWN of the host bus adapter before change. WWN is represented in hexadecimal
Change WWN	Indicates WWN of the host bus adapter after change
Change Nickname	The nickname of the host bus adapter after change
Num. of WWNs	The number of host bus adapters (WWN) where the settings have been changed

[PROV] Edit Host Grps(Mode)

Example

```
RMI AP,Task Name,[PROV],Edit Host Grps(Mode),,Normal end,
Seq.=xxxxxxxxxx
+{Port,HostGrpID,Mode,Option[0:31],Option[32:63],Option[64:95],
Option[96:127]}
=[{XX,0xXXX,0x00,0x20000000,0x00000000,0x00000000,0x00000000},
{XX,0xXXX,0x09,0x00080000,0x00000000,0x00000000,0x00000000}],
Num. of Host Groups=2
```

Item	Description
Port	The name of the port to which the host group belongs.

Item	Description
HostGrpID	The host group number where the host group names have been changed.
Mode	The specified host mode. See the *Provisioning Guide for Hitachi Virtual Storage Platform Gx00 and Fx00 Models* for the meaning of the host mode number.
Option[0:31] Option[32:63] Option[64:95] Option[96:127]	The specified host mode option. 128 host mode options from 0 to 127 are output in groups of 32 options. The following tables show the output values corresponding to the host mode options. See the *Provisioning Guide for Hitachi Virtual Storage Platform Gx00 and Fx00 Models* for the meaning of the host mode options.
Num. of Host Groups	The number of host groups that the host mode setting is changed.

Host mode option and output contents of Option

Table 12-1 Host mode option 0 to 31 and output contents of Option[0:31]

Host mode option	Value of Option[0:31]	Host mode option	Value of Option[0:31]
0	0x80000000	16	0x00008000
1	0x40000000	17	0x00004000
2	0x20000000	18	0x00002000
3	0x10000000	19	0x00001000
4	0x08000000	20	0x00000800
5	0x04000000	21	0x00000400
6	0x02000000	22	0x00000200
7	0x01000000	23	0x00000100
8	0x00800000	24	0x00000080
9	0x00400000	25	0x00000040
10	0x00200000	26	0x00000020
11	0x00100000	27	0x00000010
12	0x00080000	28	0x00000008
13	0x00040000	29	0x00000004
14	0x00020000	30	0x00000002
15	0x00010000	31	0x00000001

Table 12-2 Host mode option 32 to 63 and output contents of Option[32:63]

Host mode option	Value of Option[32:63]	Host mode option	Value of Option[32:63]
32	0x80000000	48	0x00008000
33	0x40000000	49	0x00004000
34	0x20000000	50	0x00002000
35	0x10000000	51	0x00001000
36	0x08000000	52	0x00000800
37	0x04000000	53	0x00000400
38	0x02000000	54	0x00000200
39	0x01000000	55	0x00000100
40	0x00800000	56	0x00000080
41	0x00400000	57	0x00000040
42	0x00200000	58	0x00000020
43	0x00100000	59	0x00000010
44	0x00080000	60	0x00000008
45	0x00040000	61	0x00000004
46	0x00020000	62	0x00000002
47	0x00010000	63	0x00000001

Table 12-3 Host mode option 64 to 95 and output contents of Option[64:95]

Host mode option	Value of Option[64:95]	Host mode option	Value of Option[64:95]
64	0x80000000	80	0x00008000
65	0x40000000	81	0x00004000
66	0x20000000	82	0x00002000
67	0x10000000	83	0x00001000
68	0x08000000	84	0x00000800
69	0x04000000	85	0x00000400
70	0x02000000	86	0x00000200
71	0x01000000	87	0x00000100
72	0x00800000	88	0x00000080
73	0x00400000	89	0x00000040
74	0x00200000	90	0x00000020

Host mode option	Value of Option[64:95]	Host mode option	Value of Option[64:95]
75	0x00100000	91	0x00000010
76	0x00080000	92	0x00000008
77	0x00040000	93	0x00000004
78	0x00020000	94	0x00000002
79	0x00010000	95	0x00000001

Table 12-4 Host mode option 96 to 127 and output contents of Option[96:127]

Host mode option	Value of Option[96:127]	Host mode option	Value of Option[96:127]
96	0x80000000	112	0x00008000
97	0x40000000	113	0x00004000
98	0x20000000	114	0x00002000
99	0x10000000	115	0x00001000
100	0x08000000	116	0x00000800
101	0x04000000	117	0x00000400
102	0x02000000	118	0x00000200
103	0x01000000	119	0x00000100
104	0x00800000	120	0x00000080
105	0x00400000	121	0x00000040
106	0x00200000	122	0x00000020
107	0x00100000	123	0x00000010
108	0x00080000	124	0x00000008
109	0x00040000	125	0x00000004
110	0x00020000	126	0x00000002
111	0x00010000	127	0x00000001

When more than one option is set, a logical sum of their values is output. For example, if 0x200C0000 is output to Option[0:31], it means the host mode options [2], [12], and [13] are set.

[PROV] Edit Host Grps(Name)

Example

```
RMI AP,Task Name,[PROV],Edit Host Grps(Name),,Normal end,
Seq.=xxxxxxxxxx
+{Port,HostGrpID,HostGrpName}
```

```
=[{XX,0xXXX,XXXXXXXXXXXXXXXX},{XX,0xXXX,XXXXXXXXXXXXXXXX}],
Num. of Host Groups=2
```

Detailed Information

Item	Description
Port	The name of the port to which the host group belongs
HostGrpID	The host group number where the host group names have been changed
HostGrpName	The name of the host group. If the name is changed, the name after change is indicated
Num. of Host Groups	The number of host groups where the settings have been changed

[PROV] Edit LDEVs(tier)

Example

```
RMI AP,Task Name,[PROV],Edit LDEVs(tier),,Normal end,
Seq.=xxxxxxxxxx
+{Pool ID,LDKC:CU:LDEV,Tier Relocation}
=[{1,0x00:0x01:0x0F,Disable}],Num. of LDEVs = 1
```

Detailed Information

Item	Description
Pool ID	The pool number of the edited LDEV
LDKC:CU:LDEV	The LDKC number, CU number and the LDEV number of the edited volume
Tier Relocation	Indicates whether the tier relocation is enabled or disabled. Enable: Enabled, Disable: Disabled
Num. of LDEVs	The number of edited LDEVs

[PROV] Edit LDEV Tier Rank

Example

```
RMI AP,Task Name,[PROV],Edit LDEV Tier Rank,,Normal end,
Seq.=xxxxxxxxxx
+{Pool ID,Pool Result}=[{1,Normal end}],Num. of Pools=1
++{LDKC:CU:LDEV,External LDEV Tier Rank,LDEV Result}
=[{0x00:0x00:0x00,Middle/Internal,Normal end},
{0x00:0x00:0x01,Middle/Internal,Normal end},
{0x00:0x00:0x02,Middle/Internal,Normal end}],Num. of LDEVs=3
```

Detailed Information

Item	Description
Pool ID	The number of the pool where the edited pool volumes are assigned
Pool Result	The result of editing pool volumes per pool Normal end: Normal end Error(*xxxx-yyyyy*): Abnormal end Not Execute: Not executed where *xxxx*: Part code, *yyyyy*: Error code
Num. of Pools	The number of pools whose pool volumes are edited
LDKC:CU:LDEV	The LDKC, CU, and LDEV numbers of the edited pool volume
External LDEV Tier Rank	The external LDEV tier rank of the edited pool volume High: An external volume (High) Middle/Internal: An external volume (Middle) or an internal volume Low: An external volume (Low)
LDEV Result	The result of editing pool volumes per pool volume Normal end: Normal end Error(*xxxx-yyyyy*): Abnormal end Not Execute: Not executed where *xxxx*: Part code, *yyyyy*: Error code
Num. of LDEVs	The number of edited pool volumes

[PROV] Edit MP Units

Example

```
RMI AP,Task Name,[PROV],Edit MP Units,,Normal end,
Seq.=xxxxxxxxxx
+{DKC,MP Unit ID,Auto Assignment,Result}
=[{0,00,Enable,Normal end}],Num. of MP Units=1
```

Detailed Information

Item	Description
DKC	The DKC number
MP Unit ID	The MP Unit number in the DKC module
Auto Assignment	Indicates whether the auto assignment setting is enabled or disabled. Enable or Disable will appear
Result	The result of operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *where xxxx*: Part code, *yyyyy*: Error code

Item	Description
Num. of MP Units	The number of specified MP Units

[PROV] Edit Ports(Address)

Example

```
RMI AP,Task Name,[PROV],Edit Ports(Address),,Normal end,
Seq.=xxxxxxxxxx
+{Port,Fibre Addr.}=[{XX,1},{XX,126}],Num. of Ports=2
```

Detailed Information

Item	Description
Port	The name of the port that the address has been changed
Fibre Addr.	The address of Fibre Channel port after change using the number from 1 to 126. See the following table for relation of number and Fibre Channel port address.
Num. of Ports	The number of ports where address has been changed

Table 12-5 Addresses of Fibre Channel Port

Value	Address*	Value	Address*	Value	Address*	Value	Address*
1	EF (0)	33	B2 (32)	65	72 (64)	97	3A (96)
2	E8 (1)	34	B1 (33)	66	71 (65)	98	39 (97)
3	E4 (2)	35	AE (34)	67	6E (66)	99	36 (98)
4	E2 (3)	36	AD (35)	68	6D (67)	100	35 (99)
5	E1 (4)	37	AC (36)	69	6C (68)	101	34 (100)
6	E0 (5)	38	AB (37)	70	6B (69)	102	33 (101)
7	DC (6)	39	AA (38)	71	6A (70)	103	32 (102)
8	DA (7)	40	A9 (39)	72	69 (71)	104	31 (103)
9	D9 (8)	41	A7 (40)	73	67 (72)	105	2E (104)
10	D6 (9)	42	A6 (41)	74	66 (73)	106	2D (105)
11	D5 (10)	43	A5 (42)	75	65 (74)	107	2C (106)
12	D4 (11)	44	A3 (43)	76	63 (75)	108	2B (107)
13	D3 (12)	45	9F (44)	77	5C (76)	109	2A (108)
14	D2 (13)	46	9E (45)	78	5A (77)	110	29 (109)
15	D1 (14)	47	9D (46)	79	59 (78)	111	27 (110)
16	CE (15)	48	9B (47)	80	56 (79)	112	26 (111)
17	CD (16)	49	98 (48)	81	55 (80)	113	25 (112)

Value	Address*	Value	Address*	Value	Address*	Value	Address*
18	CC (17)	50	97 (49)	82	54 (81)	114	23 (113)
19	CB (18)	51	90 (50)	83	53 (82)	115	1F (114)
20	CA (19)	52	8F (51)	84	52 (83)	116	1E (115)
21	C9 (20)	53	88 (52)	85	51 (84)	117	1D (116)
22	C7 (21)	54	84 (53)	86	4E (85)	118	1B (117)
23	C6 (22)	55	82 (54)	87	4D (86)	119	18 (118)
24	C5 (23)	56	81 (55)	88	4C (87)	120	17 (119)
25	C3 (24)	57	80 (56)	89	4B (88)	121	10 (120)
26	BC (25)	58	7C (57)	90	4A (89)	122	0F (121)
27	BA (26)	59	7A (58)	91	49 (90)	123	08 (122)
28	B9 (27)	60	79 (59)	92	47 (91)	124	04 (123)
29	B6 (28)	61	76 (60)	93	46 (92)	125	02 (124)
30	B5 (29)	62	75 (61)	94	45 (93)	126	01 (125)
31	B4 (30)	63	74 (62)	95	43 (94)	-	-
32	B3 (31)	64	73 (63)	96	3C (95)	-	-
*Addresses outside parentheses indicate arbitrated-loop physical address (AL-PA). Addresses in parentheses indicate loop IDs.							

[PROV] Edit Ports(Security)

Example

```
RMI AP,Task Name,[PROV],Edit Ports(Security),,Normal end,
Seq.=xxxxxxxxxx
+{Port,Switch}=[{XX,Disable},{XX,Enable}],Num. of Ports=2
```

Detailed Information

Item	Description
Port	The name of the port where the LUN security setting is changed
Switch	Indicates whether the LUN security setting is enabled or disabled. Disable or Enable is output
Num. of Ports	The number of ports where the LUN security setting is changed

[PROV] Edit Ports(Speed)

Example

```
RMI AP,Task Name,[PROV],Edit Ports(Speed),,Normal end,
Seq.=xxxxxxxxxx
```

```
+{Port,Speed(Gbps)}=[{XX,1},{XX,2},{XX,Auto},{XX,4}],
Num. of Ports=4
```

Detailed Information

Item	Description
Port	The name of the port that the channel speed is set
Speed(Gbps)	The channel speed set 1: 1 Gbps, 2: 2 Gbps, 4: 4 Gbps, 8: 8 Gbps, Auto: Auto mode
Num. of Ports	The number of ports where the channel speed is set

[PROV] Edit Ports(Topology)

Example

```
RMI AP,Task Name,[PROV],Edit Ports(Topology),,Normal end,
Seq.=xxxxxxxxxx
+{Port,Fabric,Connection}=[{XX,Enable,FC-AL},{XX,Disable,FC-AL},
{XX,Enable,P-to-P},{XX,Disable,P-to-P}],Num. of Ports=4
```

Detailed Information

Item	Description
Port	The name of the port where the topology of Fibre Channel is changed.
Fabric	Indicates whether the Fabric switch is enabled or disabled. Disable or Enable is output.
Connection	The connecting mode of the Fabric switch selected. FC-AL: FC-AL is selected, P-to-P: P-to-P is selected
Num. of Ports	The number of ports where the topology of Fibre Channel is changed

[PROV] Edit Resource Grp

Example

```
RMI AP,Task Name,[PROV],Edit Resource Grp,,Normal end,
Seq.=xxxxxxxxxx
+{VDKC-Box ID,Resource Group ID,Resource Group Name,Result}
=[{0,1,RSG1,Normal end}],Num. of Resource Groups=1
```

Detailed Information

Item	Description
VDKC-Box ID	The number of the VDKC-Box to which the configured resource group belongs

Item	Description
Resource Group ID	The number of the configured resource group
Resource Group Name	The contents of the setting for the changed resource group name
Result	The result of operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *where xxxx*: Part code, *yyyyy*: Error code
Num. of Resource Groups	The number of resource groups that operated the setting

[PROV] Edit Tiering Policy

Example

```
RMI AP,Task Name,[PROV],Edit Tiering Policy,,Normal end,
Seq.=xxxxxxxxxx
+{Tiering Policy ID,Tiering Policy Name,Tier1 Max(%),
Tier1 Min(%),Tier3 Max(%),Tier3 Min(%),Result}
=[{6,SamplePolicy,90,10,90,10,Normal end}],Num. of Policies=1
```

Detailed Information

Item	Description
Tiering Policy ID	The tiering policy ID
Tiering Policy Name	The tiering policy name This is output when a tiering policy name is set.
Tier1 Max(%)	The upper limit threshold value for the Tier1 The threshold value is displayed in the range 0 to 100. The unit is percent (%). This is output when an upper limit threshold value for the Tier1 is set.
Tier1 Min(%)	The lower limit threshold value for the Tier1 The threshold value is displayed in the range 0 to 100. The unit is percent (%). This is output when a lower limit threshold value for the Tier1 is set.
Tier3 Max(%)	The upper limit threshold value for the Tier3 The threshold value is displayed in the range 0 to 100. The unit is percent (%). This is output when an upper limit threshold value for the Tier3 is set.
Tier3 Min(%)	The lower limit threshold value for the Tier3 The threshold value is displayed in the range 0 to 100. The unit is percent (%).

Item	Description
	This is output when a lower limit threshold value for the Tier3 is set.
Result	The result of operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end, Not Execute: Not Executed *where xxxx*: Part code, *yyyyy*: Error code
Num. of Policies	The number of tiering policies that was set

[PROV] Edit V-VOL Option

Example

```
RMI AP,Task Name,[PROV],Edit V-VOL Option,,Normal end,
Seq.=xxxxxxxxxx
+{Pool ID,LDKC:CU:LDEV,Tiering Policy ID,
New Page Assignment Tier,Relocation Priority,Result}
=[{0,0x00:0x00:0x00,1,Middle,Default,Normal end}],
Num. of VOLs=1
```

Detailed Information

Item	Description
Pool ID	The pool ID of a pool associated with the V-VOL for Dynamic Provisioning to which Tiering policy is set
LDKC:CU:LDEV	The LDKC number, CU number, and LDEV number of the V-VOL for Dynamic Provisioning
Tiering Policy ID	The Tiering Policy ID This is output when the tiering policy is set.
New Page Assignment Tier	The new page assignment tier Middle: A middle performance tier, High: A high performance tier, Low: A low performance tier This is output when the new page assignment tier is set.
Relocation Priority	The relocation priority information Default: Normal, Prioritize: Prioritized This is output when the relocation priority information is set.
Result	The result of the operation. Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end, Not Execute: Not Executed *xxxx*: Part code, *yyyyy*: Error code
Num. of VOLs	The number of operated V-VOLs for Dynamic Provisioning

[PROV] Edit/Delete Pools

Example

```
RMI AP,Task Name,[PROV],Edit/Delete Pools,,Normal end,
Seq.=xxxxxxxxxx
+{Command,Pool ID,Pool Type,Multi Tier Pool,Tier Management,
Cycle Time,Monitoring Period,Monitoring Mode,Result}
=[{Change Tier,1,Dynamic Provisioning,Enable,Auto,24,
10:00-11:00,Continuous Mode,Normal End}],Num. of Pool=1
++{Tier,Buffer Space for New page assignment(%),
Buffer Space for Tier relocation(%),Tier Result}
=[{1,10,10,Normal end},{2,20,20,Normal end}],Num. of Tiers=2
```

Detailed Information

Item	Description
Command	The operation on the pool Change: Changing pool information about the threshold and the subscription limit Change Tier: Changing information about Dynamic Tiering Delete: Delete pool
Pool ID	The pool ID of the pool where the settings have been changed or the number of the pool that have been deleted
Pool Type	The pool type Dynamic Provisioning: Dynamic Provisioning, Thin Image: Thin Image
Multi Tier Pool	The setting status of the multi-tier mode and active flash function for the pool Enable(Active Flash): Both Dynamic Tiering and active flash are enabled. Enable: Dynamic Tiering is enabled and active flash is disabled. Disable: Both Dynamic Tiering and active flash are disabled. This item is output only when "Command" is "Change Tier". If Pool Type is Thin Image, a hyphen (-) is output.
Warning Threshold(%)	The warning threshold of the usage rate of the pool in percent (%). This item is output only when "Command" is "Change".
Depletion Threshold(%)	The depletion threshold of the usage rate of the pool in percent (%). If the depletion threshold is not specified, this percentage is not output. This item is output only when "Command" is "Change". If Pool Type is Thin Image, or if the depletion threshold is not specified, a hyphen (-) is output.
Subscription Limit(%)	The reserve amount of the pool where the setting was changed. The unit is percent (%). If the reserve amount is not specified, it outputs "Unlimited". This item is output only when "Command" is "Change".

Item	Description
	If Pool Type is Thin Image, a hyphen (-) is output.
Protect V-VOLs when I/O fails to Blocked Pool VOL	Indicates whether the setting of the protect access attribute on the virtual volume is enabled or disabled when the pool is blocked. Yes: Enabled, No: Disabled This item is output only when "Command" is "Change". If the pool type is not Dynamic Provisioning, a hyphen (-) is output.
Protect V-VOLs when I/O fails to Full Pool	Indicates whether the setting of the protect access attribute on the virtual volume is enabled or disabled when the pool is full. Yes: Enabled, No: Disabled This item is output only when "Command" is "Change". If the pool type is not Dynamic Provisioning, a hyphen (-) is output.
Tier Management	The auto control mode of the created or expanded pool. Auto: Auto, Manual: Manual This item is output only when "Command" is "Change Tier". If Multi Tier Pool is anything other than Enable, a hyphen (-) is output.
Cycle Time	The cycle of performance monitoring for the pool. 0.5: every thirty minutes, 1: every one hour, 2: every two hours, 4: every four hours, 8: every eight hours, 24: every twenty-four hours This item is output only when "Command" is "Change Tier". If Tier Management is anything other than Auto, a hyphen (-) is output.
Monitoring Period	The monitoring period of the pool. Format: "H1:M1-H2:M2" H1: The time when the monitoring starts (hour) M1: The time when the monitoring starts (minute) H2: The time when the monitoring ends (hour) M2: The time when the monitoring ends (minute). This item is output only when "Command" is "Change Tier". If Cycle Time is anything other than 24, a hyphen (-) is output.
Monitoring Mode	The monitoring mode Continuous Mode: Continuous mode, Period Mode: Period mode This item is output only when "Command" is "Change Tier". If Multi Tier Pool is anything other than Enable, a hyphen (-) is output.
Data Direct Mapping	Indicates the setting status of Data Direct Mapping Enable: Data Direct Mapping is enabled. Disable: Data Direct Mapping is disabled. This item is output only when "Command" is "Change".
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end, Not Execute: Not Executed *xxxx*: Part code, *yyyyy*: Error code

Item	Description
Num. of Pools	The number of pools where the settings have been changed or the number of pools that have been deleted
Tier	The tier number This item is output only when the "Command" is "Change Tier".
Buffer Space for New page assignment(%)	The capacity rate of buffer space for new page assignment The unit is percent (%) This item is output only when the "Command" is "Change Tier".
Buffer Space for Tier relocation(%)	The capacity rate of buffer space for Tier relocation The unit is percent (%) This item is output only when the "Command" is "Change Tier".
Tier Result	The result of Tier operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end, Not Execute: Not Executed where *xxxx*: Part code, *yyyyy*: Error code This item is output only when the "Command" is "Change Tier".
Num. of Tiers	The number of Tiers for the created pools This item is output only when the "Command" is "Change Tier".

[PROV] Edit/Delete UUIDs

Example

```
RMI AP,Task Name,[PROV],Edit/Delete UUIDs,,Normal end,
Seq.=xxxxxxxxxx
+{LDKC:CU:LDEV,UUID}
=[{0xXX:0xXX:0xXX,abcdefg},{0xXX:0xXX:0xXX,12345},
{0xXX:0xXX:0xXX,}],Num. of UUIDs=3
```

Detailed Information

Item	Description
LDKC:CU:LDEV	The LDKC number, CU number, and LDEV number
UUID	The configured UUID. There is no output if the UUID was deleted.
Num. of UUIDs	The number of UUIDs configured

[PROV] EditiScsiInitiatorUser

Example

```
RMI AP,,[PROV],EditiScsiInitiatorUser,,Normal end,Seq.=xxxxxxxxxx
+{iScsiPort[0]{
  Port=1A,
```

```
  iScsiInitiator{
    iScsiUser{
      UserId="CHAPUser"}},
  Result=Normal end}}
```

Detailed Information

Item	Description
iScsiPort[x]	The setting information of the port
Port	The port ID
iScsiInitiator	The iSCSI initiator information
iScsiUser	The authentication information
UserId	The CHAP user name "null" is output if this item is not set or changed.
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code

[PROV] EditiScsiName

Example

```
RMI AP,,[PROV],EditiScsiName,,Normal end,Seq.=xxxxxxxxxx
+{iScsiPort[0]{
  Port=1A,
  RemoteiScsiName[0]{
    Name="Name",ChangeName="ChangeName",Result=Normal end}}}
```

Detailed Information

Item	Description
iScsiPort[x]	The setting information of the port
Port	The port ID to be set
RemoteiScsiName[x]	The information of the iSCSI name of the host bus adapter
Name	The iSCSI name of the host bus adapter before change
ChangeName	The iSCSI name of the host bus adapter after change
Result	The result of the operation. Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code

[PROV] EditiScsiNickName

Example

```
RMI AP,,[PROV],EditiScsiNickName,,Normal end,Seq.=xxxxxxxxxx
+{iScsiPort[0]{
  Port=1A,
  RemoteiScsiName[0]{
    Name="iScsiName",NickName="NickName",Result=Normal end}}}
```

Detailed Information

Item			Description
iScsiPort[x]			The setting information of the port
	Port		The port ID to be set
	RemoteiScsiName[x]		The information of the iSCSI name of the host bus adapter
		Name	The iSCSI name of the host bus adapter
		NickName	The host name (nick name) after change
		Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code

[PROV] EditiScsiTarget

Example

```
RMI AP,,[PROV],EditiScsiTarget,,Normal end,Seq.=xxxxxxxxxx
+{iScsiPort[0]{
  Port=1A,
  iScsiTarget[0]{
    Id=0,Name="Name",Alias="Alias",UserAuthSwitch=Enable,
    AuthMode=Unidirectional,Result=Normal end}}}
```

Detailed Information

Item			Description
iScsiPort[x]			The setting information of the port
	Port		The port ID to be set
	iScsiTarget[x]		The iSCSI target information
		Id	The iSCSI target ID
		Name	The iSCSI target name*
		Alias	The iSCSI target alias*
		UserAuthSwitch	The setting status of the CHAP user authentication*

Item	Description
	Enable: Enabled, Disable: Disabled, UseHostSetting: Using host settings
AuthMode	The authentication mode* Unidirectional: One-way, Mutual: Two-way
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code
* "null" is output if this item is not set or changed.	

[PROV] EditiSNS

Example

```
RMI AP,,[PROV],EditiSNS,,Normal end,Seq.=xxxxxxxxxx
+{iScsiPort[0]{
  Port=1A,
  iSnsServer{
    Enabled=true,IpType=IPv4,IPv4Address=192.168.10.2,
    IPv6Address=null,TcpPortNumber=3205},
  Result=Normal end}}
```

Detailed Information

Item	Description
iScsiPort[x]	The setting information of the port
Port	The port ID to be set
iSnsServer	The iSNS server information
Enabled	Indicates whether the iSNS server is used. true: iSNS server is used. false: iSNS server is not used.
IpType	The IP type (IPv4 or IPv6) of the iSNS server*
IPv4Address	The IPv4 address of the iSNS server*
IPv6Address	The IPv6 address of the iSNS server*
TcpPortNumber	The TCP port number*
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code
* "null" is output if this item is not set or changed.	

[PROV] EditPortInfo

Example

```
RMI AP,,[PROV],EditPortInfo,,Normal end,Seq.=xxxxxxxxxx
+{iScsiPort[0]{
  Port=1A,
  IPv4{
    IpAddress=192.168.0.100,SubNetMask=255.255.255.0,
    DefaultGateway=0.0.0.0},
  IPv6{
    Available=true,
    LinkLocalAddress{
      AutoMode=true,ManualAddress=FE80:0:0:0:0:0:0:0},
    GlobalAddress{
      AutoMode=true,ManualAddress=0:0:0:0:0:0:0:0},
    GlobalAddress2{
      ManualAddress=0:0:0:0:0:0:0:0},
    DefaultGateway{
      AssignedAddress=0:0:0:0:0:0:0:0}},
  TcpPortNumber=3260,SelectiveAck=true,DelayedAck=true,
  TcpWindowSize(KB)=64,
  EthernetMtuSize{
    Mtu(byte)=1500},
  Vlan{
    AvailableTagging=true,RemovalId=1,AdditionId=2},
  KeepAliveTimer(second)=60,Result=Normal end}}
```

Detailed Information

Item	Description
iScsiPort[x]	The setting information of the port
Port	The port ID to be set
IPv4	The setting information of IPv4
IpAddress	The IP address of IPv4*
SubNetMask	The subnet mask of IPv4*
DefaultGateway	The IP address of the default gateway of IPv4*
IPv6	The setting information of IPv6
Available	The setting status of IPv6 Mode* true: Enabled, false: Disabled
LinkLocalAddress	The setting information of the local link address of IPv6
AutoMode	The setting status of the local link address of IPv6* true: Automatic, false: Manual
ManualAddress	The local link address set manually*
GlobalAddress	The setting information of the global address and the global address 2 of IPv6

Item	Description
AutoMode	The setting status of the global address and the global address 2 of IPv6* true: Automatic, false: Manual
ManualAddress	The global address set manually*
GlobalAddress2	The setting information of the global address 2 of IPv6
ManualAddress	The global address 2 set manually*
DefaultGateway	The setting information of the default gateway of IPv6
AssignedAddress	The address of the default gateway of IPv6*
TcpPortNumber	The TCP port number*
SelectiveAck	The setting status of the selective ACK* true: Enabled, false: Disabled
DelayedAck	The setting status of the delayed ACK* true: Enabled, false: Disabled
TcpWindowSize(KB)	The window size of TCP*
EthernetMtuSize	The information of the Ethernet MTU (Maximum Transmission Unit)
Mtu(byte)	The size of the Ethernet MTU*
Vlan	The information of the VLAN
AvailableTagging	The setting status of the VLAN tagging mode* true: Enabled, false: Disabled
RemovalId	The removed VLAN ID*
AdditionId	The added VLAN ID*
KeepAliveTimer(second)	The setting value of the Keep Alive timer*
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code
* "null" is output if this item is not set or changed.	

[PROV] EditRemoteChapUser

Example

```
RMI AP,,[PROV],EditRemoteChapUser,,Normal end,Seq.=xxxxxxxxxx
+{iScsiPort[0]{
  Port=1A,
  RemoteiScsiUser[0]{
    ChapUserId="ChapUserId",ChangeChapUserId="ChangeChapUserId",
    Result=Normal end}}}
```

Detailed Information

Item			Description
iScsiPort[x]			The setting information of the port
	Port		The port ID to be set
	RemoteiScsiUser[x]		The user information of the CHAP authentication
		ChapUserId	The user ID of the CHAP authentication before change
		ChangeChapUserId	The user ID of the CHAP authentication after change "null" is output if this item is not set or changed.
		Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code

[PROV] EditRemoteTargetUser

Example

```
RMI AP,,[PROV],EditRemoteTargetUser,,Normal end,Seq.=xxxxxxxxxx
+{ConnectionTest=true,
iScsiPath[0]{
  iScsiPort{
    Port=1A},
  RemoteiScsiPort{
    IpType=IPv4,Ipv4Address=192.168.0.101,
    Ipv6Address=0:0:0:0:0:0:0:0,TcpPortNumber=3260,
    RemoteiScsiTarget{
      Name="iqn.1994-04.jp.co.hitachi.h8m.t.00001.3a000",
      iScsiUser{
        AuthSwitch=None,AuthMode=Unidirectional,UserId="CHAPUser"}}},
  Result=Normal end}}
```

Detailed Information

Item	Description
ConnectionTest	Indicates whether to perform the connection test after editing iSCSI paths true: Test is performed.

Item	Description
	false: Test is not performed.
iScsiPath[x]	The path information between the iSCSI port on the local storage system and the iSCSI target on the remote storage system
iScsiPort	The information of the iSCSI port on the local storage system
Port	The Port ID
RemoteiScsiPort	The information of the iSCSI port on the remote storage system
IpType	The type of the IP address IPv4: IPv4 address, IPv6: IPv6 address
IPv4Address	The IPv4 address*
IPv6Address	The IPv6 address*
TcpPortNumber	The TCP port number
RemoteiScsiTarget	The iSCSI target information
Name	The iSCSI name
iScsiUser	The authentication information
AuthSwitch	Indicates whether the CHAP authentication method is enabled or disabled* None: CHAP is disabled. CHAP: CHAP is enabled.
AuthMode	Indicates the CHAP authentication mode* Unidirectional: CHAP is one-way. Mutual: CHAP is two-way.
UserId	The CHAP user name*
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code
* "null" is output if this item is not set or changed.	

[PROV] EditT10piMode

Example

```
RMI AP,Task Name,[PROV],EditT10piMode,,Normal end,Seq.=xxxxxxxxxx
+{Port[0]{
  Port=1A,T10pi=true,Result=Normal end}}
```

Detailed Information

Item		Description
Port[x]		The setting information of the T10 PI mode on the port
	Port	The ID of a port representing ports that share the T10 PI mode
	T10pi	The setting status of the T10 PI mode true: Enabled, false: Disabled "null" is output if this item is not set or changed.
	Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code

[PROV] EditTargetChapUser

Example

```
RMI AP,,[PROV],EditTargetChapUser,,Normal end,Seq.=xxxxxxxxxx
+{iScsiPort[0]{
  Port=1A,
  iScsiTarget[0]{
    Id=0,ChapUserId="ChapUserId",Result=Normal end}}}
```

Detailed Information

Item			Description
iScsiPort[x]			The setting information of the port
	Port		The port ID to be set
	iScsiTarget[x]		The iSCSI target information
		Id	The iSCSI target ID
		ChapUserId	The user ID of the CHAP authentication
		Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code

[PROV] ExecBindingOperation

Example

```
RMI AP,,[PROV],ExecBindingOperation,,Normal end,
Seq.=xxxxxxxxxx
+{BindingOperations[0]{
  Operation=Bind,Port=1A,HostGroup=0,Lun=0,
  Alu{
    Id="60-06-0E-81-30-00-32-30-00-32-00-00-00-00-00-01",
    Ldev{
      Id=0x00:0x00:0x01}},
```

```
Slu{
  Id="60-06-0E-81-30-00-32-30-00-32-00-00-00-00-00-02",
  Ldev{
    Id=0x00:0x00:0x02},
  SecondaryId="E2-00-00-00-02-00"},
Result=Normal end}}
```

Detailed Information

Item	Description
BindingOperations[x]	The setting information when an LDEV with the SLU attribute is bound to the LDEV with the ALU attribute or when an LDEV with the SLU attribute is unbounded from the LDEV with the ALU attribute Binding can be operated from hosts associated with vSphere. Unbinding can be operated from hosts associated with vSphere or Device Manager - Storage Navigator.
Operation	Type of operations Bind: Bind mode, Unbind: Unbind mode
Port	The port number of the LUN path set to the LDEV with the ALU attribute
HostGroup	The host group number of the LUN path set to the LDEV with the ALU attribute
Lun	The LUN ID of the LUN path set to the LDEV with the ALU attribute
Alu	The setting information of the LDEV with the ALU attribute
Id	The ALU ID
Ldev	The setting information of the LDEV
Id	The LDEV ID
Slu	The setting information of the LDEV with the SLU attribute
Id	The SLU ID
Ldev	The setting information of the LDEV
Id	The LDEV ID
SecondaryId	The secondary ID
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end, Not Execute: Not Executed *xxxx*: Part code, *yyyyy*: Error code

[PROV] Expand V-VOLs

Example

```
RMI AP,Task Name,[PROV],Expand V-VOLs,,Normal end,
Seq.=xxxxxxxxxx
+{LDKC:CU:LDEV,Pool ID,Capacity}
```

```
=[{0x00:0x00:0x00,0,80},{0x00:0x00:0x01,1,90},
{0x00:0x00:0x02,2,100}],Num. of VOLs = 3
```

Detailed Information

Item	Description
LDKC:CU:LDEV	The LDKC number, the CU number, and the LDEV number of the V-VOL
Pool ID	The pool ID of the pool corresponding to the expanded V-VOL
Capacity	The capacity of the V-VOL after expanding in LBAs
Num. of VOLs	The number of expanded V-VOLs

[PROV] ExpandSlus

Example

```
RMI AP,,[PROV],ExpandSlus,,Normal end,Seq.=xxxxxxxxxx
+{Slus[0]{
  Id="60-06-0E-81-30-76-D9-30-76-D9-00-00-00-00-15-01",PoolId=2,
  Capacity=96158,Result=Normal end,LdevId=0x00:0x15:0x01}}
```

Detailed Information

Item		Description
Slus[x]		The setting information of the LDEV with the SLU attribute whose capacity is increased
	Id	The SLU ID
	PoolId	The number of an associated pool
	Capacity	The capacity after it is increased
	Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end, Not Execute: Not Executed *xxxx*: Part code, *yyyyy*: Error code
	LdevId	The LDEV ID

[PROV] Format LDEVs

The logged information indicates that the Format operation was only requested but not completed.

Example

```
RMI AP,Task Name,[PROV],Format LDEVs,,Normal end,
Seq.=xxxxxxxxxx
+LDKC:CU:LDEV=[0x00:0x00:0x01,0x00:0x00:0x02,0x00:0x00:0x03,
0x00:0x00:0x04,0x00:0x00:0x05,0x00:0x00:0x06,0x00:0x00:0x07,
```

```
0x00:0x00:0x08,0x00:0x00:0x09,0x00:0x00:0x0A],
Num. of LDEVs=10
```

Detailed Information

Item	Description
LDKC:CU:LDEV	The LDKC number, the CU number, and the LDEV number
Num. of LDEVs	The number of LDEVs to be formatted.

[PROV] Format LDEVs(Q)

The logged information indicates that the Quick Format operation was only requested but not completed.

Example

```
RMI AP,Task Name,[PROV],Format LDEVs(Q),,Normal end,
Seq.=xxxxxxxxxx
+LDKC:CU:LDEV=[0x00:0x00:0x01,0x00:0x00:0x02,
0x00:0x00:0x03,0x00:0x00:0x04,0x00:0x00:0x05,
0x00:0x00:0x06,0x00:0x00:0x07,0x00:0x00:0x08,
0x00:0x00:0x09,0x00:0x00:0x0A],Num. of LDEVs=10
```

Detailed Information

Item	Description
LDKC:CU:LDEV	The LDKC number, the CU number, and the LDEV number
Num. of LDEVs	The number of LDEVs to be formatted

[PROV] Initialize Pools

Example

```
RMI AP,Task Name,[PROV],Initialize Pools,,Normal end,
Seq.=xxxxxxxxxx
```

[PROV] LDEV Name

Example

```
RMI AP,Task Name,[PROV],LDEV Name,,Normal end,
Seq.=xxxxxxxxxx
+{LDKC:CU:LDEV,Name,Result}
=[{0x00:0x00:0x00,nickname_0000,Normal end},
{0x00:0x80:0xFF,$%0x0080,Normal end}],Num. of LDEVs=2
```

Detailed Information

Item	Description
LDKC:CU:LDEV	The LDKC number, the CU number, and the LDEV number
Name	The character string of a LDEV nickname
Result	The result of operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end, Not Execute: Not Executed *where xxxx*: Part code, *yyyyy*: Error code
Num. of LDEVs	The number of specified LDEVs

[PROV] LdevForceRestore

Example

```
RMI AP,,[PROV],LdevForceRestore,,Normal end,Seq.=xxxxxxxxxx
+{LogicalDevice[0]{
  ID=0x00:0x00:0x00}}
```

Detailed Information

Item		Description
LogicalDevice[x]		The information of the LDEV that is forcibly restored
	ID	The ID of the LDEV

[PROV] MapSecondaryVolumeWithSlu

Example

```
RMI AP,,[PROV],MapSecondaryVolumeWithSlu,,Normal end,
Seq.=xxxxxxxxxx
+{TiPairs[0]{
  SnapshotSlu{
    Id="60-06-0E-81-30-00-32-30-00-32-00-00-80-00-00-00"},
  SecondaryVolume{
    Ldev{
      Id=0x00:0x00:0x06}},
  Result=Normal end}}
```

Detailed Information

Item		Description
TiPairs[x]		The setting information of Thin Image pairs whose secondary volume is mapped
	SnapshotSlu	The SLU information

Item	Description
Id	The SLU ID
SecondaryVolume	The information of the secondary volume
Ldev	The LDEV information
Id	The LDEV ID
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end, *xxxx*: Part code, *yyyyy*: Error code

[PROV] Monitor Pools

This log information does not indicate the completion of performance monitoring processing of pools but the completion of performance monitoring operation of pools.

Example

```
RMI AP,,[PROV],Monitor Pools,,Normal end,Seq.=xxxxxxxxxx
+{Pool ID,Result}=[{1,Normal end}],Num. of Pools = 1
```

Detailed Information

Item	Description
Pool ID	The pool ID of a pool where the performance monitoring started
Result	The result of starting the performance monitoring of pools Normal end: Normal end, Error(*xxxx-yyyyy*):Abnormal end, Not Execute: Not executed *where xxxx*: Part code, *yyyyy*: Error code
Num. of Pools	The number of pools where the performance monitoring started

[PROV] Move Resources

Example

```
RMI AP,Task Name,[PROV],Move Resources,,Normal end,
Seq.=xxxxxxxxxx
+{Resource Group ID(From),Resource Group ID(To),Result}
={1,0,Normal end}
++{LDKC:CU:LDEV,LDEVResult}=[{0x00:0x00:0x00,Normal end},
{0x00:0x00:0x01,Normal end}],Num. of LDEVs=2
++{PG,PGResult}=[{E1-1,Normal end},{E1-2,Normal end}],
Num. of PGs=2
++{Port,PortResult}=[{1A,Normal end},{2A,Normal end}],
Num. of Ports=2
```

```
++{Port(HostGrp),HostGrpID,HostGrpResult}
=[{1A,0x01,Normal end},{1A,0x02,Normal end}],Num. of Host Groups=2
+Num. of Resource Groups=1
```

Detailed Information

Item	Description
Resource Group ID(From)	The source resource group ID to which the resource belongs
Resource Group ID(To)	The target resource group ID
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end, *xxxx*: Part code, *yyyyy*: Error code
LDKC:CU:LDEV	The logical DKC, CU, and LDEV numbers of the moved LDEV.
LDEVResult	The result of the LDEV Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end, *xxxx*: Part code, *yyyyy*: Error code
Num. of LDEVs	The number of moved LDEVs
PG	The number of a moved parity group E1-1: In the case of an external volume V1-1: In the case of a virtual volume X1-1: In the case of a Dynamic Provisioning volume
PGResult	The result of the parity group Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end, *where xxxx*: Part code, *yyyyy*: Error code
Num. of PGs	The number of moved parity groups
Port	The name of a moved port
PortResult	The result of the port Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end, *where xxxx*: Part code, *yyyyy*: Error code
Num. of Ports	The number of moved ports
Port(HostGrp)	The port name of a moved host group
HostGrpID	The host group ID of the moved host group
HostGrpResult	The result of the host group Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end, *where xxxx*: Part code, *yyyyy*: Error code
Num. of Host Groups	The number of moved host groups

Item	Description
Num. of Resource Groups	The number of resource groups that operated the setting

[PROV] OperateSiPairsWithSlu

Example

```
RMI AP,,[PROV],OperateSiPairsWithSlu,,Normal end,
Seq.=xxxxxxxxxx
+{OperationCode=PairCreate,
SiPairs[0]{
  PrimaryVolume{
    Slu{
      Id="60-06-0E-81-30-00-32-30-00-32-00-00-00-00-30-00"},
    Ldev{
      Id=0x00:0x30:0x00}},
  SecondaryVolume{
    Slu{
      Id="60-06-0E-81-30-00-32-30-00-32-00-00-00-00-30-01"},
    Ldev{
      Id=0x00:0x30:0x01}},
  MirrorUnit=2,
  Result=Normal end}}
```

Detailed Information

Item	Description
OperationCode	The ShadowImage pair operation PairCreate: Create pairs, PairDelete: Delete pairs, CreateAndQuickSplit: Create and split pairs, QuickResync: Resynchronize pairs
SiPairs[x]	The setting information of ShadowImage pairs
PrimaryVolume	The primary volume information
Slu	The SLU information
Id	The SLU ID
Ldev	The LDEV information
Id	The LDEV ID
SecondaryVolume	The secondary volume information
Slu	The SLU information
Id	The SLU ID
Ldev	The LDEV information
Id	The LDEV ID
MirrorUnit	The mirror unit number

Item		Description
	Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end, *xxxx*: Part code, *yyyyy*: Error code

[PROV] OperateTiPairsWithSlu

Example

```
RMI AP,,[PROV],OperateTiPairsWithSlu,,Normal end,
Seq.=xxxxxxxxxx
+{OperationCode=PairSplit,
TiPairs[0]{
  SnapshotSlu{
    Id="60-06-0E-81-30-00-32-30-00-32-00-00-80-00-00-00"},
  Result=Normal end}}
```

Detailed Information

Item			Description
OperationCode			The Thin Image pair operation PairSplit: Split pairs, PairDelete: Delete pairs, PairResync: Resynchronize pairs
TiPairs[x]			The setting information of Thin Image pairs
	SnapshotSlu		The SLU information of the secondary volume
		Id	The SLU ID
	Result		The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end, *xxxx*: Part code, *yyyyy*: Error code

[PROV] Pool Name

Example

```
RMI AP,Task Name,[PROV],Pool Name,,Normal end,
Seq.=xxxxxxxxxx
+{Pool ID,Name,Result}
=[{0,poolname_0000,Normal end},{127,,Normal end}],
Num. of Pools=2
```

Detailed Information

Item	Description
Pool ID	The pool group number
Name	The character string of a pool name
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*):Abnormal end, *where xxxx*: Part code, *yyyyy*: Error code
Num. of Pools	The number of specified pool groups

[PROV] Reclaim Zero Pages

This log information does not indicate the completion of zero pages reclaiming processing but the completion of zero pages reclaiming operation.

Example

```
RMI AP,Task Name,[PROV],Reclaim Zero Pages,,Normal end,
Seq.=xxxxxxxxxx
+{LDKC:CU:LDEV}
=[{0x00:0x00:0x00},{0x00:0x00:0x01},{0x00:0x00:0x02}],
Num. of VOLs = 3
```

Detailed Information

Item	Description
LDKC:CU:LDEV	The LDKC number, the CU number, and the LDEV number of the LDEV where zero pages are reclaimed
Num. of VOLs	The number of LDEVs where zero pages are reclaimed

[PROV] Release HostReserved

Example

```
RMI AP,Task Name,[PROV],Release HostReserved,,Normal end,
Seq.=xxxxxxxxxx
+{Port,HostGrpID,LUN,Result}=[{XXX,0xXXX,XXXX,Normal end},
{XXX,0xXXX,XXXX,Error(xxxx-yyyyy)}],Num. of LUNs=2
```

Detailed Information

Item	Description
Port	The name of the port to which the host group belongs
HostGrpID	The host group number

Item	Description
LUN	The LUN where Release HostReserved is forcefully executed
Result	The result of the operation: Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end, Not Execute: Not Executed *where xxxx*: Part code, *yyyyy*: Error code
Num. of LUNs	The number of LUNs for which Release HostReserved is forcefully executed

[PROV] Relocate Pool

This log information does not indicate the completion of Tier relocation processing of pools but the completion of Tier relocation operation of pools.

Example

```
RMI AP,,[PROV],Relocate Pool,,Normal end,Seq.=xxxxxxxxxx
+{Pool ID,Result}=[{1,Normal end}],Num. of Pools = 1
```

Detailed Information

Item	Description
Pool ID	The pool ID of a pool where the tier relocation was performed
Result	The result of relocating the tier of pools Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end, Not Execute: Not Executed *where xxxx*: Part code, *yyyyy*: Error code
Num. of Pools	The number of pools where the tier relocation was performed

[PROV] Remove Hosts

Example

```
RMI AP,Task Name,[PROV],Remove Hosts,,Normal end,
Seq.=xxxxxxxxxx
+{Port,HostGrpID,WWN}=[{XX,0xXXX,0xXXXXXXXXXXXXXXXX},
{XX,0xXXX,0xXXXXXXXXXXXXXXXX}],Num. of WWNs=2
```

Detailed Information

Item	Description
Port	The name of the port where the host deleted from host group was connected
HostGrpID	The host group number where the host is deleted
WWN	Indicates WWN of the host deleted from the host group
Num. of WWNs	The number of hosts (WWN) deleted from the host group

[PROV] Restore LDEVs

Example

```
RMI AP,Task Name,[PROV],Restore LDEVs,,Normal end,
Seq.=xxxxxxxxxx
+LDKC:CU:LDEV=[0x00:0x00:0x01,0x00:0x00:0x02,0x00:0x00:0x03,
0x00:0x00:0x04,0x00:0x00:0x05,0x00:0x00:0x06,0x00:0x00:0x07,
0x00:0x00:0x08,0x00:0x00:0x09,0x00:0x00:0x0A],
Num. of LDEVs=10
```

Detailed Information

Item	Description
LDKC:CU:LDEV	The LDKC number, the CU number, and the LDEV number
Num. of LDEVs	The number of LDEVs being restored

[PROV] Restore Pools

Example

```
RMI AP,Task Name,[PROV],Restore Pools,,Normal end,
Seq.=xxxxxxxxxx
+{Pool ID,Result}
=[{1,Normal end},{2,Normal end},{128,Normal end}],
Num. of Pools=3
```

Detailed Information

Item	Description
Pool ID	The restored pool ID
Result	The result of the operation: Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end, Not Execute: Not Executed *where xxxx*: Part code, *yyyyy*: Error code

Item	Description
Num. of Pools	The number of restored pools

[PROV] RevertTiPairsWithSlu

Example

```
RMI AP,,[PROV],RevertTiPairsWithSlu,,Normal end,
Seq.=xxxxxxxxxx
+{TiPairs[0]{
  PrimaryVolume{
    Slu{
      Id="60-06-0E-81-30-00-32-30-00-32-00-00-00-00-30-00"}},
  SnapshotSlu{
    Id="60-06-0E-81-30-00-32-30-00-32-00-00-80-00-00-00"},
  Result=Normal end}}
```

Detailed Information

Item			Description
TiPairs[x]			The volume information of the reverted Thin Image pairs
	PrimaryVolume		The setting information of the primary volume
		Slu	The SLU information
		Id	The SLU ID
	SnapshotSlu		The setting information of the secondary volume
		Id	The SLU ID
	Result		The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end, *xxxx*: Part code, *yyyyy*: Error code

[PROV] Set FCSP Host

Example

```
RMI AP,,[PROV],Set FCSP Host,,Normal end,
Seq.=xxxxxxxxxx
+{Port,HostGrpID,Kind,UserName,Change UserName}
=[{1E,0xXXX,Add,111111111111111,-},
{3E,0xXXX,Change,222222222222222,3333333333333333},
{5E,0xXXX,Delete,444444444444444,-}],Num. of Info=3
```

Detailed Information

Item	Description
Port	The name of the port that includes the host group where user name has been set
HostGrpID	The number of the host group where user name has been set
Kind	The setting status of the user name that is registered to the host group. Add: Add user name, Change: Change user name, Delete: Delete user name.
UserName	The user name added or deleted when Kind is Add or Delete The user name before change when Kind is Change
Change UserName	The user name after change when Kind is Change Indicates a dash (-) when Kind is Add or Delete
Num. of Info	The number of added, changed or deleted user names.

[PROV] Set FCSP Port Info

Example

```
RMI AP,,[PROV],Set FCSP Port Info,,Normal end,
Seq.=xxxxxxxxxx
+{Port,Auth_TOV,Reject Time,Reject Count}
=[{1E,45,3,3},{3E,60,1,10}],Num. of Ports=2
```

Detailed Information

Item	Description
Port	The name of the port where authentication parameter has been set
Auth_TOV	The time to execute authentication after the failure of port authentication. The unit is second.
Reject Time	The period of time to reject authentication when port authentication have failed. The unit is minute.
Reject Count	The number of authentication failures allowed before port authentication is rejected
Num. of Ports	The number of ports where authentication parameter has been set

[PROV] Set FCSP Port Switch

Example

```
RMI AP,,[PROV],Set FCSP Port Switch,,Normal end,
Seq.=xxxxxxxxxx
+{Port,Switch,DH Group,Auth,UserName}
=[{1E,Enable,0,bi-directional,1111111111111111},
```

```
{3E,Disable,0,unidirectional,2222222222222222}],
Num. of Ports=2
```

Detailed Information

Item	Description
Port	The name of the port where authentication parameter has been set
Switch	The setting status whether to execute authentication by port. Disable: Do not authenticate, Enable: Authenticate
DH Group	Not used (fixed to 0)
Auth	The setting status of authentication method: bi-directional: bi-directional authentication, unidirectional: unidirectional authentication
UserName	The user name of the port
Num. of Ports	The number of ports where authentication parameter has been set

[PROV] Set FCSP Target

Example

```
RMI AP,,[PROV],Set FCSP Target,,Normal end,
Seq.=xxxxxxxxxx
+{Port,HostGrpID,Switch,DH Group,UserName}
=[{1E,0xXXX,Enable,0,1111111111111111},
{3E,0xXXX,Disable,0,2222222222222222}],
Num. of Grps=2
```

Detailed Information

Item	Description
Port	The name of the port that includes the host group where authentication parameter has been set
HostGrpID	The number of the host group where authentication has been set
Switch	The setting status whether to execute authentication by host group. Disable: Do not authenticate, Enable: Authenticate
DH Group	Not used (fixed to 0)
UserName	The user name of the host group
Num. of Grps	The number of host groups where authentication parameter has been set

[PROV] Set PageTieringLevel

Example

```
RMI AP,,[PROV],Set PageTieringLevel,,Normal end,
Seq.=xxxxxxxxxx
+{LDKC:CU:LDEV,Result}=[{0x00:0x00:0x00,Normal end}]
++{Start Page,Page Length,Page Tiering Level,Page Range Result}
=[{10,5, Level1,Normal end},{100,10, Level1,Normal end}],
Num. of Page Ranges=2
+Num. of VOLs=1
```

Detailed Information

Item	Description
LDKC:CU:LDEV	The LDKC, CU, and LDEV numbers of the volume where the tiering policy is set
Result	The result of setting the tiering policy to the volume Normal end: Normal end Warning(xxxx-yyyyy): End with warning Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Start Page	The beginning page number of page ranges
Page Length	The length of page ranges
Page Tiering Level	The level of the tiering policy that is set to the page ranges If you unset the tiering policy, a hyphen (-) is output.
Page Range Result	The result of setting the tiering policy in page ranges Normal end: Normal end Warning(xxxx-yyyyy): End with warning Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of Page Ranges	The specified number of page ranges
Num. of VOLs	The number of volumes where the tiering policy is set

[PROV] Set Virtual LDEV

Example

```
RMI AP,Task Name,[PROV],Set Virtual LDEV,,Normal end,Seq.=xxxxxxxxxx
+{Operation}={Set H-UVM ON}
++{LDKC:CU:LDEV,Virtual LDKC:CU:LDEV,Virtual Emulation,
Virtual SSID,Virtual LUSE,Virtual Attribute,Result}=
[{0x00:0x00:0x00,0x00:0x01:0x00,OPEN-V,0x0004,0,-,Normal end}],
Num. of LDEVs=1
```

Detailed Information

Item	Description
Operation	Indicates the performed operations Set H-UVM ON Set H-UVM OFF Set Virtual Ldev ID Delete Virtual Ldev ID Set Virtual Ldev Information Delete Virtual Ldev Information Set Virtual Ldev ID and Virtual Ldev Information Delete Virtual Ldev ID and Virtual Ldev Information Set Property Normal Set Property Migration Set Property Migration and Virtual Ldev ID and Virtual Ldev Information Set Property GAD S-Vol
LDKC:CU:LDEV	The LDEV ID of an LDEV that is mapped the virtual information
Virtual LDKC:CU:LDEV	The LDEV ID of the virtual LDEV
Virtual Emulation	The emulation type of the virtual LDEV
Virtual SSID	The SSID of the virtual LDEV
Virtual LUSE	The number of LUSE volumes of the virtual LDEV
Virtual Attribute	The attribute of the virtual LDEV CVS: CVS attribute, -: No attribute
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*):Abnormal end *where xxxx*: Part code, *yyyyy*: Error code
Num. of LDEVs	The number of LDEVs that is mapped the virtual information

[PROV] Shrink Pool

This log information does not indicate the completion of shrinking processing but the completion of shrinking operation.

Example

```
RMI AP,Task Name,[PROV],Shrink Pool,,Normal end,
Seq.=xxxxxxxxxx
+{Pool ID,Result}=[{1,Normal end},{2,Normal end}],
Num. of Pools = 2
++{LDKC:CU:LDEV,LDEV Result}
=[{0x00:0x00:0x02,Normal end},
{0x00:0x00:0x03,Normal end},{0x00:0x02:0x01,Normal end}],
Num. of LDEVs = 3
```

Detailed Information

Item	Description
Pool ID	The pool ID of a shrinking pool
Result	The result of the shrinking operation Normal end: Normal end Not Execute: Not executed Error(*xxxxx-xxxxxxx*): Abnormal end where *xxxxx-xxxxxxx* indicates error codes.
Num. of Pools	The number of shrinking pools
LDKC:CU:LDEV	The LDKC number, the CU number, and the LDEV number of the shrinking LDEV
LDEV Result	The result of shrinking individual LDEVs Normal end: Normal end Error(*xxxx-yyyyy*): Abnormal end Not Execute: Not executed where *xxxx*: Part Code, *yyyyy*: Error Code
Num. of LDEVs	The number of shrinking LDEVs

[PROV] StartParityGroupsFormat

StartParityGroupsFormat merely means that the operation of the parity group formatting has been performed, and does not necessarily means that the parity group formatting process is complete.

Example

```
RMI AP,,[PROV],StartParityGroupsFormat,,Normal end,Seq.=xxxxxxxxxx
+{ParityGroup[0]{
  ID=1-1}}
```

Detailed Information

Item		Description
ParityGroup[x]		The setting information of the parity group
	ID	The parity group ID

[PROV] StartVerify

StartVerify merely means that the operation for verification has been performed, and does not necessarily mean that the verification process is complete.

Example

```
RMI AP,,[PROV],StartVerify,,Normal end,Seq.=xxxxxxxxxx
+{AutoCorrectMode=true,ErrorStopCount=16,
LogicalDevice[0]{
  ID=0x00:0x00:0x00}}
```

Detailed Information

Item	Description
AutoCorrectMode	Indicates the setting status of the automatic correction mode (where errors detected by the verification are corrected automatically) true: Enabled, false: Disabled
ErrorStopCount	The setting value of the number of errors. The verification will be stopped when the number of detected errors reaches this value.
LogicalDevice[x]	The setting information of the LDEV
ID	The LDEV ID

[PROV] Stop Monitoring

Example

```
RMI AP,,[PROV],Stop Monitoring,,Normal end,
Seq.=xxxxxxxxxx
+{Pool ID,Result}=[{1,Normal end}],Num. of Pools = 1
```

Detailed Information

Item	Description
Pool ID	The pool ID of a pool where the performance monitoring stopped
Result	The result of stopping the tier relocating of pools Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end, Not Execute: Not Executed where *xxxx*:Part code, *yyyyy*: Error code
Num. of Pools	The number of pools where the performance monitoring stopped

[PROV] Stop Reclm ZeroPages

Example

```
RMI AP,Task Name,[PROV],Stop Reclm ZeroPages,,Normal end,
Seq.=xxxxxxxxxx
+{LDKC:CU:LDEV}
=[{0x00:0x00:0x00},{0x00:0x00:0x01},{0x00:0x00:0x02}],
Num. of VOLs = 3
```

Detailed Information

Item	Description
LDKC:CU:LDEV	The LDKC number, the CU number, and the LDEV number of the LDEV where reclaiming of zero pages is stopped
Num. of VOLs	The number of LDEVs where reclaiming of zero pages is stopped

[PROV] Stop Relocating

Example

```
RMI AP,,[PROV],Stop Relocating,,Normal end,
Seq.=xxxxxxxxxx
+{Pool ID,Result}=[{1,Normal end}],Num. of Pools=1
```

Detailed Information

Item	Description
Pool ID	The pool ID of a pool where the tier relocation was stopped
Result	The result of stop relocating the tier of pools Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end, Not Execute: Not executed where *xxxx*: Part code, *yyyyy*: Error code
Num. of Pools	The number of pools where the tier relocation was stopped

[PROV] Stop Shrinking Pool

Example

```
RMI AP,Task Name,[PROV],Stop Shrinking Pool,,Normal end,
Seq.=xxxxxxxxxx
+{Pool ID,Result}=[{1,Normal end},{2,Normal end}],
Num. of Pools = 2
```

Detailed Information

Item	Description
Pool ID	The pool ID of the pool where shrinking is stopped
Result	The result of the stopping shrinking operation Normal end: Normal end Not Execute: Not executed Error(*xxxxx-xxxxxxx*): Abnormal end where *xxxxx-xxxxxxx* indicates error codes.
Num. of Pools	The number of pools where shrinking is stopped

[PROV] StopFormat

Example

```
RMI AP,,[PROV],StopFormat,,Normal end,Seq.=xxxxxxxxxx
```

[PROV] StopVerify

Example

```
RMI AP,,[PROV],StopVerify,,Normal end,Seq.=xxxxxxxxxx
```

[PROV] UnmapSecondaryVolumeWithSlu

Example

```
RMI AP,,[PROV],UnmapSecondaryVolumeWithSlu,,Normal end,
Seq.=xxxxxxxxxx
+{TiPairs[0]{
  SnapshotSlu{
    Id="60-06-0E-81-30-00-32-30-00-32-00-00-80-00-00-00"},
  Result=Normal end,
  SecondaryVolume{
    Ldev{
      Id=0x00:0x00:0x06}}}}
```

Detailed Information

Item	Description
TiPairs[x]	The setting information of Thin Image pairs whose secondary volume is unmapped
SnapshotSlu	The SLU information of the secondary volume
Id	The SLU ID
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*):Abnormal end *where xxxx*: Part code, *yyyyy*: Error code
SecondaryVolume	The unmapped secondary volume information
Ldev	The LDEV information
Id	The LDEV ID

[PROV] UpdateAluaMode

Example

```
RMI AP,Task Name,[PROV],UpdateAluaMode,,Normal end,
Seq.=xxxxxxxxxx
```

```
+{Ldev[0]{
  Id=0x00:0x00:0x01,AluaMode=true,Result=Normal end}}
```

Detailed Information

Item		Description
Ldev[x]		The setting information of ALUA mode of the LDEV
	Id	The LDEV ID
	AluaMode	The setting status of ALUA mode true: Enabled, false: Disabled
	Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code

[PROV] UpdateAsymmetricAccessStatePerHG

Example

```
RMI AP,Task Name,[PROV],UpdateAsymmetricAccessStatePerHG,,
Normal end,Seq.=xxxxxxxxxx
+{AsymmetricAccessStateSettingOperation[0]{
  AsymmetricAccessState=ActiveOptimized,
  Port{
    Id=1A,
    HostGroup{
      Id=0}},
  Result=Normal end}}
```

Detailed Information

Item			Description
AsymmetricAccessStateSettingOperation[x]			The setting information of Asymmetric Access States
	AsymmetricAccessState		The setting status of Asymmetric Access States ActiveOptimized: Prioritized, ActiveNonOptimized: Non-prioritized
	Port		The setting information of the port
		Id	The port ID
		HostGroup	The setting information of the host group
		Id	The host group ID
	Result		The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code

[PROV] UpdateCopybackMode

Example

```
RMI AP,,[PROV],UpdateCopybackMode,,Normal end,Seq.=xxxxxxxxxx
+{ParityGroup[0]{
  ID=1-1,Copy-backMode=true,Result=Normal end}}
```

Detailed Information

Item		Description
ParityGroup[x]		The setting information of the parity group
	ID	The parity group ID
	Copy-backMode	The setting status of the copy-back mode true: Enabled, false: Disabled
	Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code

[PROV] UpdateParityGroupSettings

Example

```
RMI AP,,[PROV],UpdateParityGroupSettings,,Normal end,Seq.=xxxxxxxxxx
+{ParityGroup[0]{
  ID=1-1,Accelerated Compression=true,Result=Normal end}}
```

Detailed Information

Item		Description
ParityGroup[x]		The setting information of the parity group
	ID	The parity group ID
	Accelerated Compression	The setting status of the accelerated compression true: Enabled, false: Disabled
	Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code

[PROV] UpdateSpareDrives

Example

```
RMI AP,,[PROV],UpdateSpareDrives,,Normal end,Seq.=xxxxxxxxxx
+{Drive[0]{
  Location=HDD0-0,Spare=true,Result=Normal end}}
```

Detailed Information

Item		Description
Drive[x]		The information of the drive
	Location	The mounting position of the drive
	Spare	The assignment status of the spare drive true: Assigning as a spare drive, false: Releasing spare drive setting
	Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code

[PROV] UpdatePoolDeduplication

Example

```
RMI AP,,[PROV], UpdatePoolDeduplication,,Normal end,Seq.=xxxxxxxxxx
+{Deduplication=true,Pools[0]{Id=1,Result=Normal
end,ThinProvisioningVolumes[0]{Id=0x00:0x00:0x00}}}
```

Detailed Information

Item			Description
Deduplication			Indicates the setting status of the deduplication of the edited pool true: Enabled, false: Disabled
Pools[x]			The setting information of the deduplication of the edited pool
	Id		The pool ID of the associated pool
	Result		The result of operation Normal end: Normal end, Error(*xxxxx-xxxxxxx*): Abnormal end *where xxxx*: Part code, *yyyyy*: Error code
	ThinProvisioningVolumes[x]		The setting information of the deduplication system data volume
		Id	The ID of the deduplication system data volume

[PROV] UpdateDataSavingOptions

Example

```
RMI AP,,[PROV], VVOLupdateDataSavingOptions,,Normal
end,Seq.=xxxxxxxxxx
+{ThinProvisioningVolumes[0]{Id=0x00:0x00:0x00,Result=Normal
end,CapacitySaving=Compression }}
```

Detailed Information

Item		Description
ThinProvisioningVolumes[x]		The setting information of Capacity Saving of the edited Dynamic Provisioning volume
	Id	The ID of the Dynamic Provisioning volume
	Result	The result of operation Normal end: Normal end, Error(*xxxxx-xxxxxxx*): Abnormal end *where xxxx*: Part code, *yyyyy*: Error code
	CapacitySaving	The setting status of Capacity Saving Disabled: Capacity Saving is disabled, Compression: Compression is enabled, Deduplication and Compression: Deduplication and compression are enabled

Remote Maintenance Descriptions

[Remote Maintenance] PS Control

Example

```
RM AP,,[Remote Maintenance],PS Control,,Normal end,
Seq.=xxxxxxxxxx
+PS Control=OFF
```

Detailed Information

Item	Description
PS Control	Indicates whether it is PSON or PSOFF operation. ON: PSON operation, OFF: PSOFF operation.

[Remote Maintenance] Reboot MP

Example

```
RM AP,,[Remote maintenance],Reboot MP,,Normal end,
Seq.=xxxxxxxxxx
+MP=MP00-1MA
```

Detailed Information

Item	Description
MP	Indicates the name of MP to be rebooted

[Remote Maintenance] Reboot Port

Example

```
RM AP,,[Remote Maintenance],Reboot Port,,Normal end,
Seq.=xxxxxxxxxx
+PORT=1E
```

Detailed Information

Item	Description
Port	Indicates the port name to be rebooted

Remote Replication Descriptions

[Remote Replication] Add Path

Example

```
RMI AP,,[Remote Replication],Add Path,,Normal end,
Seq.=xxxxxxxxxx
+{S/N,MCU LDKC,RCU LDKC,Path Gr.ID,Controller ID,Result}
={411111,0x00,0x00,Default,18,Normal end}
++{MCU Port,RCU Port}
=[{1E,3E},{5E,7E},{1F,3F},{5F,7F},{1G,3G},{5G,7G},{1H,3H}],
Num. of Port Pairs=7
(Snip)
+{S/N,MCU LDKC,RCU LDKC,Path Gr.ID,Controller ID,Result}
={422222,0x00,0x00,Default,18,Normal end}
++{MCU Port,RCU Port}
=[{1E,3E},{5E,7E},{1F,3F},{5F,7F},{1G,3G},{5G,7G},{1H,3H}],
Num. of Port Pairs=7
+Num. of RCUs=xx
```

Detailed Information

Item	Description
S/N	The serial number of the RCU
MCU LDKC	The LDKC number of the connected LDKC
RCU LDKC	The LDKC number of the paired LDKC
Path Gr.ID	The path group ID. When the path group ID is default setting, "Default" is output.
Controller ID	The controller ID of the RCU 7: VSP G1000/G1500 and VSP F1500, 18: VSP Gx00, VSP Fx00, 19: HUS VM
Result	The result of the operation Normal end: Normal end,

Item	Description
	Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
MCU Port	The port number of MCU
RCU Port	The port number of RCU
Num. of Port Pairs	Number of pairs of the port to be operated
Num. of RCUs	The number of RCUs set

[Remote Replication] Add Quorum Disk ID

Example

```
RMI AP,,[Remote Replication],Add Quorum Disk ID,,Normal end,
Seq.=xxxxxxxxxx
+{Quorum Disk ID,Paired S/N,Controller ID,Quorum Disk(LDKC:CU:LDEV),
Result}=[{0x01,464024,18,0x00:0x01:0x01,Normal end},
{0x02,464024,18,0x00:0x02:0x02,Normal end},(Snip),
{0x7F,464024,18,0x00:0x03:0x03,Error(xxxx-yyyyy)}]
-,Num. of IDs=xx
```

Detailed Information

Item	Description
Quorum Disk ID	The added quorum disk ID used by global-active device
Paired S/N	The serial number of the remote storage system
Controller ID	The controller ID of the remote storage system 7: VSP G1000/G1500 and VSP F1500, 18: VSP Gx00, VSP Fx00, 19: HUS VM
Quorum Disk(LDKC:CU:LDEV)	The LDKC, CU, and LDEV numbers of the added quorum disk used by global-active device
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of IDs	The number of added quorum disk IDs used by global-active device

[Remote Replication] Add RCU

Example

```
RMI AP,,[Remote Replication],Add RCU,,Normal end,
Seq.=xxxxxxxxxx
+{S/N,MCU LDKC,RCU LDKC,Path Gr.ID,Controller ID,Min.Path,
MIH Time(s),Round Trip Time(ms),Result}
```

```
={422222,0x00,0x00,Default,18,08,015,001,Normal end}
++{MCU Port,RCU Port}
=[{1E,3E},{5E,7E},{1F,3F},{5F,7F},{1G,3G},{5G,7G},{1H,3H},
{5H,7H}],Num. of Port Pairs=8
(Snip)
+{S/N,MCU LDKC,RCU LDKC,Path Gr.ID,Controller ID,Min.Path,
MIH Time(s),Round Trip Time(ms),Result}
={411111,0x00,0x00,Default,18,08,015,001,Normal end}
++{MCU Port,RCU Port}
=[{1E,3E},{5E,7E},{1F,3F},{5F,7F},{1G,3G},{5G,7G},{1H,3H},
{5H,7H}],Num. of Port Pairs=8
+Num. of RCUs=xx
```

Detailed Information

Item	Description
S/N	The serial number of the registered RCU
MCU LDKC	The LDKC number of the connected LDKC
RCU LDKC	The LDKC number of the paired LDKC
Path Gr.ID	The path group ID of the registered RCU. When the path group ID is default setting, "Default" is output.
Controller ID	The controller ID of the registered RCU 7: VSP G1000/G1500 and VSP F1500, 18: VSP Gx00, VSP Fx00, 19: HUS VM
Min.Path	The number of set minimum paths
MIH Time(s)	The value of set RIO MIH (Remote I/O Missing Interrupt Handler) timer (wait time until data copy from MCU to RCU is complete). The unit is second.
Round Trip Time(ms)	The round-trip response time set (delay time for round-trip remote I/O). The unit is millisecond. This value is output when TrueCopy is used.
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
MCU Port	The port number of MCU
RCU Port	The port number of the registered RCU
Num. of Port Pairs	The number of port pairs set
Num. of RCUs	The number of RCUs set

[Remote Replication] Change JNL Option

Example

```
RMI AP,,[Remote Replication],Change JNL Option,,Normal end,
Seq.=xxxxxxxxxx
+Copy Type=UR
```

```
+{LDKC,JNL,Data Overflow Watch(s),Inflow Control,
Use of Cache,Result}
=[{0x00,0x001,20,Yes,Not Use,Normal end},
{0x00,0x002,20,No,Use,Normal end}],Num. of JNLs=2
```

Detailed Information

Item	Description
Copy Type	The program product name for this operation UR: Universal Replicator
LDKC	The LDKC number to which the journal belongs
JNL	The journal number
Data Overflow Watch(s)	The overflow watch time of the meta data or journal data (in seconds)
Inflow Control	The inflow control of the journal volume Yes: The flow of the updated I/O data to the journal volume is restricted No: The flow of the updated I/O data to the journal volume is not restricted
Use of Cache	Whether to store the journal data in the restore journal in cache. Use: Store the journal data in cache, Not Use: Store the journal data in journal volume
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of JNLs	The number of journals

[Remote Replication] Change Mirror Option

Example

```
RMI AP,,[Remote Replication],Change Mirror Option,,Normal end,
Seq.=xxxxxxxxxx
+Copy Type=UR
+{LDKC,JNL,MirrorID,Copy Pace,Path Watch Time,
Forward Path Watch Time,Transfer Speed(Mbps),
Delta resync Failure,Result}
=[{0x00,0x001,0x00,Medium,12(hour),Yes,100,Entire,Normal end},
{0x00,0x002,0x00,Low,1(day),No,10,None,Normal end}],
Num. of Mirrors=2
```

Detailed Information

Item	Description
Copy Type	The program product name for this operation

Item	Description
	UR: Universal Replicator
LDKC	The LDKC number to which the journal belongs
JNL	The journal number
MirrorID	The mirror ID
Copy Pace	The speed of initial copy Low: Low speed, Medium: Medium speed, High: High speed
Path Watch Times	Path block watch time (observation time from the path block till the mirror split <suspended>) The units are minutes, hours or days. If it is set to 30 minutes, it will be 30(min.).
Forward Path Watch Time	Indicates whether to transfer the path blockade watch period of the master journal to the restore journal. Yes: Transfer, No: Do Not Transfer
Transfer Speed(Mbps)	The transfer speed of the communication line. The unit is megabits per second (Mbps).
Delta resync Failure	Indicates the behavior when Delta resync operation has failed. Entire: Copy the entire data of the primary volume to the secondary volume. None: Do not copy the primary volume data to the secondary volume.
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of Mirrors	The number of mirrors

[Remote Replication] Change RCU Option

Example

```
RMI AP,,[Remote Replication],Change RCU Option,,Normal end,
Seq.=xxxxxxxxxx
+{S/N,MCU LDKC,RCU LDKC,Path Gr.ID,Controller ID,Min.Path,
MIH Time(s),Round Trip Time(ms),Result}
={422222,0x00,0x00,Default,18,08,015,001,Normal end}
(Snip)
+{S/N,MCU LDKC,RCU LDKC,Path Gr.ID,Controller ID,Min.Path,
MIH Time(s),Round Trip Time(ms),Result}
={411111,0x00,0x00,Default,18,08,015,001,Normal end}
+Num. of RCUs=xx
```

Detailed Information

Item	Description
S/N	The serial number of the RCU on which the RCU option is changed
MCU LDKC	The LDKC number of the connected LDKC
RCU LDKC	The LDKC number of the paired LDKC
Path Gr.ID	The path group ID of the RCU on which the RCU option is changed. When the path group ID is default setting, "Default" is output.
Controller ID	The controller ID of the RCU on which the RCU option is changed 7: VSP G1000/G1500 and VSP F1500, 18: VSP Gx00, VSP Fx00, 19: HUS VM
Min.Path	The number of minimum paths after the change
MIH Time(s)	The value of RIO MIH (Remote I/O Missing Interrupt Handler) timer after the change (wait time until data copy from MCU to RCU is complete). The unit is second.
Round Trip Time(ms)	The round-trip response time after the change (delay time for round-trip remote I/O). The unit is millisecond. This value is output when TrueCopy is used.
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of RCUs	The number of RCUs set

[Remote Replication] Create Pairs

Example 1: Copy type is TC

```
RMI AP,,[Remote Replication],Create Pairs,,Normal end,Seq.=xxxxxxxxxx
+Copy Type=TC,{P-VOL(Port-G-ID-LUN),S-VOL(Port-G-ID-LUN),
S/N,LDKC,ID,Controller ID,Type,Initial Copy,Fence Level,Copy Pace,
Priority,Result}
=[{1A-0x00-0,GR-0xFE-1023,411111,0x00,Default,18,
Sync,Entire,Never,15,032,Normal end},(Snip)-(Snip)],
Num. of Pairs=xx
```

Detailed Information 1

Item	Description
Copy Type	The program product name for this operation TC: TrueCopy
P-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the volume specified to the primary volume
S-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the volume specified to the secondary volume

Item	Description
S/N	The serial number of the RCU
LDKC	The LDKC number of the RCU
ID	The path group ID When the path group ID is default setting, "Default" is output.
Controller ID	The controller ID of the RCU 7: VSP G1000/G1500 and VSP F1500, 18: VSP Gx00, VSP Fx00, 19: HUS VM
Type	Type of the update copy operation Outputs Sync (synchronization mode) as a fixed parameter.
Initial Copy	Type of the pair creation operation Entire: Creates pairs and copies data from the primary volume to the secondary volume. None: Creates pairs but does not copy data from the primary volume to the secondary volume.
Fence Level	Configured fence level (conditions where the local storage system rejects write operations to the primary volume) Never: Can write to the primary volume even the pair is split. Data: Cannot write to the primary volume when update copying fails. Status: Cannot write to the primary volume, only when the storage system of the primary site cannot change the pair status of the secondary volume to PSUE.
Copy Pace	The initial copy speed setting (the number of tracks you can copy at one time)
Priority	The priority of the set initial copy operation (scheduling order).
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of Pairs	The number of create pairs

Example 2: when the copy type is UR

```
RMI AP,,[Remote Replication],Create Pairs,,Normal end,Seq.=xxxxxxxxxx
+Copy Type=UR
+{P-VOL(Port-G-ID-LUN),S-VOL(Port-G-ID-LUN),MirrorID,
S/N,CTRLID,Priority,CTG,Initial Copy,M-JNL,R-JNL,
Path Gr. ID,Error Level,Result}
=[{4C-0x00-0,4A-0x00-0,0x00,467676,18,32,0x000,Entire,
0x001,0x001,Default,Mirror,Normal end},
{4C-0x00-1,4A-0x00-1,0x00,467676,18,32,0x000,Entire,
0x001,0x001,Default,Mirror,Normal end}],Num. of Pairs=2
```

Detailed Information 2

Item	Description
Copy Type	The program product name for this operation UR: Universal Replicator
P-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the primary data volume
S-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the secondary data volume
MirrorID	The mirror ID
S/N	The serial number of the RCU
CTRLID	The controller ID of the RCU 7: VSP G1000/G1500 and VSP F1500, 18: VSP Gx00, VSP Fx00, 19: HUS VM
Priority	The priority of the set initial copy operation (scheduling order).
CTG	The consistency group ID
Initial Copy	Type of the pair creation operation Entire: Creates pairs and copies data from the primary volume to the secondary volume. None: Creates pairs but does not copy data from the primary volume to the secondary volume. Delta: Creates delta resynchronization pairs.
M-JNL	The master journal number
R-JNL	The restore journal number
Path Gr. ID	The path group ID specified for the storage system When the path group ID is default setting, "Default" is output.
Error Level	Range of the pair split at failure occurrence Mirror: When a pair fails, all the pairs are split that exist in the same mirror as the pair. LU: When a pair fails, only the pair is split.
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of Pairs	The number of created pairs

Example 3: when the copy type is GAD

```
RMI AP,,[Remote Replication],Create Pairs,,Normal end,Seq.=xxxxxxxxxx
+Copy Type=GAD,{P-VOL(Port-G-ID-LUN),S-VOL(Port-G-ID-LUN),
S/N_P,S/N_S,Path Gr.ID,Controller ID,SSID,Copy Pace,Quorum Disk ID,
MirrorID,CTG,Initial Copy,Result}=
[{1A-0x00-0,1C-0x02-3,411111,422222,0x00,18,0x0004,15,0x15, 0,
0x00,None,Normal end},(Snip)-(Snip)],Num. of Pairs=xx
```

Detailed Information 3

Item	Description
Copy Type	The program product name for this operation GAD: global-active device
P-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the primary volume
S-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the secondary volume
S/N_P	The serial number of the local storage system
S/N_S	The serial number of the remote storage system
Path Gr.ID	Path group ID used in a global-active device pair
Controller ID	The controller ID of the remote storage system 7: VSP G1000/G1500 and VSP F1500, 18: VSP Gx00, VSP Fx00, 19: HUS VM
SSID	The SSID
Copy Pace	The setting of the initial copy speed (the number of tracks that can be copied at a time)
Quorum Disk ID	The quorum disk ID used by global-active device
MirrorID	The mirror ID
CTG	The consistency group ID A hyphen (-) is displayed if the consistency group is not specified.
Initial Copy	Type of the pair creation operation Entire: Creates pairs and copies data from the primary volume to the secondary volume. None: Creates pairs but does not copy data from the primary volume to the secondary volume.
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of Pairs	The number of created pairs

[Remote Replication] Delete Pairs

Example 1: Copy type is TC

```
RMI AP,,[Remote Replication],Delete Pairs,,Normal end,Seq.=xxxxxxxxxx
+Copy Type=TC,{P-VOL(Port-G-ID-LUN),S-VOL(Port-G-ID-LUN),
Type,Force,Result}
=[{1A-0x00-0,1B-0x00-0,P-VOL,No,Normal end},
{1A-0x00-1,1B-0x00-1,P-VOL,No,Normal end},
{1A-0x00-2,1B-0x00-2,P-VOL,No,Normal end},(Snip)-(Snip)],
Num. of Pairs=xx
```

Detailed Information 1

Item	Description
Copy Type	The program product name for this operation TC: TrueCopy
P-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the volume specified to the primary volume
S-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the volume specified to the secondary volume
Type	Volume type of the local storage system P-VOL: Primary volume, S-VOL: Secondary volume
Force	Conditions to delete pairs forcibly Yes: Deletes pairs, also when the local storage system cannot communicate with the remote storage system. No: Deletes pairs, only when the local storage system can change the pair to simplex volumes.
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of Pairs	The number of delete pairs

Example 2: when the copy type is UR

```
RMI AP,,[Remote Replication],Delete Pairs,,Normal end,Seq.=xxxxxxxxxx
+Copy Type=UR
+{P-VOL(Port-G-ID-LUN),S-VOL(Port-G-ID-LUN),MirrorID,
S/N,CTRLID,Type,Range,Delete Mode,Result}
=[{4C-0x00-0,4A-0x00-0,0x00,467676,18,P-VOL,LU,Normal,Normal end},
{4C-0x00-1,4A-0x00-1,0x00,467676,18,P-VOL,LU,Normal,Normal end}],
Num. of Requests=2
```

Detailed Information 2

Item	Description
Copy Type	The program product name for this operation UR: Universal Replicator
P-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the primary data volume
S-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the secondary data volume
MirrorID	The mirror ID
S/N	The serial number of the RCU
CTRLID	The controller ID of the RCU

Item	Description
	7: VSP G1000/G1500 and VSP F1500, 18: VSP Gx00, VSP Fx00, 19: HUS VM
Type	The volume type of the deleted volume P-VOL: Primary volume, S-VOL: Secondary volume
Range	The delete range Mirror: All the pairs are delete that exist in the same mirror as the pair. LU: Only the pair is delete.
Delete Mode	Type of the pair deletion operation Normal: Deletes pairs, Force: Deletes pairs forcibly.
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of Requests	The number of deleted mirrors when Range is Mirror The number of deleted pairs when Range is LU

Example 3: when the copy type is GAD

```
RMI AP,,[Remote Replication],Delete Pairs,,Normal end,Seq.=xxxxxxxxxx
+Copy Type=GAD,{P-VOL(Port-G-ID-LUN),S-VOL(Port-G-ID-LUN),
S/N_P,S/N_S,Type,SSID_P,SSID_S,CTG,Range,Force,MirrorID,
Invisible,Result}=
[{1A-0x00-0,1B-0x01-1,411111,422222,P-VOL,0x0004,0x0004,-,
Volume,Yes,0,Disable,Normal end},(Snip)-(Snip)],Num. of Requests=xx
```

Detailed Information 3

Item	Description
Copy Type	The program product name for this operation GAD: global-active device
P-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the primary volume
S-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the secondary volume
S/N_P	The serial number of the local storage system
S/N_S	The serial number of the remote storage system
Type	Volume type of the local storage system SMPL: simplex, P-VOL: Primary volume, S-VOL: Secondary volume
SSID_P	The SSID of the primary volume
SSID_S	The SSID of the secondary volume
CTG	The consistency group ID

Item	Description
	A hyphen (-) is displayed when Range is Volume.
Range	The applicable range of pair deletion Volume: Only this volume, Group: All volumes in the consistency group to which this volume belongs
Force	Conditions to delete pairs forcibly Yes: Deletes pairs, also when the local storage system cannot communicate with the remote storage system. No: Deletes pairs, only when the local storage system can change the pair to simplex volumes.
MirrorID	The mirror ID
Invisible	Indicates whether the host can access volumes after deleting pairs. Enable: Deletes the virtual LDEV ID of the volume of the local storage system so that no hosts can access the volume. Disable: Keeps the virtual LDEV ID of the volume of the local storage system so that hosts can access the volume.
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of Requests	The number of requests to delete pairs

[Remote Replication] Delete Path

Example

```
RMI AP,,[Remote Replication],Delete Path,,Normal end,
Seq.=xxxxxxxxxx
+{S/N,MCU LDKC,RCU LDKC,Path Gr.ID,Controller ID,Result}
={411111,0x00,0x00,Default,18,Normal end}
++{MCU Port,RCU Port}
=[{1E,3E},{5E,7E},{1F,3F},{5F,7F},{1G,3G},{5G,7G},{1H,3H}],
Num. of Port Pairs=7
(Snip)
+{S/N,MCU LDKC,RCU LDKC,Path Gr.ID,Controller ID,Result}
={422222,0x00,0x00,Default,18,Normal end}
++{MCU Port,RCU Port}
=[{1E,3E},{5E,7E},{1F,3F},{5F,7F},{1G,3G},{5G,7G},{1H,3H}],
Num. of Port Pairs=7
+Num. of RCUs=xx
```

Detailed Information

Item	Description
S/N	The serial number of the RCU on which a path is deleted
MCU LDKC	The LDKC number of the connected LDKC

Item	Description
RCU LDKC	The LDKC number of the paired LDKC
Path Gr.ID	The path group ID of the deleted path. When the path group ID is default setting, "Default" is output.
Controller ID	The controller ID of the RCU on which a path is deleted 7: VSP G1000/G1500 and VSP F1500, 18: VSP Gx00, VSP Fx00, 19: HUS VM
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
MCU Port	The port number of MCU
RCU Port	The port number of RCU
Num. of Port Pairs	Number of pairs of the port to be operated
Num. of RCUs	The number of RCUs set

[Remote Replication] Del Quorum Disk ID

Example

```
RMI AP,,[Remote Replication],Del Quorum Disk ID,,Normal end,
Seq.=xxxxxxxxxx
+{Quorum Disk ID,Paired S/N,Controller ID,Quorum Disk(LDKC:CU:LDEV),
Result}=[{0x01,464024,18,0x00:0x01:0x01,Normal end},
{0x02,464024,18,0x00:0x02:0x02,Normal end},(Snip),
{0x7F,464024,18,0x00:0x03:0x03,Error(xxxx-yyyyy)}]
-,Num. of IDs=xx
```

Detailed Information

Item	Description
Quorum Disk ID	The deleted quorum disk ID used by global-active device
Paired S/N	The serial number of the remote storage system
Controller ID	The controller ID of the remote storage system 7: VSP G1000/G1500 and VSP F1500, 18: VSP Gx00, VSP Fx00, 19: HUS VM
Quorum Disk(LDKC:CU:LDEV)	The LDKC, CU, and LDEV numbers of the deleted quorum disk used by global-active device
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code

Item	Description
Num. of IDs	The number of deleted quorum disk IDs used by global-active device

[Remote Replication] Delete RCU

Example

```
RMI AP,,[Remote Replication],Delete RCU,,Normal end,
Seq.=xxxxxxxxxx
+{S/N,MCU LDKC,RCU LDKC,Path Gr.ID,Controller ID,Result}
={411111,0x00,0x00,Default,18,Normal end}
(Snip)
+{S/N,MCU LDKC,RCU LDKC,Path Gr.ID,Controller ID,Result}
={422222,0x00,0x00,Default,18,Normal end}
+Num. of RCUs=xx
```

Detailed Information

Item	Description
S/N	The serial number of the deleted RCU
MCU LDKC	The LDKC number of the connected LDKC
RCU LDKC	The LDKC number of the paired LDKC
Path Gr.ID	The path group ID of the deleted RCU. When the path group ID is default setting, "Default" is output.
Controller ID	The controller ID of the deleted RCU 7: VSP G1000/G1500 and VSP F1500, 18: VSP Gx00, VSP Fx00, 19: HUS VM
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of RCUs	The number of deleted RCUs

[Remote Replication] Edit Options

Example 1: Editing storage system options when the copy type is TC

```
RMI AP,,[Remote Replication],Edit Options,,Normal end,Seq.=xxxxxxxxxx
+Copy Type=TC,
{Max Initial Copy,CU Activity,Path Blockade Watch(s),
Path Blockade SIM Watch(s),Switch}
={128,Enable,45,070,-}
```

Example 2: Editing CU options when the copy type is TC

```
RMI AP,,[Remote Replication],Edit Options,,Normal end,Seq.=xxxxxxxxxx
+Copy Type=TC,{LDKC,CU,Max Initial Copy}
```

```
=[{0x00,0x00,04},{0x00,0x01,04},
{0x00,0x02,04},{0x00,0x03,04},
{0x00,0x04,04},(Snip)-(Snip)],Num. of CUs=255
```

Example 3: Editing both storage system options and CU options when the copy type is TC

```
RMI AP,,[Remote Replication],Edit Options,,Normal end,Seq.=xxxxxxxxxx
+Copy Type=TC,
{Max Initial Copy,CU Activity,Path Blockade Watch(s),
Path Blockade SIM Watch(s),Switch}
={128,Enable,45,070,-}
+{LDKC,CU,Max Initial Copy}
=[{0x00,0x00,04},{0x00,0x01,04},
{0x00,0x02,04},{0x00,0x03,04},
{0x00,0x04,04},(Snip)-(Snip)],Num. of CUs=255
```

Example 4: Editing remote replication function switch when the copy type is TC

```
RMI AP,,[Remote Replication],Edit Options,,Normal end,Seq.=xxxxxxxxxx
+Copy Type=TC,
{Max Initial Copy,CU Activity,Path Blockade Watch(s),
Path Blockade SIM Watch(s),Switch}
={-,-,-,-,1000 0000 0000 0000 0100 0000 0000 0000 0000
0000 0000 0000 0000 0000 0000 0000}
```

Detailed Information for Example 1- 4

Item	Description
Copy Type	The program product name for this operation TC: TrueCopy
Max Initial Copy	The maximum number of initial copy operations set If this is not a subject to change, a hyphen (-) is displayed. If any one of Max Initial Copy, CU Activity, Path Blockade Watch(s), and Path Blockade SIM Watch(s) is changed, this will be the subject to change.
CU Activity	Indicates whether the parallel operation of initial copy by the control unit is enabled or not. Enable or Disable will appear. If this is not a subject to change, a hyphen (-) is displayed. If any one of Max Initial Copy, CU Activity, Path Blockade Watch(s, and Path Blockade SIM Watch(s) is changed, this will be the subject to change.
Path Blockade Watch(s)	The path blockade watch period setting (in seconds). If this is not a subject to change, a hyphen (-) is displayed. If any one of Max Initial Copy, CU Activity, Path Blockade Watch(s, and Path Blockade SIM Watch(s) is changed, this will be the subject to change.
Path Blockade SIM Watch(s)	The path blockade SIM watch period setting (in seconds).

Item	Description
	If this is not a subject to change, a hyphen (-) is displayed. If any one of Max Initial Copy, CU Activity, Path Blockade Watch(s, and Path Blockade SIM Watch(s) is changed, this will be the subject to change.
Switch	Indicates the ON/OFF information of each bit of the function switch that is allocated in the 64 bit format; the first digit corresponds to the bit 0 while the last one corresponds to the bit 63. 0: OFF, 1: ON If this is not a subject to change, a hyphen (-) is displayed.
LDKC	The LDKC number
CU	The CU number of the connected CU
Max Initial Copy	The number of parallel operation of initial copy by CU. If this is not a subject to change, a hyphen (-) is displayed.
Num. of CUs	The number of CUs set

Example 5: Copy type is UR

```
RMI AP,,[Remote Replication],Edit Options,,Normal end,Seq.=xxxxxxxxxx
+Copy Type=UR
+Max Initial Copy=64
```

Detailed Information 5

Item	Description
Copy Type	The program product name for this operation UR: Universal Replicator
Max Initial Copy	The maximum number of initial copy operations set

Example 6: when the copy type is GAD

```
RMI AP,,[Remote Replication],Edit Options,,Normal end,Seq.=xxxxxxxxxx
+Copy Type=GAD,{Max Initial Copy,Path Blockade Watch(s),
Path Blockade SIM Watch(s),Service SIM,Switch,Max Initial Copy HA}=
{128,45,70,Not Report,0000 0000 0000 0000 0000 0000 0000 0000 0000
0000 0000 0000 0000 0000 0000 0000,50}
```

Detailed Information 6

Item	Description
Copy Type	The program product name for this operation GAD: global-active device
Max Initial Copy	The setting of the maximum number of initial copy operations

Item	Description
Path Blockade Watch(s)	The path blockade watch period setting (in seconds).
Path Blockade SIM Watch(s)	The path blockade SIM watch period setting (in seconds).
Service SIM	Indicates whether the remote replication related SIM is reported. Report: Reported, Not Report: Not reported
Switch	Indicates the ON/OFF information of each bit of the function switch that is allocated in the 64 bit format; the first digit corresponds to the bit 0 while the last one corresponds to the bit 63. 0: OFF, 1: ON If this is not a subject to change, a hyphen (-) is displayed.
Max Initial Copy HA	The setting of the number of initial copy operations of GAD

[Remote Replication] Edit Pair Options

Example 1: Copy type is TC

```
RMI AP,,[Remote Replication],Edit Pair Options,,Normal end,
Seq.=xxxxxxxxxx
+Copy Type=TC,{P-VOL(Port-G-ID-LUN),Fence Level,Result}
=[{1A-0x00-0,Never,Normal end},{1A-0x00-1,Never,Normal end},
{1A-0x00-2,Never,Normal end},(Snip)-(Snip)],
Num. of Pairs=xx
```

Detailed Information 1

Item	Description
Copy Type	The program product name for this operation TC: TrueCopy
P-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the primary volume
Fence Level	The changed fence level setting (the condition that MCU rejects the write operation to the primary volume). Never: Can write to the primary volume even when the pair is split. Data: Cannot write to the primary volume when update copying fails. Status: Cannot write to the primary volume, only when the storage system of the primary site cannot change the pair status of the secondary volume to PSUE.
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of Pairs	The number of pairs on which the setting is changed

Example 2: when the copy type is UR

```
RMI AP,,[Remote Replication],Edit Pair Options,,Normal end,
Seq.=xxxxxxxxxx
+Copy Type=UR
+{P-VOL(Port-G-ID-LUN),S-VOL(Port-G-ID-LUN),MirrorID,
M-JNL,R-JNL,Error Level,Result}
=[{4C-0x00-0,4A-0x00-0,0x00,0x001,0x001,Mirror,Normal end},
{4C-0x00-1,4A-0x00-1,0x00,0x001,0x001,Mirror,Normal end}],
Num. of Pairs=2
```

Detailed Information 2

Item	Description
Copy Type	The program product name for this operation UR: Universal Replicator
P-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the primary data volume
S-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the secondary data volume
MirrorID	The mirror ID
M-JNL	The master journal number
R-JNL	The restore journal number
Error Level	Range of the pair split at failure occurrence Mirror: When a pair fails, all the pairs are split that exist in the same mirror as the pair. LU: When a pair fails, only the pair is split.
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of Pairs	The number of pairs on which the setting is changed

[Remote Replication] Journal Owner

Example

```
RMI AP,,[Remote Replication],Journal Owner,,Normal end,
Seq.=xxxxxxxxxx
+{JNL,Owner,Result}={0x000,0x00,Normal end},
{0x001,0x00,Normal end},
Num. of JNLs=2
```

Detailed Information

Item	Description
JNL	The journal number

Item	Description
Owner	The ownership to which the journal belongs
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end
Num. of JNLs	The number of journals

[Remote Replication] Journal Vol

Example 1: Adding journal volumes

```
RMI AP,,[Remote Replication],Journal Vol,Add,Normal end,
Seq.=xxxxxxxxxx
+Copy Type=UR
+{LDKC,JNL,Owner}={0x00,0x001,0x00}
++{LDKC:CU:LDEV,Result}
=[{0x00:0xD7:0x01,Normal end}],Num. of LDEVs=1
+{LDKC,JNL,Owner}={0x00,0x002,0x00}
++{LDKC:CU:LDEV,Result}
=[{0x00:0xD8:0x21,Normal end}],Num. of LDEVs=1
+Num. of JNLs=2
```

Example 2: Deleting journal volumes

```
RMI AP,,[Remote Replication],Journal Vol,Delete,Normal end,
Seq.=xxxxxxxxxx
+Copy Type=UR
+{LDKC,JNL}={0x00,0x001}
++{LDKC:CU:LDEV,Result}
=[{0x00:0xD7:0x01,Normal end}],Num. of LDEVs=1
+{LDKC,JNL}={0x00,0x002}
++{LDKC:CU:LDEV,Result}
=[{0x00:0xD8:0x21,Normal end}],Num. of LDEVs=1
+Num. of JNLs=2
```

Basic Information (Adding or deleting journal volumes)

Parameter	Description
Add	Indicates the addition of journal volumes
Delete	Indicates the deletion of journal volumes

Detailed Information (Adding or deleting journal volumes)

Item	Description
Copy Type	The program product name for this operation UR: Universal Replicator
LDKC	The LDKC number to which the journal belongs

Item	Description
JNL	The journal number
Owner	The ownership to which the journal belongs This information is output when the parameter is Add.
LDKC:CU:LDEV	The LDKC, CU, and LDEV numbers of the volume
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of LDEVs	The number of LDEVs set for the journal
Num. of JNLs	The number of journals

Example 3: Deleting journals

```
RMI AP,,[Remote Replication],Journal Vol,Delete JNL,Normal end,
Seq.=xxxxxxxxxx
+Copy Type=UR
+{LDKC,JNL,Result}
=[{0x00,0x001,Normal end},{0x00,0x003,Normal end},
{0x00,0x005,Normal end}],Num. of JNLs=3
```

Basic Information

Parameter	Description
Delete JNL	Indicates the deletion of journals

Detailed Information

Item	Description
Copy Type	The program product name for this operation UR: Universal Replicator
LDKC	The LDKC number to which the journal belongs
JNL	The journal number
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of JNLs	The number of journals

[Remote Replication] R-Cmd.Dev.

Example

```
RMI AP,,[Remote Replication],R-Cmd.Dev.,Assign,Normal end,
Seq.=xxxxxxxxxx
+Copy Type=UR
+{LDKC,JNL,MirrorID,R-Cmd.Dev.(LDKC:CU:LDEV),Result}
=[{0x00,0x001,0x01,0x00:0x12:0x34,Normal end},
{0x00,0x010,0x02,0x00:0x56:0x78,Normal end}],
Num. of Mirrors=2
```

Basic Information

Parameter	Description
Assign	The remote command device is assigned.
Release	The remote command device is released.

Detailed Information

Item	Description
Copy Type	The program product name for this operation UR: Universal Replicator
LDKC	The LDKC number to which the journal belongs
JNL	The journal number
MirrorID	The mirror ID
R-Cmd.Dev. (LDKC:CU:LDEV)	The LDKC, CU, and LDEV numbers of the remote command device. The hyphen (-) indicates • When assigning a remote command device without specifying a remote command device as a parameter. • When releasing a remote command device.
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of Mirrors	The number of mirrors on which the setting is changed

[Remote Replication] Resync Pairs

Example 1: Copy type is TC

```
RMI AP,,[Remote Replication],Resync Pairs,,Normal end,Seq.=xxxxxxxxxx
+Copy Type=TC,{P-VOL(Port-G-ID-LUN),S-VOL(Port-G-ID-LUN),
Fence Level,Copy Pace,Priority,Result}
=[{1A-0x00-0,1B-0x00-0,Never,15,256,Normal end},
```

```
{1A-0x00-1,1B-0x00-1,Never,15,256,Normal end},(Snip)-(Snip)],
Num. of Pairs=xx
```

Detailed Information 1

Item	Description
Copy Type	The program product name for this operation TC: TrueCopy
P-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the primary volume
S-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the secondary volume
Fence Level	Configured fence level (conditions where the local storage system rejects write operations to the primary volume) Never: Can write to the primary volume even the pair is split. Data: Cannot write to the primary volume when update copying fails. Status: Cannot write to the primary volume, only when the storage system of the primary site cannot change the pair status of the secondary volume to PSUE.
Copy Pace	The initial copy speed set (the number of tracks you can copy at a time)
Priority	The priority of resynchronizing operation set (scheduling order)
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of Pairs	The number of resynchronized pairs

Example 2: when the copy type is UR

```
RMI AP,,[Remote Replication],Resync Pairs,,Normal end,Seq.=xxxxxxxxxx
+Copy Type=UR
+{P-VOL(Port-G-ID-LUN),S-VOL(Port-G-ID-LUN),MirrorID,
S/N,CTRLID,Priority,CTG,Range,M-JNL,R-JNL,Error Level,
Resync Mode,Result}
=[{4C-0x00-0,4A-0x00-0,0x00,467676,18,32,0x000,LU,0x001,0x001,
Mirror,Normal,Normal end},
{4C-0x00-1,4A-0x00-1,0x00,467676,18,32,0x000,LU,0x001,0x001,
Mirror,Normal,Normal end}],Num. of Requests=2
```

Detailed Information 2

Item	Description
Copy Type	The program product name for this operation UR: Universal Replicator
P-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the primary data volume

Item	Description
S-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the secondary data volume
MirrorID	The mirror ID
S/N	The serial number of the RCU
CTRLID	The controller ID of the RCU 7: VSP G1000/G1500 and VSP F1500, 18: VSP Gx00, VSP Fx00, 19: HUS VM
Priority	The priority of resynchronizing operation set (scheduling order)
CTG	The consistency group ID
Range	The applicable range of resynchronization Mirror: All the pairs are resync that exist in the same mirror as the pair. LU: Only the pair is resync.
M-JNL	The master journal number
R-JNL	The restore journal number
Error Level	Range of the pair split at failure occurrence Mirror: When a pair fails, all the pairs are split that exist in the same mirror as the pair. LU: When a pair fails, only the pair is split.
Resync Mode	Type of the pair resynchronization operation Normal: normal resync, Delta: delta resync, Return to standby: return to standby status
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of Requests	The number of resynchronized mirrors when Range is Mirror The number of resynchronized pairs when Range is LU

Example 3: when the copy type is GAD

```
RMI AP,,[Remote Replication],Resync Pairs,,Normal end,Seq.=xxxxxxxxxx
+Copy Type=GAD,{P-VOL(Port-G-ID-LUN),S-VOL(Port-G-ID-LUN),
S/N_P,S/N_S,Type,Path Gr.ID,Controller ID,SSID_P,SSID_S,
Copy Pace,Quorum Disk ID,MirrorID,Swap,Range,CTG,Result}=
-[{1A-0x00-0,1B-0x01-1,411111,422222,P-VOL,0x00,18,0x0004,0x0004,15,
0x00,1,Yes,Group,0x000,Normal end},(Snip)-(Snip)],Num. of Requests=xx
```

Detailed Information 3

Item	Description
Copy Type	The program product name for this operation

Item	Description
	GAD: global-active device
P-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the primary volume
S-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the secondary volume
S/N_P	The serial number of the local storage system
S/N_S	The serial number of the remote storage system
Type	The volume type of the volume on the local storage system P-VOL: Primary volume, S-VOL: Secondary volume
Path Gr.ID	Path group ID used in a global-active device pair
Controller ID	The controller ID of the remote storage system 7: VSP G1000/G1500 and VSP F1500, 18: VSP Gx00, VSP Fx00, 19: HUS VM
SSID_P	The SSID of the primary volume
SSID_S	The SSID of the secondary volume
Copy Pace	The setting of the initial copy speed (the number of tracks that can be copied at a time)
Quorum Disk ID	The quorum disk ID used by global-active device
MirrorID	The mirror ID
Swap	Indicates whether the attributes of the primary and secondary volumes are swapped. No: Not swapped, Yes: Swapped
Range	The applicable range of resynchronization Volume: Only this volume, Group: All volumes in the consistency group to which this volume belongs
CTG	The consistency group ID A hyphen (-) is displayed when the volume does not belong to a consistency group.
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of Requests	The number of requests to resynchronize pairs

[Remote Replication] Split Pairs

Example 1: Copy type is TC

```
RMI AP,,[Remote Replication],Split Pairs,,Normal end,
Seq.=xxxxxxxxxx
+Copy Type=TC,{P-VOL(Port-G-ID-LUN),S-VOL(Port-G-ID-LUN),
```

```
Type,S-VOL Write,Kind,Result}
=[{1A-0x00-0,1B-0x00-0,P-VOL,Disable,S-VOL,Normal end},
{1A-0x00-1,1B-0x00-1,P-VOL,Disable,S-VOL,Normal end},
(Snip)-(Snip)],Num. of Pairs=xx
```

Detailed Information 1

Item	Description
Copy Type	The program product name for this operation TC: TrueCopy
P-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the primary volume
S-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the secondary volume
Type	The volume type of the volume on the primary site P-VOL: Primary volume, S-VOL: Secondary volume
S-VOL Write	Indicates whether the writing to the secondary volume is enabled Enable: Writing is enabled, Disable: Writing is disabled
Kind	Indicates whether the primary volume is writable after splitting a pair. P-VOL Failure: Not writable S-VOL: Writable
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of Pairs	The number of split pairs

Example 2: when the copy type is UR

```
RMI AP,,[Remote Replication],Split Pairs,,Normal end,
Seq.=xxxxxxxxxx
+Copy Type=UR
+{P-VOL(Port-G-ID-LUN),S-VOL(Port-G-ID-LUN),MirrorID,
S/N,CTRLID,Type,S-VOL Write,Range,Suspend Mode,Result}
=[{4C-0x00-0,4A-0x00-0,0x00,467676,18,P-VOL,Disable,LU,
Flush,Normal end},
{4C-0x00-1,4A-0x00-1,0x00,467676,18,P-VOL,Disable,LU,
Flush,Normal end}],Num. of Requests=2
```

Detailed Information 2

Item	Description
Copy Type	The program product name for this operation UR: Universal Replicator

Item	Description
P-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the primary data volume
S-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the secondary data volume
MirrorID	The mirror ID
S/N	The serial number of the RCU
CTRLID	The controller ID of the RCU 7: VSP G1000/G1500 and VSP F1500, 18: VSP Gx00, VSP Fx00, 19: HUS VM
Type	Indicates whether the split data volume is a primary or secondary data volume P-VOL: Primary, S-VOL: Secondary
S-VOL Write	Indicates whether the writing to the secondary volume is enabled Disable: Disabled, Enable: Enabled
Range	The split range Mirror: All the pairs are split that exist in the same mirror as the pair. LU: Only the pair is split.
Suspend Mode	Indicates how to handle updated data that is not reflected in the secondary volume. Flush: The updated data is reflected when splitting a pair. Flush: The updated data is reflected when splitting a pair. Purge: The updated data is not reflected when splitting a pair. However, the updated data is reflected when the pair is resynchronized later.
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of Requests	The number of split mirrors when Range is Mirror The number of split pairs when Range is LU

[Remote Replication] Suspend Pairs

Example

```
RMI AP,,[Remote Replication],Suspend Pairs,,Normal end,
Seq.=xxxxxxxxxx
+Copy Type=GAD,{P-VOL(Port-G-ID-LUN),S-VOL(Port-G-ID-LUN),
S/N_P,S/N_S,Type,SSID_P,SSID_S,Kind,CTG,Range,Swap,MirrorID,Result}
=[{1A-0x00-0,1B-0x01-01,411111,422222,P-VOL,0x0008,0x000C,S-VOL,
-,Volume,No,0,Normal end},
{1A-0x00-1,1B-0x01-1,411111,422222,P-VOL,0x0009,0x000C,S-VOL,
-,Volume,No,0,Normal end},(Snip)-(Snip)],Num. of Requests=xx
```

Detailed Information

Item	Description
Copy Type	The program product name for this operation GAD: global-active device
P-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the primary volume
S-VOL(Port-G-ID-LUN)	The port number, host group number, and LUN of the secondary volume
S/N_P	The serial number of the local storage system
S/N_S	The serial number of the remote storage system
Type	The volume type of the volume on the local storage system P-VOL: Primary volume, S-VOL: Secondary volume
SSID_P	The SSID of the primary volume
SSID_S	The SSID of the secondary volume
Kind	Indicates whether the primary volume is writable after suspending a pair. P-VOL Failure: Not writable S-VOL: Writable
CTG	The consistency group ID A hyphen (-) is displayed when Range is Volume.
Range	The applicable range of suspension Volume: Only this volume, Group: All volumes in the consistency group to which this volume belongs
Swap	Indicates whether the attributes of the primary and secondary volumes are swapped. No: Not swapped, Yes: Swapped, Rollback: Returning the pair status of the secondary volume to PSUS from SSWS
MirrorID	The mirror ID
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of Requests	The number of requests to suspend pairs

[Remote Replication] UpdateQuorumDisks

Example

```
08xx,YYYY/MM/DD,HH:MM:SS.xxx, 00:00,RMI AP,uid=user-name,1,,
[Remote Replication], UpdateQuorumDisks,,Normal end,
from=xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx,,Seq.=xxxxxxxxxx
+{QuorumDisks[0]{
  Result=Normal end,Id=31,ReadResponseGuaranteedTime=40}}
```

Detailed Information

Item		Description
QuorumDisks		The setting information of quorum disks.
	Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
	Id	Indicates the ID of a global-active device quorum disk whose Read Response Guaranteed Time When Quorum Disk Blocked value will be updated.
	ReadResponse GuaranteedTime	Indicates the updated value of Read Response Guaranteed Time When Quorum Disk Blocked for global-active device in seconds.

Server Priority Manager Descriptions

[SPM] Change SPMGrp

Example

```
RMI AP,,[SPM],Change SPMGrp,,Normal end,
Seq.=xxxxxxxxxx
+{SPM Group,Priority,UpperLimit,Mode}
=[{XXXXXXXXXXXXXXXX,Non-Prio,XXXXXXXX,IOPS}],Num. of SPM Groups=1
```

Detailed Information

Item	Description
SPM Group	An SPM group name
Priority	An attribute specified to an HBA (host bus adapter) in the SPM group after the change Prio: a prioritized WWN Non-Prio: a non-prioritized WWN
Upper Limit	An upper limit when you specify Non-Prio When you specify Prio, this information is not output.
Mode	The type of rate when you specify an upper limit. IOPS: the I/O rate KB/s: the transfer rate When you specify Prio, this information is not output.
Num. of SPM Groups	The number of SPM groups whose settings are changed

Note:

- When the attribute of the host bus adapter in the SPM group changes from a prioritized WWN to a non-prioritized WWN, "Non-Prio" is output to Priority and "0" is output to Upper limit respectively.
- If multiple changes in settings such as Priority and Upper limit are made in succession and then **Apply** is clicked at the end of the operation, these set values are output one by one in the order they were configured.

[SPM] Clear SPM Info

Example

```
RMI AP,,[SPM],Clear SPM Info,,Normal end,
Seq.=xxxxxxxxxx
```

[SPM] Default Set

Example

```
RMI AP,,[SPM],Default Set,Kind=WWN,Normal end,
Seq.=xxxxxxxxxx
```

Basic Information

Parameter	Description
Kind=Port	Indicates that settings in the Port tab are initialized.
Kind=WWN	Indicates that settings in the WWN tab are initialized.

[SPM] Set All Prio Port

Example

```
RMI AP,,[SPM],Set All Prio Port,,Normal end,
Seq.=xxxxxxxxxx
+{AllPriority,Threshold,Mode}={Enable,XXXXXXXX,IOPS}
```

Detailed Information

Item	Description
AllPriority	Settings in the All Thresholds field in the Port tab Enable: All Thresholds is configured. Disable: Settings in the All Thresholds field are canceled.
Threshold	A configured value in the All Thresholds field. This information is output only when All Thresholds is configured.
Mode	The type of rate for All Thresholds IOPS: the I/O rate

Item	Description
	KB/s: the transfer rate This information is output only when All Thresholds is configured.

[SPM] Set All Prio WWN

Example

```
RMI AP,,[SPM],Set All Prio WWN,,Normal end,
Seq.=xxxxxxxxxx
+{AllPriority,Threshold,Mode}={Enable,XXXXXXXX,IOPS}
```

Detailed Information

Item	Description
AllPriority	Settings in the All Thresholds field in the WWN tab Enable: All Thresholds is configured. Disable: Settings in the All Thresholds field are canceled.
Threshold	A configured value in the All Thresholds field. This information is output only when All Thresholds is configured.
Mode	The type of rate for All Thresholds IOPS: the I/O rate KB/s: the transfer rate This information is output only when All Thresholds is configured.

[SPM] Set Ctrl Kind

Example

```
RMI AP,,[SPM],Set Ctrl Kind,Kind=WWN,Normal end,
Seq.=xxxxxxxxxx
```

Basic Information

Parameter	Description
Kind=Port	Indicates that you switched a definition of the server priority by a port without configuring All Thresholds.
Kind=All Port	Indicates that you switched a definition of the server priority by a port with configuring All Thresholds.
Kind=WWN	Indicates that you switched a definition of the server priority by a WWN. This information is output whichever All Thresholds is configured or not.

[SPM] Set Prio Port

Example

```
RMI AP,,[SPM],Set Prio Port,,Normal end,
Seq.=xxxxxxxxxx
+{Port,Priority,Use,Threshold/Upper Limit,Mode}
=[{1A,Non-Prio,Enable,XXXXXXXX,IOPS}],Num. of Ports=1
```

Detailed Information

Item	Description
Port	A name of the port
Priority	An attribute specified to the port Prio: a prioritized port Non-Prio: a non-prioritized port
Use	When the port is a prioritized port, this information indicates whether a threshold is specified or not. When the port is a non-prioritized port, this information indicates whether an upper limit is specified or not. Enable: specified Disable: not specified
Threshold/Upper Limit	When the port is a prioritized port, this information indicates the threshold. When the port is a non-prioritized port, this information indicates the upper limit. This information is output only when a threshold or an upper limit is specified.
Mode	The type of rate for the threshold or the upper limit IOPS: the I/O rate KB/s: the transfer rate This information is output only when a threshold or an upper limit is specified.
Num. of Ports	The number of ports whose settings are changed

[SPM] Set Prio WWN

Example

```
RMI AP,,[SPM],Set Prio WWN,,Normal end,
Seq.=xxxxxxxxxx
+{WWN,Priority,Upper Limit,Mode}
=[{0xXXXXXXXXXXXXXXXX,Non-Prio,XXXXXXXX,IOPS}],Num. of WWNs=1
```

Detailed Information

Item	Description
WWN	A WWN of an HBA A WWN is a 16-digit number in the hexadecimal format.
Priority	An attribute specified to the HBA Prio: a prioritized WWN Non-Prio: a non-prioritized WWN
Upper Limit	When the WWN is a non-prioritized WWN, this information indicates the upper limit. When the WWN is a prioritized WWN, this information is not output.
Mode	The type of rate for the upper limit IOPS: the I/O rate KB/s: the transfer rate This information is not output when the WWN is a prioritized WWN.
Num. of WWNs	The number of WWNs of HBAs whose settings are changed

Note:

- When the attribute of the host bus adapter changes from a prioritized WWN to a non-prioritized WWN, "Non-Prio" is output to Priority and "0" is output to Upper limit respectively.
- If multiple changes in settings such as Priority and Upper limit are made in succession and then **Apply** is clicked at the end of the operation, these set values are output one by one in the order they were configured.

[SPM] SPMGrp Del/Chg

Example

```
RMI AP,,[SPM],SPMGrp Del/Chg,,Normal end,
Seq.=xxxxxxxxxx
+{Mode,SPM Group,Change Name}
=[{Update,XXXXXXXXXXXXXXXX,XXXXXXXXXXXXXXXX}],
Num. of SPM Groups=1
```

Detailed Information

Item	Description
Mode	An executed operation Delete: Deleted an SPM group. Update: Changed an SPM name.
SPM Group	An SPM group name where the operation is executed
Change Name	An SPM group name after the change This information is output only when an SPM group name is changed.

Item	Description
Num. of SPM Groups	The number of SPM groups that are deleted or whose names are changed

[SPM] Update Port WWN

Example

```
RMI AP,,[SPM],Update Port WWN,,Normal end,
Seq.=xxxxxxxxxx
+{Mode,WWN,SPM Name,Priority}
={Add WWN,0xXXXXXXXXXXXXXXXX,XXXXXXXXXXXXXXXX,Non-Prio},
++Port=[1A,3A],Num. of Ports=2,
-Num. of WWNs=1
```

Detailed Information

Item	Description
Mode	An executed operation Add WWN: Added a WWN (an HBA is monitored). Delete WWN: Deleted a WWN (an HBA is not monitored).
WWN	An added or deleted WWN A WWN is a 16-digit number in the hexadecimal format.
SPM Name	An SPM name for an added or deleted HBA
Priority	An attribute specified to the HBA Prio: a prioritized WWN Non-Prio: a non-prioritized WWN This information is output only when a WWN (HBA) is added.
Port	A name of the port where the HBA is added
Num. of Ports	The number of ports where the HBA is added
Num. of WWNs	The number of added or deleted WWNs

[SPM] Update SPMGrp

Example

```
RMI AP,,[SPM],Update SPMGrp,,Normal end,
Seq.=xxxxxxxxxx
+{UpdateMode,SPM Group,Priority,Upper Limit,Mode}
=[{Add New Group,XXXXXXXXXXXXXXXX,Non-Prio,XXXXXXXX,IOPS},
++WWN=[0xXXXXXXXXXXXXXXXX,0xXXXXXXXXXXXXXXXX],Num. of WWNs=2],
+Num. of SPM Group=1
```

Detailed Information

Item	Description
UpdateMode	An executed operation Add New Group: Added a new SPM group. Add WWN: Added an HBA to the SPM group Delete WWN: Deleted an HBA from the SPM group
SPM Group	An SPM group name
Priority	An attribute specified to the HBA Prio: a prioritized WWN Non-Prio: a non-prioritized WWN This attribute is applied to all HBAs in the SPM group. This information is output only when you add a new SPM group.
Upper Limit	When an attribute specified to the SPM group is Non-Prio, this information indicates an upper limit of the HBAs in the SPM group. This information is output only when you add a new SPM group.
Mode	The type of rate when you specify an upper limit. IOPS: the I/O rate KB/s: the transfer rate This information is output only when you add a new SPM group.
WWN	WWNs of HBAs in the SPM group A WWN is a 16-digit number in the hexadecimal format. All WWNs are output for this item. You can add up to 32 WWNs to an SPM group.
Num. of WWNs	The number of WWNs of added or deleted HBAs
Num. of SPM Group	The number of SPM groups whose settings are changed

[SPM] Update WWN

Example

```
RMI AP,,[SPM],Update WWN,,Normal end,
Seq.=xxxxxxxxxx
+{Update Mode,WWN,Change SPM Name,Change WWN}
={Change WWN,0xXXXXXXXXXXXXXXXX,,0xXXXXXXXXXXXXXXXX},
Num. of WWNs=1
```

Detailed Information

Item	Description
Update Mode	An executed operation Change WWN: Changed an HBA. Change Nickname: Changed an SPM name for a WWN

Item	Description
WWN	A WWN of the HBA A WWN is a 16-digit number in the hexadecimal format. When you changed an HBA, the WWN before the change is output.
Change SPM Name	An SPM name for the HBA When you changed an SPM name for the HBA, the SPM name after the change is output.
Change WWN	An WWN of the HBA after the change This information is output only when an HBA is changed.
Num. of WWNs	The number of HBAs whose settings are changed

Universal Volume Manager Descriptions

[UVM] Add External Volumes

Example

```
RMI AP,Task Name,[UVM],Add External Volumes,,Normal end,
Seq.=xxxxxxxxxx
+{Vendor,Product,Serial,VolumeID1,VolumeID2,Device,
Capa(blocks),ExGroup,PathGroup,CLPR,Emulation,Cache,Inflow,
MP Unit ID,LoadBalanceMode,ALUA Permitted,Data Direct Mapping,
Result}={HITACHI,9500V,28528,0001,
00000000000000000000000000000000000000000000000000000000000000000000,
DF600F,4294967296,E1-1,1,0,,Enable,Disable,Auto,
Extended Round-robin,Enable,Enable,Normal end}
++{Port,WWN,IP Address,iSCSI Target Name,LUN,PathResult}
=[{1A,50560E8000C3E211,-,-,1,Normal end},
{2A,-,192.168.0.136,
iqn.1994-04.jp.co.hitachi.h8m.t.00001.2b000,1,Normal end},
{3A,-,FE80:0:0:0:0:0:0:1,
iqn.1994-04.jp.co.hitachi.h8m.t.00001.3b000,1,Normal end},
{4A,-,0:0:0:0:0:FFFF:192.168.0.137,
iqn.1994-04.jp.co.hitachi.h8m.t.00001.4b000,1,Normal end}],
Num. of Paths=4
++{LDKC:CU:LDEV,LDEVCapa(blocks),SSID,LDEV MP Unit ID,LDEVResult}
=[{0x00:0x00:0x00,96000,,Auto,Normal end},
{0x00:0x00:0x01,96000,,Auto,Normal end}],Num. of LDEVs=2
+{Vendor,Product,Serial,VolumeID1,VolumeID2,Device,
Capa(blocks),ExGroup,PathGroup,CLPR,Emulation,Cache,Inflow,
MP Unit ID,LoadBalanceMode,ALUA Permitted,Data Direct Mapping,
Result}={HITACHI,9500V,28528,0001,
00000000000000000000000000000000000000000000000000000000000000000000,
DF600F,4294967296,E1-1,1,0,,Enable,Disable,Auto,
Extended Round-robin,Enable,Disable,Normal end}
++{Port,WWN,IP Address,iSCSI Target Name,LUN,PathResult}
=[{1A,50560E8000C3E211,-,-,2,Normal end},
{2A,-,192.168.0.136,
iqn.1994-04.jp.co.hitachi.h8m.t.00001.2b000,2,Normal end},
{3A,-,FE80:0:0:0:0:0:0:1,
iqn.1994-04.jp.co.hitachi.h8m.t.00001.3b000,2,Normal end},
```

```
{4A,-,0:0:0:0:0:FFFF:192.168.0.137,
iqn.1994-04.jp.co.hitachi.h8m.t.00001.4b000,2,Normal end}],
Num. of Paths=4
++{LDKC:CU:LDEV,LDEVCapa(blocks),SSID,LDEV MP Unit ID,LDEVResult}
=[{0x00:0x01:0x00,4294967296,,Auto,Normal end}],Num. of LDEVs=1
+Num. of Volumes=2
```

Detailed Information

Item	Description
Vendor	The name of the vendor of the external storage system that the mapped external volume exists
Product	The product name of the external storage system that the mapped external volume exists
Serial	The serial number the external storage system that the mapped external volume exists
VolumeID1	The volume properties of the mapped external volume
VolumeID2	The device ID of the mapped external volume
Device	The device name that the mapped external volume notifies to the host
Capa(blocks)	The capacity of the mapped external volume indicated by blocks
ExGroup	The number of the external volume group and the reference number assigned to the external volume of the mapped external volume. The number on the left of a dash (-) is the external volume number and the number on the right of the dash (-) is the reference number of the group.
PathGroup	The path group number of the mapped external volume
CLPR	The CLPR ID of the mapped external volume
Emulation	Not output because this item is not used.
Cache	The cache mode of the mapped external volume Enable: Enabled, Disable: Disabled
Inflow	The inflow control setting of the cache of the mapped external volume. Enable: Enabled, Disable: Disabled
MP Unit ID	MP Unit ID specified for the external volume When an MP Unit ID is specified automatically, "Auto" is output.
LoadBalanceMode	The load balance mode of the mapped external volume Normal Round-robin, Extended Round-robin, or Disable will appear.
ALUA Permitted	The ALUA permitted of the mapped external volume Enable: Enabled, Disable: Disabled
Data Direct Mapping	Indicates the setting status of Data Direct Mapping Enable: Data Direct Mapping is enabled. Disable: Data Direct Mapping is disabled.
Result	The result of the operation

Item	Description
	Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Port	The port name of the local storage system
WWN	For connection through the fibre channel port, the WWN of the target port on the external storage system is indicated. For connection through the iSCSI port, a hyphen (-) is output.
IP Address	For connection through the iSCSI port, the IP address of the iSCSI port on the external storage system is indicated. For connection through the fibre channel port, a hyphen (-) is output.
iSCSI Target Name	For connection through the iSCSI port, the iSCSI target name on the external storage system is indicated. For connection through the fibre channel port, a hyphen (-) is output.
LUN	The LUN of the external volume
Num. of Paths	The number of mapping path (Port-WWN-LUN) configured
PathResult	The result of attempting to create an external path. If the path is created normally, the audit log includes the following: PathResult: Normal end If the path is not created, the audit log includes this: PathResult: Error(xxxx-yyyyy): Abnormal end where xxxx is the Part code and yyyyy is the Error code
LDKC:CU:LDEV	The LDKC number, CU, and LDEV number of the LDEVs in the mapped external volume. The number on the left of the colon is an LDKC number, the number between the colons is a CU number, and the number on the right of the colon is an LDEV number
LDEVCapa(blocks)	The capacity of LDEVs in the mapped external volumes indicated by blocks
SSID	Not output because this item is not used.
LDEV MP Unit ID	MP Unit ID specified for the LDEV. When an MP Unit ID is specified automatically, "Auto" is output.
LDEVResult	The result of attempting to create an external path. If the LDEV is created normally, the audit log includes the following: LDEVResult: Normal end If the LDEV is not created, the audit log includes this: LDEVResult: Error(xxxx-yyyyy): Abnormal end where xxxx is the Part code and yyyyy is the Error code
Num. of LDEVs	The number of LDEVs in the mapped external volumes
Num. of Volumes	The number of mapped external volumes

[UVM] Assign MP Unit

Example

```
RMI AP,Task Name,[UVM],Assign MP Unit,,Normal end,
Seq.=xxxxxxxxxx
+{Group,MP Unit ID,Result}=[{E1-1,10,Normal end},
{E1-2,11,Normal end},{E1-3,20,Normal end}],Num. of Groups=3
```

Detailed Information

Item	Description
Group	The external volume number for the configured external volumes
MP Unit ID	The MP Unit ID assigned to the external volume
Result	The result of operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of Groups	The number of groups of configured external volumes

[UVM] Delete ES VOLs

Example

```
RMI AP,Task Name,[UVM],Delete ES VOLs,,Normal end,
Seq.=xxxxxxxxxx
+{ExGroup,Mode,Result}=[{E1-1,Force,Normal end},{E1-2,Force,
Normal end},{E1-3,Normal,Normal end}],Num. of Volumes=3
```

Detailed Information

Item	Description
ExGroup	The number of the external volume group and the reference number assigned to the external volume of the external volume that the mapping has been released. The number on the left of a dash (-) is the external volume number and the number on the right of the dash (-) is the reference number of the group.
Mode	The mode of execution when mapping was released Normal: normal execution. Force: forcible execution
Result	The result of operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of Volumes	The number of volumes in the external volumes that mapping has been released

[UVM] Disconnect ES Paths

This logged information indicates that this Disconnect External Paths operation was only requested but not completed.

Example

```
RMI AP,Task Name,[UVM],Disconnect ES Paths,,Normal end,
Seq.=xxxxxxxxxx
+{Port,WWN,IP Address,iSCSI Target Name,Result}
=[{1A,50560E8000C3E211,-,-,Normal end},
{2A,-,192.168.0.136,
iqn.1994-04.jp.co.hitachi.h8m.t.00001.2b000,Normal end},
{3A,-,FE80:0:0:0:0:0:0:1,
iqn.1994-04.jp.co.hitachi.h8m.t.00001.3b000,Normal end}],
Num. of Paths=3
```

Detailed Information

Item	Description
Port	The port name of the local storage system
WWN	For connection through the fibre channel port, the WWN of the target port on the external storage system is indicated. For connection through the iSCSI port, a hyphen (-) is output.
IP Address	For connection through the iSCSI port, the IP address of the iSCSI port on the external storage system is indicated. For connection through the fibre channel port, a hyphen (-) is output.
iSCSI Target Name	For connection through the iSCSI port, the iSCSI target name on the external storage system is indicated. For connection through the fibre channel port, a hyphen (-) is output.
Result	The result of operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of Paths	The number of mapping paths that has been disconnected.

[UVM] Disconnect ES VOLs

If this operation is performed from Device Manager - Storage Navigator, this logged information indicates that the Disconnect External Volumes operation was only requested but not completed.

Example

```
RMI AP,Task Name,[UVM],Disconnect ES VOLs,,Normal end,
Seq.=xxxxxxxxxx
+{Group,Result}=[{E1-1,Normal end},{E1-2,Normal end},
{E1-3,Normal end},{E1-4,Normal end}],Num. of Groups=4
```

Detailed Information

Item	Description
Group	The group number of the disconnected external volume
Result	The result of operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code
Num. of Groups	The number of external volume groups that contain the disconnected external volume

[UVM] Edit ES Path Config

Example

```
RMI AP,Task Name,[UVM],Edit ES Path Config,,Normal end,
Seq.=xxxxxxxxxx
+{ExGroup,PathGroup,Result}={E1-1,1,Normal end}
++{Port,WWN,IP Address,iSCSI Target Name,LUN,PathResult}
=[{1A,50560E8000C3E211,-,-,1,Normal end},
{2A,-,192.168,0,136,
iqn.1994-04.jp.co.hitachi.h8m.t.00001.2b000,1,Normal end},
{3A,-,FE80:0:0:0:0:0:0:1,
iqn.1994-04.jp.co.hitachi.h8m.t.00001.3b000,1,Normal end},
{4A,-,0:0:0:0:0:FFFF:192.168.0.137,
iqn.1994-04.jp.co.hitachi.h8m.t.00001.4b000,1,Normal end}],
Num. of Paths=4
+{ExGroup,PathGroup,Result}={E1-2,1,Normal end}
++{Port,WWN,IP Address,iSCSI Target Name,LUN,PathResult}
=[{1A,50560E8000C3E211,-,-,2,Normal end},
{2A,-,192.168,0,136,
iqn.1994-04.jp.co.hitachi.h8m.t.00001.2b000,2,Normal end},
{3A,- FE80:0:0:0:0:0:0:1,
iqn.1994-04.jp.co.hitachi.h8m.t.00001.3b000,2,Normal end},
{4A,-,0:0:0:0:0:FFFF:192.168.0.137,
iqn.1994-04.jp.co.hitachi.h8m.t.00001.4b000,2,Normal end}],
Num. of Paths=4
+Num. of Volumes=2
```

Detailed Information

Item	Description
ExGroup	The number of the external volume group and the reference number assigned to the external volume of the external volume that the mapping path configuration has been changed. The number on the left of a dash (-) is the external volume number and the number on the right of the dash (-) is the reference number of the group.
PathGroup	The path group number of the external volume that the mapping path configuration has been changed
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end

Item	Description
	xxxx: Part code, *yyyyy*: Error code
Port	The port name of the local storage system
WWN	For connection through the fibre channel port, the WWN of the target port on the external storage system is indicated. For connection through the iSCSI port, a hyphen (-) is output.
IP Address	For connection through the iSCSI port, the IP address of the iSCSI port on the external storage system is indicated. For connection through the fibre channel port, a hyphen (-) is output.
iSCSI Target Name	For connection through the iSCSI port, the iSCSI target name on the external storage system is indicated. For connection through the fibre channel port, a hyphen (-) is output.
LUN	The LUN of the external volume
PathResult	The result of editing the path Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of Paths	The number of mapping path (Port-WWN-LUN) set
Num. of Volumes	The number of external volumes that the mapping path configuration has been changed

[UVM] Edit ES VOLs

Example 1: Change the cache mode

```
RMI AP,Task Name,[UVM],Edit ES VOLs,CacheMode,Normal end,
Seq.=xxxxxxxxxx
+{Group,Result}
=[{E1-1,Enable,Normal end},{E1-2,Enable,Normal end},
{E1-3,Enable,Normal end},{E1-4,Enable,Normal end}],
Num. of Groups=4
```

Example 2: Set the cache inflow control

```
RMI AP,Task Name,[UVM],Edit ES VOLs, InflowControl,
Normal end,Seq.=xxxxxxxxxx
+{Group,Mode,Result}=[{E1-1,Enable,Normal end},
{E1-2,Enable,Normal end},{E1-3, Enable,Normal end},
{E1-4, Enable,Normal end}],Num. of Groups=4
```

Basic Information for Example 1 and 2

Parameter	Description
CacheMode	The cache mode is changed.

Parameter	Description
InflowControl	The cache inflow control is set.

Detailed Information for Example 1 and 2

Item	Description
Group	External volume group number for the executed setting operation
Mode	Whether the setting is enabled or disabled Enable: Enabled, Disable: Disabled
Result	The result of operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of Groups	The number of external volumes groups configured

Example 3: Changing a load balance mode

```
RMI AP,Task Name,[UVM],Edit ES VOLs,LoadBalanceMode,
Normal end,Seq.=xxxxxxxxxx
+{Group,Mode,Result}=[{E1-1,Normal Round-robin,Normal end},
{E1-2,Normal Round-robin,Normal end}],Num. of Groups=2
```

Basic Information for Example 3

Parameter	Description
LoadBalanceMode	The load balance mode is changed.

Detailed Information for Example 3

Item	Description
Group	External volume group number for the executed setting operation
Mode	The load balance mode after the change Normal Round-robin, Extended Round-robin, or Disable will appear.
Result	The result of operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of Groups	The number of external volumes groups configured

Example 4: Changing ALUA Permitted

```
RMI AP,Task Name,[UVM],Edit ES VOLs,ALUA Permitted,
Normal end,Seq.=xxxxxxxxxx
+{Group,ALUA Permitted,Result}=[{E1-1,Enable,Normal end},
{E1-2,Enable,Normal end}],Num. of Groups=2
```

Basic Information for Example 4

Parameter	Description
ALUA Permitted	The ALUA Permitted is changed.

Detailed Information for Example 4

Item	Description
Group	The external volume group number of the external volume on which the setting is performed
ALUA Permitted	The ALUA permitted after the change Enable: enable, Disable: disable
Result	The result of operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of Groups	The number of external volume groups on which the setting is performed

[UVM] Edit External WWNs / iSCSI Targets

Example

```
RMI AP,Task Name,[UVM],Edit External WWNs / iSCSI Targets,,
Normal end,Seq.=xxxxxxxxxx
+{WWN,IP Address,iSCSI Target Name,I/O-TOV,Quedepth,LinkDown,Result}
=[{50060E8000C3E214,-,-,15,8,180,Normal end},
{-,192.168.0.136,iqn.1994-04.jp.co.hitachi.h8m.t.00001.2b000,
15,8,180,Normal end},
{-,FE80:0:0:0:0:0:0:1,iqn.1994-04.jp.co.hitachi.h8m.t.00001.3b000,
15,8,180,Normal end}],Num. of WWNs=3
```

Detailed Information

Item	Description
WWN	For connection through the fibre channel port, the WWN of the target port on the external storage system is indicated. For connection through the iSCSI port, a hyphen (-) is output.
IP Address	For connection through the iSCSI port, the IP address of the iSCSI port on the external storage system is indicated.

Item	Description
	For connection through the fibre channel port, a hyphen (-) is output.
iSCSI Target Name	For connection through the iSCSI port, the iSCSI target name on the external storage system is indicated. For connection through the fibre channel port, a hyphen (-) is output.
I/O-TOV	The I/O time over value setting
Quedepth	The Quedepth value (the number of commands issuable)
LinkDown	The Blocked Path Monitoring value
Result	The result of operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of WWNs	The number of WWNs setting of the external storage system

[UVM] Reconnect ES Paths

This logged information indicates that this Reconnect External Paths operation was only requested but not completed.

Example

```
RMI AP,Task Name,[UVM],Reconnect ES Paths,,Normal end,
Seq.=xxxxxxxxxx
+{Port,WWN,IP Address,iSCSI Target Name,Result}
=[{1A,50060E8000C3E214,-,-,Normal end},
{2A,-,192.168,0,136,
iqn.1994-04.jp.co.hitachi.h8m.t.00001.2b000,Normal end},
{3A,-,FE80:0:0:0:0:0:0:1,
iqn.1994-04.jp.co.hitachi.h8m.t.00001.3b000,Normal end}],
Num. of Paths=3
```

Detailed Information

Item	Description
Port	The port name of the local storage system
WWN	For connection through the fibre channel port, the WWN of the target port on the external storage system is indicated. For connection through the iSCSI port, a hyphen (-) is output.
IP Address	For connection through the iSCSI port, the IP address of the iSCSI port on the external storage system is indicated. For connection through the fibre channel port, a hyphen (-) is output.
iSCSI Target Name	For connection through the iSCSI port, the iSCSI target name on the external storage system is indicated.

Item	Description
	For connection through the fibre channel port, a hyphen (-) is output.
Result	The result of operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end where *xxxx*: Part code, *yyyyy*: Error code
Num. of Paths	The number of mapping paths that path status has been checked.

[UVM] Reconnect ES VOLs

If this operation is performed from Device Manager - Storage Navigator, this logged information indicates that the Reconnect External Volumes operation was only requested but not completed.

Example

```
RMI AP,Task Name,[UVM],Reconnect ES VOLs,,Normal end,
Seq.=xxxxxxxxxx
+{Group,Result}=[{E1-1,Normal end},{E1-2,Normal end},
{E1-3,Normal end},{E1-4,Normal end}],Num. of Groups=4
```

Detailed Information

Item	Description
Group	The group number of the external volume resumed
Result	The result of operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end *xxxx*: Part code, *yyyyy*: Error code
Num. of Groups	The number of external volumes resumed

Volume Migration Descriptions

For information on using Volume Migration, contact the Hitachi Data Systems Support Center.

[VM] Del Migration Plans

Example

```
RMI AP,,[VM],Del Migration Plans,,Normal end,
Seq.=xxxxxxxxxx
+{SourceVolume,TargetVolume,OwnerID,Result}
=[{0x00:0x00:0x00,0x00:0x00:0x01,0xFF,Normal end},
{0x00:0x00:0x02,0x00:0x00:0x03,0xFF,Error(xxxx-yyyyy)},
{0x00:0x00:0x04,0x00:0x00:0x05,-,Normal end},
```

```
{0x00:0x00:0x06,0x00:0x00:0x07,-,Error(xxxx-yyyyy)}],
Num. of Plans=4
```

Detailed Information

Item	Description
SourceVolume	The logical volume ID of the migration source. The number on the left of the colon is an LDKC number, the number between the colons is a CU number, and the number on the right of the colon is an LDEV number.
TargetVolume	The logical volume ID of the migration target. The number on the left of the colon is an LDKC number, the number between the colons is a CU number, and the number on the right of the colon is an LDEV number.
OwnerID	The application by which a migration plans to be deleted is set. 0x00: Device Manager - Storage Navigator 0x01: Command Control Interface 0xFF: Tiered Storage Manager A hyphen (-) is output, no matter which application is used for a migration plan to be set, if the plan is deleted from the Volume Migration window.
Result	The result of operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end, Not Execute: Not executed *where xxxx*: Part code, *yyyyy*: Error code
Num. of Plans	The number of migration plans deleted.

[VM] Migrate Volumes

This logged information indicates that the migration was only requested but not completed.

Example

```
RMI AP,,[VM],Migrate Volumes,,Normal end,
Seq.=xxxxxxxxxx
+{SourceVolume,TargetVolume,OwnerID,Migration Type,Result}
=[{0x00:0x00:0x00,0x00:0x00:0x01,0x00,Normal,Normal end},
{0x00:0x00:0x02,0x00:0x00:0x03,0xFF,Normal,Error(xxxx-yyyyy)},
{0x00:0x00:0x04,0x00:0x00:0x05,0x00,Normal,Normal end},
{0x00:0x00:0x06,0x00:0x00:0x07,0xFF,Normal,
Error(xxxx-yyyyy)}],Num. of VOLs=4
```

Detailed Information

Item	Description
SourceVolume	The logical volume ID of the migration source. The number on the left of the colon is an LDKC number, the number between the colons

Item	Description
	is a CU number, and the number on the right of the colon is an LDEV number.
TargetVolume	The logical volume ID of the migration target. The number on the left of the colon is an LDKC number, the number between the colons is a CU number, and the number on the right of the colon is an LDEV number. This value is output only when the migration plan is set.
OwnerID	The application by which a migration plans is set. 0x00: Device Manager - Storage Navigator 0x01: Command Control Interface 0xFF: Tiered Storage Manager
Migration Type	The migration type of the migration plan. Nondisruptive Migration: Nondisruptive Migration Normal: Normal
Result	The result of operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end, Not Execute: Not executed *where xxxx*: Part code, *yyyyy*: Error code
Num. of VOLs	The number of migration volumes.

Virtual Partition Manager Descriptions

[VPM] Edit CLPR

Example

```
RMI AP,,[VPM],Edit CLPR,,Normal end,
Seq.=xxxxxxxxxx
+CLPR=0:CLPR0,Total Cache Size=15360
++PG=[1-1,1-2,1-3,1-4],Num. of PGs=4
+Num. of CLPRs=1
```

Detailed Information

Item	Description
CLPR	The CLPR ID and the CLPR name
Total Cache Size	The cache capacity setting. The unit is megabyte (MB).
PG	The parity group number assigned to CLPR E1-1: In the case of an external volume V1-1: In the case of a virtual volume X1-1: In the case of a Dynamic Provisioning volume

Item	Description
Num. of PGs	The number of parity groups assigned to CLPR
Num. of CLPRs	The number of CLPRs configured

Volume Shredder Descriptions

[VS] Abort Shredding

Example

```
RMI AP,Task Name,[VS],Abort Shredding,,Normal end,
Seq.=xxxxxxxxxx
+OwnerID=0
```

Detailed Information

Item	Description
OwnerID	The owner ID 0: Indicates Device Manager - Storage Navigator 0xXX: Owner ID is expressed in two hexadecimal digits.

[VS] End Shredding

Example

```
MPC,,[VS],End Shredding,,Normal end,,Seq.=xxxxxxxxxx
+{Times,Result}
=[{1,Normal},{2,Normal},{3,Normal}],Num. of Data=3
```

Detailed Information

Item	Description
Times	The order of the shredding processes. A number from 1 to 8 is displayed.
Result	The result of the shredding processes. Normal: Normal end. Failed: Abnormal end. Aborted: Operation aborted. Not executed: Not executed. Data transfer error: An error occurred while outputting the result to the file. Data verify error: The error occurred in verifying the data. No data assigned: No data.

Item	Description
Num. of Data	The number of shredding processes

[VS] Shred LDEVs

This logged information indicates that the Shredding operation was only requested but not completed.

Example

```
RMI AP,Task Name,[VS],Shred LDEVs,,Normal end,
Seq.=xxxxxxxxxx
+OwnerID=0
+{Data, Output File}
=[{0xffff,Disable},{Random,Disable},{0x00,Enable}],
Num. of Data=3
+Output LDEV=[0x00:0x00:0x00,0x00:0x00:0x01,0x00:0x00:0x02],
Num. of LDEVs=3
+Shred LDEV=[0x00:0x00:0x00,0x00:0x00:0x01,0x00:0x00:0x02],
Num. of LDEVs=3
```

Detailed Information

Item	Description
OwnerID	The owner ID 0: Indicates Device Manager - Storage Navigator 0xXX: Owner ID is expressed in two digits of the hexadecimal format
Data	The shredding data pattern Random: Random, 0xXXXX: Define
Output File	Whether the result of shredding is output to the file Disable: No output, Enable: Output
Num. of Data	The number of shredding data patterns
Output LDEV	Indicates LDEVs whose shredding results are output to the file
Num. of LDEVs	The number of target LDEVs of Data Output
Shred LDEV	The LDEV to be shredded
Num. of LDEVs	The number of LDEVs to be shredded

13

VSP Gx00 models, VSP Fx00 models audit log examples of encryption key operations

This topic provides examples and descriptions of the audit logs produced by data encryption operations. The descriptions are listed alphabetically by function name and operation name.

- ENC Descriptions
- KEK Acquisition Descriptions

ENC Descriptions

[ENC] Add keys to DKC

Add keys to DKC is output when an encryption key created on the key management server is added to the storage system or when the key management server is enabled in the encryption environmental settings from the initial setting.

Example

```
RMI AP,Task Name,[ENC],Add keys to DKC,,Normal end,
Seq.=xxxxxxxxxx
+{Num. of Keys}=[1]
```

Detailed Information

Item	Description
Num. of Keys	The number of created encryption keys

[ENC] Backup Keys

Backup Keys is output when back up information of encryption keys is created in the storage system in order to externally back up. It does not necessarily mean that the back up information is backed up normally on the file or the key management server even if Normal End is displayed.

Example

```
RMI AP,Task Name,[ENC],Backup Keys,,Normal end,
Seq.=xxxxxxxxxx
```

[ENC] Backup Keys to File

Backup Keys to File is output when encryption key information created in the storage system is written to the file. It does not necessarily mean that the encryption key information is backed up on the file normally even if Normal End is displayed.

Example

```
RMI AP,Task Name,[ENC], Backup Keys to File,,Normal end,
Seq.=xxxxxxxxxx
```

[ENC] Backup Keys to Serv

Backup Keys to Serv is output when encryption key information created in the storage system is backed up on the key management server. Even if Normal End is displayed, it merely means that the key management server received the request for backup and does not necessarily means that the encryption key information is backed up normally.

Example

```
RMI AP,Task Name,[ENC], Backup Keys to Serv,,Normal end,
Seq.=xxxxxxxxxx
+{UUID,Backup Date,Description,Result,Server_Reply}
=[{3E2332580B110E052D13C378866427A218EF1609881BC058FCBCF79FCD
7727C7,2013/07/06 09:20:37,BACK0706,Normal end,-}],
Num. of Keys=1
```

Detailed Information

Item	Description
UUID	The UUID of the encryption key to be backed up on the key management server
Backup Date	The date and time entered into the backup information when an encryption key is backed up on the key management server
Description	The description set in the backup information when an encryption key is backed up on the key management server
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end
Server_Reply	The return value from the key management server A hyphen (-) is displayed unless an error occurred while processing. For details on return values, see the manuals for each key management server.
Num. of Keys	The number of encryption keys to be backed up This value is fixed to "1" because all of the created encryption keys are backed up as one key.

[ENC] Change CEK Status

Change CEK Status is output asynchronous with the Device Manager - Storage Navigator operations.

Example

```
,,[ENC],Change CEK Status,,Normal end,,,Seq.=xxxxxxxxxx
```

[ENC] Change DEK Status

Change DEK Status is output asynchronous with the Device Manager - Storage Navigator operations.

Example

```
,,[ENC],Change DEK Status,,Normal end,Seq.=xxxxxxxxxx
```

[ENC] Clear Keys

Clear Keys is output asynchronous with the Device Manager - Storage Navigator operations.

Example

```
,,[ENC],Clear Keys,,Normal end,Seq.=xxxxxxxxxx
```

[ENC] Create KEK Dynamic

Create KEK Dynamic is output when a key encryption key is updated or when the key management server is enabled in the encryption environmental settings.

Example

```
RMI AP,Task Name,[ENC], Create KEK Dynamic,,Normal end,
Seq.=xxxxxxxxxx
+{UUID,Result,Server_Reply}
=[{C53F242C7DCC27CC9698A72413C1C4DC280A757FDF93CED8AEBDF8807A
79A06D,Normal end,-}],Num. of Keys=1
```

Detailed Information

Item	Description
UUID	The UUID of the created encryption key
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end
Server_Reply	The return value from the key management server A hyphen (-) is displayed unless an error occurred while processing. For details on return values, see the manuals for each key management server.
Num. of Keys	The number of created encryption keys

[ENC] Create Keys

Create Keys is output when an encryption key is created on the storage system or when the key management server is disabled in the encryption environmental settings from the initial setting.

Example

```
RMI AP,Task Name,[ENC],Create Keys,,Normal end,
Seq.=xxxxxxxxxx
+{Num. of Keys}=[1]
```

Detailed Information

Item	Description
Num. of Keys	The number of created encryption keys

[ENC] Create Keys

Create Keys is output asynchronous with the Device Manager - Storage Navigator operations.

Example

```
,,[ENC],Create Keys,,Normal end,Seq.=xxxxxxxxxx
```

[ENC] Create Keys On Serv

Create Keys On Serv is output when a key encryption key or an encryption key is created on the key management server or when the key management server is enabled in the encryption environmental settings from the initial setting.

Example 1: Creating encryption keys

```
RMI AP,Task Name,[ENC], Create Keys On Serv,,Normal end,
Seq.=xxxxxxxxxx
+{UUID,Tweak_UUID,Result,Server_Reply}
=[{30708B5A94F5BE54DA84E0CB55BD2CFE5ABEBECBD8309B02EB1B71F17F805617,
94DA26FE13EF6196EF15A3CCCD333CD63D6867E57CF5BD5EB3CB9DF2CDE7CE1A,
Normal end,-}],Num. of Keys=1
```

Detailed Information for Example 1

Item	Description
UUID	The UUID of the created encryption key on the key management server A hyphen (-) is displayed when an error occurred while processing.
Tweak_UUID	The UUID of the created encryption key for Tweak on the key management server A hyphen (-) is displayed when an error occurred while processing.
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end
Server_Reply	The return value from the key management server A hyphen (-) is displayed unless an error occurred while processing. For details on return values, see the manuals for each key management server.
Num. of Keys	The number of created encryption keys

Example 2: Creating key encryption keys

```
RMI AP,Task Name,[ENC], Create Keys On Serv,,Normal end,
Seq.=xxxxxxxxxx
+{Key Type,UUID,Result,Server_Reply}
=[{KEK,4365A0465C69FA96DF64C9BBB77122E9AB65D4D6A2E9BBDE5987EAB
86A0FE94E,Normal end,-}],Num. of Keys=1
```

Detailed Information for Example 2

Item	Description
Key Type	The purpose of the use of the created key KEK: key encryption keys (used as a key wrapping key)
UUID	The UUID of the created encryption key on the key management server A hyphen (-) is displayed when an error occurred while processing.
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end
Server_Reply	The return value from the key management server A hyphen (-) is displayed unless an error occurred while processing. For details on return values, see the manuals for each key management server.
Num. of Keys	The number of created keys

[ENC] DEK assign SpareDisk

DEK assign SpareDisk is output when encryption settings are edited in the encryption environmental settings from the initial setting.

Example

```
RMI AP,Task Name,[ENC],DEK assign SpareDisk,,Normal end,
Seq.=xxxxxxxxxx
```

[ENC] DEK delete

DEK delete is output when encryption environment settings are initialized.

Example

```
RMI AP,Task Name,[ENC],DEK delete,,Normal end,
Seq.=xxxxxxxxxx
```

[ENC] Delete KEK Dynamic

Delete KEK Dynamic is output when a key encryption key is updated or when the key management server is changed from Enable to Disable in the encryption environmental settings.

Example

```
RMI AP,Task Name,[ENC], Delete KEK Dynamic,,Normal end,
Seq.=xxxxxxxxxx
+{UUID,Result,Server_Reply}=
[{C53F242C7DCC27CC9698A72413C1C4DC280A757FDF93CED8AEBDF8807A79A06D
,Normal end,-}],Num. of Keys=1
```

Detailed Information

Item	Description
UUID	The UUID of the deleted encryption key
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end
Server_Reply	The return value from the key management server A hyphen (-) is displayed unless an error occurred while processing. For details on return values, see the manuals for each key management server.
Num. of Keys	The number of deleted encryption keys

[ENC] Delete Keys

Delete Keys is output when encryption keys are deleted.

Example

```
RMI AP,Task Name,[ENC],Delete Keys,,Normal end,
Seq.=xxxxxxxxxx
+{Key ID}=[1,2],Num. of Keys=2
```

Detailed Information

Item	Description
Key ID	A deleted encryption key number
Num. of Keys	The number of deleted encryption keys

[ENC] Delete Keys

Delete Keys is output asynchronous with the Device Manager - Storage Navigator operations.

Example

```
,,[ENC],Delete Keys,,Normal end,Seq.=xxxxxxxxxx
```

[ENC] Delete Keys on Serv

Delete Keys on Serv is output when the key management server has received the request for deletion even if Normal End is displayed, which does not mean that encryption keys are deleted normally.

Example

```
RMI AP,Task Name,[ENC], Delete Keys on Serv,,Normal end,
Seq.=xxxxxxxxxx
+{UUID,Backup Date,Description,Result,Server_Reply}=
```

```
[{FBC095D54493A45CAC4BE80EECD1BE51D7E0D4023D377D37B0BFDE72B887CED9
,2013/07/06 09:13:18,BACK0706,Normal end,-}],Num. of Keys=1
```

Detailed Information

Item	Description
UUID	The UUID of the encryption key to be deleted
Backup Date	The date and time of the backup information for the encryption key to be deleted
Description	The description of the backup information for the encryption key to be deleted
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end
Server_Reply	The return value from the key management server A hyphen (-) is displayed unless an error occurred while processing. For details on return values, see the manuals for each key management server.
Num. of Keys	The number of encryption keys to be deleted

[ENC] Edit Encryption

Edit Encryption is output when encryption settings for a parity group are edited or deleted.

Example

```
RMI AP,Task Name,[ENC],Edit Encryption,,Normal end,
Seq.=xxxxxxxxxx
+{PG,Encryption}=[{XX-XX,Enable},{XX-XX,Disable}],Num. of PGs=2
```

Detailed Information

Item	Description
PG	A parity group number
Encryption	The status of encryption Enable: Encryption is enabled Disable: Encryption is disabled
Num. of PGs	The number of parity groups

[ENC] Edit ENC Settings

Edit ENC Settings is output when the encryption environmental settings are edited.

Example

```
RMI AP,Task Name,[ENC],Edit ENC Settings,,Normal end,
Seq.=xxxxxxxxxx
+{KMS, Generate ENC Keys on KMS, Protect the KEK at the KMS}
=[No Set, No, No],Num. of Settings=1
```

Detailed Information

Item	Description
KMS	Indicates whether the key management server is used No Set: Not set Enable: The key management server is used Disable: The key management server is not used
Generate ENC Keys on KMS	Indicates where the encryption keys are created Yes: The keys are created on the key management server No: The keys are created on the storage system
Protect the KEK at the KMS	Indicates whether the key encryption keys created on the key management server are to be stored on the storage system Yes: The keys are stored on the storage system Yes (Disable Local Key Generation): The keys are stored but Local Key Generation is disabled No: The keys are not stored
Num. of Settings	The number of configured encryption environment settings

[ENC] Edit Password Policy

Edit Password Policy is output when the password policy for backing up encryption keys is edited.

Example

```
RMI AP,Task Name,[ENC], Edit Password Policy,,Normal end,
Seq.=xxxxxxxxxx
+{Numeric Characters (0-9),Uppercase Characters (A-Z),
Lowercase Characters (a-z),Symbols,Total}={1,2,3,4,10},
Num. of Settings=1
```

Detailed Information

Item	Description
Numeric Characters (0-9)	Indicates the minimum number of numeric characters used for the password
Uppercase Characters (A-Z)	Indicates the minimum number of uppercase characters used for the password

Item	Description
Lowercase Characters (a-z)	Indicates the minimum number of lowercase characters used for the password
Symbols	Indicates the minimum number of symbols used for the password
Total	Indicates the minimum number of total characters used for the password
Num. of Settings	The number of configured password policies

[ENC] Register KEK Dynamic

Register KEK Dynamic is output when a key encryption key is updated or when the key management server is enabled in the encryption environmental settings.

Example

```
RMI AP,Task Name,[ENC], Register KEK Dynamic,,Normal end,
Seq.=xxxxxxxxxx
+{UUID,Result,Server_Reply}=
[{B75E9D1699659C10B088E027798ACB082F1375AF2FF613229F15E9FE70D1EC4D
,Normal end,-}],Num. of Keys=1
```

Detailed Information

Item	Description
UUID	The UUID of the registered encryption key
Result	The result of the operation Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end
Server_Reply	The return value from the key management server A hyphen (-) is displayed unless an error occurred while processing. For details on return values, see the manuals for each key management server.
Num. of Keys	The number of registered encryption keys

[ENC] Rekey CEK

Rekey CEK is output when a certificate encryption key is updated, or when encryption settings are edited from the initial setting or initialized.

Example

```
RMI AP,Task Name,[ENC],Rekey CEK,,Normal end,
Seq.=xxxxxxxxxx
```

[ENC] Rekey KEK Dynamic

Rekey KEK Dynamic is output when a key encryption key is updated.

Example

```
RMI AP,Task Name,[ENC],Rekey KEK Dynamic,,Normal end,
Seq.=xxxxxxxxxx
```

[ENC] Restore Keys

Restore Keys is output when encryption key information in the storage system is restored with key information obtained externally.

Example

```
RMI AP,Task Name,[ENC],Restore Keys,,Normal end,
Seq.=xxxxxxxxxx
```

[ENC] Restore Keys fr File

Restore Keys fr File is output when encryption key information is obtained from the backup file.

Example

```
RMI AP,Task Name,[ENC], Restore Keys fr File,,Normal end,
Seq.=xxxxxxxxxx
```

[ENC] Restore Keys fr Serv

Restore Keys fr Serv is output when the backup of encryption key information is obtained from the key management server.

Example

```
RMI AP,Task Name,[ENC], Restore Keys fr Serv,,Normal end,
Seq.=xxxxxxxxxx
+{UUID,Backup Date,Description,Result,Server_Reply}=
[{FBC095D54493A45CAC4BE80EECD1BE51D7E0D4023D377D37B0BFDE72B887CED9
,2013/07/06 09:13:18,BACK0706,Normal end,-}],Num. of Keys=1
```

Detailed Information

Item	Description
UUID	The UUID of the encryption key that is used for restoring on the key management server
Backup Date	The date and time entered into the backup information for the encryption key that is used for restoring
Description	The contents of Description in the backup information for the encryption key that is used for restoring
Result	The result of the operation

Item	Description
	Normal end: Normal end, Error(*xxxx-yyyyy*): Abnormal end
Server_Reply	The return value from the key management server A hyphen (-) is displayed unless an error occurred while processing. For details on return values, see the manuals for each key management server.
Num. of Keys	The number of encryption keys that are used for restoring This value is fixed to "1" because all of the encryption keys that are used for restoring are backed up as one key.

[ENC] Retry KEK Dynamic

Retry KEK Dynamic is output when a key encryption key is reacquired.

Example

```
RMI AP,Task Name,[ENC],Retry KEK Dynamic,,Normal end,
Seq.=xxxxxxxxxx
```

[ENC] Set Up Key Mng Serv

Set Up Key Mng Serv is output when encryption environmental settings are edited.

Example 1: Using a key management server

```
RMI AP,Task Name,[ENC], Set Up Key Mng Serv,,Normal end,
Seq.=xxxxxxxxxx
+{Server Type,Key Management Server,Host Name,Port Number,
Timeout,Retry Interval,Number of Retries,
Client Certificate File Name,Root Certificate File Name}
=[{Primary,Enable,10.213.75.37,5696,10,1,3,,},
{Secondary,Enable,10.213.75.37,5696,10,1,3,,}],
Num. of Servers=2
```

Example 2: Not using a key management server

```
RMI AP,Task Name,[ENC], Set Up Key Mng Serv,,Normal end,
Seq.=xxxxxxxxxx
+{Server Type,Key Management Server}=
[{Primary,Disable},{Secondary,Disable}],Num. of Servers=2
```

Example 3: Initializing a encryption environmental settings

```
RMI AP,Task Name,[ENC], Set Up Key Mng Serv,,Normal end,
Seq.=xxxxxxxxxx
+{Server Type,Key Management Server}
=[{Primary,No Set},{Secondary,No Set}],Num. of Servers=2
```

Detailed Information

Item	Description
Server Type	The type of the key management server Primary: primary server, Secondary: secondary server
Key Management Server	Indicates whether the key management server is used Enable: The server is used Disable: The server is not used No Set: The encryption environmental settings are to be initialized
Host Name	The address of the key management server
Port Number	The port number of the key management server
Timeout	The communication timeout time to the key management server
Retry Interval	The retry interval to communicate with the key management server
Number of Retries	The number of retries to communicate with the key management server
Client Certificate File Name	The file name of the client certificate
Root Certificate File Name	The file name of the root certificate
Num. of Servers	The number of the configured key management servers

[ENC] Use Keys for CEK/KEK

Use Keys for CEK/KEK is output asynchronous with the Device Manager - Storage Navigator operations.

Example

```
,,[ENC],Use Keys for CEK/KEK,,Normal end,Seq.=xxxxxxxxxx
```

KEK Acquisition Descriptions

[KEK Acquisition] Acquisition Key

Acquisition Key is output when the storage system obtains KEK Dynamic from the key management server after the power is turned on again with the KMIP mode set to ON.

Example

```
RMI AP,Task Name,[KEK Acquisition],Acquisition Key,,Normal end,
Seq.=xxxxxxxxxx
```

[KEK Acquisition] Set Key

Set Key is output when KEK Dynamic is configured for the storage system after the power is turned on again with the KMIP mode set to ON.

Example

```
RMI AP,Task Name,[KEK Acquisition],Set Key,,Normal end,
Seq.=xxxxxxxxxx
```

14

Audit log examples of commands received by VSP Gx00 models, VSP Fx00 models

This topic provides examples and descriptions of the audit logs when a storage system receives commands sent from hosts, or computers using Command Control Interface software. The descriptions are listed alphabetically by function name and operation name.

- Config Command
- FC-SP
- User Auth

Config Command

The following shows examples and descriptions of the audit logs when a storage system receives commands sent from hosts or computers using CCI.

Add CHAP User

Example 1: Adding the CHAP user name on the target side

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Add CHAP User
++Port=1A,Target ID=0xBB,Target CHAP User=XXXXXX,
Virtual Storage Machine S/N=423456
```

Detailed Information 1

Item	Description
Command	The command name
Port	The name of a port to which an iSCSI target, to which a CHAP user is added, belongs
Target ID	The iSCSI target ID
Target CHAP User	The CHAP user name on the target side
Virtual Storage Machine S/N	The serial number of the virtual storage machine No value is output when a virtual storage machine is not specified.

Example 2: Adding the CHAP user name on the initiator side

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Add CHAP User
++Port=1A,Target ID=0xBB,Initiator CHAP User=XXXXXX,
Virtual Storage Machine S/N=423456
```

Detailed Information 2

Item	Description
Command	The command name
Port	The name of a port to which an iSCSI target, to which a CHAP user is added, belongs
Target ID	The iSCSI target ID
Initiator CHAP User	The CHAP user name on the initiator side
Virtual Storage Machine S/N	The serial number of the virtual storage machine No value is output when a virtual storage machine is not specified.

Add Copy Group

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Add Copy Group
++Copy Group=AAAAAAA
++Device Group={BBBBBB,CCCCCC},Num. of Device Groups=2,
MU={10,11},JNL={0x020,0x021}
```

Detailed Information

Item	Description
Command	The command name
Copy Group	The name of a copy group to be registered
Device Group	The name of a device group to be registered
Num. of DeviceGroups	The number of device groups to be registered
MU	The MU number to be registered
JNL	The journal number to be registered

Add Device Group

Add Device Group is an audit log generated when a command operation is performed with the DKCMAIN firmware version earlier than 83-04-0X-XX/XX.

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Add Device Group
++Device Group=AAAAAAAA
++LDEV(LDKC:CU:LDEV)={0x00:0xAA:0xBB,0x00:0xCC:0xDD,……,
0x00:0xEE:0xFF},Num. of LDEVs=X
```

Detailed Information

Item	Description
Command	The command name
Device Group	The name of a device group to be registered When an LDEV is added, the name of the device group to which the LDEV is added is output
LDEV(LDKC:CU:LDEV)	The LDEV IDs for LDEVs to be added to the device group
Num. of LDEVs	The number of LDEVs to be added to the device group

Add Device Group(Name)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Add Device Group(Name)
++Device Group=AAAAAAAA,,Device Name=XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX
++LDEV(LDKC:CU:LDEV)={0x00:0xAA:0xBB,0x00:0xCC:0xDD,……,
0x00:0xEE:0xFF},Num. of LDEVs=X
```

Detailed Information

Item	Description
Command	The command name
Device Group	The name of a device group to be operated
Blank item	Nothing is output due to unused.
Device Name	The name of a device to be assigned to LDEVs
LDEV(LDKC:CU:LDEV)	The LDEV IDs for LDEVs to be added to the device group
Num. of LDEVs	The number of LDEVs to be added to the device group

Add DP Pool

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Add DP Pool
++Pool ID=AA,Pool Name=AAAAAA,Warning Threshold(%)=85,
High water mark Threshold(%)=85
++LDEV(LDKC:CU:LDEV)={0x00:0xAA:0xBB,0x00:0xCC:0xDD,……,
0x00:0xEE:0xFF},Num. of LDEVs=X
```

Detailed Information

Item	Description
Command	The command name
Pool ID	The pool number of a pool for Dynamic Provisioning to be created
Pool Name	The pool name of a pool for Dynamic Provisioning to be created
Warning Threshold(%)	The warning threshold of the usage rate of a pool for Dynamic Provisioning to be created
High water mark Threshold(%)	The depletion threshold of a pool for Dynamic Provisioning to be created
LDEV(LDKC:CU:LDEV)	The LDEV IDs for LDEVs of a pool volume
Num. of LDEVs	The number of pool volumes

Add External Group

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Add External Group
++PG=E1-1,Port=1A,WWN=AAAAAAAA,Path Group ID=A,LUN=A,
Emulation=xxxxxxxx,Migration=Enable,CLPR=3,
Data Direct Mapping=Enable
```

Detailed Information

Item	Description
Command	The command name
PG	The external volume group number
Port	The port name of the storage system (connection source)
WWN	The WWN of the storage system (connection target)
Path Group ID	The path group ID
LUN	The LU number of the external volume
Emulation	The emulation type of the mapped external volume
Migration	The setting status of the nondisruptive migration function Enable: Enabled, Disable: Disabled
CLPR	The CLPR ID
Data Direct Mapping	The setting status of the data direct mapping attribute Enable: Enabled, Disable: Disabled

Add External iSCSI Name/Modify External CHAP User

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Add External iSCSI Name/Modify External CHAP User
++Port=3B,iSCSI Name=iqn.1994-04.jp.co.hitachi:rsd.h8h.t.00001.4b000,
TCP Port=3260,IP Address=192.168.0.169,CHAP User=user1,
User Auth Switch=Enable,Auth Mode=Unidirectional
```

Detailed Information

Item	Description
Command	The command name
Port	The name of the port to which the iSCSI initiator belongs
iSCSI Name	The iSCSI name
TCP Port	The TCP port number

Item	Description
	If this item is not specified by the command option, the TCP port number of the iSCSI target on the port is output.
IP Address	The IP address of the port on the external system
CHAP User	The CHAP user name to be set for Secret When the iSCSI name of the external storage system is added, a hyphen (-) is output.
User Auth Switch	The setting status of CHAP authentication Enable: CHAP authentication is enabled. Disable: CHAP authentication is disabled. When the iSCSI name of the external storage system is changed, a hyphen (-) is output.
Auth Mode	The CHAP authentication mode Unidirectional: One-way CHAP authentication Mutual: Mutual-way CHAP authentication When the iSCSI name of the external storage system is changed, a hyphen (-) is output.

Add HBA iSCSI

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Add HBA iSCSI
++Port=1A,Target ID=0xBB,iSCSI Name=ABCDEF,
Virtual Storage Machine S/N=423456
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port to which iSCSI targets are added, or on which iSCSI targets are changed When a virtual storage machine is specified, the port name of the virtual storage machine is output
Target ID	The iSCSI target ID
iSCSI Name	The iSCSI name of the host bus adapter
Virtual Storage Machine S/N	The serial number of the virtual storage machine No value is output when a virtual storage machine is not specified.

Add Host Group

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Add Host Group
++Port=1A,Host Group ID=0xXXX,Host Group Name=XXXXXX,
Virtual Storage Machine S/N=423456
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port to which a host group is added When a virtual storage machine is specified, the port name of the virtual storage machine is output.
Host Group ID	The host group ID to be added
Host Group Name	The name of the host group to be added
Virtual Storage Machine S/N	The serial number of the virtual storage machine No output when a virtual storage machine is not specified

Add Host Group(iSCSI)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Add Host Group(iSCSI)
++Port=1A,Target Alias=XXXXXX,iSCSI Name=YYYYYYYY,Auth Mode=Chap,
Chap Mutual=Enable,Virtual Storage Machine S/N=423456
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port to which the host group is added When a virtual storage machine is specified, the port name of the virtual storage machine is output.
Target Alias	The alias to be added
iSCSI Name	The iSCSI name to be added
Auth Mode	The setting status of the CHAP authentication mode Chap: CHAP authentication is enabled None: CHAP authentication is disabled Both: Connection is available both with and without CHAP authentication
Chap Mutual	CHAP authentication is unidirectional or bidirectional

Item	Description
	Enable: Set to bidirectional authentication mode Disable: Set to the unidirectional authentication mode
Virtual Storage Machine S/N	The serial number of the virtual storage machine No value is output when a virtual storage machine is not specified.

Add Journal(Ldev)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Add Journal(Ldev)
++JNL=0x001,JNL Kind=Open,MP Blade ID=0,Timer Type=
++LDEV(LDKC:CU:LDEV)={0x00:0xAA:0xBB,0x00:0xCC:0xDD,……,
0x00:0xEE:0xFF},Num. of LDEVs=X
```

Detailed Information

Item	Description
Command	The command name
JNL	The journal number
JNL Kind	The journal kind of the system Open: Open system, MF: Mainframe system "MF" is output when Timer Type is specified
MP Blade ID	The MP unit ID When the MP unit ID is not specified, a hyphen (-) is output.
Timer Type	The clock type used for consistency time System: The system clock of the main frame host on the primary site Local: No system clock is used. None: The system clock of the main frame host on the primary site when data is copied from the storage system on the secondary site to the one on the primary site No value is output if JNL Kind is Open.
LDEV(LDKC:CU:LDEV)	The LDEV IDs of a journal volume to be created
Num. of LDEVs	The number of journal volumes to be created

Add Ldev

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Add Ldev
```

```
++PG=1-1,LDEV(LDKC:CU:LDEV)=0x00:0xAA:0xBB,Emulation=OPEN-3,
Size=200 Capacity,Location=10000000,MP Blade ID=0,T10PI=Disable
```

Detailed Information

Item	Description
Command	The command name
PG	The parity group number to which an LDEV to be created belongs If the LDEV to be created is an external volume, "E" is added on the top of the external volume group number.
LDEV(LDKC:CU:LDEV)	The LDEV ID of the LDEV to be created
Emulation	The type of emulation
Size	The capacity and method for specifying the capacity of an LDEV to be created *Specifying the capacity* • Capacity: Specify a capacity by the byte or block. Units, byte or block, are not output. If a capacity is specified by the kilobyte, megabyte, gigabyte, or terabyte, the capacity is output on a byte basis. • Offset-Capacity: Specify a capacity by the byte or block, and then the storage system corrects the capacity. Units, byte or block, are not output. If a capacity is specified by the kilobyte, megabyte, gigabyte, or terabyte, the capacity is output on a byte basis. • Cylinder: Specify a capacity by the cylinder. • ALL Capacity: All free space is assigned to the LDEV capacity. The capacity value is not output. For details, see the section describing CV size calculation in *Provisioning Guide for Hitachi Virtual Storage Platform Gx00 and Fx00 Models*.
Location	The starting point of an LDEV to be created in the parity group or external volume group
MP Blade ID	The MP unit ID
T10PI	The setting status of T10 PI attribute Enable: Enabled, Disable: Disabled

Add Ldev(Dynamic Provisioning)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Add Ldev(Dynamic Provisioning)
++Pool ID=127,LDEV(LDKC:CU:LDEV)=0x00:0xAA:0xBB,
Emulation=OPEN-V,Size=200 Capacity,MP Blade ID=0,CLPR=1,
TSE=Enable,Full Allocation=Enable,
Data Direct Mapping LDEV(LDKC:CU:LDEV)=,T10PI=Enable,
Capacity Saving=Deduplication Compression
```

Detailed Information

Item	Description
Command	The command name
Pool ID	The pool number of a pool to which a virtual volume of Dynamic Provisioning to be created belongs No value is output when the data direct mapping attribute is enabled.
LDEV(LDKC:CU:LDEV)	The LDEV ID of an LDEV to be created.
Emulation	The type of emulation
Size	The capacity and method for specifying the capacity of an LDEV to be created *Specifying the capacity* • Capacity: Specify a capacity by the byte or block. Units, byte or block, are not output. If a capacity is specified by the kilobyte, megabyte, gigabyte, or terabyte, the capacity is output on a byte basis. • Offset-Capacity: Specify a capacity by the byte or block, and then the storage system corrects the capacity. Units, byte or block, are not output. If a capacity is specified by the kilobyte, megabyte, gigabyte, or terabyte, the capacity is output on a byte basis. • Cylinder: Specify a capacity by the cylinder. • ALL Capacity: All free space is assigned to the LDEV capacity. The capacity value is not output. For details, see the section describing CV size calculation in *Provisioning Guide for Hitachi Virtual Storage Platform Gx00 and Fx00 Models*.
MP Blade ID	The MP unit ID of an LDEV to be created
CLPR	The CLPR ID
TSE	The setting status of TSE attribute Enable: Enabled, Disable: Disabled
Full Allocation	The setting status of the full allocation Enable: Enabled, Disable: Disabled
Data Direct Mapping LDEV(LDKC:CU:LDEV)	The LDEV ID of a pool volume with the data direct mapping attribute when the data direct mapping attribute is enabled. No value is output when the data direct mapping attribute is disabled.
T10PI	The setting status of T10 PI attribute Enable: Enabled, Disable: Disabled
Capacity Saving	The setting status of capacity saving Disable: Capacity saving is disabled, Compression: Compression is enabled, Deduplication Compression: Deduplication and compression are enabled

Add Ldev(Snapshot)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Add Ldev(Snapshot)
++LDEV(LDKC:CU:LDEV)=0x00:0xAA:0xBB,Emulation=OPEN-V,
Size=200 Capacity,MP Blade ID=0,CLPR=1,T10PI=Disable
```

Detailed Information

Item	Description
Command	The command name
LDEV(LDKC:CU:LDEV)	The LDEV ID of an LDEV to be created
Emulation	The emulation type
Size	The capacity and method for specifying the capacity of an LDEV to be created *Specifying the capacity* • Capacity: Specify a capacity by the byte or block. Units, byte or block, are not output. If a capacity is specified by the kilobyte, megabyte, gigabyte, or terabyte, the capacity is output on a byte basis. • Offset-Capacity: Specify a capacity by the byte or block, and then the storage system corrects the capacity. Units, byte or block, are not output. If a capacity is specified by the kilobyte, megabyte, gigabyte, or terabyte, the capacity is output on a byte basis. • Cylinder: Specify a capacity by the cylinder. • ALL Capacity: All free space is assigned to the LDEV capacity. The capacity value is not output. For details, see the section describing CV size calculation in *Provisioning Guide for Hitachi Virtual Storage Platform Gx00 and Fx00 Models*.
MP Blade ID	The MP unit ID of an LDEV to be created
CLPR	The CLPR ID
T10PI	The setting status of T10 PI attribute Enable: Enabled, Disable: Disabled

Add License

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Add License
++Key Code=xxx
```

Detailed Information

Item	Description
Command	The command name
Key Code	The license key code

Add LUN

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Add LUN
++Port=1A,Host Group ID=0x1AA,LUN=2,
LDEV(LDKC:CU:LDEV)=0x00:0xAA:0xBB,
Virtual Storage Machine S/N=423456,Command Device=Enable
++Additional Port(Port,Host Group ID,LUN)
=[{1B,0x1AA,2},{1C,0x1AA,2}],Num. of Paths=2
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port to which an LU is added When a virtual storage machine is specified, the port name of the virtual storage machine is output.
Host Group ID	The ID of a host group to which an LU is added
LUN	The LU number to be added
LDEV(LDKC:CU:LDEV)	The LDEV ID of an LDEV to be set as an LU.
Virtual Storage Machine S/N	The serial number of the virtual storage machine No output when a virtual storage machine is not specified
Command Device	The setting status of the command device attribute Enable: Enabled, Disable: Disabled
Additional Port(Port,Host Group ID,LUN)	The port name, the host group ID, and the LU number for the LU path to be added If it is not specified by the command option, the index itself is not output.
Num. of Paths	The number of LU paths to be added If it is not specified by the command option, the index itself is not output.

Add Parity Group

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Add Parity Group
++PG=1-1,Drive Location={0-0,0-1,0-2,0-3,0-4,0-5,0-6,0-7}
++PG=1-2,Drive Location={1-0,1-1,1-2,1-3,1-4,1-5,1-6,1-7}
++PG=1-3,Drive Location={2-0,2-1,2-2,2-3,2-4,2-5,2-6,2-7}
++PG=1-4,Drive Location={3-0,3-1,3-2,3-3,3-4,3-5,3-6,3-7}
++Num. of PGs=4
++RAID Level=7D+1P,CLPR=1,Encryption=Disable,Copy
Back=Disable,Accelerated Compression=Enable
```

Detailed Information

Item	Description
Command	The command name
PG	The parity group number
Drive Location	The drive location
PG	The parity group number 2 This index is not displayed if the number of the parity groups are less than 2.
Drive Location	The drive location 2 This index is not displayed if the number of the parity groups are less than 2.
PG	The parity group number 3 This index is not displayed if the number of the parity groups are less than 3.
Drive Location	The drive location 3 This index is not displayed if the number of the parity groups are less than 3.
PG	The parity group number 4 This index is not displayed if the number of the parity groups are less than 4.
Drive Location	The drive location 4 This index is not displayed if the number of the parity groups are less than 4.
Num. of PGs	Number of the parity groups
RAID Level	The RAID level
CLPR	The CLPR ID
Encryption	Indicates whether the encryption is enabled or disabled. Enable: The setting is enabled. Disable: The setting is disabled.
Copy Back	Indicates whether the copy back mode is enabled or disabled.

Item	Description
	Enable: The setting is enabled. Disable: The setting is disabled.
Accelerated Compression	Indicates whether the accelerated compression is enabled or disabled. Enable: The setting is enabled. Disable: The setting is disabled.

Add Path

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Add Path
++Port=1B,WWN=XXXXXXXXXXXXXXXX,Path Group ID=A
```

Detailed Information

Parameter	Description
Command	The command name
Port	The name of a port to be connected to the external storage system
WWN	The WWN of the external storage system
Path Group ID	The path group ID of the external volume

Add RCU

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Add RCU
++S/N=423456,MCU=0xAAAA,RCU=0xBBBB,Controller ID=18,MCU Port=1A,RCU
Port=1B,Path Gr. ID=0
```

Detailed Information

Item	Description
Command	The command name
S/N	The serial number of the remote storage system
MCU	The CU number of the local storage system "Free" is output when CU Free is specified
RCU	The CU number of the remote storage system "Free" is output when CU Free is specified

Item	Description
Controller ID	The controller ID of the remote storage system 5: USP V/VM, 6: VSP, 7: VSP G1000/G1500 and VSP F1500, 18: VSP Gx00, VSP Fx00, 19: HUS VM
MCU Port	The port name of the local storage system
RCU Port	The port name of the remote storage system
Path Gr. ID	The path group ID of the remote storage system No value is output when CU Free is not specified.

Add RCU iSCSI Port

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Add RCU iSCSI Port
++S/N=400001,Controller ID=18,MCU Port=3B,RCU Port=4B,TCP Port=3260,
IP Address=192.168.0.169
```

Detailed Information

Item	Description
Command	The command name
S/N	The serial number of the remote storage system
Controller ID	The controller ID of the remote storage system 5: USP V/VM, 6: VSP, 7: VSP G1000/G1500 and VSP F1500, 18: VSP Gx00, VSP Fx00, 19: HUS VM
MCU Port	The port name of the local storage system
RCU Port	The port name of the remote storage system
TCP Port	The TCP port number
IP Address	The IP address of the port on the remote storage system

Add RCU Path

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Add RCU Path
++S/N=423456,MCU=0xAAAA,RCU=0xBBBB,MCU Port=1A,RCU Port=1B,
Controller ID=18,Path Gr. ID=0
```

Detailed Information

Item	Description
Command	The command name
S/N	The serial number of the remote storage system
MCU	The CU number of the local storage system "Free" is output when CU Free is specified
RCU	The CU number of the remote storage system "Free" is output when CU Free is specified
MCU Port	The port name of the local storage system to be added
RCU Port	The port name of the remote storage system to be added
Controller ID	The controller ID of the remote storage system 5: USP V/VM, 6: VSP, 7: VSP G1000/G1500 and VSP F1500, 18: VSP Gx00, VSP Fx00, 19: HUS VM
Path Gr. ID	The path group ID of the remote storage system No value is output when CU Free is not specified.

Add Resource(Group)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Add Resource(Group)
++Resource Group=AAAAAAAA,Controller ID=18,S/N=423456
```

Detailed Information

Item	Description
Command	The command name
Resource Group	The name of a resource group to be created
Controller ID	The controller ID of the virtual storage machine 5: USP V/VM, 6: VSP, 7: VSP G1000/G1500 and VSP F1500, 19: HUS VM, 11: VSP G200, 111: VSP G400/VSP G600, 112: VSP G800 No output when a virtual storage machine is not specified
S/N	The serial number of the virtual storage machine No output when a virtual storage machine is not specified

Add Resource(Resource Name)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Add Resource(Resource Name)
++Resource Group ID=123,Resource Group Name=XXXXXXXXX
```

Detailed Information

Item	Description
Command	The command name
Resource Group ID	The number of the resource group whose name is changed
Resource Group Name	The newly changed resource group name

Add Resource/Delete Resource

Example: when the resource of the operation target is LDEV

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Add Resource/Delete Resource
++Resource Group ID=AAAAAAAA,
LDEV(LDKC:CU:LDEV)=0x00:0xAA:0xBB
```

Detailed Information

Item	Description
Command	The command name
Resource Group ID	The number of a resource group to be registered or deleted
LDEV(LDKC:CU:LDEV)	The LDEV ID of an LDEV to be registered or deleted This item is output when the resource of the operation target is LDEV
PG	The number of a parity group to be registered or deleted This item is output when the resource of the operation target is the parity group or external volume group
Port	The name of a port to be registered or deleted This item is output when the resource of the operation target is Port or Host Group
Host Group ID	The ID of a host group to be registered or deleted This item is output when the resource of the operation target is Host Group

Add Snap Pool

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Add Snap Pool
++Pool ID=AA,Pool Name=XXXXX,User Threshold(%)=85
++LDEV(LDKC:CU:LDEV)={0x00:0xAA:0xBB,0x00:0xCC:0xDD,……,
0x00:0xEE:0xFF},Num. of LDEVs=X
```

Detailed Information

Item	Description
Command	The command name
Pool ID	The pool number of a pool for Thin Image to be created
Pool Name	The pool name of a pool for Thin Image to be created No value is output if the pool name is not specified
User Threshold(%)	The user defined threshold
LDEV(LDKC:CU:LDEV)	The LDEV IDs of a pool volume
Num. of LDEVs	The number of pool volumes

Add Snapshot

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Add Snapshot
++Snapshot Group=SSSSSSSS,Pool ID=A,
P-VOL(LDKC:CU:LDEV)=0x00:0xAA:0xBB,
S-VOL(LDKC:CU:LDEV)=0x00:0xCC:0xDD,
Virtual Storage Machine S/N=423456,
Range=Group,S-VOL Storage Machine S/N=412345,
S-VOL Actual Controller ID=18
```

Detailed Information

Item	Description
Command	The command name
Snapshot Group	The name of a snapshot group
Pool ID	The pool ID of a pool to which a pair to be registered belongs
P-VOL(LDKC:CU:LDEV)	The LDEV ID of the primary volume of a pair to be registered When a virtual storage machine is specified, the volume number of the virtual storage machine is output.
S-VOL(LDKC:CU:LDEV)	The LDEV ID of the secondary volume of a pair to be registered No output when a secondary volume is not specified

Item	Description
Virtual Storage Machine S/N	The serial number of the virtual storage machine No output when a virtual storage machine is not specified
Range	The range for splitting pairs Volume: Only the pair is split. Group: All pairs in the group including the pair are split.
S-VOL Storage Machine S/N	The serial number of the actual storage system to which the secondary volume belongs
S-VOL Actual Controller ID	The controller ID of the actual storage system to which the secondary volume belongs 5: USP V/VM, 6: VSP, 7: VSP G1000/G1500 and VSP F1500, 18: VSP Gx00, VSP Fx00, 19: HUS VM

Add SPM Group

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Add SPM Group
++Port=1A,WWN=XXXXXXXXXXX,SPM Group=AAAAAAAAA,Nickname=
```

Detailed Information

Item	Description
Command	The command name
Port	The port name to which the SPM target WWN to be registered to the SPM group belongs
WWN	The SPM target WWN to be registered to the SPM group No value is output when the Nickname is output.
SPM Group	The name of the SPM group to which the SPM target WWN is registered
Nickname	The SPM name (nickname) for the WWN No value is output when the WWN value is output.

Add SPM Host Group

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Add SPM Host Group
++Port=1A,SPM Group=XXXXXXXXXXX,Host Group Name=AAAAAAAAA
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port for the host group to which the WWN to be set to the SPM group is registered
SPM Group	The name of an SPM group to be set
Host Group Name	The name of a host group to which the WWN to be set to the SPM group is registered

Add SPM WWN

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Add SPM WWN
++Port=1A,WWN=XXXXXXXXXXX,Nickname=AAAAAAAAA
```

Detailed Information

Item	Description
Command	The command name
Port	The port name to which the WWN belongs
WWN	The WWN
Nickname	The SPM name (nickname) for the WWN

Add WWN

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Add WWN
++Port=1A,Host Group ID=0x0FE,WWN=XXXXXXXXXXXXXXXX,
Virtual Storage Machine S/N=423456
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port to which a WWN is set When a virtual storage machine is specified, the port name of the virtual storage machine is output.
Host Group ID	The ID of a host group to which the WWN is set
WWN	The WWN to be set

Item	Description
Virtual Storage Machine S/N	The serial number of the virtual storage machine No output when a virtual storage machine is not specified

Check External Storage Group

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Check External Storage Group
++PG=E1-1
```

Detailed Information

Item	Description
Command	The command name
PG	The external volume group number

Check External Storage Path

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Check External Storage Path
++Port=1B,WWN=XXXXXXXXXXXXXXXX,Path Group ID=A
```

Detailed Information

Item	Description
Command	The command name
Port	The name of the port to be connected to the external storage system
WWN	The WWN of the external storage system
Path Group ID	The path group ID of the external volume

CTQM

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=CTQM
++LDEV(CU:LDEV)=0x12:0x34,MU=5,
Virtual Storage Machine S/N=423456,
Suspend Status=Suspend,CTQM=EOM
```

Detailed Information

Item	Description
Command	The command name
LDEV(CU:LDEV)	The CU number and the LDEV number of the primary or secondary volume shared by a pair that is included in the consistency group for executing the command When a virtual storage machine is specified, the CU number and the LDEV number of the virtual storage machine is output.
MU	The MU number of the pair to which the LDEV belongs
Virtual Storage Machine S/N	The serial number of the virtual storage machine No output when a virtual storage machine is not specified
Suspend Status	The instruction to the journal in the suspend status Suspend: Suspended Full Suspend: Full and suspended Obstacle Suspend: Suspended due to an error
CTQM	The synchronization status in the suspend status CTQM: Synchronization is underway. EOM: Synchronization is complete.

Delete CHAP User

Example 1: Deleting the CHAP user name on the target side

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Delete CHAP User
++Port=1A,Target ID=0xBB,Target CHAP User=XXXXXX,
Virtual Storage Machine S/N=423456
```

Detailed Information 1

Item	Description
Command	The command name
Port	The name of a port to which an iSCSI target, from which CHAP users are deleted, belongs
Target ID	The iSCSI target ID
Target CHAP User	The CHAP user name on the target side
Virtual Storage Machine S/N	The serial number of the virtual storage machine No value is output when a virtual storage machine is not specified.

Example 2: Deleting the CHAP user name on the initiator side

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Delete CHAP User
```

```
++Port=1A,Target ID=0xBB,Initiator CHAP User=XXXXXX,
Virtual Storage Machine S/N=423456
```

Detailed Information 2

Item	Description
Command	The command name
Port	The name of a port to which an iSCSI target, from which CHAP users are deleted, belongs
Target ID	The iSCSI target ID
Initiator CHAP User	The CHAP user name on the initiator side
Virtual Storage Machine S/N	The serial number of the virtual storage machine No value is output when a virtual storage machine is not specified.

Delete Copy Group

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Delete Copy Group
++Copy Group=AAAAAAAA
```

Detailed Information

Item	Description
Command	The command name
Copy Group	The name of a copy group to be deleted

Delete Device Group

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Delete Device Group
++Device Group=AAAAAAAA
++LDEV(LDKC:CU:LDEV)={0x00:0xAA:0xBB,0x00:0xCC:0xDD,……,
0x00:0xEE:0xFF},Num. of LDEVs=X
```

Detailed Information

Item	Description
Command	The command name
Device Group	The name of a device group to be deleted
LDEV(LDKC:CU:LDEV)	The LDEV ID of an LDEV to be deleted from the device group

Item	Description
Num. of LDEVs	The number of LDEVs to be deleted from the device group

Delete External Group

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Delete External Group
++PG=E11111-1,Forcible=Disable
```

Detailed Information

Item	Description
Command	The command name
PG	The external volume group number
Forcible	Indicates whether the forcible mode is enabled or disabled. Enable: The setting is enabled. Disable: The setting is disabled.

Delete External iSCSI Name

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Delete External iSCSI Name
++Port=3B,iSCSI Name=iqn.1994-04.jp.co.hitachi:rsd.h8h.t.00001.4b000,
IP Address=192.168.0.169
```

Detailed Information

Item	Description
Command	The command name
Port	The name of the port to which the iSCSI initiator belongs
iSCSI Name	The iSCSI name
IP Address	The IP address of the port on the external storage system

Delete HBA iSCSI

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Delete HBA iSCSI
++Port=1A,Target ID=0xBB,iSCSI Name=ABCDEF,
Virtual Storage Machine S/N=423456
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port from which iSCSI targets are deleted When a virtual storage machine is specified, the port name of the virtual storage machine is output
Target ID	The iSCSI target ID
iSCSI Name	The iSCSI name of the host bus adapter
Virtual Storage Machine S/N	The serial number of the virtual storage machine No value is output when a virtual storage machine is not specified.

Delete Host Group

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Delete Host Group
++Port=1A,Host Group ID=0x000,,
Virtual Storage Machine S/N=423456
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port from which a host group is deleted When a virtual storage machine is specified, the port name of the virtual storage machine is output.
Host Group ID	The ID of a host group to be deleted
Blank item	Nothing is output due to unused.
Virtual Storage Machine S/N	The serial number of the virtual storage machine No output when a virtual storage machine is not specified

Delete Journal

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Delete Journal
++JNL=0x001
```

Detailed Information

Item	Description
Command	The command name
JNL	The number of a journal to be deleted

Delete Journal(Ldev)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Delete Journal(Ldev)
++JNL=0x001
++LDEV(LDKC:CU:LDEV)={0x00:0xAA:0xBB,0x00:0xCC:0xDD,……,
0x00:0xEE:0xFF},Num. of LDEVs=X
```

Detailed Information

Item	Description
Command	The command name
JNL	The journal number of a journal from which journal volumes are deleted
LDEV(LDKC:CU:LDEV)	The LDEV ID of a journal volume to be deleted
Num. of LDEVs	The number of journal volumes to be deleted

Delete Ldev

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Delete Ldev
++LDEV(LDKC:CU:LDEV)=0x00:0xAA:0xBB
```

Detailed Information

Item	Description
Command	The command name
LDEV(LDKC:CU:LDEV)	The LDEV ID of an LDEV to be deleted

Delete License

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Delete License
++Product Name=xxx
```

Detailed Information

Item	Description
Command	The command name
Product Name	The program product name

Delete LUN

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Delete LUN
++Port=1A,Host Group ID=0x100,LUN=3,
LDEV(LDKC:CU:LDEV)=0x00:0xAA:0xBB,
Virtual Storage Machine S/N=423456
++Additional Port(Port,Host Group ID,LUN)
=[{1B,0x100,3},{1C,0x100,3}],Num. of Paths=2
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port from which an LU is deleted When a virtual storage machine is specified, the port name of the virtual storage machine is output.
Host Group ID	The ID of a host group from which an LU is deleted
LUN	The LU number to be deleted No value is output, if it is not specified by the command option.
LDEV(LDKC:CU:LDEV)	The LDEV ID of an LDEV to be deleted No value is output, if it is not specified by the command option.
Virtual Storage Machine S/N	The serial number of the virtual storage machine No output when a virtual storage machine is not specified
Additional Port(Port,Host Group ID,LUN)	The port name, the host group ID, and the LU number for the LU path to be deleted If an LDEV is specified but no LUN is specified by the command option, no LU number is output. If it is not specified by the command option, the index itself is not output.
Num. of Paths	The number of LU paths to be deleted If it is not specified by the command option, the index itself is not output.

Delete Parity Group

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Delete Parity Group
++PG={1-1},Num. of PGs=1
```

Detailed Information

Item	Description
Command	The command name
PG	The parity group number
Num. of PGs	Number of the parity groups

Delete Path

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Delete Path
++Port=1B,WWN=XXXXXXXXXXXXXXXX,Path Group ID=A
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port to be connected to the external storage system
WWN	The WWN of the external storage system
Path Group ID	The path group ID of the external volume

Delete Pool

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Delete Pool
++Pool ID=AA
```

Detailed Information

Item	Description
Command	The command name
Pool ID	The pool number of a pool to be deleted

Delete Pool(Ldev)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Delete Pool(Ldev)
++Pool ID=AA
++LDEV(LDLC:CU:LDEV)={0x00:0xAA:0xBB,0x00:0xCC:0xDD,……,
0x00:0xEE:0xFF},Num. of LDEVs=X
```

Detailed Information

Item	Description
Command	The command name
Pool ID	The pool ID of a pool whose capacity is to be decreased
LDEV(LDKC:CU:LDEV)	The LDEV IDs of pool volumes to be deleted from the pool
Num. of LDEVs	The number of pool volumes to be deleted from the pool

Delete RCU

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Delete RCU
++S/N=423456,MCU=0xAAAA,RCU=0xBBBB,Controller ID=18,
Path Gr. ID=0
```

Detailed Information

Item	Description
Command	The command name
S/N	The serial number of the remote storage system
MCU	The CU number of the local storage system "Free" is output when CU Free is specified
RCU	The CU number of the remote storage system "Free" is output when CU Free is specified
Controller ID	The controller ID of the remote storage system 5: USP V/VM, 6: VSP, 7: VSP G1000/G1500 and VSP F1500, 18: VSP Gx00, VSP Fx00, 19: HUS VM
Path Gr. ID	The path group ID of the remote storage system No value is output when CU Free is not specified.

Delete RCU iSCSI Port

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Delete RCU iSCSI Port
++S/N=400001,Controller ID=18,MCU Port=3B,RCU Port=4B
```

Detailed Information

Item	Description
Command	The command name
S/N	The serial number of the remote storage system
Controller ID	The controller ID of the remote storage system 5: USP V/VM, 6: VSP, 7: VSP G1000/G1500 and VSP F1500, 18: VSP Gx00, VSP Fx00, 19: HUS VM
MCU Port	The port name of the local storage system
RCU Port	The port name of the remote storage system

Delete RCU Path

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Delete RCU Path
++S/N=423456,MCU=0xAAAA,RCU=0xBBBB,MCU Port=CL1-A,RCU Port=CL1-B,
Controller ID=18,Path Gr. ID=0
```

Detailed Information

Item	Description
Command	The command name
S/N	The serial number of the remote storage system
MCU	The CU number of the local storage system "Free" is output when CU Free is specified
RCU	The CU number of the remote storage system "Free" is output when CU Free is specified
MCU Port	The port name of the local storage system to be deleted
RCU Port	The port name of the remote storage system to be deleted
Controller ID	The controller ID of the remote storage system 5: USP V/VM, 6: VSP, 7: VSP G1000/G1500 and VSP F1500, 18: VSP Gx00, VSP Fx00, 19: HUS VM
Path Gr. ID	The path group ID of the remote storage system No value is output when CU Free is not specified.

Delete Resource(Group)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Delete Resource(Group)
++Resource Group ID=AAAAAAAA
```

Detailed Information

Item	Description
Command	The command name
Resource Group ID	The number of the resource group to be deleted

Delete Snapshot

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Delete Snapshot
++P-VOL(LDKC:CU:LDEV)=0x00:0xAA:0xBB,MU=A,
Virtual Storage Machine S/N=423456
```

Detailed Information

Item	Description
Command	The command name
P-VOL(LDKC:CU:LDEV)	The LDEV ID of the primary volume of a pair to be deleted When a virtual storage machine is specified, the LDEV ID of the virtual storage machine is output.
MU	The MU number of the pair to be deleted
Virtual Storage Machine S/N	The serial number of the virtual storage machine No output when a virtual storage machine is not specified

Delete SPM Group

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Delete SPM Group
++Port=1A,SPM Group=XXXXXXXXXXXX
```

Detailed Information

Item	Description
Command	The command name

Item	Description
Port	The name of a port to which the WWN to be deleted from the SPM group belongs
SPM Group	The name of an SPM group from which the WWN is deleted

Delete SPM Host Group

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Delete SPM Host Group
++Port=1A,Host Group Name=XXXXXXXXXXXX
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port to which the WWN to be deleted from the SPM group belongs
Host Group Name	The name of a host group to which the WWN to be deleted from the SPM group belongs

Delete SPM WWN

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Delete SPM WWN
++Port=1A,WWN=XXXXXXXXXXXX
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port to which the WWN to be deleted from the SPM target belongs
WWN	The WWN to be deleted from the SPM target

Delete SPM WWN(Nickname)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Delete SPM WWN(Nickname)
++Port=1A,Nickname=XXXXXXXXXXXX
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port to which the WWN to be deleted from the SPM target belongs
Nickname	The SPM name (nickname) of the WWN to be deleted from the SPM target

Delete WWN

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Delete WWN
++Port=1A,Host Group ID=0x0FE,WWN=XXXXXXXXXXXXXXXX,
Virtual Storage Machine S/N=423456
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port from which a WWN is deleted When a virtual storage machine is specified, the port name of the virtual storage machine is output.
Host Group ID	The ID of a host group from which the WWN is deleted
WWN	The WWN to be deleted
Virtual Storage Machine S/N	The serial number of the virtual storage machine No output when a virtual storage machine is not specified

Disconnect External Group

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Disconnect External Group
++PG=E1-1
```

Detailed Information

Item	Description
Command	The command name
PG	The external volume group number

Disconnect Path

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Disconnect Path
++Port=1B,WWN=XXXXXXXXXXXXXXXX,Path Group ID=A
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port to be connected to the external storage system
WWN	The WWN of the external storage system
Path Group ID	The path group ID of the external volume

Extend Ldev

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Extend Ldev
++LDEV(LDKC:CU:LDEV)=0x00:0xAA:0xBB,
Virtual Storage Machine S/N=423456,
Size=200 Capacity
```

Detailed Information

Item	Description
Command	The command name
LDEV(LDKC:CU:LDEV)	The LDEV ID of the virtual volume for Dynamic Provisioning to be extended When a virtual storage machine is specified, the LDEV ID of the virtual storage machine is output.
Virtual Storage Machine S/N	The serial number of the virtual storage machine No output when a virtual storage machine is not specified
Size	The capacity and method for specifying the capacity of an LDEV to be created *Specifying the capacity* • Capacity: Specify a capacity by the byte or block. Units, byte or block, are not output. If a capacity is specified by the kilobyte, megabyte, gigabyte, or terabyte, the capacity is output on a byte basis. • Offset-Capacity: Specify a capacity by the byte or block, and then the storage system corrects the capacity.

Item	Description
	Units, byte or block, are not output. If a capacity is specified by the kilobyte, megabyte, gigabyte, or terabyte, the capacity is output on a byte basis. • Cylinder: Specify a capacity by the cylinder. For details, see the section describing CV size calculation in *Provisioning Guide for Hitachi Virtual Storage Platform Gx00 and Fx00 Models*.

Initialize Ldev(Format)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Initialize Ldev(Format)
++LDEV(LDKC:CU:LDEV)=0x00:0xAA:0xBB,Format Option=Normal
```

Detailed Information

Item	Description
Command	The command name
LDEV(LDKC:CU:LDEV)	The LDEV ID of an LDEV to be formatted
Format Option	The format options Normal: Normal format, Quick: Quick format

Initialize Ldev(Shredding)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Initialize Ldev(Shredding)
++LDEV(LDKC:CU:LDEV)=0x00:0xAA:0xBB,Data=00-FF-00
```

Detailed Information

Item	Description
Command	The command name
LDEV(LDKC:CU:LDEV)	The LDEV ID of an LDEV whose data is to be deleted
Data	The data pattern used for deleting the data 00-FF-00: Default pattern Random: Random value 0xXXXXXXXX : User defined value

Initialize Ldev(Stop Shredding)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Initialize Ldev(Stop Shredding)
++LDEV(LDKC:CU:LDEV)=0x00:0xAA:0xBB
```

Detailed Information

Item	Description
Command	The command name
LDEV(LDKC:CU:LDEV)	The LDEV ID of an LDEV in which deletion of its data is to be stopped

Initialize Parity Group

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Initialize Parity Group
++PG=1-5
```

Detailed Information

Item	Description
Command	The command name
PG	The parity group number for a parity group to be initialized

Initialize Pool

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Initialize Pool
++Pool ID=10,Operation=Initialize Deduplication
```

Detailed Information

Item	Description
Command	The command name
Pool ID	The pool ID of the pool which will be initialized
Operation	The operation Initialize Deduplication: Initialize the deduplication system data volume and the volumes include the data which is deduplicated.

Map Resource(LDEV)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Map Resource(LDEV)
++LDEV(LDKC:CU:LDEV)=0x00:0xAA:0xBB,
Map LDEV(LDKC:CU:LDEV)=0x00:0xCC:0xDD,Emulation=AAAAAA
```

Detailed Information

Item	Description
Command	The command name
LDEV(LDKC:CU:LDEV)	The LDEV ID of the actual volume
Map LDEV(LDKC:CU:LDEV)	The LDEV ID of the virtual volume assigned to the actual volume "Reserve" is output if the reservation attribute of global-active device is set on the LDEV ID of the volume used as a secondary volume of a global-active device pair.
Emulation	The emulation type of a virtual volume

Map Resource(Port)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Map Resource(Port)
++Port=1A,Map Port=1E
```

Detailed Information

Item	Description
Command	The command name
Port	The port name of the actual port
Map Port	The name of the virtual port assigned to the actual port

Map Snapshot

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Map Snapshot
++P-VOL(LDKC:CU:LDEV)=0x00:0xAA:0xBB,
S-VOL(LDKC:CU:LDEV)=0x00:0xCC:0xDD,MU=1,
Virtual Storage Machine S/N=423456,
S-VOL Storage Machine S/N=412345,S-VOL Actual Controller ID=18
```

Detailed Information

Item	Description
Command	The command name
P-VOL(LDKC:CU:LDEV)	The LDEV ID of the primary volume When a virtual storage machine is specified, the LDEV ID of the virtual storage machine is output.
S-VOL(LDKC:CU:LDEV)	The LDEV ID of the secondary volume When a virtual storage machine is specified, the LDEV ID of the virtual storage machine is output.
MU	The MU number
Virtual Storage Machine S/N	The serial number of the virtual storage machine No output when a virtual storage machine is not specified
S-VOL Storage Machine S/N	The serial number of the actual storage system to which the secondary volume belongs
S-VOL Actual Controller ID	The controller ID of the actual storage system to which the secondary volume belongs 5: USP V/VM, 6: VSP, 7: VSP G1000/G1500 and VSP F1500, 18: VSP Gx00, VSP Fx00, 19: HUS VM

Modify CLPR

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Modify CLPR
++PG=1-1,CLPR=0
```

Detailed Information

Item	Description
Command	The command name
PG	The number of a parity group for CLPR to be migrated The parity group number with "E" on the top of the name indicates that the parity group contains an external volume
CLPR	The CLPR ID of the target of migration

Modify Drive

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Modify Drive
++Drive Location=0-1,Spare=Enable
```

Detailed Information

Item	Description
Command	The command name
Drive Location	The mounting position of the drive
Spare	The assignment status of the spare drive Enable: Assigning as a spare drive. Disable: Releasing spare drive setting.

Modify External Group(ALUA Switch)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Modify External Group(ALUA Switch)
++PG=E1-1,ALUA Switch=Enable
```

Detailed Information

Item	Description
Command	The command name
PG	The external volume group number
ALUA Switch	The setting status of the ALUA mode Enable: Enabled, Disable: Disabled

Modify External Group(Cache Inflow)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Modify External Group(Cache Inflow)
++PG=E1-1,Cache Inflow=Enable
```

Detailed Information

Item	Description
Command	The command name
PG	The external volume group number
Cache Inflow	The inflow control setting of the cache of the external volume. Enable: Enabled, Disable: Disabled

Modify External Group(Cache Mode)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Modify External Group(Cache Mode)
++PG=E1-1,Cache Mode=Enable
```

Detailed Information

Item	Description
Command	The command name
PG	The external volume group number
Cache Mode	The cache mode to be set Enable: The cache mode is enabled Disable: The cache mode is disabled Through: Cache through mode Write Sync: Write synchronous mode

Modify External Group(Load Balance Mode)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Modify External Group(Load Balance Mode)
++PG=E1-1,Load Balance Mode=Extend
```

Detailed Information

Item	Description
Command	The command name
PG	The external volume group number
Load Balance Mode	The load balance mode to be set Normal: Standard round robin Extend: Extended round robin Disable: Disabled

Modify External Group(MP Blade)

Modify External Group(MP Blade) is the command history of CCI. Since CCI is software common to Hitachi storage systems, "MP Blade" instead of "MP Unit" is output as the command name and the item in audit logs.

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Modify External Group(MP Blade)
++PG=E1-1,MP Blade ID=0
```

Detailed Information

Item	Description
Command	The command name
PG	The external volume group number
MP Blade ID	The MP unit ID to be allocated to a target volume

Modify Host Group(Host Mode)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Modify Host Group(Host Mode)
++Port=1A,Host Group ID=0x0FE,Virtual Storage Machine S/N=423456,
Mode=0x0A,Auth Mode=Chap,Chap Mutual=Disable
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port to which a host group for the host mode to be set belongs When a virtual storage machine is specified, the port name of the virtual storage machine is output.
Host Group ID	The ID of a host group for which the host mode is set
Virtual Storage Machine S/N	The serial number of the virtual storage machine No output when a virtual storage machine is not specified
Mode	The host mode For details about the host mode, see *Provisioning Guide for Hitachi Virtual Storage Platform Gx00 and Fx00 Models*.
Auth Mode	The authentication mode Chap: CHAP authentication is enabled None: CHAP authentication is disabled Both: Connection is available both with and without CHAP authentication
Chap Mutual	CHAP authentication is unidirectional or bidirectional Enable: Set to bidirectional authentication mode Disable: Set to the unidirectional authentication mode

Modify Host Group(Host Mode Option)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Modify Host Group(Host Mode Option)
++Port=1A,Host Group ID=0x0FE,Virtual Storage Machine S/N=423456,
Mode=0x0A,Option[0:31]=0x80000000,Option[32:63]=0x80000000,
Option[64:95]=0x80000000,Option[96:127]=0x80000000,Auth Mode=Chap,
Chap Mutual=Disable
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port on which the host mode option is changed When a virtual storage machine is specified, the port name of the virtual storage machine is output.
Host Group ID	The ID of a host group whose host mode option is changed
Virtual Storage Machine S/N	The serial number of the virtual storage machine No output when a virtual storage machine is not specified
Mode	The host mode For details about the host mode, see *Provisioning Guide for Hitachi Virtual Storage Platform Gx00 and Fx00 Models*.
Option[0:31]	Values of host mode options from 0 to 31 bits
Option[32:63]	Values of host mode options from 32 to 63 bits
Option[64:95]	Values of host mode options from 64 to 95 bits
Option[96:127]	Values of host mode options from 96 to 127 bits
Auth Mode	The authentication mode Chap: CHAP authentication is enabled None: CHAP authentication is disable Both: Connection is available both with and without CHAP authentication
Chap Mutual	CHAP authentication is unidirectional or bidirectional Enable: Set to bidirectional authentication mode Disable: Set to the unidirectional authentication mode

Modify Initiator CHAP User

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Modify Initiator CHAP User
++Port=2B,CHAP User=user1
```

Detailed Information

Item	Description
Command	The command name
Port	The name of the port to which the iSCSI initiator belongs
CHAP User	The CHAP user name to be set for Secret

Modify Journal

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Modify Journal
++JNL=0x001,Timer Type=System,Use of Cache=Use,Inflow Control=Enable,
Data Over flow Watch(s)=600,MU=0,Copy Pace=Medium,
Path blockade watch timer Transfer=Enable,
Path blockade watch timer(m)=60
```

Detailed Information

Item	Description
Command	The command name
JNL	The number of a journal whose options to be changed
Timer Type	The clock type used for consistency time System: The system clock of the main frame host on the primary site Local: No system clock is used. None: The system clock of the main frame host on the primary site when data is copied from the storage system on the secondary site to the one on the primary site
Use of Cache	Indicates whether journal data in the restore journal is stored in cache or not Not Use: Not stored in cache, Use: Stored in cache
Inflow Control	The setting status of data inflow Enable: Enabled, Disable: Disabled
Data Over flow Watch(s)	The time for data over flow to be watched: 0 to 600 seconds
MU	The MU number
Copy Pace	The data transfer speed for copy operation Low: Low speed, Medium: Medium speed, High: High speed
Path blockade watch timer Transfer	The setting status of the path blockade watch timer Enable: Enabled, Disable: Disabled
Path blockade watch timer(m)	The path blockade watch time: 1 to 60 minutes If the value is 0, the path blockade watch timer is disabled.

Modify Journal(MP Blade)

Modify Journal(MP Blade) is the command history of CCI. Since CCI is software common to Hitachi storage systems, "MP Blade" instead of "MP Unit" is output as the command name and the item in audit logs.

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Modify Journal(MP Blade)
++JNL=0x001,MP Blade ID=A
```

Detailed Information

Item	Description
Command	The command name
JNL	The number of a journal to be modified
MP Blade ID	The MP Unit ID to be assigned to a target journal

Modify Ldev(ALUA)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Modify Ldev(ALUA)
++LDEV(LDKC:CU:LDEV)=0x00:0xAA:0xBB,ALUA=Enable
```

Detailed Information

Item	Description
Command	The command name
LDEV(LDKC:CU:LDEV)	The ID of the LDEV on which the ALUA mode is set or canceled
ALUA	The setting status of the ALUA mode Enable: Enabled, Disable: Disabled

Modify Ldev(Blocked)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Modify Ldev(Blocked)
++LDEV(LDKC:CU:LDEV)=0x00:0xAA:0xBB
```

Detailed Information

Item	Description
Command	The command name
LDEV(LDKC:CU:LDEV)	The LDEV ID of an LDEV to be blocked

Modify Ldev(Capacity Saving)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Modify Ldev(Capacity Saving)
++LDEV(LDKC:CU:LDEV)=0x00:0xAA:0xBB,Capacity Saving=Deduplication
Compression
```

Detailed Information

Item	Description
Command	The command name
LDEV(LDKC:CU:LDEV)	The LDEV ID of the LDEV to which the capacity saving is set
Capacity Saving	The setting status of capacity saving Disable: Capacity saving is disabled. Compression: Compression is enabled. Deduplication Compression: Deduplication and compression are enabled.

Modify Ldev(CLPR)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Modify Ldev(CLPR)
++LDEV(LDKC:CU:LDEV)=0x00:0xAA:0xBB,CLPR=0
```

Detailed Information

Item	Description
Command	The command name
LDEV(LDKC:CU:LDEV)	The LDEV ID of an LDEV in which the CLPR is changed
CLPR	The number of the CLPR ID to be changed

Modify Ldev(Command Device)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Modify Ldev(Command Device)
++LDEV(LDKC:CU:LDEV)=0x00:0xFE:0xFF,Command Device=Disable,
Security=Disable,UserAuth=Disable,DeviceGroup=Disable
```

Detailed Information

Item	Description
Command	The command name
LDEV(LDKC:CU:LDEV)	The LDEV ID of an LDEV to be set
Command Device	The setting status of the command device attribute Enable: Enabled, Disable: Disabled
Security	The setting status of the command device security Enable: Enabled, Disable: Disabled
UserAuth	The setting status of the user authentication Enable: Enabled, Disable: Disabled
DeviceGroup	The setting status of the device group definition Enable: Enabled, Disable: Disabled

Modify Ldev(Discard Zero Page)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Modify Ldev(Discard Zero Page)
++LDEV(LDKC:CU:LDEV)=0x00:0xAA:0xBB
```

Detailed Information

Item	Description
Command	The command name
LDEV(LDKC:CU:LDEV)	The LDEV ID of an LDEV from which the zero data page is discarded

Modify Ldev(Full Allocation)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Modify Ldev(Full Allocation)
++LDEV(LDKC:CU:LDEV)=0x00,0x01,0x02,Full Allocation=Enable
```

Detailed Information

Item	Description
Command	The command name
LDEV(LDKC:CU:LDEV)	The LDEV ID of an LDEV for which Full Allocation is set to be enabled or disabled
Full Allocation	The setting status of Full Allocation Enable: Full Allocation is enabled. Disable: Full Allocation is disabled.

Modify Ldev(MP Blade)

Modify Ldev(MP Blade) is the command history of CCI. Since CCI is software common to Hitachi storage systems, "MP Blade" instead of "MP Unit" is output as the command name and the item in audit logs.

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Modify Ldev(MP Blade)
++LDEV(LDKC:CU:LDEV)=0x00:0xAA:0xBB,MP Blade ID=A
```

Detailed Information

Item	Description
Command	The command name
LDEV(LDKC:CU:LDEV)	The LDEV ID of an LDEV to which an MP Unit is assigned
MP Blade ID	The ID of the MP Unit to which the LDEV is assigned

Modify Ldev(Nickname)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Modify Ldev(Nickname)
++LDEV(LDKC:CU:LDEV)=0x00:0xAA:0xBB,Nickname=AAAAAAAAAA
```

Detailed Information

Item	Description
Command	The command name
LDEV(LDKC:CU:LDEV)	The LDEV ID of an LDEV on which a name is designated
Nickname	The name to be designated on the LDEV

Modify Ldev(Quorum Disable)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Modify Ldev(Quorum Disable)
++LDEV(LDKC:CU:LDEV)=0x00:0x01:0x02
```

Detailed Information

Item	Description
Command	The command name
LDEV(LDKC:CU:LDEV)	The LDEV ID of the volume whose setting as a quorum disk used by global-active device is released

Modify Ldev(Quorum Enable)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Modify Ldev(Quorum Enable)
++LDEV(LDKC:CU:LDEV)=0x00:0x01:0x02,Quorum Disk ID=1,
Controller ID=18,S/N=412345
```

Detailed Information

Item	Description
Command	The command name
LDEV(LDKC:CU:LDEV)	The LDEV ID of the volume to be set as a quorum disk used by global-active device
Quorum Disk ID	The ID of the quorum disk used by global-active device to be set
Controller ID	The controller ID of the storage system on which the quorum disk used by global-active device is set 5: USP V/VM, 6: VSP, 7: VSP G1000/G1500 and VSP F1500, 18: VSP Gx00, VSP Fx00, 19: HUS VM
S/N	The serial number of the storage system on which the quorum disk used by global-active device is set

Modify Ldev(Restore)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Modify Ldev(Restore)
++LDEV(LDKC:CU:LDEV)=0x00:0xAA:0xBB
```

Detailed Information

Item	Description
Command	The command name
LDEV(LDKC:CU:LDEV)	The LDEV ID of an LDEV to be restored

Modify Ldev(Tier)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Modify Ldev(Tier)
++LDEV(LDKC:CU:LDEV)=0x00:0xAA:0xBB,Tier Relocation=Enable,
Tiering Policy=Level1,New Page Assignment Tier=High
```

Detailed Information

Item	Description
Command	The command name
LDEV(LDKC:CU:LDEV)	The LDEV ID of an LDEV to which the Tier is relocated
Tier Relocation	The setting status of the tier relocation Enable: Relocated, Disable: Not relocated
Tiering Policy	The tiering policy ID is output in the format of "Level*ID*". All is output when all tiers are used at relocation. A hyphen (-) is output for the value when Tier Relocation is disabled.
New Page Assignment Tier	The tier when a new page is assigned High: High performance tier Middle: Medium performance tier Low: Low performance tier

Modify License(Disable)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Modify License(Disable)
++Product Name=xxx
```

Detailed Information

Item	Description
Command	The command name
Product Name	The program product name

Modify License(Enable)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Modify License(Enable)
++Product Name=xxx
```

Detailed Information

Item	Description
Command	The command name
Product Name	The program product name

Modify Local Replica Opt

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Modify Local Replica Opt
++Option Type=Open,Option=Enable
++Option ID={1,2,25},Num. of IDs=3
```

Detailed Information

Item	Description
Command	The command name
Option Type	The local replica option type to be set Open: Local replica options for ShadowImage, Thin Image, Volume Migration, and nondisruptive migration MF: Local replica options for ShadowImage for Mainframe, Compatible FlashCopy® V2, Compatible Software for IBM® FlashCopy® SE, and Volume Migration
Option	The setting status of the local replica option Enable: Enabled, Disable: Disabled
Option ID	The IDs of the specified local replica options For details of the local replica option ID, see *Hitachi ShadowImage® User Guide* and *Hitachi Thin Image User Guide*.
Num. of IDs	The number of IDs of the specified local replica options

Modify LUN(Asymmetric Access)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Modify LUN(Asymmetric Access)
```

```
++Port=1A,Host Group ID=0x001,Virtual Storage Machine S/N=423456,
Asymmetric Access State=Active Optimized
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port whose setting is modified When a virtual storage machine is specified, the port name of the virtual storage machine is output.
Host Group ID	The ID of a host group whose setting is modified When a virtual storage machine is specified, the host group ID of the virtual storage machine is output.
Virtual Storage Machine S/N	The serial number of the virtual storage machine No value is output when a virtual storage machine is not specified.
Asymmetric Access State	The setting status of the asymmetric access states Active Optimized: Prioritized, Active Non Optimized: Not prioritized

Modify Parity Group

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Modify Parity Group
++PG=1-1,Accelerated Compression=Enable
```

Detailed Information

Item	Description
Command	The command name
PG	The parity group number
Accelerated Compression	The setting status of the accelerated compression Enable: Enabled, Disable: Disabled

Modify Pool Attribute

Modify Pool Attribute is an audit log generated when a command operation is performed with the DKCMAIN firmware version earlier than 83-04-0X-XX/XX.

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Modify Pool Attribute
++Pool ID=AA,Attribute=DP
```

Detailed Information

Item	Description
Command	The command name
Pool ID	The pool ID of a pool whose attribute is to be changed
Attribute	The pool attribute after the change DP: Dynamic Provisioning DT: Dynamic Tiering

Modify Pool(Data Direct Mapping)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Modify Pool(Data Direct Mapping)
++Pool ID=AA,Data Direct Mapping=Enable
```

Detailed Information

Item	Description
Command	The command name
Pool ID	The ID of the pool on which Data Direct Mapping is set
Data Direct Mapping	The setting status of Data Direct Mapping Enable: Data Direct Mapping is enabled. Disable: Data Direct Mapping is disabled.

Modify Pool(Deduplication)

Example (when the deduplication system data volume will be allocated)

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Modify Pool(Deduplication)
++Pool ID=10,Deduplication=Yes
++LDEV(LDKC:CU:LDEV)={0x00:0xAA:0xBB},Num. of LDEVs=1
```

Example (when the deduplication system data volume will not be allocated)

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Modify Pool(Deduplication)
++Pool ID=10,Deduplication=No
```

Detailed Information

Item	Description
Command	The command name
Pool ID	The ID of the pool to which the deduplication system data volume will be allocated
Deduplication	Will the deduplication system data volume be allocated Yes: The deduplication system data volume will be allocated. No: The deduplication system data volume will not be allocated.
LDEV(LDKC:CU:LDEV)	The LDEV IDs for LDEVs to be set as the deduplication system data volume When Deduplication is No, this item is not output.
Num. of LDEVs	The number of deduplication system data volumes to be created When Deduplication is No, this item is not output.

Modify Pool(Monitor Mode)

Modify Pool(Monitor Mode) is an audit log generated when a command operation is performed with the DKCMAIN firmware version earlier than 83-04-0X-XX/XX.

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Modify Pool(Monitor Mode)
++Pool ID=AA
```

Detailed Information

Item	Description
Command	The command name
Pool ID	The pool number of a pool whose monitor mode is set

Modify Pool(Restore)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Modify Pool(Restore)
++Pool ID=AA
```

Detailed Information

Item	Description
Command	The command name

Item	Description
Pool ID	The pool ID of a pool to be restored

Modify Pool(Threshold)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Modify Pool(Threshold)
++Pool ID=AA,Warning Threshold(%)=85,High water mark Threshold(%)=85,
Subscription(%)=65530,Monitor Mode=-,Blocking Mode=pool_full
```

Detailed Information

Item	Description
Command	The command name
Pool ID	The pool ID of a pool whose threshold is to be changed
Warning Threshold(%)	The warning threshold of the usage rate of a pool
High water mark Threshold(%)	The depletion threshold of the usage rate of a pool
Subscription(%)	The maximum reserve rate of virtual volumes for the pool capacity Unlimited is output as a value when the reserve rate is unlimited.
Monitor Mode	The monitor mode period: Monitoring periodically continuous: Monitoring continuously realtime_tiering: The active flash function is enabled. non_realtime_tiering: The active flash function is disabled. A hyphen (-) is output for the value when Blocking Mode option is specified.
Blocking Mode	The blocking mode pool_full: Read and write to the virtual volume are not available when the pool is full. When the pool is blocked, read and write to the virtual volume are available. pool_vol_blockade: Read and write to the virtual volume are not available when the pool is blocked. When the pool is full, read and write to the virtual volume are available. full_or_blockade: Read and write to the virtual volume are not available when the pool is full or blocked. no_blocking: Read and write to the virtual volume are available even if the pool is full or blocked.

Modify Pool(TierOpt)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Modify Pool(TierOpt)
++Pool ID=10,Tier=1,Tier Ratio(%)=2,Tier Buffer
Rate(%)=40,Attribute=DP
```

Detailed Information

Item	Description
Command	The command name
Pool ID	The ID of a pool to be modified
Tier	The tier to be modified
Tier Ratio(%)	The rate of space for new allocation per tier
Tier Buffer Rate(%)	The buffer rate for relocation per tier
Attribute	The pool attribute after the change DP: Dynamic Provisioning, DT: Dynamic Tiering

Modify Port

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Modify Port
++Port=1A,Speed(Gbps)=8,Fibre. Address=1,Fabric=Enable,
Connection=FC-AL,Switch=Enable,
Virtual Storage Machine S/N=423456
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port whose setting is to be changed When a virtual storage machine is specified, the port name of the virtual storage machine is output.
Speed(Gbps)	The host speed of a port
Fibre. Address	The address of the Fibre Channel Port
Fabric	The setting status of the fabric switch Enable or Disable will appear
Connection	The topology of the Fabric switch FC-AL: FC-AL (Fibre Channel-Arbitrated Loop) is selected P-to-P: Point-to-Point is selected

Item	Description
Switch	The setting status of the LUN security Enable or Disable will appear
Virtual Storage Machine S/N	The serial number of the virtual storage machine No output when a virtual storage machine is not specified

Modify Port(Attribute)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Modify Port(Attribute)
++Port=1A,Attribute=Target
```

Detailed Information

Item	Item
Command	The command name
Port	The name of a port whose attribute is to be changed
Attribute	The attribute after the change Target: Target port Initiator: Initiator port External: External port RCU Target: RCU Target port

Modify Port(iSCSI)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Modify Port(iSCSI)
++Port=1A,Speed(Gbps)=8,Security Switch=Enable,Ethernet
MTU(byte)=1500,
VLAN Tagging Mode=Enable,VLAN ID=100,New VLAN ID=200,
IPv4 Address=127.0.0.1,Subnet Mask=255.255.255.0,
Default Gateway=10.0.0.4,IPv6 Mode=Enable,
LinkLocal Addressing Mode=Manual,
IPv6 LinkLocal Address=fe80:0:0:0:199a:b948:fbc:a149,
Global Addressing Mode=Manual,
IPv6 Global Address=fe80:0:0:0:199a:b948:fbc:a149,
IPv6 Global Address 2=fe80:0:0:0:199a:b948:fbc:a149,
IPv6 Default Gateway=fe80:0:0:0:199a:b948:fbc:a149,
TCP Port=25,Selective ACK Mode=Enable,
Delayed ACK Mode=Disable,Window Scale(K)=128,Keep Alive Timer(s)=30,
iSNS Server=Disable,iSNS Server IP=127.0.0.1,iSNS Server TCP Port=26,
Virtual Storage Machine S/N=423456
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port whose settings are modified When a virtual storage machine is specified, the port name of the virtual storage machine is output.
Speed(Gbps)	The port host speed: Auto, 1, 2, 4, 8, 10, or 16
Security Switch	The setting status of the security switch Enable: Enabled, Disable: Disabled
Ethernet MTU(byte)	The value of Ethernet MTU (maximum transmission unit): 1500, 4500, or 9000 *
VLAN Tagging Mode	The VLAN tagging mode* Enable: Enabled, Disable: Disabled No value is output when VLAN ID is deleted.
VLAN ID	The VLAN ID before modification* No value is output when VLAN ID is added. For a VLAN ID to be deleted, the VLAN ID (1 to 4094) to be deleted is output. For a VLAN ID to be modified, the VLAN ID (1 to 4094) to be modified is output.
New VLAN ID	The VLAN ID after modification* For a VLAN ID to be added, the added VLAN ID (1 to 4094) is output. For a VLAN ID to be deleted, no value is output. For a VLAN ID to be modified, the modified VLAN ID (1 to 4094) is output.
IPv4 Address	The IPv4 address*
Subnet Mask	The subnet mask of the IPv4*
Default Gateway	The default gateway of the IPv4*
IPv6 Mode	The IPv6 setting status* Enable: Enabled, Disable: Disabled
LinkLocal Addressing Mode	The input mode of the link local address* Auto: Automatic input, Manual: Manual input No value is output when IPv6 Mode is disabled.
IPv6 LinkLocal Address	The IPv6 link local address* No value is output when IPv6 Mode is disabled or Link Local Addressing Mode is Auto.
Global Addressing Mode	The input mode of the global address and the global address 2* Auto: Automatic input, Manual: Manual input No value is output when IPv6 Mode is disabled.

Item	Description
IPv6 Global Address	The IPv6 global address* No value is output when IPv6 Mode is disabled or Link Local Addressing Mode is Auto.
IPv6 Global Address 2	The IPv6 global address 2* No value is output when IPv6 Mode is disabled or Link Local Addressing Mode is Auto.
IPv6 Default Gateway	The IPv6 default gateway* No value is output when IPv6 Mode is disabled.
TCP Port	The TCP port number*
Selective ACK Mode	The setting status of Selective ACK Mode* Enable: Enabled, Disable: Disabled
Delayed ACK Mode	The setting status of Delayed ACK Mode* Enable: Enabled, Disable: Disabled
Window Scale(K)	The TCP window size: 64, 128, 256, 512, or 1024*
Keep Alive Timer(s)	The setting status of Keep Alive Timer*
iSNS Server	The setting status of iSNS Server* Enable: Enabled, Disable: Disabled
iSNS Server IP	The IP address of the iSNS server*
iSNS Server TCP Port	The TCP port number of the iSNS server*
Virtual Storage Machine S/N	The serial number of the virtual storage machine No value is output when a virtual storage machine is not specified.
*For settings other than port attributes, the user setting values are output even if options are omitted.	

Modify Port(T10PI)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Modify Port(T10PI)
++Port=1A,T10PI=Enable
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port for which T10 PI mode is set

Item	Description
	When a virtual storage machine is specified, the port name of the virtual storage machine is output.
T10PI	The setting status of the T10 PI mode Enable: Enabled; Disable: Disabled

Modify Quorum

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Modify Quorum
++Quorum Disk ID=1, Read Response Guaranteed Time=15
```

Detailed Information

Item	Description
Command	The command name
Quorum Disk ID	Indicates the ID of a global-active device quorum disk whose Read Response Guaranteed Time When Quorum Disk Blocked value will be updated.
Read Response Guaranteed Time	Indicates the updated value of Read Response Guaranteed Time When Quorum Disk Blocked for global-active device in seconds.

Modify RCU

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Modify RCU
++S/N=423456,MCU=0xAAAA,RCU=0xBBBB,Controller ID=18,
Path Gr. ID=0,Min.Path=1,Round Trip Time(ms)=30,RIO MIH(s)=3,
FREEZE=Enable
```

Detailed Information

Item	Description
Command	The command name
S/N	The serial number of the remote storage system
MCU	The CU number of the local storage system "Free" is output when CU Free is specified
RCU	The CU number of the remote storage system "Free" is output when CU Free is specified
Controller ID	The controller ID of the remote storage system

Item	Description
	5: USP V/VM, 6: VSP, 7: VSP G1000/G1500 and VSP F1500, 18: VSP Gx00, VSP Fx00, 19: HUS VM No value is output when CU Free is not specified.
Path Gr. ID	The path group ID of the remote storage system No value is output when CU Free is not specified.
Min.Path	The minimum number of paths between the local storage system and remote storage system
Round Trip Time(ms)	The round trip time: the delayed time for the remote I/O round trip
RIO MIH(s)	The value of the RIO MTH (remote I/O missing interrupt handler) timer: The wait time for data copy from the local storage system to the remote storage system to be complete
FREEZE	The setting status of the CGROUP (FREEZE/RUN) PPRC TSO command Enable: Enabled, Disable: Disabled

Modify Snapshot(Restore)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Modify Snapshot(Restore)
++P-VOL(LDKC:CU:LDEV)=0x00:0xAA:0xBB,MU=A,
Virtual Storage Machine S/N=423456
```

Detailed Information

Item	Description
Command	The command name
P-VOL(LDKC:CU:LDEV)	The LDEV ID of the primary volume shared by a pair to be restored When a virtual storage machine is specified, the LDEV ID of the virtual storage machine is output.
MU	The MU number of the pair to be restored
Virtual Storage Machine S/N	The serial number of the virtual storage machine No output when a virtual storage machine is not specified

Modify Snapshot(Resync)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Modify Snapshot(Resync)
++P-VOL(LDKC:CU:LDEV)=0x00:0xAA:0xBB,MU=A,
Virtual Storage Machine S/N=423456
```

Detailed Information

Item	Description
Command	The command name
P-VOL(LDKC:CU:LDEV)	The LDEV ID of the primary volume shared by a pair to be resynchronized When a virtual storage machine is specified, the LDEV ID of the virtual storage machine is output.
MU	The MU number of the pair to be resynchronized
Virtual Storage Machine S/N	The serial number of the virtual storage machine No output when a virtual storage machine is not specified

Modify Snapshot(Split)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Modify Snapshot(Split)
++P-VOL(LDKC:CU:LDEV)=0x00:0xAA:0xBB,MU=A,
Virtual Storage Machine S/N=423456,Range=Group
```

Detailed Information

Item	Description
Command	The command name
P-VOL(LDKC:CU:LDEV)	The LDEV ID of the primary volume shared by a pair to be split When a virtual storage machine is specified, the LDEV ID of the virtual storage machine is output.
MU	The MU number of the pair to be split
Virtual Storage Machine S/N	The serial number of the virtual storage machine No output when a virtual storage machine is not specified
Range	The range for splitting pairs Volume: The pair to be split Group: All pairs in the group including the pair is split

Modify SPM Group

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Modify SPM Group
++Port=1A,SPM Group=XXXXXXXXXXXX,Priority=Prio,Limit=100 IOPS
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port to which the SPM group, for which SPM information is set, belongs
SPM Group	The name of an SPM group for which SPM information is set
Priority	The attribute after the WWN is modified Prio: Prioritized WWN, Non-Prio: Not prioritized WWN
Limit	The threshold value for the WWN when Priority is Prio The upper limit value for the WWN when Priority is Non-Prio The unit is I/O rate (IOPS) or transfer rate (KB/s) If MB is specified at the command option, the value calculated on the basis of 1MB=1024KB is output.

Modify SPM Host Group

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Modify SPM Host Group
++Port=1A,Host Group Name=XXXXXXXXXXXX,Priority=Prio,Limit=100 IOPS
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port to which the SPM group, for which SPM information is set, belongs
Host Group Name	The name of a host group to which the SPM group, for which SPM information is set, belongs
Priority	The attribute after the WWN is modified Prio: Prioritized WWN, Non-Prio: Not prioritized WWN
Limit	The threshold value for the WWN when Priority is Prio The upper limit value for the WWN when Priority is Non-Prio The unit is I/O rate (IOPS) or transfer rate (KB/s) If MB is specified at the command option, the value calculated on the basis of 1MB=1024KB is output.

Modify SPM WWN

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Modify SPM WWN
++Port=1A, WWN=XXXXXXXXXXXX,Priority=Prio,Limit=100 IOPS
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port to which the WWN, for which the SPM information is set, belongs
WWN	The WWN for which the SPM information is set
Priority	The attribute after the WWN is modified Prio: Prioritized WWN, Non-Prio: Not prioritized WWN
Limit	The threshold value for the WWN when Priority is Prio The upper limit value for the WWN when Priority is Non-Prio The unit is I/O rate (IOPS) or transfer rate (KB/s) If MB is specified at the command option, the value calculated on the basis of 1MB=1024KB is output.

Modify SPM WWN(Nickname)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Modify SPM WWN(Nickname)
++Port=1A,Nickname=XXXXXXXXXXXX,Priority=Prio,Limit=100 IOPS
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port to which the WWN, for which SPM information is set, belongs
Nickname	The SPM name (nickname) of the WWN for which SPM information is set
Priority	The attribute after the WWN is modified Prio: Prioritized WWN, Non-Prio: Not prioritized WWN
Limit	The threshold value for the WWN when Priority is Prio The upper limit value for the WWN when Priority is Non-Prio The unit is I/O rate (IOPS) or transfer rate (KB/s)

Item	Description
	If MB is specified at the command option, the value calculated on the basis of 1MB=1024KB is output.

Monitor Pool

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Monitor Pool
++Pool ID=AA
```

Detailed Information

Item	Description
Command	The command name
Pool ID	The pool number of a pool to be monitored

Paircreate

Paircreate is an audit log generated when a command operation is performed with the DKCMAIN firmware version earlier than 83-04-0X-XX/XX.

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Paircreate
++Copy Kind=Remote
++P-VOL(Port-LUN-LDEV)=1A-2047-0x1A,
S-VOL(Port-LUN-LDEV)=1B-3-0x3B,MCU S/N=412345,RCU S/N=422364,
Virtual Storage Machine S/N=423456
```

Detailed Information

Item	Description
Command	The command name
Copy Kind	Indicates whether the copy kind is Local copy or Remote copy Local: Local copy, Remote: Remote copy
P-VOL(Port-LUN-LDEV)*	The port number, the LU number, and the LDEV number of the primary volume The port number and the LU number show the expanded LU of Command Control Interface
S-VOL(Port-LUN-LDEV)*	The port number, the LU number, and the LDEV number of the secondary volume The port number and the LU number show the expanded LU of Command Control Interface

Item	Description
MCU S/N*	The serial number of the local storage system
RCU S/N*	The serial number of the remote storage system For Local copy, the same value as that of MCU S/N is output.
Virtual Storage Machine S/N	The serial number of the virtual storage machine No output when a virtual storage machine is not specified
*When a virtual storage machine is specified, the value of the virtual storage machine is output.	

Paircreate(LocalCopy)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Paircreate(LocalCopy)
++Copy Kind=Local
++P-VOL(Port-LUN-LDEV)=1A-2047-0x1A,S-VOL(Port-LUN-LDEV)=1B-3-0x3B,
MCU S/N=412345,RCU S/N=412345,
Virtual Storage Machine S/N=423456,
Copy Pace(TRK)=1,Range=Group,CTG ID=100,
Split Mode=Normal,S-VOL Hidden Mode=Enable,Pool ID(TI)=10,
Device Option=Enable
```

Detailed Information

Item	Description
Command	The command name
Copy Kind	The local copy Local is output as the fixed value.
P-VOL(Port-LUN-LDEV)*	The port number, the LU number, and the LDEV number of the primary volume The port number and the LU number show the expanded LU of Command Control Interface
S-VOL(Port-LUN-LDEV)*	The port number, the LU number, and the LDEV number of the secondary volume The port number and the LU number show the expanded LU of Command Control Interface
MCU S/N*	The serial number of the local storage system
RCU S/N*	The same value as that of MCU S/N is output.
Virtual Storage Machine S/N	The serial number of the virtual storage machine No value is output when a virtual storage machine is not specified.
Copy Pace(TRK)	The track size for copy
Range	Specifies a range of pairs to be created

Item	Description
	Device: Specifies by the device Group: Specifies by the consistency group
CTG ID	The consistency group ID
Split Mode	The split mode when ShadowImage pairs are split Normal: The pair is split normally. Quick: The pair is split quickly. If it is not specified at the command option or the pair is other than ShadowImage one, a hyphen (-) is output.
S-VOL Hidden Mode	Indicates whether the secondary volume is hidden after a ShadowImage pair is created Enable: Hides the secondary volume Disable: Not hides the secondary volume Disable is output for pairs other than ShadowImage ones.
Pool ID(TI)	The pool ID of Thin Image pairs 0 (zero) is output for pairs other than Thin Image ones.
Device Option	Indicates whether the volume name defined in the configuration definition file is used Enable: Used, Disable: Not used
*When a virtual storage machine is specified, the value of the virtual storage machine is output.	

Paircreate(RemoteCopy)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Paircreate(RemoteCopy)
++Copy Kind=Remote
++P-VOL(Port-LUN-LDEV)=1A-2047-0x1A,S-VOL(Port-LUN-LDEV)=1B-3-0x3B,
MCU S/N=412345,RCU S/N=422364,
Virtual Storage Machine S/N=423456,
Write Permission(Update Copy Error)=Enable,
Write Permission(RCU Suspend Failure)=Enable,
Initial Copy=None,Copy Pace(TRK)=1,JNL ID Option=Disable,CTG ID=100,
CTG Mode(Multi)=Disable,Paircreate Mode(Diff)=Normal,CTG
Option=Enable,
CTO Option=Enable,Inflow Control=Disable,Offloading Timer(s)=,M-JNL=,
R-JNL=,Quorum Disk ID=,Device Option=Enable
```

Detailed Information

Item	Description
Command	The command name
Copy Kind	The remote copy Remote is output as the fixed value.

Item	Description
P-VOL(Port-LUN-LDEV)*	The port number, the LU number, and the LDEV number of the primary volume The port number and the LU number show the expanded LU of Command Control Interface
S-VOL(Port-LUN-LDEV)*	The port number, the LU number, and the LDEV number of the secondary volume The port number and the LU number show the expanded LU of Command Control Interface
MCU S/N*	The serial number of the local storage system
RCU S/N*	The serial number of the remote storage system
Virtual Storage Machine S/N	The serial number of the virtual storage machine No value is output when a virtual storage machine is not specified.
Write Permission(Update Copy Error)	The setting status of write permission if an error occurs during update copy Enable: Enabled, Disable: Disabled
Write Permission(RCU Suspend Failure)	The setting status of permission to write to the local storage system if the suspension operation cannot be performed on the remote storage system Enable: Enabled, Disable: Disabled
Initial Copy	The type of pair creation Entire: Creates pairs and copies data from the primary volume to the secondary volume None: Creates pairs and does not copy data from the primary volume to the secondary volume
Copy Pace(TRK)	The track size for copy
JNL ID Option	Indicates whether an option (-jp or -js) is specified for a journal ID Enable: Specified, Disable: Not specified Disable is output for pairs other than Universal Replicator ones
CTG ID	The consistency group ID
CTG Mode(Multi)	Indicates whether pairs are specified for consistency groups across multiple storage systems Enable: Specified, Disable: Not specified Disable is output for pairs other than Universal Replicator ones
Paircreate Mode(Diff)	The pair creation mode Normal: Normal mode, Diff: Difference mode Normal is output for pairs other than Universal Replicator ones.
CTG Option	Indicates whether the consistency group option (-fg) is specified Enable: Specified, Disable: Not specified
CTO Option	Indicates whether the CTO option (-cto) is specified

Item	Description
	Enable: Specified, Disable: Not specified
Inflow Control	The setting status of the inflow control mode Enable: Enabled, Disable: Disabled No value is output when the CTO option is not specified.
Offloading Timer(s)	The time out value for the inflow control in seconds No value is output when the CTO option is not specified or the inflow control mode is disabled.
M-JNL	The master journal number No value is output for pairs other than Universal Replicator ones.
R-JNL	The restore journal number No value is output for pairs other than Universal Replicator ones.
Quorum Disk ID	The Quorum Disk ID No value is output for pairs other than global-active device ones.
Device Option	Indicates whether the volume name defined in the configuration definition file is used Enable: Used, Disable: Not used
*When a virtual storage machine is specified, the value of the virtual storage machine is output.	

Pairresync

Pairresync is an audit log generated when a command operation is performed with the DKCMAIN firmware version earlier than 83-04-0X-XX/XX.

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Pairresync
++Copy Kind=Local
++P-VOL(Port-LUN-LDEV)=1A-2047-0x1A,
S-VOL(Port-LUN-LDEV)=1B-3-0x3B,
MCU S/N=412345,RCU S/N=412345,Resync Type=Reverse,
Virtual Storage Machine S/N=423456
```

Detailed Information

Item	Description
Command	The command name
Copy Kind	Indicates whether the copy kind is Local copy or Remote copy Local: Local copy, Remote: Remote copy

Item	Description
P-VOL(Port-LUN-LDEV)*	The port number, the LU number, and the LDEV number of the primary volume The port number and the LU number show the expanded LU of Command Control Interface No value is output when the pair operation is performed by Command Control Interface from the remote storage system
S-VOL(Port-LUN-LDEV)*	The port number, the LU number, and the LDEV number of the secondary volume The port number and the LU number show the expanded LU of Command Control Interface
MCU S/N*	The serial number of the local storage system No value is output when the pair operation is performed by Command Control Interface from the remote storage system
RCU S/N*	The serial number of the remote storage system For Local copy, the same value as that of MCU S/N is output.
Resync Type	Indicates the direction of resynchronizing a pair Normal: Normal direction (Primary volume to secondary volume) Reverse: Reverse direction (Secondary volume to primary volume.) Normal is output when the Copy Kind is Remote.
Virtual Storage Machine S/N	The serial number of the virtual storage machine No output when a virtual storage machine is not specified
*When a virtual storage machine is specified, the value of the virtual storage machine is output.	

Pairresync(LocalCopy)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Pairresync(LocalCopy)
++Copy Kind=Local
++P-VOL(Port-LUN-LDEV)=1A-2047-0x1A,S-VOL(Port-LUN-LDEV)=1B-3-0x3B,
MCU S/N=412345,RCU S/N=412345,
Resync Type=Reverse,Virtual Storage Machine S/N=423456,
Copy Pace(TRK)=1,Pair Target Range=Device,
CTG ID=100,Split Mode=Normal,Device Option=Enable
```

Detailed Information

Item	Description
Command	The command name
Copy Kind	The local copy Local is output as the fixed value.

Item	Description
P-VOL(Port-LUN-LDEV)*	The port number, the LU number, and the LDEV number of the primary volume The port number and the LU number show the expanded LU of Command Control Interface
S-VOL(Port-LUN-LDEV)*	The port number, the LU number, and the LDEV number of the secondary volume The port number and the LU number show the expanded LU of Command Control Interface
MCU S/N*	The serial number of the local storage system
RCU S/N*	The same value as that of MCU S/N is output.
Resync Type	Indicates the direction of resynchronizing a pair Normal: Normal direction (Primary volume to secondary volume) Reverse: Reverse direction (Secondary volume to primary volume)
Virtual Storage Machine S/N	The serial number of the virtual storage machine No value is output when a virtual storage machine is not specified.
Copy Pace(TRK)	The track size for copy
Pair Target Range	Specifies the range of pairs to be resynchronized Device: Specifies by the device Group: Specifies by the consistency group
CTG ID	The consistency group ID
Split Mode	The split mode when pairs are split Normal: The pair is split normally. Quick: The pair is split quickly. If it is not specified at the command option, a hyphen (-) is output.
Device Option	Indicates whether the volume name defined in the configuration definition file is used Enable: Used, Disable: Not used
*When a virtual storage machine is specified, the value of the virtual storage machine is output.	

Pairresync(RemoteCopy)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Pairresync(RemoteCopy)
++Copy Kind=Remote
++P-VOL(Port-LUN-LDEV)=1A-2047-0x1A,S-VOL(Port-LUN-LDEV)=1B-3-0x3B,
MCU S/N=412345,RCU S/N=412345,
Virtual Storage Machine S/N=423456,
Write Permission(Update Copy Error)=Enable,
```

```
Write Permission(RCU Suspend Failure)=Enable,
Copy Pace(TRK)=1,JNL ID Option=Disable,CTG ID=100,Resync-
SWAP=Disable,
CTG Mode(Multi)=Enable,CTG Option=Enable,CTO Option=Enable,
Inflow Control=Enable,Offloading Timer(s)=1,Device Option=Enable
```

Detailed Information

Item	Description
Command	The command name
Copy Kind	The remote copy Remote is output as the fixed value.
P-VOL(Port-LUN-LDEV)*	The port number, the LU number, and the LDEV number of the primary volume The port number and the LU number show the expanded LU of Command Control Interface
S-VOL(Port-LUN-LDEV)*	The port number, the LU number, and the LDEV number of the secondary volume The port number and the LU number show the expanded LU of Command Control Interface No value is output when the option "-swaps" or "-swapp" is specified.
MCU S/N*	The serial number of the local storage system
RCU S/N*	The serial number of the remote storage system No value is output when the option "-swaps" or "-swapp" is specified.
Virtual Storage Machine S/N	The serial number of the virtual storage machine No value is output when a virtual storage machine is not specified.
Write Permission(Update Copy Error)	The setting status of write permission if an error occurs during update copy Enable: Enabled, Disable: Disabled Enable is output when the option "-swaps" or "-swapp" is specified.
Write Permission(RCU Suspend Failure)	The setting status of permission to write to the local storage system if the suspension operation cannot be performed on the remote storage system Enable: Enabled, Disable: Disabled Enable is output when the option "-swaps" or "-swapp" is specified.
Copy Pace(TRK)	The track size for copy
JNL ID Option	Indicates whether an option (-jp or -js) is specified for a journal ID Enable: Specified, Disable: Not specified Disable is output for pairs other than Universal Replicator ones.
CTG ID	The consistency group ID

Item	Description
	No value is output when the option "-swaps" or "-swapp" is specified.
Resync-SWAP	Indicates whether an option (-swaps or -swapp) is specified Enable: Specified, Disable: Not specified
CTG Mode(Multi)	Indicates whether pairs are specified for consistency groups across multiple storage systems Enable: Specified, Disable: Not specified Disable is output for pairs other than Universal Replicator ones.
CTG Option	Indicates whether the consistency group option (-fg) is specified Enable: Specified, Disable: Not specified If the option "-swaps" or "-swapp" is specified, Disable is output for Universal Replicator pair.
CTO Option	Indicates whether the CTO option (-cto) is specified Enable: Specified, Disable: Not specified
Inflow Control	The setting status of the inflow control mode Enable: Enabled, Disable: Disabled No value is output when the CTO option is not specified.
Offloading Timer(s)	The time out value for the inflow control in seconds No value is output when the CTO option is not specified or the inflow control mode is disabled.
Device Option	Indicates whether the volume name defined in the configuration definition file is used Enable: Used, Disable: Not used
*When a virtual storage machine is specified, the value of the virtual storage machine is output.	

Pairsplit

Pairsplit is an audit log generated when a command operation is performed with the DKCMAIN firmware version earlier than 83-04-0X-XX/XX.

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Pairsplit
++Copy Kind=Remote
++P-VOL(Port-LUN-LDEV)=1A-2047-0x1A,
S-VOL(Port-LUN-LDEV)=1B-3-0x3B,
MCU S/N=412345,RCU S/N=422364,Range=LU,
Virtual Storage Machine S/N=423456
```

Detailed Information

Item	Description
Command	The command name
Copy Kind	Indicates whether the copy kind is Local copy or Remote copy Local: Local copy, Remote: Remote copy
P-VOL(Port-LUN-LDEV)*	The port number, the LU number, and the LDEV number of the primary volume The port number and the LU number show the expanded LU of Command Control Interface No value is output when the pair operation is performed by Command Control Interface from the remote storage system
S-VOL(Port-LUN-LDEV)*	The port number, the LU number, and the LDEV number of the secondary volume The port number and the LU number show the expanded LU of Command Control Interface
MCU S/N*	The serial number of the local storage system No value is output when the pair operation is performed by Command Control Interface from the remote storage system
RCU S/N*	The serial number of the remote storage system The same value as that of MCU S/N is output for Local copy.
Range	The range of pair split Group: Split by the consistency group unit LU: Split by LU unit
Virtual Storage Machine S/N	The serial number of the virtual storage machine No output when a virtual storage machine is not specified
*When a virtual storage machine is specified, the value of the virtual storage machine is output.	

Pairsplit(LocalCopy)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Pairsplit(LocalCopy)
++Copy Kind=Local
++P-VOL(Port-LUN-LDEV)=1A-2047-0x1A,S-VOL(Port-LUN-LDEV)=1B-3-0x3B,
MCU S/N=412345,RCU S/N=412345,Range=LU,
Virtual Storage Machine S/N=423456,Suspend Mode=Normal,Split
Mode=Normal,
Copy Pace(TRK)=1,S-VOL Hidden Mode=Enable,Pool ID(TI)=10
```

Detailed Information

Item	Description
Command	The command name

Item	Description
Copy Kind	The local copy Local is output as the fixed value.
P-VOL(Port-LUN-LDEV)*	The port number, the LU number, and the LDEV number of the primary volume The port number and the LU number show the expanded LU of Command Control Interface
S-VOL(Port-LUN-LDEV)*	The port number, the LU number, and the LDEV number of the secondary volume The port number and the LU number show the expanded LU of Command Control Interface
MCU S/N*	The serial number of the local storage system
RCU S/N*	The same value as that of MCU S/N is output.
Range	The range of pair split Group: Split by the consistency group unit LU: Split by the LU unit
Virtual Storage Machine S/N	The serial number of the virtual storage machine No value is output when a virtual storage machine is not specified.
Suspend Mode	Indicates whether ShadowImage pairs are forcibly suspended at an error Normal: Not suspended, Force: Forcibly suspended If it is not specified at the command option or the pair is other than ShadowImage one, Normal is output.
Split Mode	The split mode when ShadowImage pairs are split Normal: The pair is split normally. Quick: The pair is split quickly. If it is not specified at the command option or the pair is other than ShadowImage one, a hyphen (-) is output.
Copy Pace(TRK)	The track size for copy
S-VOL Hidden Mode	Indicates whether the secondary volume is hidden after a ShadowImage pair is created Enable: Hides the secondary volume Disable: Not hides the secondary volume If it is not specified at the command option or the pair is other than ShadowImage one, a hyphen (-) is output.
Pool ID(TI)	The pool ID ofThin Image. If it is not paircreate –split operation, 0 (zero) is output.
*When a virtual storage machine is specified, the value of the virtual storage machine is output.	

Pairsplit(RemoteCopy)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Pairsplit(RemoteCopy)
++Copy Kind=Remote
++P-VOL(Port-LUN-LDEV)=1A-2047-0x1A,S-VOL(Port-LUN-LDEV)=1B-3-0x3B,
MCU S/N=412345,RCU S/N=422364,Range=LU,
Virtual Storage Machine S/N=423456,Suspend Status=P-VOL Failure,
S-VOL Write Permission (Suspend)=Disable,
P-VOL Write Permission (Force Suspend)=Disable,
Side File Liberation Kind=Flush,Rewind=Normal Suspend,CTG ID=100,
CTG Option=Disable
```

Detailed Information

Item	Description
Command	The command name
Copy Kind	The remote copy Remote is output as the fixed value.
P-VOL(Port-LUN-LDEV)*	The port number, the LU number, and the LDEV number of the primary volume The port number and the LU number show the expanded LU of Command Control Interface No value is output when the option "-RS" is specified.
S-VOL(Port-LUN-LDEV)*	The port number, the LU number, and the LDEV number of the secondary volume The port number and the LU number show the expanded LU of Command Control Interface
MCU S/N*	The serial number of the local storage system No value is output when the option "-RS" is specified.
RCU S/N*	The serial number of the remote storage system
Range	The range of pair split Group: Split by the consistency group unit LU: Split by the LU unit
Virtual Storage Machine S/N	The serial number of the virtual storage machine No value is output when a virtual storage machine is not specified.
Suspend Status	Indicates whether the primary volume is writable after splitting a TrueCopy pair. P-VOL Failure: Not writable S-VOL Suspend: Writable S-VOL Suspend is output for pairs other than TrueCopy ones.
S-VOL Write Permission (Suspend)	Indicates whether the writing to the secondary volume is enabled in the suspend status Enable: Enabled, Disable: Disabled

Item	Description
P-VOL Write Permission (Force Suspend)	Indicates whether the writing to the primary volume is enabled in the forcible suspend status Enable: Enabled, Disable: Disabled
Side File Liberation Kind	The liberation kind of the side file Flush: Flush is specified. Purge: Purge is specified.
Rewind	Rewinds from SSWS to PSUS/PSUE Normal Suspend: Normal suspend SSWS Rewind: Rewound to PSUS/PSUE
CTG ID	The consistency group ID No value is output when the consistency group option "-fg" is not specified.
CTG Option	Indicates whether the consistency group option (-fg) is specified Enable: Specified, Disable: Not specified
*When a virtual storage machine is specified, the value of the virtual storage machine is output.	

Pairsplit-S

Pairsplit-S is an audit log generated when a command operation is performed with the DKCMAIN firmware version earlier than 83-04-0X-XX/XX.

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Pairsplit-S
++Copy Kind=Remote
++P-VOL(Port-LUN-LDEV)=1A-2047-0x1A,
S-VOL(Port-LUN-LDEV)=1B-3-0x3B,
MCU S/N=412345,RCU S/N=422364,
Virtual Storage Machine S/N=423456
```

Detailed Information

Item	Description
Command	The command name
Copy Kind	Indicates whether the copy kind is Local copy or Remote copy Local: Local copy, Remote: Remote copy
P-VOL(Port-LUN-LDEV)*	The port number, the LU number, and the LDEV number of the primary volume The port number and the LU number show the expanded LU of Command Control Interface No value is output when the pair operation is performed by Command Control Interface from the remote storage system

Item	Description
S-VOL(Port-LUN-LDEV)*	The port number, the LU number, and the LDEV number of the secondary volume The port number and the LU number show the expanded LU of Command Control Interface
MCU S/N*	The serial number of the local storage system No value is output when the pair operation is performed by Command Control Interface from the remote storage system
RCU S/N*	The serial number of the remote storage system For Local copy, the same value as that of MCU S/N is output.
Virtual Storage Machine S/N	The serial number of the virtual storage machine No output when a virtual storage machine is not specified
*When a virtual storage machine is specified, the value of the virtual storage machine is output.	

Pairsplit-S(LocalCopy)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Pairsplit-S(LocalCopy)
++Copy Kind=Local
++P-VOL(Port-LUN-LDEV)=1A-2047-0x1A,S-VOL(Port-LUN-LDEV)=1B-3-0x3B,
MCU S/N=412345,RCU S/N=412345,
Virtual Storage Machine S/N=423456,Delete Range=LU
```

Detailed Information

Item	Description
Command	The command name
Copy Kind	The local copy Local is output as the fixed value.
P-VOL(Port-LUN-LDEV)*	The port number, the LU number, and the LDEV number of the primary volume The port number and the LU number show the expanded LU of Command Control Interface
S-VOL(Port-LUN-LDEV)*	The port number, the LU number, and the LDEV number of the secondary volume The port number and the LU number show the expanded LU of Command Control Interface
MCU S/N*	The serial number of the local storage system
RCU S/N*	The same value as that of MCU S/N is output.
Virtual Storage Machine S/N	The serial number of the virtual storage machine

Item	Description
	No value is output when a virtual storage machine is not specified.
Delete Range	The range for deleting pairs Group: Deletes pairs by the consistency group LU: deletes pairs by the LU
*When a virtual storage machine is specified, the value of the virtual storage machine is output.	

Pairsplit-S(RemoteCopy)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Pairsplit-S(RemoteCopy)
++Copy Kind=Remote
++P-VOL(Port-LUN-LDEV)=1A-2047-0x1A,S-VOL(Port-LUN-LDEV)=1B-3-0x3B,
MCU S/N=412345,RCU S/N=422364,
Virtual Storage Machine S/N=423456,Delete Range=LU,
Force=Enable,Invisible=Enable,Type=P-VOL
```

Detailed Information

Item	Description
Command	The command name
Copy Kind	The remote copy Remote is output as the fixed value.
P-VOL(Port-LUN-LDEV)*	The port number, the LU number, and the LDEV number of the primary volume The port number and the LU number show the expanded LU of Command Control Interface No value is output when the option "-R" is specified.
S-VOL(Port-LUN-LDEV)*	The port number, the LU number, and the LDEV number of the secondary volume The port number and the LU number show the expanded LU of Command Control Interface
MCU S/N*	The serial number of the local storage system No value is output when the option "-R" is specified.
RCU S/N*	The serial number of the remote storage system
Virtual Storage Machine S/N	The serial number of the virtual storage machine No value is output when a virtual storage machine is not specified.
Delete Range	The range for deleting pairs Group: Deletes pairs by the consistency group

Item	Description
	LU: deletes pairs by the LU
Force	Indicates whether the setting for deleting pairs forcibly is enabled Enable: Pairs are forcibly deleted. Disable: Pairs are not forcibly deleted.
Invisible	Indicates whether hosts can access the volume after pairs are deleted Enable: The virtual LDEV ID is deleted from the volume on the local storage system not to be accessed by hosts. Disable: The virtual LDEV ID is not deleted from the volume on the local storage system to be accessed by hosts.
Type	The type of volumes of pairs to be deleted P-VOL: Primary volume, S-VOL: Secondary volume
*When a virtual storage machine is specified, the value of the virtual storage machine is output.	

Raidvchkset(Data Retention Utility)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Raidvchkset(Data Retention Utility)
++Guard Type=inv svd,Retention Term=365,Virtual Storage Machine S/
N=423456
```

Detailed Information

Item	Description
Command	The command name
Guard Type	The guard type to be specified for volumes by using Data Retention Utility inv: Invisible mode to be set sz0: Zero Read Cap mode to be set rwd: Protection from reading/writing wtd: Protection from writing svd: Protection from copying program products - (hyphen): Released from all protection modes If svd is specified along with a different guard type, two values separated by a space are displayed.
Retention Term	The retention term (days) A hyphen (-) is output for the value if it is not specified by the command option.
Virtual Storage Machine S/N	The serial number of the virtual storage machine

Item	Description
	No value is output when a virtual storage machine is not specified.

Reallocate Pool(Start)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Reallocate Pool(Start)
++Pool ID=AA
```

Detailed Information

Item	Description
Command	The command name
Pool ID	The pool number of a pool in which the manual tier relocation is performed

Reallocate Pool(Stop)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Reallocate Pool(Stop)
++Pool ID=AA
```

Detailed Information

Item	Description
Command	The command name
Pool ID	The pool number of a pool in which the manual tier relocation is interrupted

Rename Pool

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Rename Pool
++Pool ID=AA,Pool Name=XXXXXXX
```

Detailed Information

Item	Description
Command	The command name
Pool ID	The pool number of a pool to be renamed
Pool Name	The pool name after the change

Replace Snapshot

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Replace Snapshot
++Snapshot Group=ABCDEF,S-VOL(LDKC:CU:LDEV)=0x00:0xCC:0xDD,MU=1,
Virtual Storage Machine S/N=23456
```

Detailed Information

Item	Description
Command	The command name
Snapshot Group	The Snapshot Group name. The value is output only when Snapshot Group is specified.
S-VOL(LDKC:CU:LDEV)	The LDEV ID of the secondary volume When a virtual storage machine is specified, the LDEV ID of the virtual storage machine is output.
MU	The MU number. The value is output only when MU number is specified.
Virtual Storage Machine S/N	The serial number of the virtual storage machine No output when a virtual storage machine is not specified

Reset CHAP User

Example 1: Resetting the secret of the CHAP user on the target side

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Reset CHAP User
++Port=1A,Target ID=0xBB,Target CHAP User=XXXXXX,
Virtual Storage Machine S/N=423456
```

Detailed Information 1

Item	Description
Command	The command name
Port	The name of a port to which iSCSI targets belong

Item	Description
Target ID	The iSCSI target ID
Target CHAP User	The CHAP user name on the target side
Virtual Storage Machine S/N	The serial number of the virtual storage machine No output when a virtual storage machine is not specified

Example 2: Resetting the secret of the CHAP user on the initiator side

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Reset CHAP User
++Port=1A,Target ID=0xBB,Initiator CHAP User=XXXXXX,
Virtual Storage Machine S/N=423456
```

Detailed Information 2

Item	Description
Command	The command name
Port	The name of a port to which iSCSI targets belong
Target ID	The iSCSI target ID
Initiator CHAP User	The CHAP user name on the initiator side
Virtual Storage Machine S/N	The serial number of the virtual storage machine No output when a virtual storage machine is not specified

Reset Command Status

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Reset Command Status
```

Detailed Information

Item	Description
Command	The command name

Reset Ldev Priority

Example 1: Deleting the priority information from the combination of the LDEV and WWNs

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Re
++LDEV(LDKC:CU:LDEV)=0x00:0xAA:0xBB
```

```
++WWN={AAAAAAAAA,BBBBBBBBB,……,DDDDDDDD},Num. of WWNs=X
++Priority Type=WWN
```

Detailed Information 1

Item	Description
Command	The command name
LDEV(LDKC:CU:LDEV)	The LDEV ID of an LDEV from which the priority information is to be deleted
WWN	The WWN from which the priority information is to be deleted
Num. of WWNs	The number of WWNs from which the priority information is to be deleted
Priority Type	Indicates targets from which the priority information is to be deleted WWN: The WWNs and LDEV

Example 2: Deleting the priority information from the combination of the LDEV and iSCSI names

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Reset Ldev Priority
++LDEV(LDKC:CU:LDEV)=0x00:0xAA:0xBB
++iSCSI Name={iqn.z1,iqn.z2,……,iqn.zX},Num. of iSCSI Names=X
++Priority Type=iSCSI
```

Detailed Information 2

Item	Description
Command	The command name
LDEV(LDKC:CU:LDEV)	The LDEV ID of an LDEV from which the priority information is to be deleted
iSCSI Name	The iSCSI names from which the priority information is to be deleted
Num. of iSCSI Names	The number of iSCSI names from which the priority information is to be deleted
Priority Type	Indicates targets from which the priority information is to be deleted iSCSI: The iSCSI names and LDEV

Reset WWN

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Reset WWN
++Port=1A,Host Group ID=0xXXX,WWN=XXXXXXXXXXXXXXXX,
Virtual Storage Machine S/N=423456
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port to which a WWN, on which the nickname is deleted, belongs When a virtual storage machine is specified, the port name of the virtual storage machine is output.
Host Group ID	The ID of a host group to which a WWN, on which the nickname is deleted, belongs
WWN	The WWN on which the nickname is deleted
Virtual Storage Machine S/N	The serial number of the virtual storage machine No output when a virtual storage machine is not specified

Set CHAP User

Example 1: Setting the secret of the CHAP user on the target side

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Set CHAP User
++Port=1A,Target ID=0xBB,Target CHAP User=XXXXXX,
Virtual Storage Machine S/N=423456
```

Detailed Information 1

Item	Description
Command	The command name
Port	The name of a port to which iSCSI targets belong
Target ID	The iSCSI target ID
Target CHAP User	The CHAP user name on the target side
Virtual Storage Machine S/N	The serial number of the virtual storage machine No value is output when a virtual storage machine is not specified.

Example 2: Setting the secret of the CHAP user on the initiator side

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Set CHAP User
++Port=1A,Target ID=0xBB,Initiator CHAP User=XXXXXX,
Virtual Storage Machine S/N=423456
```

Detailed Information 2

Item	Description
Command	The command name

Item	Description
Port	The name of a port to which iSCSI targets belong
Target ID	The iSCSI target ID
Initiator CHAP User	The CHAP user name on the initiator side
Virtual Storage Machine S/N	The serial number of the virtual storage machine No value is output when a virtual storage machine is not specified.

Set HBA iSCSI

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Set HBA iSCSI
++Port=1A,Target ID=0xBB,iSCSI Name=ABCDEF,iSCSI Nickname=FFFFFF,
Virtual Storage Machine S/N=423456
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port to which iSCSI targets belong
Target ID	The iSCSI target ID
iSCSI Name	The iSCSI name of a host bus adapter for which a nickname is set
iSCSI Nickname	The specified nickname No value is output when a nickname is deleted.
Virtual Storage Machine S/N	The serial number of the virtual storage machine No value is output when a virtual storage machine is not specified.

Set Ldev Priority

Example 1: Setting the priority information for the combination of the LDEV and WWNs

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Set Ldev Priority
++LDEV(LDKC:CU:LDEV)=0x00:0xAA:0xBB
++{WWN,Priority,Limit}=[{123456789ABCDEF0,Non-Prio,10 IOPS}],
Num. of WWNs=1
++Priority Type=WWN
```

Detailed Information 1

Item	Description
Command	The command name
LDEV(LDKC:CU:LDEV)	The LDEV ID of an LDEV for which the priority information is to be set
WWN	The WWN for which the priority information is to be set
Priority	Indicates the setting of the priority information Prio: Prioritized, Non-Prio: Not prioritized
Limit	The upper limit value of the WWN when Priority is Non-Prio The unit is I/O rate (IOPS) or transfer rate (MB/s)
Num. of WWNs	The number of WWNs for which the priority information is to be set
Priority Type	Indicates targets for which the priority information is to be set WWN: The WWNs and LDEV

Example 2: Setting the priority information for the combination of the LDEV and iSCSI names

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Set Ldev Priority
++LDEV(LDKC:CU:LDEV)=0x00:0xAA:0xBB
++{iSCSI Name,Priority,Limit}=[{iqn.z1,Non-Prio,10 IOPS}],
Num. of iSCSI Names=1
++Priority Type=iSCSI
```

Detailed Information 2

Item	Description
Command	The command name
LDEV(LDKC:CU:LDEV)	The LDEV ID of an LDEV for which the priority information is to be set
iSCSI Name	The iSCSI names for which the priority information is to be set When Server Priority Manager is not installed, no value is output.
Priority	Indicates the setting of the priority information Prio: The priority is given, Non-Prio: The priority is not given
Limit	The upper limit value of the iSCSI name when Priority is Non-Prio The unit is I/O rate (IOPS) or transfer rate (MB/s)
Num. of iSCSI Names	The number of iSCSI names for which the priority information is to be set
Priority Type	Indicates targets for which the priority information is to be set iSCSI: The iSCSI names and LDEV

Set WWN

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Set WWN
++Port=1A,Host Group ID=0xXXX,WWN=XXXXXXXXXXXXXXXX,
Nickname=AAAAAAA,Virtual Storage Machine S/N=423456
```

Detailed Information

Item	Description
Command	The command name
Port	The name of a port to which a WWN, on which the nickname is set, belongs When a virtual storage machine is specified, the port name of the virtual storage machine is output.
Host Group ID	The ID of a host group to which a WWN, in which the nickname is set, belongs
WWN	The WWN on which the nickname is set
Nickname	The nickname to be set
Virtual Storage Machine S/N	The serial number of the virtual storage machine No output when a virtual storage machine is not specified

Stop Monitor Pool

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Stop Monitor Pool
++Pool ID=AA
```

Detailed Information

Item	Description
Command	The command name
Pool ID	The pool number of a pool, the monitoring of which is stopped

Switch Source Storage

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Switch Source Storage
++Source Storage S/N=75000018,{Port,IP Address}
=[{1A,192.168.1.1},{2A,192.168.1.2},{3A,192.168.1.3}],
Num. of Ports=3
```

Detailed Information

Item	Description
Command	The command name
Source Storage S/N	The serial number of the source external storage system
Port	The name of a port on the local storage system that is a destination to which the host I/O is switched
IP Address	The IP addresses to be set on ports on the source external storage system
Num. of Ports	The number of ports for operation

Switch Source Storage(Revert)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Switch Source Storage(Revert)
++Source Storage S/N=75000018
++{Port,IP Address}=[{1A,192.168.1.1},{2A,192.168.1.2},{3A,
192.168.1.3}],Num. of Ports=3
```

Detailed Information

Item	Description
Command	The command name
Source Storage S/N	The serial number of the source external storage system
Port	The name of a port on the local storage system that is a destination to which the host I/O is switched
IP Address	The IP addresses to be set on ports on the source external storage system
Num. of Ports	The number of ports for operation

Unmap Resource(LDEV)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Unmap Resource(LDEV)
++LDEV(LDKC:CU:LDEV)=0x00:0xAA:0xBB,
Map LDEV(LDKC:CU:LDEV)=0x00:0xCC:0xDD
```

Detailed Information

Item	Description
Command	The command name

Item	Description
LDEV(LDKC:CU:LDEV)	The LDEV ID of the actual volume
Map LDEV(LDKC:CU:LDEV)	The LDEV ID of the virtual volume to be unassigned from the actual volume "Reserve" is output if the reservation attribute of global-active device set on the LDEV ID of the volume that is used as a secondary volume of a global-active device pair is released.

Unmap Resource(Port)

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Unmap Resource(Port)
++Port=1A,Map Port=1E
```

Detailed Information

Item	Description
Command	The command name
Port	The port name of the actual port
Map Port	The name of the virtual port whose assignment to the actual port is released

Unmap Snapshot

Example

```
Out-of-band,,[Config Command],,,Accept,Seq.=xxxxxxxxxx
+Command=Unmap Snapshot
++P-VOL(LDKC:CU:LDEV)=0x00:0xAA:0xBB,
S-VOL(LDKC:CU:LDEV)=0x00:0xCC:0xDD,MU=1,
Virtual Storage Machine S/N=423456
```

Detailed Information

Item	Description
Command	The command name
P-VOL(LDKC:CU:LDEV)	The LDEV ID of the primary volume. The value is output only when the primary volume is specified. When a virtual storage machine is specified, the LDEV ID of the virtual storage machine is output.
S-VOL(LDKC:CU:LDEV)	The LDEV ID of the secondary volume. The value is output only when the secondary volume is specified.

Item	Description
	When a virtual storage machine is specified, the LDEV ID of the virtual storage machine is output.
MU	The MU number. The value is output only when the primary volume is specified.
Virtual Storage Machine S/N	The serial number of the virtual storage machine No output when a virtual storage machine is not specified

FC-SP

```
In-band OPEN,,[FC-SP],,,Normal end,Seq.=xxxxxxxxxx
```

- In-band OPEN
  The host is an open-system host.

User Auth

```
In-band OPEN,195,[User Auth],Login,,Normal end,
Seq.=xxxxxxxxxx
In-band OPEN,195,[User Auth],Logout,,Normal end,
Seq.=xxxxxxxxxx
```

- In-band OPEN
  The host is an open-system host.

15

VSP Gx00 models, VSP Fx00 models audit log examples of PIN Deletion Tool operation

This topic provides examples and descriptions of the audit logs produced by the PIN Deletion Tool.

- [PINDeletion] Delete

[PINDeletion] Delete

This log information indicates the completion of the PIN deletion operation, and does not indicate the completion of the PIN deletion processing.

Example

```
MPC,,[PINDeletion],Delete,,Normal end,
Seq.=xxxxxxxxxx
+LDEV=[0x00:0x00:0x00,0x00:0x00:0x01],Num. of LDEVs=2
```

Detailed Information

Item	Description
LDKC:CU:LDEV	The LDKC, CU, and LDEV numbers
Num. of LDEVs	The number of set LDEVs

A


Hitachi Device Manager - Storage Navigator audit log GUI reference

This topic describes the audit log screens in the Device Manager - Storage Navigator GUI. The GUI illustrations in this guide were created using a Windows computer with the Internet Explorer browser. Actual windows may differ depending on the operating system and browser used. GUI contents also vary with licensed program products, storage system models, and firmware versions.

- Audit Log Properties window
- Edit Audit Log Settings wizard

Audit Log Properties window

Use this window to download audit log files to the management client.

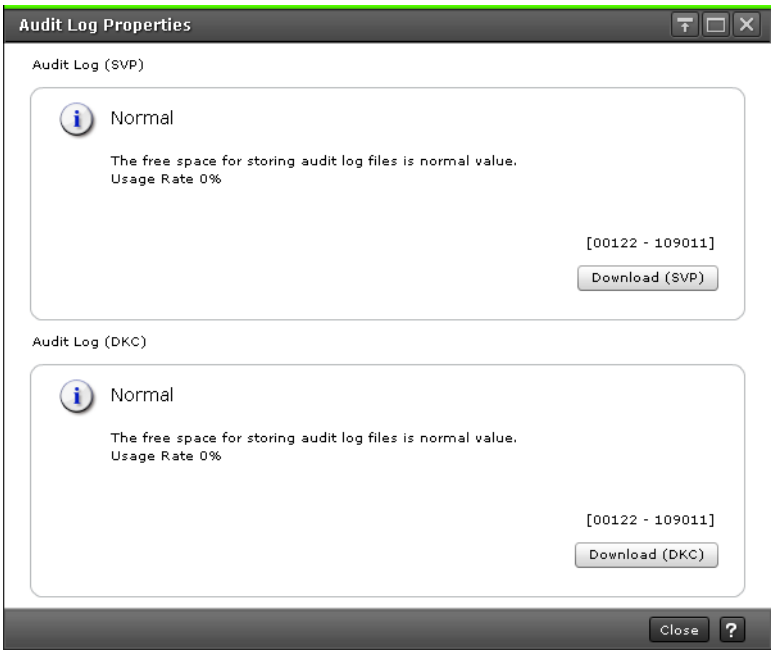

Item	Description
Download (SVP)	The Audit Log (SVP) includes operations from Device Manager - Storage Navigator and SVP. This option downloads audit log: Audit log information file 1 to management client.
Download (DKC)	The Audit Log (DKC) includes commands sent from hosts, computers using CCI, or hosts using Business Continuity Manager and events about encryption keys. This option downloads audit log: Audit log information file 2 to management client.

Related topics

- Downloading audit log files on page 3-3

Edit Audit Log Settings wizard

Use the Edit Audit Log Settings wizard to transfer the audit log or download a syslog file to the management client.

Related topics


- Downloading syslog files on page 3-4
- Automatically transferring audit log files to FTP servers on page 3-4
- Completing SIM generated when FTP transfer of audit log files failed on page 3-6
- Manually transferring audit log files to FTP servers on page 3-6

- Transferring audit log to syslog servers on page 3-7

Edit Audit Log Settings window

- Syslog tab on page A-3
- FTP tab on page A-6

Syslog tab

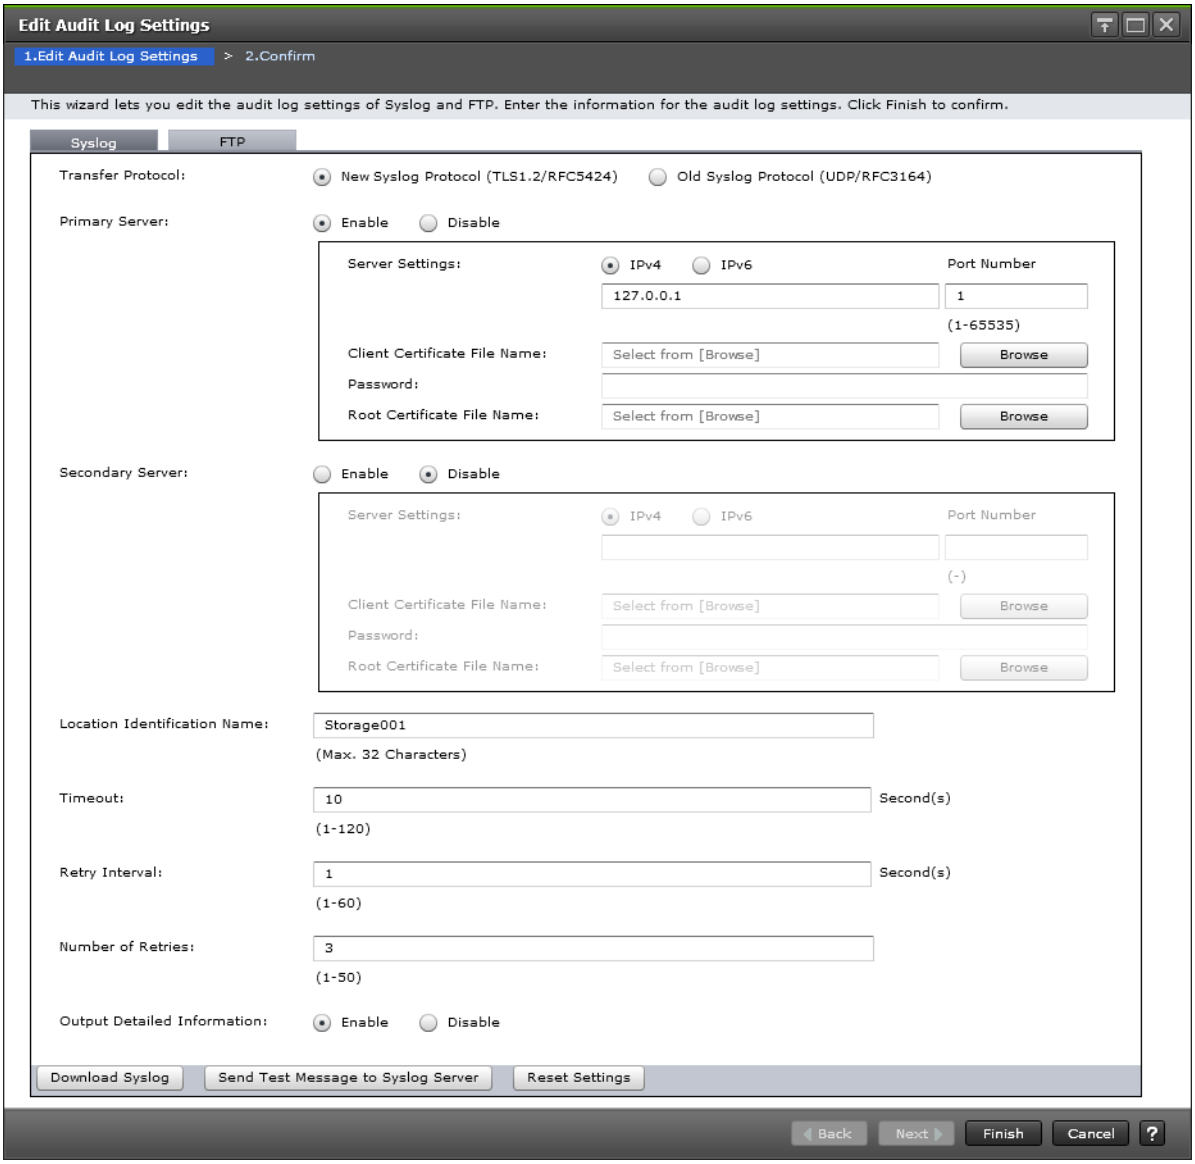

Item	Description
Transfer Protocol	Selects a protocol to transfer the audit log. • *New Syslog Protocol (TLS1.2/RFC5424)* • *Old Syslog Protocol (UDP/RFC3164)*
Primary Server	Selects whether to use the syslog server.


Item	Description
	• *Enable:* Transfers the audit log to the syslog server. • *Disable:* Do not transfer the audit log to the syslog server.
Primary Server-Server settings	Enters an IP address of a server you want to set as a syslog server. • To set an IPv4 address, select *IPv4* and enter four integers in the range of 0 to 255 (for example, `nnn.nnn.nnn.nnn`, where n is a number). • To set an IPv6 address, select *IPv6* and enter eight hexadecimal alphanumeric in the range of 0 to FFFF. (for example, `hhhh:hhhh:hhhh:hhhh:hhhh:hhhh:hhhh:hhhh`, where h is a hexadecimal digit). An abbreviated style of IPv6 address can also be specified.
Primary Server- Port Number	Enters a port number to be used at the syslog server.
Primary Server-Client Certificate File Name	Specifies a certificate file. Click **Browse**, and then specify a certificate file. Specifies this item only when *New Syslog Protocol (TLS1.2/ RFCS5424)* is selected at *Transfer Protocol*.
Primary Server-Password	Enters a password for the client certificate. Up to 128 characters can be entered for the password. Allowed characters are alphanumeric characters and symbols: ! # $ % & ' ( ) * + , - . / : ; < = > ? @ [\ ] ^ _ ` { | } ~. Inputs this item only when *Client Certificate File Name* is specified.
Primary Server- Root Certificate File Name	Specifies a certificate file. Click **Browse**, and then specify a certificate file. Specifies this item only when *New Syslog Protocol (TLS1.2/ RFCS5424)* is selected at *Transfer Protocol*.
Secondary Server	Selects whether to use an alternative server (secondary server) to the syslog server. • *Enable:* Transfers the audit log to the secondary server. • *Disable:* Do not transfer the audit log to the secondary server.
Secondary Server-Server Setting	Enters an IP address of a server you want to set as a secondary server. The restriction for the available values is the same as that of *Primary Server- Server Setting*.
Secondary Server-Port Number	Enters a port number to be used on the secondary server.
Secondary Server-Client Certificate File Name	Specifies a certificate file. Click **Browse**, and then specify a certificate file. Specifies this item only when *New Syslog Protocol (TLS1.2/ RFCS5424)* is selected at *Transfer Protocol*.
Secondary Server-Password	Enters a password for the client certificate. Up to 128 characters password can be entered. The restriction for the available values is the same as that of *Primary Server- Server Setting*.

Item	Description
Secondary Server-Root Certificate File Name	Specifies a certificate file. Click **Browse**, and then specify a certificate file. Specifies this item only when *New Syslog Protocol (TLS1.2/ RFCS5424)* is selected at *Transfer Protocol*.
Location Identification Name	Enters an arbitrary name for the storage system that transfers the audit log to the syslog servers, so that you can identify the storage system. Enter 32 characters at the maximum. Allowed characters are alphanumeric characters and symbols: ! " # $ % & ' ( ) * + - . / : ; < = > ? @ [\ ] ^ _ ` { | } ~. A comma (,) and a space cannot be used.
Timeout	Enters the time to detect the timeout of communication with the syslog server in the range of 1 to 120 seconds. The default is 10 seconds. Inputs this item only when *New Syslog Protocol (TLS1.2/ RFC5424)* at *Transfer Protocol* is specified.
Retry Interval	Enters the retry interval when the communication with the syslog server fails in the range of 1 to 60 seconds. The default is 1 second. Inputs this item only when *New Syslog Protocol (TLS1.2/ RFC5424)* at *Transfer Protocol* is specified.
Number of Retries	Enters the number of retry times when the communication with the syslog server fails in the range of 1 to 50. The default is 3. Inputs this item only when *New Syslog Protocol (TLS1.2/ RFC5424)* at *Transfer Protocol* is specified.
Output Detailed Information	Selects whether to transfer the detailed information of the audit log to the syslog server. • *Enable*:Transfer the detailed information to the syslog server. • *Disable*: Do not transfer the detailed information to the syslog server. In the syslog file that is stored in the SVP, the detailed information is always stored regardless of this setting.

- Button

Item	Description
Download Syslog	Downloads the syslog file to the management client.
Send Test Message to Syslog Server	Sends the test log to the syslog server.
Reset Settings	Cancel the change within tab.

FTP tab

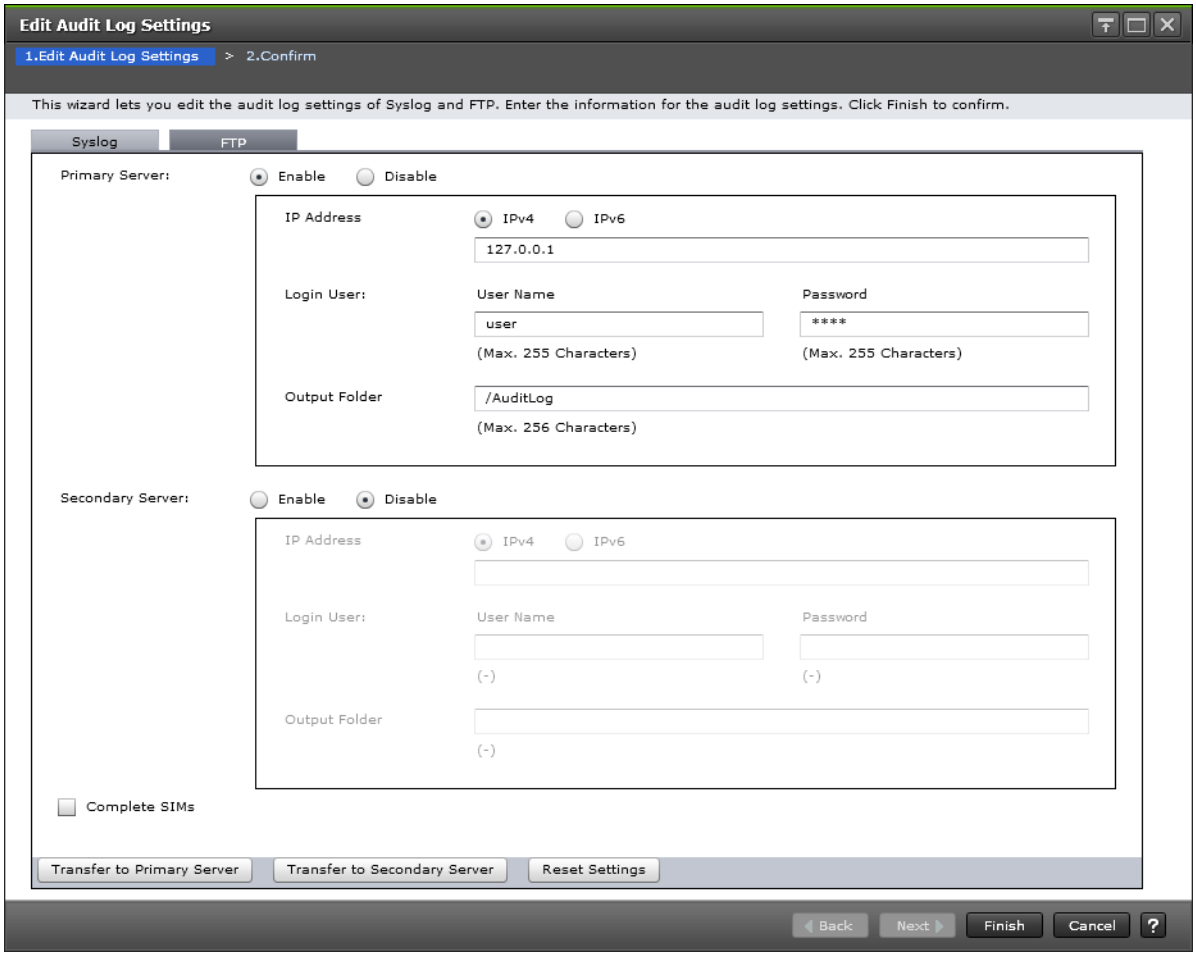


Item	Description
Primary Server	Selects whether to use the FTP server. • *Enable:* Transfers the audit log file to the FTP server. • *Disable:* Do not transfer the audit log file to the FTP server.
Primary Server- IP Address	Sets an IP address for the primary FTP server. You can set either IPv4 address or IPv6 address for IP address. • To set an IPv4 address, select *IPv4* and enter four integers in the range of 0 to 255 (for example, `nnn.nnn.nnn.nnn`, where n is a number). • To set an IPv6 address, select *IPv6* and enter eight hexadecimal alphanumeric in the range of 0 to FFFF. (for example, `hhhh:hhhh:hhhh:hhhh:hhhh:hhhh:hhhh:hhhh`, where h is a hexadecimal digit). An abbreviated style of IPv6 address can also be specified.
Primary Server- Login User	Sets the user name and password to log in to the primary FTP server. Enter up to 255 alphanumeric characters and symbols (ASCII codes) for user name and password.
Primary Server- Output Folder	Specifies the folder location to save the audit log file. The folder location should be relative to a home directory of a FTP server user. The default setting (/) is the home directory. Enter up to

Item	Description
	256 alphanumeric characters and symbols (ASCII codes) for the output folder.
Secondary Server	Selects whether to use an alternative server (secondary server) to the FTP server. • *Enable:* Transfers the audit log file to the secondary FTP server. • *Disable:* Do not transfer the audit log file to the secondary FTP server.
Secondary Server-IP Address	Enters an IP address of a server you want to set as a secondary FTP server. The restriction for the available values is the same as that of *Primary Server- IP Address*.
Secondary Server-Login User	Sets the user name and password to log in to the secondary FTP server. The restriction for the available values is the same as that of *Primary Server- Login User*.
Secondary Server-Output Folder	Specifies the secondary FTP server folder location to save the audit log file. The restriction for the available values is the same as that of *Primary Server- Output Folder*.
Complete SIMs	Completes (resolve) the SIM that occurred when transferring audit logs to any FTP servers fails. Resolve the error condition, manually transfer the audit log file by clicking *Transfer to Primary Server* or *Transfer to Secondary Server*, and then complete the SIM. The SIM status will change to *Completed*. *Important:* If you do not complete the SIM, the SIM will not occur when an FTP transfer fails next time.

- Button

Item	Description
Transfer to Primary Server	The audit log file is transferred to the primary FTP server. You can transfer the current audit log file without waiting to reach the threshold value with the automatic transfer.
Transfer to Secondary Server	The audit log file is transferred to the secondary FTP server. You can transfer the current audit log file without waiting to reach the threshold value with the automatic transfer.
Reset Settings	Cancel the change within tab.

Confirm window

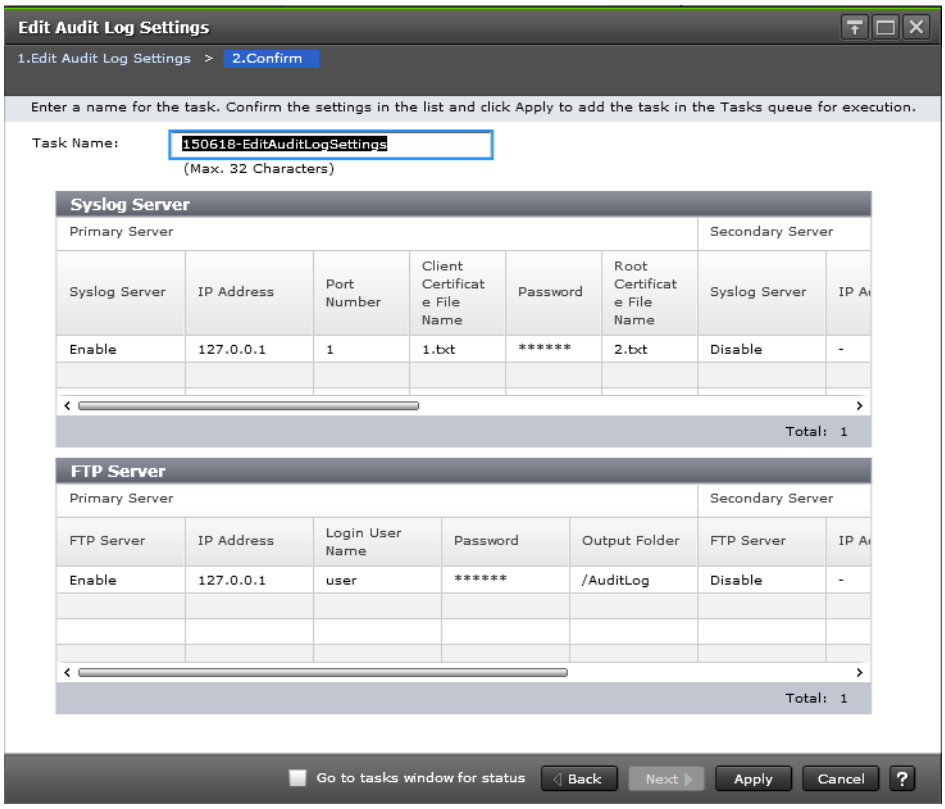

Syslog Server table

This table displays only when you have made settings in the Syslog tab of the Edit Audit Log Settings window.

Item	Description
Primary Server-Syslog Server	Indicates whether to use the syslog server or not.
Primary Server- IP Address	Indicates the IP address of the syslog server.
Primary Server- Port Number	Indicates the port number to be used on the syslog server.
Primary Server-Client Certificate File Name	Indicates the file name of the client certificate.
Primary Server-Password	Indicates the password of the client certificate with "*" mark.
Primary Server- Root Certificate File Name	Indicates the file name of the root certificate.
Secondary Server-Syslog Server	Indicates whether to use the alternative server to the syslog server.
Secondary Server-IP Address	Indicates the IP address of the alternative server to the syslog server.

Item	Description
Secondary Server-Port Number	Indicates the port number to be used on the alternative server to the syslog server.
Secondary Server-Client Certificate File Name	Indicates the file name of the client certificate.
Secondary Server-Password	Indicates the password of the client certificate with "*" mark.
Secondary Server-Root Certificate File Name	Indicates the file name of the root certificate.
Location Identification Name	Indicates the name to identify the storage system that transfer the audit log file to the syslog server.
Timeout (sec.)	Indicates the time to detect the timeout of communication with the syslog server in seconds.
Retry Interval (sec.)	Indicates the retry interval when the communication with the syslog server fails in seconds.
Number of Retries	Indicates the number of retry times when the communication with the syslog server fails.
Output Detailed Information	Indicates whether to transfer the detailed information of the audit log file to the syslog server.

FTP Server table

This table displays only when you have made settings in the FTP tab of the Edit Audit Log Settings window. When you only complete a SIM, items from Primary Server- FTP Server to Secondary Server-Output Folder do not display.

Item	Description
Primary Server- FTP Server	Indicates whether to use the FTP server or not.
Primary Server- IP Address	Indicates the IP address of the primary FTP server.
Primary Server-Login User Name	Indicates the login user name of the primary FTP server
Primary Server-Password	Indicates the password of the primary FTP server with "*" mark.
Primary Server-Output Folder	Indicates the output folder of the primary FTP server.
Secondary Server-FTP Server	Indicates whether to use an alternative server to the FTP server.
Secondary Server-IP Address	Indicates the IP address of the alternative server to the FTP server.

Item	Description
Secondary Server-Login User Name	Indicates the login user name of the alternative server to the FTP server.
Secondary Server-Password	Indicates the password of the alternative server to the FTP server with "*" mark.
Secondary Server-Output Folder	Indicates the output folder of the alternative server to the FTP server.
Complete SIMs	Yes displays when you complete a SIM. This item does not display when you do not complete a SIM.

B

VSP G1000 audit log user operations

This topic describes the Device Manager - Storage Navigator operation and the corresponding operation name output to audit logs. A user can perform an operation either using a Device Manager - Storage Navigator menu, or clicking a button or using **General Tasks** in the main window, and the same log is output for the operation selected in different ways.

- Logging in or out
- Using Maintenance menu
- Using Actions menu
- Using Reports menu
- Using Settings menu
- Using Resource Lock menu
- Using External API
- When executing single sign-on from Hitachi Command Suite

Logging in or out

Table B-1 Logging in to or out from Device Manager - Storage Navigator

GUI operation	Audit Log Output		Notes
	Function Name	Operation Name	
Login	BASE	Login	--
Logout (Exit)		Logout	--
Session disconnected			Logout processing executed by server when session is disconnected
Tool Panel operation	BASE	Environment Setting	--
		Control Panel Backup	
		Control Panel Restore	
		Certificate Update	
		Release HTTP Block	
		Set Up HTTP Block	
		Update HCS Crt	
		Update SMIS CrtFiles	
		Upload SMIS ConfFile	

Using Maintenance menu

Table B-2 Maintenance Components (General)

GUI operation		Audit Log Output	
Submenu	Description	Function Name	Operation Name
Maintenance Components (General)	Operation on SVP	For details, see Appendix D, Audit log SVP operations on page D-1.	
Reset Microprocessor	Resetting microprocessor	Maintenance	MP Restore PCB Restore
A menu that is displayed only when accessing SVP with the remote desktop connection.			

Using Actions menu

Table B-3 Component

GUI operation		Audit Log Output	
Submenu	**Description**	**Function Name**	**Operation Name**
Edit MP Blades	Editing the MP blade setting	PROV	Edit MP Blades
Edit High Temperature Mode	Settings of High Temperature Mode	BASE	Edit High TEMP Mode

Table B-4 Logical Device

GUI operation		Audit Log Output	
Submenu	**Description**	**Function Name**	**Operation Name**
Create LDEVs	Creating an LDEV	PROV	Create LDEVs CreateAlus Edit Full Allocation Edit V-VOL Option Format LDEVs Format LDEVs(H) Format LDEVs(Q) LDEV Name Set SSID
Delete LDEVs	Deleting an LDEV	PROV	Delete LDEVs DeleteAlus
Edit LDEVs	Editing LDEV information	PROV	Edit Full Allocation Edit LDEVs(tier) Edit V-VOL Option LDEV Name UpdateAluaMode
Format LDEVs	Formatting an LDEV	PROV	Format LDEVs
	Formatting an LDEV using the Write to Control Blocks function	PROV	Format LDEVs(H)
	Quick formatting an LDEV	PROV	Format LDEVs(Q)
Block LDEVs	Blocking LDEVs	PROV	Block LDEVs
Restore LDEVs	Restoring an LDEV	PROV	Restore LDEVs
Shred LDEVs	Shredding an LDEV	VS	Shred LDEVs

GUI operation			Audit Log Output	
Submenu		Description	Function Name	Operation Name
				Abort Shredding[1] End Shredding
Assign MP Blade		Assigning an MP blade	PROV	Assign MP Blade
Migration	Migrate Volumes	Directing migrate volumes	VM	Migrate Volumes
	Delete Migration Plans	Deleting migration plans	VM	Del Migration Plans
	Delete All Histories	Deleting all histories of migration operation	VM	Delete All Histories
Add LUN Paths		Mapping an LUN path	PROV	Add LUN Paths
Delete LUN Paths		Removing an LUN path from an LDEV	PROV	Delete LUN Paths
Edit UUIDs		Changing UUID	PROV	Edit/Delete UUIDs
Delete UUIDs		Deleting UUID		
Expand V-VOLs		Increasing virtual volume capacity	PROV	Expand V-VOLs
Reclaim Zero Pages		Releasing pages in a virtual volume	PROV	Reclaim Zero Pages
Stop Reclaiming Zero Pages		Stop releasing pages in a virtual volume	PROV	Stop Reclm ZeroPages
Edit Command Devices		Editing Command Devices	PROV	Edit Cmd Dev(Auth) Edit Cmd Dev(DevGrp) Edit Cmd Dev(Sec) Edit Command Devices
Release Mainframe Command Devices		Releasing TrueCopy for Mainframe command devices	Remote Replication	Delete Cmd.Dev
Force Delete Mainframe DP VOLs[2]		Forcibly deleting a V-Vol for Dynamic Provisioning for Mainframe, Dynamic Tiering for Mainframe, or active flash for mainframe	PROV	Force Del MF V-VOLs
Unbind SLUs		Unbinding an LDEV with the SLU attribute from the LDEV with the ALU attribute	PROV	ExecBindingOperation
Notes:				

GUI operation		Audit Log Output	
Submenu	**Description**	**Function Name**	**Operation Name**
1. Abort Shredding is output when a shredding operation is aborted from the Confirm window during a shredding operation by Shred LDEVs. 2. A menu that is displayed only when accessing SVP with the remote desktop connection.			

Table B-5 Port/Host Group > Fibre

GUI operation		Audit Log Output	
Submenu	**Description**	**Function Name**	**Operation Name**
Create Host Groups	Creating a host group	PROV	Add Hosts Create Host Groups Edit Host Grps(Mode)
Delete Host Groups	Deleting a host group	PROV	Delete Host Groups
Edit Host Groups	Editing host group settings	PROV	Edit Host Grps(Mode) Edit Host Grps(Name)
Add Hosts	Adding a host to the selected host group	PROV	Add Hosts
Add to Host Groups	Adding the selected host to a host group	PROV	Add Hosts
Remove Hosts	Removing a host from a host group	PROV	Remove Hosts
Delete Login WWNs	Deleting an unnecessary WWN	PROV	Delete Login WWNs
Edit Host	Editing host settings	PROV	Edit Host
Create Alternative LUN Paths	Creating an alternative LUN path	PROV	Add Hosts Add LUN Paths Create Host Groups Edit Host Grps(Mode)
Copy LUN Paths	Copying the selected LUN path	PROV	Add LUN Paths
View Host-Reserved LUNs > Release Host-Reserved LUNs[1]	Releasing Host-Reserved LUNs	PROV	Release HostReserved
Edit Asymmetric Access States	Editing Asymmetric Access States settings	PROV	UpdateAsymmetricAccessStatePerHG
Edit Ports	Editing port settings	PROV	Edit Ports(Address) Edit Ports(Attr) Edit Ports(Security)

GUI operation		Audit Log Output	
Submenu	**Description**	**Function Name**	**Operation Name**
			Edit Ports(Speed) Edit Ports(Topology)
Edit T10 PI Mode	Editing T10 PI mode settings on ports	PROV	EditT10piMode
Authentication	Setting port information Setting default such as user name and secret	PROV	Set FCSP Port Info[2, 3]
	Registering or deleting authentication information Authentication (Host Group): Disable -> Enable or Enable -> Disable	PROV	Set FCSP Target[2, 3]
	Creating, changing, or deleting the host authentication information	PROV	Set FCSP Host[2, 3]
	Registering authentication Information Authentication Mode: bi-directional -> unidirectional or unidirectional -> bi-directional Authentication (Port): Enable -> Disable or Disable -> Enable	PROV	Set FCSP Port Switch[2, 3]

Notes:

1. Release Host-Reserved LUNs window opened from Host-Reserved LUNs window.
2. When you apply two or more settings of the same type to the storage system at the same time, the log information is output as one entry.
3. If one or more settings end abnormally when you have applied at one time, the output log information is *Error*, not *Warning*.

Table B-6 Port/Host Group > iSCSI

GUI operation		Audit Log Output	
Submenu	**Description**	**Function Name**	**Operation Name**
Create iSCSI Targets	Creating iSCSI targets	PROV	CreateiScsiTarget
	Editing CHAP users assigned to iSCSI targets	PROV	EditTargetChapUser
Delete iSCSI Targets	Deleting iSCSI targets	PROV	DeleteiScsiTarget
Edit iSCSI Targets	Editing iSCSI target settings	PROV	EditiScsiTarget
	Editing CHAP users assigned to iSCSI targets	PROV	EditTargetChapUser
Add Hosts	Adding hosts to selected iSCSI targets	PROV	CreateiScsiName
Remove Hosts	Removing hosts from selected iSCSI targets	PROV	DeleteiScsiName
Delete Login iSCSI Names	Deleting unnecessary iSCSI names	PROV	DeleteLoginiScsiName
Edit Host	Editing host settings	PROV	EditiScsiName EditiScsiNickName
Create Alternative LUN Paths	Creating an alternative LUN path	PROV	Add Hosts Add LUN Paths Create Host Groups Edit Host Grps(Mode)
Copy LUN Paths	Copying the selected LUN path	PROV	Add LUN Paths
View Host-Reserved LUNs > Release Host-Reserved LUNs*	Releasing Host-Reserved LUNs	PROV	Release HostReserved
Edit Ports	Editing port settings	PROV	Edit Ports(Security) Edit Ports(Speed) EditPortInfo EditiSNS
	Editing the setting information of users with CHAP	PROV	EditiScsiInitiatorUser

GUI operation			Audit Log Output	
Submenu		Description	Function Name	Operation Name
		authentication on ports		
Authentication	Add CHAP Users	Adding CHAP users to selected iSCSI targets	PROV	CreateRemoteChapUser
	Remove CHAP Users	Removing CHAP users from selected iSCSI targets	PROV	DeleteRemoteChapUser
	Edit CHAP User	Editing CHAP user settings	PROV	EditRemoteChapUser
	Remove Target CHAP Users	Removing CHAP users assigned to iSCSI targets	PROV	DeleteTargetChapUser
	Remove Port CHAP Users	Deleting the setting information of users with CHAP authentication on ports	PROV	DeleteiScsiInitiatorUser
*Release Host-Reserved LUNs window opened from Host-Reserved LUNs window.				

Table B-7 Pool

GUI operation		Audit Log Output	
Submenu	Description	Function Name	Operation Name
Create Pools	Creating a pool	PROV	Create/Expand Pools Edit/Delete Pools Pool Name
Delete Pools	Deleting a pool	PROV	Edit/Delete Pools Pool Name
Expand Pool	Increasing pool capacity	PROV	Create/Expand Pools
Shrink Pool	Decreasing pool capacity	PROV	Shrink Pool
Stop Shrinking Pools	Stop decreasing pool capacity	PROV	Stop Shrinking Pool
Edit Pools	Editing pool settings	PROV	Edit/Delete Pools Pool Name
Edit External LDEV Tier Rank	Editing the external LDEV tier ranks of	PROV	Edit LDEV Tier Rank

GUI operation		Audit Log Output	
Submenu	**Description**	**Function Name**	**Operation Name**
	pool volumes that are assigned to a pool		
Monitor Pools	Starting the performance monitoring of a pool	PROV	Monitor Pools
Stop Monitoring Pools	Stopping the performance monitoring of a pool	PROV	Stop Monitoring
Start Tier Relocation	Starting the tier relocation of a pool	PROV	Relocate Pool
Stop Tier Relocation	Stopping the tier relocation of a pool	PROV	Stop Relocating
Restore Pools	Restoring a pool	PROV	Restore Pools
Initialize Pools*	Initializing a pool	PROV	Initialize Pools
Edit Tiering Policies	Editing Tiering Policies	PROV	Edit Tiering Policy
Complete SIMs	Completing SIMs related to a pool	PROV	Complete SIMs
*A menu that is displayed only when accessing SVP with the remote desktop connection.			

Table B-8 Parity Group

GUI operation		Audit Log Output	
Submenu	**Description**	**Function Name**	**Operation Name**
Edit Encryption	Enabling or disabling data encryption	ENC	Edit Encryption
Edit Parity Groups	Enabling or disabling accelerated compression	PROV	UpdateParityGroupSettings

Table B-9 External Storage

GUI operation		Audit Log Output	
Submenu	**Description**	**Function Name**	**Operation Name**
Add External Volumes	Mapping an external volume	UVM	Add External Volumes
Delete External Volumes	Releasing external volume mapping	UVM	Delete ES VOLs

GUI operation		Audit Log Output	
Submenu	**Description**	**Function Name**	**Operation Name**
Edit External Volumes	Editing external volume settings	UVM	Edit ES VOLs
Disconnect External Volumes	Disconnecting external volumes	UVM	Disconnect ES VOLs
Reconnect External Volumes	Reconnecting an external volume	UVM	Reconnect ES VOLs
Assign MP Blade	Assigning an MP blade for an external volume	UVM	Assign MP Blade
Disconnect External Paths	Disconnecting an external path	UVM	Disconnect ES Paths
Reconnect External Paths	Reconnecting an external path	UVM	Reconnect ES Paths
Edit External WWNs	Editing external WWN parameters	UVM	Edit External WWNs / iSCSI Targets
Edit External iSCSI Targets	Editing external iSCSI target parameters		
Edit External Path Configuration	Adding a path to an external path group Deleting a path from an external path group Changing priority among external paths	UVM	Edit ES Path Config
Disconnect External Storage Systems	Disconnecting an external storage system	UVM	Disconnect ES VOLs
Reconnect External Storage Systems	Reconnecting an external storage system	UVM	Reconnect ES VOLs
Add iSCSI Paths	Adding iSCSI paths	PROV	CreateiScsiPath
Delete iSCSI Paths	Deleting iSCSI paths	PROV	DeleteiScsiPath
Edit iSCSI Targets	Editing iSCSI targets	PROV	EditRemoteTargetUser

Table B-10 Local Replication

GUI operation		Audit Log Output	
Submenu	**Description**	**Function Name**	**Operation Name**
Create SI Pairs	Creating pairs for ShadowImage or	Local Replication	Create Pairs

GUI operation		Audit Log Output	
Submenu	**Description**	**Function Name**	**Operation Name**
	ShadowImage for Mainframe		
Create TI Pairs	Creating pairs for Thin Image	Local Replication	Create Pairs
Operate TI Pairs	Creating pairs, splitting pairs, resynchronizing pairs, and removing pairs for Thin Image Assigning and removing S-VOLs for Thin Image pairs	Local Replication	Create Pairs Split Pairs Resync Pairs Delete Pairs Assign S-VOLs Remove S-VOLs
Split Pairs	Splitting pairs for ShadowImage, ShadowImage for Mainframe, or Thin Image	Local Replication	Split Pairs
Resync Pairs	Resynchronizing pairs for ShadowImage, ShadowImage for Mainframe, or Thin Image	Local Replication	Resync Pairs
Suspend Pairs	Suspending pairs for ShadowImage or ShadowImage for Mainframe	Local Replication	Suspend Pairs
Delete Pairs	Deleting pairs for ShadowImage, ShadowImage for Mainframe, or Thin Image	Local Replication	Delete Pairs
Initialize Local Replica Pairs*	Initializing pairs for ShadowImage, ShadowImage for Mainframe, or Thin Image	Local Replication	Initialize
Assign Secondary Volumes	Assigning secondary volumes of Thin Image pairs	Local Replication	Assign S-VOLs
Remove Secondary Volumes	Removing secondary volumes of Thin Image pairs	Local Replication	Remove S-VOLs
Edit Local Replica Options	Editing option information for ShadowImage or ShadowImage for Mainframe	Local Replication	Edit Options

GUI operation		Audit Log Output	
Submenu	**Description**	**Function Name**	**Operation Name**
Edit SCP Time	Setting a SCP (State Change Pending) time to the mainframe host	PROV	Edit SCP Time
Reserve Mainframe CTGs	Reserving consistency groups for ShadowImage for Mainframe	Local Replication	Reserve CTG
Release Reserved Mainframe CTGs	Releasing reserved consistency groups for ShadowImage for Mainframe	Local Replication	Release Reserved CTG
* A menu that is displayed only when accessing SVP with the remote desktop connection.			

Table B-11 Remote Replication

GUI operation		Audit Log Output	
Submenu	**Description**	**Function Name**	**Operation Name**
Create TC Pairs	Creating pairs for TrueCopy or TrueCopy for Mainframe	Remote Replication	Create Pairs[1]
Create UR Pairs	Creating pairs for Universal Replicator or Universal Replicator for Mainframe	Remote Replication	Create Pairs[1]
Create GAD Pairs	Creating pairs for global-active device	Remote Replication	Create Pairs[1]
		PROV	UpdateAluaMode
Split Pairs	Splitting pairs for TrueCopy, TrueCopy for Mainframe, Universal Replicator, or Universal Replicator for Mainframe	Remote Replication	Split Pairs[1]
Resync Pairs	Resynchronizing pairs for TrueCopy, TrueCopy for Mainframe, Universal Replicator, Universal Replicator for	Remote Replication	Resync Pairs[1]
		PROV	UpdateAluaMode

GUI operation		Audit Log Output	
Submenu	**Description**	**Function Name**	**Operation Name**
	Mainframe, or global-active device		
Delete Pairs	Deleting pairs for TrueCopy, TrueCopy for Mainframe, Universal Replicator, Universal Replicator for Mainframe, or global-active device	Remote Replication	Delete Pairs[1]
Suspend Pairs	Suspending pairs for global-active device	Remote Replication	Suspend Pairs[1]
Force Delete Pairs (TC Pairs)	Force deleting pairs for TrueCopy and TrueCopy for Mainframe	Remote Replication	Delete Pairs[1]
Force Delete Pairs (UR Pairs)	Force deleting pairs for Universal Replicator and Universal Replicator for Mainframe	Remote Replication	Delete Pairs[1]
Force Delete Pairs (GAD Pairs)	Force deleting pairs for global-active device	Remote Replication	Delete Pairs[1]
Edit Pair Options	Editing pair options for TrueCopy, TrueCopy for Mainframe, Universal Replicator, or Universal Replicator for Mainframe	Remote Replication	Edit Pair Options[1]
Suspend Consistency Groups	Suspending pairs for global-active device by the consistency group	Remote Replication	Suspend Pairs
Resync Consistency Groups	Resynchronizing pairs for global-active device by the consistency group	Remote Replication	Resync Pairs
		PROV	UpdateAluaMode
Split Mirrors	Splitting mirrors for Universal Replicator and Universal Replicator for Mainframe	Remote Replication	Split Pairs[1]
Resync Mirrors	Resynchronizing mirrors for Universal Replicator and	Remote Replication	Resync Pairs[1]

GUI operation		Audit Log Output	
Submenu	**Description**	**Function Name**	**Operation Name**
	Universal Replicator for Mainframe		
Delete Mirrors	Deleting mirrors for Universal Replicator and Universal Replicator for Mainframe	Remote Replication	Delete Pairs[1]
Edit Mirror Options	Editing mirror options for Universal Replicator and Universal Replicator for Mainframe	Remote Replication	Change Mirror Option[1]
Assign Remote Command Devices	Assigning remote command devices for Universal Replicator and Universal Replicator for Mainframe	Remote Replication	R-Cmd.Dev.
Release Remote Command Devices	Releasing remote command devices for Universal Replicator and Universal Replicator for Mainframe	Remote Replication	R-Cmd.Dev.
Edit Remote Replica Options	Editing remote replica options for TrueCopy, TrueCopy for Mainframe, Universal Replicator, Universal Replicator for Mainframe, or global-active device	Remote Replication	Edit Options
Edit SCP Time	Setting a SCP (State Change Pending) time to the mainframe host	PROV	Edit SCP Time
Edit Remote Replica Function Switch[2]	Editing system options for TrueCopy and TrueCopy for Mainframe	Remote Replication	Edit Options
Clear SIM[2]	Collective clearing SIMs for TrueCopy for Mainframe and Universal Replicator for Mainframe	Remote Replication	Clear SIM
Assign GAD Reserves	Assigning the GAD reserve attribute to a	PROV	Set Virtual LDEV

GUI operation		Audit Log Output	
Submenu	**Description**	**Function Name**	**Operation Name**
	volume for the secondary volume of a global-active device pair		
Release GAD Reserved	Releasing the GAD reserve attribute from a volume for the secondary volume of a global-active device pair	PROV	Set Virtual LDEV

Notes:

1. When you apply two or more settings of the same type to the storage system at the same time, the log information is output as one entry.
2. A menu that is displayed only when accessing SVP with the remote desktop connection.

Table B-12 Journal

GUI operation		Audit Log Output	
Submenu	**Description**	**Function Name**	**Operation Name**
Create Journals	Creating journal volumes for Universal Replicator and Universal Replicator for Mainframe	Remote Replication	Journal Vol
Delete Journals	Deleting journal volumes for Universal Replicator and Universal Replicator for Mainframe	Remote Replication	Journal Vol
Edit Journal Options	Editing journal options for Universal Replicator and Universal Replicator for Mainframe	Remote Replication	Change JNL Option
Assign MP Blade	Migrating the journal ownership for Universal Replicator and Universal Replicator for Mainframe	Remote Replication	Journal Owner
Initialize EXCTGs	Removing all journals from expanded consistency groups for Universal	Remote Replication	Edit EXCTG

GUI operation		Audit Log Output	
Submenu	**Description**	**Function Name**	**Operation Name**
	Replicator for Mainframe		
Force Remove Journals from EXCTG	Forcibly removing journals from expanded consistency groups for Universal Replicator for Mainframe	Remote Replication	Journal Vol
Assign Journal Volumes	Assigning journal volumes for Universal Replicator and Universal Replicator for Mainframe	Remote Replication	Journal Vol
When you apply two or more settings of the same type to the storage system at the same time, the log information is output as one entry.			

Table B-13 Remote Connection

GUI operation		Audit Log Output	
Submenu	**Description**	**Function Name**	**Operation Name**
Add Remote Connection	Adding remote storage system connections	Remote Replication	Add RCU
		PROV	CreateiScsiPath
	Deleting iSCSI paths when connections cannot be added to remote storage systems	PROV	DeleteiScsiPath
Remove Remote Connections	Removing remote storage system connections	Remote Replication	Delete RCU
Edit Remote Connection Options	Editing remote storage system connection options	Remote Replication	Change RCU Option
Add Remote Paths	Adding remote storage system paths	Remote Replication	Add Path
Remove Remote Paths	Removing remote storage system paths	Remote Replication	Delete Path
Add SSIDs	Adding remote storage system SSIDs	Remote Replication	Add RCU
Remove SSIDs	Removing remote storage system SSIDs	Remote Replication	Delete RCU

GUI operation		Audit Log Output	
Submenu	**Description**	**Function Name**	**Operation Name**
Add Quorum Disks	Adding quorum disk IDs used by global-active device	Remote Replication	Add Quorum Disk ID
Remove Quorum Disks	Deleting quorum disk IDs used by global-active device	Remote Replication	Del Quorum Disk ID
Edit Quorum Disks	Editing the value of Read Response Guaranteed Time When Quorum Disk Blocked for global-active device	Remote Replication	UpdateQuorumDisks
When you apply two or more settings of the same type to the storage system at the same time, the log information is output as one entry.			

Table B-14 Mainframe Connection

GUI operation		Audit Log Output	
Submenu	**Description**	**Function Name**	**Operation Name**
Compatible PAV	Add	CPAV	Add Alias[1, 2]
	Delete	CPAV	Delete Alias[1, 2]
Volume Retention Manager	Attribute	PROV	Edit VR Attribute[1]
	VTOC	PROV	VTOC[1]
XRC	Change XRC Option	XRC	Set XRC Option

Notes:

1. When you apply two or more settings of the same type to the storage system at the same time, the log information is output as one entry.
2. If you perform the Add Alias and Delete Alias operations at the same time, Delete Alias is executed first. If Delete Alias operation fails, Add Alias is not executed.

Table B-15 Other function

GUI operation		Audit Log Output	
Submenu	**Description**	**Function Name**	**Operation Name**
Data Retention	Attribute / S-VOL / Reserved/ Mode Clear / Retention term	PROV	Edit DRU Attribute[1]

GUI operation		Audit Log Output	
Submenu	**Description**	**Function Name**	**Operation Name**
	Expiration-Lock	PROV	DRU Expiration Lock[1]
Cache Residency	Set Cache Residency (Open Volume)	PFM	Set Open DCR[1, 2]
	Set Cache Residency (M/F Volume)	PFM	Set M/F DCR[1, 2]
	Release Cache Residency (Open Volume)	PFM	Delete Open DCR[1, 2]
	Release Cache Residency (M/F Volume)	PFM	Delete M/F DCR[1, 2]
	Prestaging ON	PFM	DCR Prestaging[1, 3]

Notes:

1. When you apply two or more settings of the same type to the storage system at the same time, the log information is output as one entry.
2. If one or more settings end abnormally when you have applied at one time, the output log information is *Error*, not *Warning*.
3. The log information is output at the end, no matter when you perform the Cache Residency Manager operation.

Using Reports menu

Table B-16 Task Management

GUI operation		Audit Log Output	
Submenu	**Description**	**Function Name**	**Operation Name**
Delete Tasks	Deleting a task	BASE	Delete Tasks
Resume Tasks	Resuming a task	BASE	Resume Tasks
Suspend Tasks	Suspending a task	BASE	Suspend Tasks
Disable Auto Delete	Disabling Task Auto Delete function	BASE	Disable Auto Delete
Enable Auto Delete	Enabling Task Auto Delete function	BASE	Enable Auto Delete

Table B-17 Configuration Report

GUI operation		Audit Log Output	
Submenu	**Description**	**Function Name**	**Operation Name**
Create Configuration Report	Creating a configuration report	BASE	Create Conf Report
Delete Reports	Deleting a configuration report	BASE	Delete Reports

Table B-18 Performance Monitor

GUI operation		Audit Log Output	
Submenu	**Description**	**Function Name**	**Operation Name**
Edit Monitoring Switch	Starting/stopping monitoring	PFM	Edit Monitoring SW
Edit CU Monitor Mode	Setting target CUs for monitoring	PFM	Edit CU Monitor Mode
Edit WWN Monitor Mode	Setting target WWNs for monitoring	PFM	Edit WWN MonitorMode
Add New Monitored WWNs	Adding new WWNs for monitoring	PFM	Edit WWN MonitorMode
Edit WWN	Editing WWN	PFM	Edit WWN
Delete Unused WWNs	Deleting WWNs from monitoring targets	PFM	Delete Unused WWNs
Add to Ports	Adding monitored WWN to a port	PFM	Edit WWN MonitorMode
Server Priority Manager (Port)	All Thresholds	SPM	Set All Prio Port[1, 2] Set Ctrl Kind
	Setting priority for ports (Attribute / Threshold / Upper)	SPM	Set All Prio Port Set Prio Port[1, 2]
	Initializing	SPM	Default Set[1, 2]
	Current Control Status (Port Control)	SPM	Set Ctrl Kind
	Clearing port settings due to removing port controllers	SPM	Clear SPM Info[2]
Server Priority Manager (WWN)	All Thresholds	SPM	Set All Prio WWN[1, 2]

GUI operation		Audit Log Output	
Submenu	**Description**	**Function Name**	**Operation Name**
	Setting priority for WWNs (Attribute / Upper)	SPM	Set All Prio WWN Set Prio WWN[1, 2]
	Changing WWN and SPM name	SPM	Set All Prio WWN Update WWN[1, 2]
	Current Control Status (WWN Control)	SPM	Set Ctrl Kind[1, 2]
	Adding WWN	SPM	Update Port WWN[1, 2]
	Deleting WWN	SPM	Update Port WWN[1, 2]
	Initializing	SPM	Default Set[2]
	Adding WWN (to SPM group)	SPM	Update SPMGrp[1, 2]
	Deleting WWN (from SPM group)	SPM	Update SPMGrp[1, 2]
	Adding SPM group and WWN	SPM	Set All Prio WWN Update SPMGrp[1, 2]
	Deleting SPM group	SPM	Set All Prio WWN SPMGrp Del/Chg Update SPMGrp[1, 2]
	Setting priority for SPM groups (Attribute / Upper)	SPM	Change SPMGrp[1, 2] Set All Prio WWN
	Changing SPM group name	SPM	Set All Prio WWN SPMGrp Del/Chg[1, 2]
	Clearing port settings due to removing port controllers	SPM	Clear SPM Info[2]

Notes:

1. When you apply two or more settings of the same type to the storage system at the same time, the log information is output as one entry.
2. If one or more settings end abnormally when you have applied at one time, the output log information is *Error*, not *Warning*.

Table B-19 User Management

GUI operation		Audit Log Output	
Submenu	**Description**	**Function Name**	**Operation Name**
Create User	Creating a new user account	ACM	Create User
Add Uses	Adding a user account to a user group	ACM	Add Users
Remove Users	Removing a user from a user group	ACM	Remove Users
Edit User	Editing settings of a user account	ACM	Edit User
Delete Users	Deleting a user account	ACM	Delete Users
Change Password	Changing a password	ACM	Change Password
Release Lockout	Releasing a user account from lockout	ACM	Release Lockout
Create User Group	Creating a new user group	ACM	Create User Grp
Edit User Group	Changing the name of a user group	ACM	Edit User Grp
Delete User Groups	Deleting a user group	ACM	Delete User Grps
Edit Resource Group Assignment	Changing the resource group assignment of a user group	ACM	Assign Resource Grps
Edit Role Assignment	Changing the role assignment of a user group	ACM	Assign Roles
View External Authentication Server Properties	Setting up Server	ACM	Setup Server

Table B-20 Resource Management

GUI operation		Audit Log Output	
Submenu	**Description**	**Function Name**	**Operation Name**
Create Resource Groups	Creating a resource group	PROV	Create Resource Grps
	Adding a resource		Move Resources

GUI operation		Audit Log Output	
Submenu	**Description**	**Function Name**	**Operation Name**
Edit Resource Group	Changing a resource group name	PROV	Edit Resource Grp
Delete Resource Groups	Deleting a resource group	PROV	Delete Resource Grps
Add Resources	Adding a resource to a resource group	PROV	Move Resources
Remove Resources	Removing a resource from a resource group	PROV	Move Resources
Create CLPRs	Creating new CLPRs	VPM	Edit CLPR
Edit CLPR	Editing a CLPR		
Delete CLPRs	Deleting CLPRs		
Migrate CLPR Resources	Migrating parity groups to another CLPR		
Edit Virtualization Management Settings	Editing Virtualization Management Settings	PROV	Set Virtual LDEV

Table B-21 Security

GUI operation			Audit Log Output	
Submenu		**Description**	**Function Name**	**Operation Name**
Encryption Keys	Create Keys	Creating encryption keys	ENC	Add keys to DKC[1] Create Keys[2] Create Keys On Serv[1, 9]
	Delete Keys	Deleting encryption keys	ENC	Delete Keys
	Rekey Certificate Encryption Keys	Updating certificate encryption keys	ENC	Rekey CEK
	Rekey Key Encryption Key	Updating key encryption keys	ENC	Create KEK Dynamic[9] Delete KEK Dynamic[9] Register KEK Dynamic[9] Rekey KEK Dynamic
	Retry Key Encryption Key Acquisition	Reacquisition of key encryption keys	ENC	Retry KEK Dynamic

GUI operation			Audit Log Output	
Submenu		Description	Function Name	Operation Name
	Backup Keys to File	Backing up keys on the Device Manager - Storage Navigator PC	ENC	Backup Keys Backup Keys to File
	Backup Keys to Server	Backing up encryption keys on the key management server	ENC	Backup Keys Backup Keys to Serv[9] Create Keys On Serv[9]
	Restore Keys from File	Restoring encryption keys with backup files on the Device Manager - Storage Navigator PC	ENC	Restore Keys Restore Keys fr File
	Restore Keys from Server	Restoring encryption keys with backup keys on the key management server	ENC	Restore Keys Restore Keys fr Serv[9]
	View Backup Keys on Server	Deleting encryption keys backed up on the key management server	ENC	Delete Keys on Server[9]
	Edit Encryption Environmental Settings	Configuring encryption environment settings	ENC	Add keys to DKC[3] Create Keys[4] Create KEK Dynamic[5, 9] Create Keys On Serv[3, 9] DEK assign SpareDisk[6] DEK delete[7] Delete KEK Dynamic[8, 9] Edit ENC Settings Register KEK Dynamic[5, 9] Rekey CEK[6, 7] Set Up Key Mng Serv
	Edit Password Policy (Backup Encryption Keys)	Editing password policies for backing up encryption keys	ENC	Edit Password Policy
Edit Audit Log Settings		Setting up syslog and FTP server	AuditLog	Set Syslog Server Set FTP Server SIM Complete

GUI operation		Audit Log Output	
Submenu	**Description**	**Function Name**	**Operation Name**
Login Message	Setting login message	ACM	Set Login Message

Notes:

1. Output when the encryption key is created on the key management server
2. Output when the encryption key is created on the storage system
3. Output when the key management server is changed to be enabled and the encryption environment setting is configured from the initial setting
4. Output when the key management server is changed to be disabled and the encryption environment settings is configured from the initial setting
5. Output when the status of the key management server is changed from Disable to Enable
6. Output when the encryption environment setting is configured from the initial setting
7. Output when the encryption environment setting is initialized
8. Output when the status of the key management server is changed from Enable to Disable
9. Output because access to the key management server is performed, following the GUI operation

Table B-22 Environmental Setting

GUI operation		Audit Log Output	
Submenu	**Description**	**Function Name**	**Operation Name**
Edit Storage System	Editing storage system information	BASE	Edit Storage System
Install Licenses	Installing licenses	PP KEY	PP Install chk[1, 2] PP Apply
	Installing licenses using the key code file	PP KEY	PP Install File chk[1] PP Apply
Remove Licenses	Uninstalling licenses	PP KEY	PP Removal chk[1] PP Apply
Enable Licenses	Enabling licenses	PP KEY	PP Enable chk[1] PP Apply
Disable Licenses	Disabling licenses	PP KEY	PP Disable chk[1] PP Apply
Update License Statuses	Updating license statuses	PP KEY	Update License[1] PP Apply
Edit Alert Settings	Setting a destination of the alert	BASE	Edit Alert Setting

GUI operation		Audit Log Output	
Submenu	**Description**	**Function Name**	**Operation Name**
	Editing settings in the Syslog tab	BASE	Edit SIM Syslog Serv
	Editing settings in the SNMP tab	SNMP	UpdateSnmpSetting
	Editing settings in the E-mail tab	E-Mail	MailAddress Write Valid Flag Update
Edit Advanced System Settings	Editing advanced system settings	BASE	Advanced Settings

Notes:

1. This is the audit log that is output when the setting operation is executed in the window. The PP Apply audit log is output at the time of completing the task.
2. The audit log is output per license key. When two or more license keys are installed at one time, only one PP Apply audit log is output at the time of completing the task.

Using Resource Lock menu

Table B-23 Resource Lock

GUI operation		Audit Log Output	
Submenu	**Description**	**Function Name**	**Operation Name**
Resource Lock	Cancelling lock forcibly	BASE	Unlock Forcibly

Using External API

Table B-24 Using External API

External API operations		Audit Log Output		Note
Command		**Function Name**	**Operation Name**	
CFLSET	Starts Operation	Spreadsheet	CflSet Start	Logs of operations performed by CFLSET command are output between CflSet Start and CflSet End.
	Ends operation		CflSet End	

When executing single sign-on from Hitachi Command Suite

Table B-25 When executing single sign-on from Hitachi Command Suite

GUI operations	Audit Log Output	
	Function Name	Operation Name
Issuing OneTimeKey from Hitachi Command Suite	BASE	HCSSO SetOneTimeKey
Launching Device Manager - Storage Navigator from Hitachi Command Suite		HCSSO Authentication

C

VSP Gx00 models, VSP Fx00 models audit log user operations

Device Manager - Storage Navigator operations and corresponding operation names output to audit logs are described for each menu. The same log is output when a user perform an operation using each Device Manager - Storage Navigator menu, clicking a button on the main window, or using **General Tasks**.

- Logging in or out
- Using Maintenance menu
- Using Actions menu
- Using Reports menu
- Using Settings menu
- Using Maintenance Utility
- Using Maintenance Utility window
- Operation Lock
- When executing single sign-on from Hitachi Command Suite

Logging in or out

GUI operation	Audit Log Output		Notes
	Function Name	Operation Name	
Login	BASE	Login	--
Logout (Exit)		Logout	--
Session disconnected			Logged out by a server when a session is disconnected.

Using Maintenance menu

GUI operation		Audit Log Output	
Submenu	Description	Function Name	Operation Name
Maintenance Components (General)	Operations on Maintenance PC	For details, see Appendix E, Audit log Maintenance PC operations on page E-1.	
A menu displayed only on Maintenance PC.			

Using Actions menu

- Using Component submenu on page C-3
- Using Logical Device submenu on page C-3
- Using Port/Host Group submenu on page C-5
- Using Pool submenu on page C-8
- Using Parity Group submenu on page C-9
- Using External Storage submenu on page C-10
- Using Local Replication submenu on page C-11
- Using Remote Replication submenu on page C-12
- Using Journal submenu on page C-13
- Using Remote Connection submenu on page C-14
- Using Other function submenu on page C-15

Using Component submenu

GUI operation		Audit Log Output	
Submenu	**Description**	**Function Name**	**Operation Name**
Edit MP Units	Editing MP unit settings	PROV	Edit MP Units

Using Logical Device submenu

GUI operation		Audit Log Output	
Submenu	**Description**	**Function Name**	**Operation Name**
Create LDEVs	Creating LDEVs	PROV	Create LDEVs[1] CreateLdev[2] CreateAlus Edit Full Allocation Edit V-VOL Option Format LDEVs Format LDEVs(Q) LDEV Name
Delete LDEVs	Deleting LDEVs	PROV	Delete LDEVs[1] DeleteLdev[2] DeleteAlus
Edit LDEVs	Editing LDEV settings	PROV	Edit Full Allocation Edit LDEVs(tier) Edit V-VOL Option LDEV Name UpdateAluaMode
Format LDEVs	Formatting LDEVs	PROV	Format LDEVs
	Quick formatting LDEVs	PROV	Format LDEVs(Q)
Interrupt Format Task[3]	Stopping formatting LDEVs	PROV	StopFormat
Block LDEVs	Blocking LDEVs	PROV	Block LDEVs
Restore LDEVs	Restoring LDEVs	PROV	Restore LDEVs
Force Restore LDEVs[3]	Forcible restoration of LDEVs	PROV	LdevForceRestore
Shred LDEVs	Shredding LDEVs	VS	Shred LDEVs End Shredding

GUI operation			Audit Log Output	
Submenu		Description	Function Name	Operation Name
Interrupt Shredding Task		Stopping shredding LDEVs	VS	Abort Shredding[4]
Assign MP Unit		Assigning MP units	PROV	Assign MP Unit
Migration	Migrate Volumes	Directing volume migration	VM	Migrate Volumes
	View Migration Plans	Referring to migration plans	VM	Del Migration Plans
Add LUN Paths		Mapping LUN paths	PROV	Add LUN Paths
Delete LUN Paths		Removing LUN paths from LDEVs	PROV	Delete LUN Paths
Edit UUIDs		Changing UUIDs	PROV	Edit/Delete UUIDs
Delete UUIDs		Deleting UUIDs		
Expand V-VOLs		Increasing virtual volume capacity	PROV	Expand V-VOLs
Reclaim Zero Pages		Releasing pages in virtual volumes	PROV	Reclaim Zero Pages
Stop Reclaiming Zero Pages		Stopping releasing pages in virtual volumes	PROV	Stop Reclm ZeroPages
Edit Command Devices		Editing Command Devices	PROV	Edit Cmd Dev(Auth) Edit Cmd Dev(DevGrp) Edit Cmd Dev(Sec) Edit Command Devices
Unbind SLUs		Unbinding an LDEV with the SLU attribute from the LDEV with the ALU attribute	PROV	ExecBindingOperation
Verify LDEVs[3]		Verifying LDEVs	PROV	StartVerify
Interrupt Verification Task[3]		Stopping verifying LDEVs	PROV	StopVerify

Notes:

1. The audit log of this operation is output when volumes of Thin Image or DP-VOLs are created or deleted.
2. The audit log of this operation is output when internal or external volumes are created or deleted.
3. A menu displayed only on Maintenance PC.
4. The audit log of this operation is output not only by performing an operation on the **Interrupt Shredding Task** submenu, but by stopping the shredding LDEVs task on the **Task** window.

Using Port/Host Group submenu

Table C-1 Port/Host Group > Fibre

GUI operation		Audit Log Output	
Submenu	**Description**	**Function Name**	**Operation Name**
Create Host Groups	Creating host groups	PROV	Add Hosts Create Host Groups Edit Host Grps(Mode)
Delete Host Groups	Deleting host groups	PROV	Delete Host Groups
Edit Host Groups	Editing host group settings	PROV	Edit Host Grps(Mode) Edit Host Grps(Name)
Add Hosts	Adding hosts to selected host groups	PROV	Add Hosts
Add to Host Groups	Adding selected host to host groups		
Remove Hosts	Removing hosts from host groups	PROV	Remove Hosts
Delete Login WWNs	Deleting unnecessary WWNs	PROV	Delete Login WWNs
Edit Host	Editing host settings	PROV	Edit Host
Create Alternative LUN Paths	Creating alternative LUN paths	PROV	Add Hosts Add LUN Paths Create Host Groups Edit Host Grps(Mode)
Copy LUN Paths	Setting the same path as a selected LUN	PROV	Add LUN Paths
View Host-Reserved LUNs > Release Host-Reserved LUNs[1]	Releasing Host-Reserved LUNs	PROV	Release HostReserved
Edit Asymmetric Access States	Editing Asymmetric Access States settings	PROV	UpdateAsymmetricAccessStatePerHG
Edit Ports	Editing port settings	PROV	Edit Ports(Address) Edit Ports(Security) Edit Ports(Speed) Edit Ports(Topology)
Edit T10 PI Mode	Editing T10 PI mode settings on ports	PROV	EditT10piMode
Authentication	Setting port information Setting default (User name/Secret)	PROV	Set FCSP Port Info[2, 3]

GUI operation		Audit Log Output	
Submenu	**Description**	**Function Name**	**Operation Name**
	Registering or deleting authentication information Authentication (Host Group): Disable -> Enable or Enable -> Disable	PROV	Set FCSP Target[2, 3]
	Creating, changing, or deleting host authentication information	PROV	Set FCSP Host[2, 3]
	Registering authentication Information Authentication Mode: Bi-directional -> Unidirectional or Unidirectional -> Bi-directional Authentication (Port): Enable -> Disable or Disable -> Enable	PROV	Set FCSP Port Switch[2, 3]

Notes:

1. To release host reserved LUNs, open the Release Host-Reserved LUNs window from the Host-Reserved LUNs window.
2. When multiple settings of the same type are applied at the same time, log information is output as one entry.
3. *Error*, not *Warning*, is output as log information if one of multiple settings is applied abnormally.

Table C-2 Port/Host Group > iSCSI

GUI operation		Audit Log Output	
Submenu	**Description**	**Function Name**	**Operation Name**
Create iSCSI Targets	Creating iSCSI targets	PROV	CreateiScsiTarget
	Editing CHAP users assigned to iSCSI targets	PROV	EditTargetChapUser
Delete iSCSI Targets	Deleting iSCSI targets	PROV	DeleteiScsiTarget
Edit iSCSI Targets	Editing iSCSI target settings	PROV	EditiScsiTarget

GUI operation			Audit Log Output	
Submenu		Description	Function Name	Operation Name
		Editing CHAP users assigned to iSCSI targets	PROV	EditTargetChapUser
Add Hosts		Adding hosts to selected iSCSI targets	PROV	CreateiScsiName
Remove Hosts		Removing hosts from selected iSCSI targets	PROV	DeleteiScsiName
Delete Login iSCSI Names		Deleting unnecessary iSCSI names	PROV	DeleteLoginiScsiName
Edit Host		Editing host settings	PROV	EditiScsiName EditiScsiNickName
Create Alternative LUN Paths		Creating an alternative LUN path	PROV	Add Hosts Add LUN Paths Create Host Groups Edit Host Grps(Mode)
Copy LUN Paths		Copying the selected LUN path	PROV	Add LUN Paths
View Host-Reserved LUNs > Release Host-Reserved LUNs*		Releasing Host-Reserved LUNs	PROV	Release HostReserved
Edit Ports		Editing port settings	PROV	Edit Ports(Security) Edit Ports(Speed) EditPortInfo EditiSNS
		Editing the setting information of users with CHAP authentication on ports	PROV	EditiScsiInitiatorUser
Authentication	Add CHAP Users	Adding CHAP users to selected iSCSI targets	PROV	CreateRemoteChapUser
	Remove CHAP Users	Removing CHAP users from selected iSCSI targets	PROV	DeleteRemoteChapUser
	Edit CHAP User	Editing CHAP user settings	PROV	EditRemoteChapUser

GUI operation			Audit Log Output	
Submenu		Description	Function Name	Operation Name
	Remove Target CHAP Users	Removing CHAP users assigned to iSCSI targets	PROV	DeleteTargetChapUser
	Remove Port CHAP Users	Deleting the setting information of users with CHAP authentication on ports	PROV	DeleteiScsiInitiatorUser
* Release Host-Reserved LUNs window opened from Host-Reserved LUNs window.				

Using Pool submenu

GUI operation		Audit Log Output	
Submenu	Description	Function Name	Operation Name
Create Pools	Creating pools	PROV	Create/Expand Pools Edit/Delete Pools Pool Name
Delete Pools	Deleting pools	PROV	Edit/Delete Pools Pool Name
Expand Pool	Increasing pool capacity	PROV	Create/Expand Pools
Shrink Pool	Decreasing pool capacity	PROV	Shrink Pool
Stop Shrinking Pools	Stopping decreasing pool capacity	PROV	Stop Shrinking Pool
Edit Pools	Editing pool settings	PROV	Edit/Delete Pools Pool Name
Edit External LDEV Tier Rank	Editing external LDEV tier ranks of pool volumes that are assigned to pools	PROV	Edit LDEV Tier Rank
Monitor Pools	Starting the performance monitoring of pools	PROV	Monitor Pools
Stop Monitoring Pools	Stopping the performance monitoring of pools	PROV	Stop Monitoring
Start Tier Relocation	Starting the tier relocation of pools	PROV	Relocate Pool

GUI operation		Audit Log Output	
Submenu	**Description**	**Function Name**	**Operation Name**
Stop Tier Relocation	Stopping the tier relocation of pools	PROV	Stop Relocating
Restore Pools	Restoring pools	PROV	Restore Pools
Initialize Pools*	Initializing pools	PROV	Initialize Pools
Edit Tiering Policies	Editing Tiering Policies	PROV	Edit Tiering Policy
* A menu displayed only on Maintenance PC.			

Using Parity Group submenu

GUI operation		Audit Log Output	
Submenu	**Description**	**Function Name**	**Operation Name**
Create Parity Groups	Creating parity groups	PROV	CreateParityGroups
Delete Parity Groups	Deleting parity groups	PROV	DeleteParityGroups
Format Parity Groups	Formatting parity groups	PROV	StartParityGroupsFormat
Interrupt Format Task*	Stopping formatting parity groups	PROV	StopFormat
Edit Encryption	Enabling/disabling data encryption	ENC	Edit Encryption
Edit Parity Groups	Enabling or disabling copy-back mode	PROV	UpdateCopybackMode
	Enabling or disabling accelerated compression	PROV	UpdateParityGroupSettings
Assign Spare Drives	Assigning as a spare drive or releasing the spare drive setting	PROV	UpdateSpareDrives
* A menu displayed only on Maintenance PC.			

Using External Storage submenu

GUI operation		Audit Log Output	
Submenu	**Description**	**Function Name**	**Operation Name**
Add External Volumes	Mapping external volumes	UVM	Add External Volumes
Delete External Volumes	Releasing external volume mapping	UVM	Delete ES VOLs
Edit External Volumes	Editing external volume settings	UVM	Edit ES VOLs
Disconnect External Volumes	Disconnecting external volumes	UVM	Disconnect ES VOLs
Reconnect External Volumes	Reconnecting external volumes	UVM	Reconnect ES VOLs
Assign MP Unit	Assigning MP units for external volumes	UVM	Assign MP Unit
Disconnect External Paths	Disconnecting external paths	UVM	Disconnect ES Paths
Reconnect External Paths	Reconnecting external paths	UVM	Reconnect ES Paths
Edit External WWNs	Editing external WWN parameters	UVM	Edit External WWNs / iSCSI Targets
Edit External iSCSI Targets	Editing external iSCSI target parameters		
Edit External Path Configuration	Adding paths to external path groups Deleting paths from external path groups Changing priority among external paths	UVM	Edit ES Path Config
Disconnect External Storage Systems	Disconnecting external storage systems	UVM	Disconnect ES VOLs
Reconnect External Storage Systems	Reconnecting external storage systems	UVM	Reconnect ES VOLs
Add iSCSI Paths	Adding iSCSI paths	PROV	CreateiScsiPath
Delete iSCSI Paths	Deleting iSCSI paths	PROV	DeleteiScsiPath
Edit iSCSI Targets	Editing iSCSI targets	PROV	EditRemoteTargetUser

Using Local Replication submenu

GUI operation		Audit Log Output	
Submenu	**Description**	**Function Name**	**Operation Name**
Create SI Pairs	Creating ShadowImage pairs	Local Replication	Create Pairs
Create TI Pairs	Creating Thin Image pairs	Local Replication	Create Pairs
Operate TI Pairs	Creating pairs, splitting pairs, resynchronizing pairs, and removing pairs for Thin Image Assigning and removing S-VOLs for Thin Image pairs	Local Replication	Create Pairs Split Pairs Resync Pairs Delete Pairs Assign S-VOLs Remove S-VOLs
Split Pairs	Splitting pairs of ShadowImage or Thin Image	Local Replication	Split Pairs
Resync Pairs	Resynchronizing pairs of ShadowImage or Thin Image	Local Replication	Resync Pairs
Suspend Pairs	Suspending ShadowImage pairs	Local Replication	Suspend Pairs
Delete Pairs	Deleting pairs of ShadowImage or Thin Image	Local Replication	Delete Pairs
Initialize Local Replica Pairs*	Initializing pairs of ShadowImage or Thin Image	Local Replication	Initialize
Assign Secondary Volumes	Assigning secondary volumes of Thin Image pairs	Local Replication	Assign S-VOLs
Remove Secondary Volumes	Removing secondary volumes of Thin Image pairs	Local Replication	Remove S-VOLs
Edit Local Replica Options	Setting ShadowImage options	Local Replication	Edit Options
* A menu displayed only on Maintenance PC.			

Using Remote Replication submenu

GUI operation		Audit Log Output	
Submenu	**Description**	**Function Name**	**Operation Name**
Create TC Pairs	Creating TrueCopy pairs	Remote Replication	Create Pairs[1]
Create UR Pairs	Creating Universal Replicator pairs	Remote Replication	Create Pairs[1]
Create GAD Pairs	Creating pairs for global-active device	Remote Replication	Create Pairs[1]
		PROV	UpdateAluaMode
Split Pairs	Splitting pairs of TrueCopy or Universal Replicator	Remote Replication	Split Pairs[1]
Resync Pairs	Resynchronizing pairs of TrueCopy, Universal Replicator, or global-active device	Remote Replication	Resync Pairs[1]
		PROV	UpdateAluaMode
Delete Pairs	Deleting pairs of TrueCopy, Universal Replicator, or global-active device	Remote Replication	Delete Pairs[1]
Suspend Pairs	Suspending pairs for global-active device	Remote Replication	Suspend Pairs[1]
Force Delete Pairs (TC Pairs)	Forcible deletion of TrueCopy pairs	Remote Replication	Delete Pairs[1]
Force Delete Pairs (UR Pairs)	Forcible deletion of Universal Replicator pairs	Remote Replication	Delete Pairs[1]
Force Delete Pairs (GAD Pairs)	Forcible deletion of global-active device pairs	Remote Replication	Delete Pairs[1]
Edit Pair Options	Editing pair options of TrueCopy or Universal Replicator	Remote Replication	Edit Pair Options[1]
Resync Consistency Groups	Resynchronizing pairs for global-active device by the consistency group	PROV	UpdateAluaMode
Split Mirrors	Splitting mirrors of Universal Replicator	Remote Replication	Split Pairs[1]
Resync Mirrors	Resynchronizing mirrors of Universal Replicator	Remote Replication	Resync Pairs[1]

GUI operation		Audit Log Output	
Submenu	**Description**	**Function Name**	**Operation Name**
Delete Mirrors	Deleting mirrors of Universal Replicator	Remote Replication	Delete Pairs[1]
Edit Mirror Options	Editing mirror options of Universal Replicator	Remote Replication	Change Mirror Option[1]
Assign Remote Command Devices	Assigning remote command devices of Universal Replicator	Remote Replication	R-Cmd.Dev.
Release Remote Command Devices	Releasing remote command devices of Universal Replicator	Remote Replication	R-Cmd.Dev.
Edit Remote Replica Options	Editing system options of TrueCopy, Universal Replicator, or global-active device	Remote Replication	Edit Options
Edit Remote Replica Function Switch[2]	Editing system options of TrueCopy	Remote Replication	Edit Options
Assign GAD Reserves	Assigning the GAD reserve attribute to a volume for the secondary volume of a global-active device pair	PROV	Set Virtual LDEV
Release GAD Reserved	Releasing the GAD reserve attribute from a volume for the secondary volume of a global-active device pair	PROV	Set Virtual LDEV

Notes:

1. When multiple settings of the same type are applied at the same time, log information is output as one entry.
2. A menu displayed only on Maintenance PC.

Using Journal submenu

GUI operation		Audit Log Output	
Submenu	**Description**	**Function Name**	**Operation Name**
Create Journals	Creating journal volumes of Universal Replicator	Remote Replication	Journal Vol

GUI operation		Audit Log Output	
Submenu	**Description**	**Function Name**	**Operation Name**
Delete Journals	Deleting journal volumes of Universal Replicator	Remote Replication	Journal Vol
Edit Journal Options	Editing journal options of Universal Replicator	Remote Replication	Change JNL Option
Assign MP Unit	Migrating journal ownership of Universal Replicator	Remote Replication	Journal Owner
Assign Journal Volumes	Assigning journal volumes of Universal Replicator	Remote Replication	Journal Vol
When multiple settings of the same type are applied at the same time, log information is output as one entry.			

Using Remote Connection submenu

GUI operation		Audit Log Output	
Submenu	**Description**	**Function Name**	**Operation Name**
Add Remote Connection	Adding connections to remote storage systems	Remote Replication	Add RCU
		PROV	CreateiScsiPath
	Deleting iSCSI paths when connections cannot be added to remote storage systems	PROV	DeleteiScsiPath
Remove Remote Connections	Removing connections to remote storage systems	Remote Replication	Delete RCU
Edit Remote Connection Options	Editing connection options of remote storage systems	Remote Replication	Change RCU Option
Add Remote Paths	Adding paths to remote storage systems	Remote Replication	Add Path
Remove Remote Paths	Removing paths from remote storage systems	Remote Replication	Delete Path

GUI operation		Audit Log Output	
Submenu	**Description**	**Function Name**	**Operation Name**
Add Quorum Disks	Adding quorum disk IDs used by global-active device	Remote Replication	Add Quorum Disk ID
Remove Quorum Disks	Deleting quorum disk IDs used by global-active device	Remote Replication	Del Quorum Disk ID
Edit Quorum Disks	Editing the value of Read Response Guaranteed Time When Quorum Disk Blocked for global-active device	Remote Replication	UpdateQuorumDisks
When multiple settings of the same type are applied at the same time, log information is output as one entry.			

Using Other function submenu

GUI operation		Audit Log Output	
Submenu	**Description**	**Function Name**	**Operation Name**
Data Retention	Attribute / S-VOL / Reserved/ Mode Clear / Retention term	PROV	Edit DRU Attribute
	Expired lock	PROV	DRU Expiration Lock
When multiple settings of the same type are applied at the same time, log information is output as one entry.			

Using Reports menu

- Using Task Management submenu on page C-16
- Using Configuration Report submenu on page C-16
- Using Performance Monitor submenu on page C-16

Using Task Management submenu

GUI operation		Audit Log Output	
Submenu	**Description**	**Function Name**	**Operation Name**
Delete Tasks	Deleting tasks	BASE	Delete Tasks
Resume Tasks	Resuming tasks	BASE	Resume Tasks
Suspend Tasks	Suspending tasks	BASE	Suspend Tasks
Disable Auto Delete	Disabling the Task Auto Delete function	BASE	Disable Auto Delete
Enable Auto Delete	Enabling the Task Auto Delete function	BASE	Enable Auto Delete

Using Configuration Report submenu

GUI operation		Audit Log Output	
Submenu	**Description**	**Function Name**	**Operation Name**
Create Configuration Report	Creating configuration reports	BASE	Create Conf Report
Delete Reports	Deleting configuration reports	BASE	Delete Reports

Using Performance Monitor submenu

GUI operation		Audit Log Output	
Submenu	**Description**	**Function Name**	**Operation Name**
Edit Monitoring Switch	Starting/stopping monitoring	PFM	Edit Monitoring SW
Edit CU Monitor Mode	Setting target CUs for monitoring	PFM	Edit CU Monitor Mode
Edit WWN Monitor Mode	Setting target WWNs for monitoring	PFM	Edit WWN MonitorMode
Add New Monitored WWNs	Adding new WWNs for monitoring	PFM	Edit WWN MonitorMode
Edit WWN	Editing WWNs	PFM	Edit WWN
Delete Unused WWNs	Deleting WWNs from monitoring targets	PFM	Delete Unused WWNs
Add to Ports	Connecting target WWNs to ports	PFM	Edit WWN MonitorMode

GUI operation		Audit Log Output	
Submenu	**Description**	**Function Name**	**Operation Name**
Server Priority Manager (Port)	Comprehensive thresholds	SPM	Set All Prio Port[1, 2] Set Ctrl Kind
	Setting priority of ports (Attribute / Threshold / Upper limit)	SPM	Set All Prio Port Set Prio Port[1, 2]
	Initialization settings	SPM	Default Set[1, 2]
	Setting control status (Port control)	SPM	Set Ctrl Kind
	Clearing port settings due to removing port controllers	SPM	Clear SPM Info[2]
Server Priority Manager (WWN)	Comprehensive thresholds	SPM	Set All Prio WWN[1, 2]
	Setting priority of WWNs (Attribute / Upper limit)	SPM	Set All Prio WWN Set Prio WWN[1, 2]
	Changing WWNs and SPM names	SPM	Set All Prio WWN Update WWN[1, 2]
	Setting control status (WWN control)	SPM	Set Ctrl Kind[1, 2]
	Registering WWNs	SPM	Update Port WWN[1, 2]
	Deleting WWNs	SPM	Update Port WWN[1, 2]
	Initialization settings	SPM	Default Set[2]
	Adding WWNs (to SPM groups)	SPM	Update SPMGrp[1, 2]
	Deleting WWNs (from SPM groups)	SPM	Update SPMGrp[1, 2]
	Registering SPM groups and adding WWNs	SPM	Set All Prio WWN Update SPMGrp[1, 2]
	Deleting SPM groups	SPM	Set All Prio WWN SPMGrp Del/Chg Update SPMGrp[1, 2]
	Setting priority of SPM groups (Attribute / Upper limit)	SPM	Change SPMGrp[1, 2] Set All Prio WWN
	Changing SPM group names	SPM	SPMGrp Del/Chg[1, 2]

GUI operation		Audit Log Output	
Submenu	**Description**	**Function Name**	**Operation Name**
			Set All Prio WWN
	Clearing port settings due to removing port controllers	SPM	Clear SPM Info[2]

Notes:

1. When multiple settings of the same type are applied at the same time, log information is output as one entry.
2. *Error*, not *Warning*, is output as log information if one of multiple settings is applied abnormally.

Using Settings menu

- Using User Management submenu on page C-18
- Using Resource Management submenu on page C-19
- Using Security submenu on page C-20
- Using Environmental Setting submenu on page C-21

Using User Management submenu

GUI operation		Audit Log Output	
Submenu	**Description**	**Function Name**	**Operation Name**
Create User	Creating a new user account	ACM	CreateUser
Add Uses	Adding users to a user group	ACM	AddUsersToUserGroup
Remove Users	Removing users from a user group	ACM	RemoveUsersFromUserGroup
Edit User	Changing a user authentication mode	ACM	UpdateUserAuthentication
	Enabling/disabling users	ACM	DisableUsers EnableUsers
Delete Users	Deleting user accounts	ACM	DeleteUsers
Change Password	Changing a password	ACM	UpdatePassword
Create User Group	Creating a new user group	ACM	CreateUserGroup
Edit User Group	Changing a user group name	ACM	UpdateUserGroupName

GUI operation		Audit Log Output	
Submenu	**Description**	**Function Name**	**Operation Name**
Delete User Groups	Deleting user groups	ACM	DeleteUserGroups
Edit Resource Group Assignment	Changing assignment of resource groups of a user group	ACM	UpdateUserGroupResourceGrpBmp
	Assigning roles to a user group or releasing assignment of roles	ACM	UpdateUserGroupRole
Edit Role Assignment	Changing assignment of all resource groups of a user group	ACM	UpdateUserGroupAllResourceGrp

Using Resource Management submenu

GUI operation		Audit Log Output	
Submenu	**Description**	**Function Name**	**Operation Name**
Create Resource Groups	Creating resource groups	PROV	Create Resource Grps
	Adding resources		Move Resources
Edit Resource Group	Changing resource group names	PROV	Edit Resource Grp
Delete Resource Groups	Deleting resource groups	PROV	Delete Resource Grps
Add Resources	Adding resources to resource groups	PROV	Move Resources
Remove Resources	Removing resources from resource groups	PROV	Move Resources
Create CLPRs	Creating CLPRs	VPM	Edit CLPR
Edit CLPR	Editing CLPRs		
Delete CLPRs	Deleting CLPRs		
Migrate CLPR Resources	Migrating parity groups to other CLPRs		
Edit Virtualization Management Settings	Editing Virtualization Management Settings	PROV	Set Virtual LDEV

Using Security submenu

GUI operation			Audit Log Output	
Submenu		Description	Function Name	Operation Name
Encryption Keys	Create Keys	Creating encryption keys	ENC	Add keys to DKC[1] Create Keys[2] Create Keys On Serv[1, 9]
	Delete Keys	Deleting encryption keys	ENC	Delete Keys
	Rekey Certificate Encryption Keys	Updating certificate encryption keys	ENC	Rekey CEK
	Rekey Key Encryption Key	Updating key encryption keys	ENC	Create KEK Dynamic[9] Delete KEK Dynamic[9] Register KEK Dynamic[9] Rekey KEK Dynamic
	Retry Key Encryption Key Acquisition	Reacquisition of key encryption keys	ENC	Retry KEK Dynamic
	Backup Keys to File	Backing up keys on the management client	ENC	Backup Keys Backup Keys to File
	Backup Keys to Server	Backing up encryption keys on the key management server	ENC	Backup Keys Backup Keys to Serv[9] Create Keys On Serv[9]
	Restore Keys from File	Restoring encryption keys from backup files on the management client	ENC	Restore Keys Restore Keys fr File
	Restore Keys from Server	Restoring encryption keys from backup keys on the key management server	ENC	Restore Keys Restore Keys fr Serv[9]
	View Backup Keys on Server	Deleting encryption keys backed up on the key management server	ENC	Delete Keys on Server[9]
	Edit Encryption Environmental Settings	Configuring encryption environment settings	ENC	Add keys to DKC[3] Create KEK Dynamic[5, 9] Create Keys[4] Create Keys On Serv[3, 9] DEK assign SpareDisk[6]

GUI operation			Audit Log Output	
Submenu		Description	Function Name	Operation Name
				DEK delete[7] Delete KEK Dynamic[8, 9] Edit ENC Settings Register KEK Dynamic[5, 9] Rekey CEK[6, 7] Set Up Key Mng Serv
	Edit Password Policy (Backup Encryption Keys)	Editing password policies for backing up encryption keys	ENC	Edit Password Policy
Login Message		Setting login message	ACM	Set Login Message

Notes:

1. Output when an encryption key is created on the key management server
2. Output when an encryption key is created on the storage system
3. Output when the key management server is changed to be enabled from the initial setting
4. Output when the key management server is changed to be disabled from the initial setting
5. Output when the status of the key management server is changed from Disable to Enable
6. Output when the encryption environment setting is configured from the initial setting
7. Output when the encryption environment setting is initialized
8. Output when the status of the key management server is changed from Enable to Disable
9. Output because access to the key management server is performed, following the GUI operation

Using Environmental Setting submenu

GUI operation		Audit Log Output	
Submenu	Description	Function Name	Operation Name
Edit Storage System	Editing storage system information	BASE	Edit Storage System
Edit Advanced System Settings	Editing advanced system settings	BASE	Advanced Settings

Using Maintenance Utility

When a submenu in the **Maintenance Utility** menu is selected, the Maintenance Utility operation window opens as a different window. Related topics below for operations on the **Maintenance Utility** window and corresponding operation names output to audit logs.

Related topics

- Using Maintenance Utility window on page C-22

Using Maintenance Utility window

Table C-3 Storage System GUI operation

GUI operation			Audit Log Output	
GUI Name	**Tab**	**Operation**	**Function Name**	**Operation Name**
Storage System	-	Set Up System Information	Maintenance	Set Up System Info
	-	NAS Module Status > Reset *	Maintenance	Reset Hypervisor Reset Hypervisor NW Reset NASFW
		NAS Module Status > Edit Unified Hypervisor Maintenance Mode*	Maintenance	Edit Hypervisor Mode
	Chassis	Install > Drive Box Install > Channel Board Box	Maintenance	Install
		Remove > Drive Box Remove > Channel Board Box	Maintenance	Remove
		Locate LED > Turn on	Maintenance	Turn On Locate LEDs
		Locate LED > Turn off	Maintenance	Turn Off Locate LEDs
		Air Filter > Reset Duration of Use for Air Filter	Maintenance	Reset DurationOfUse
		Air Filter > Edit Replacing Notice for Air Filter	Maintenance	Edit ReplacingNotice
	Drives	Install	Maintenance	Install

GUI operation			Audit Log Output	
GUI Name	**Tab**	**Operation**	**Function Name**	**Operation Name**
		Remove	Maintenance	Check Remove Remove
		Block	Maintenance	Block
		Stop Copy	Maintenance	Stop Copy
* This operation menu is displayed when NAS modules are installed.				

Table C-4 Operation from Hardware in navigation area on the left side of window

GUI operation			Audit Log Output	
GUI Name	**Tab**	**Operation**	**Function Name**	**Operation Name**
Controller Chassis	Drives[1]	Install	Maintenance	Install
		Remove	Maintenance	Check Remove Remove
		Block	Maintenance	Block
		Stop Copy	Maintenance	Stop Copy
	CTLs	Replace > CTL*n*[3]	Maintenance	Block Restore
		Replace > Cache Memory - CTL*n*[3] Replace > FAN - CTL*n*[1, 3]	Maintenance	Block Restore
		Replace (Type Change) > Cache Memory - CTL*n*[2, 3]	Maintenance	Block(Type Change) Restore(Type Change)
		Replace (Type Change) > CTL*n*[1, 3]	Maintenance	Block(Type Change) Restore(Type Change)
		Install > Cache Memory - CTL*n*[3]	Maintenance	Block Restore
		Install > Shared Memory	Maintenance	Install
		Remove > Cache Memory - CTL*n*[3]	Maintenance	Remove
		Remove > Shared Memory	Maintenance	Remove

GUI operation			Audit Log Output	
GUI Name	**Tab**	**Operation**	**Function Name**	**Operation Name**
		Rest HUB > CTL*n*[1, 3]	Maintenance	Reset HUB
	BKMFs / BKMs[4]	Block	Maintenance	Block
	CFMs	Replace	Maintenance	Block Restore
	CHBs	Replace	Maintenance	Block Restore
		Install > *Installed position*	Maintenance	Install
		Remove > *Installed position*	Maintenance	Remove
		Changing FSP type by clicking **SFP Status**	Maintenance	Change SFP Type
	PECBs[5]	Replace	Maintenance	Block Restore
	DKBs[2]	Replace	Maintenance	Block Restore
		Replace (Type Change)	Maintenance	Block(Type Change) Restore
		Install > *Installed position*	Maintenance	Install
		Remove > *Installed position*	Maintenance	Remove
	LANBs[2]	Reset HUB	Maintenance	Reset HUB
Channel Board Box[5]	CHBs	Replace	Maintenance	Block Restore
		Install > *Installed position*	Maintenance	Install
		Remove > *Installed position*	Maintenance	Remove
	SWPKs	Replace	Maintenance	Block Restore
	PCPs	Replace	Maintenance	Block Restore
Drive Box	Drives	Install	Maintenance	Install

GUI operation			Audit Log Output	
GUI Name	**Tab**	**Operation**	**Function Name**	**Operation Name**
		Remove	Maintenance	Check Remove Remove
		Block	Maintenance	Block
		Stop Copy	Maintenance	Stop Copy
	ENCs	Replace	Maintenance	Block Restore

Notes:

1. This tab or operation is not available for VSP G400, G600, G800 and VSP F400, F600, F800.
2. This tab or operation is not available for VSP G200.
3. "n" of CTRn can be 1 or 2.
4. BKMF is the part name of VSP G400, G600, G800 and VSP F400, F600, F800. BKM is the part name of VSP G200.
5. This tab or operation is available only for VSP G800 and VSP F800.

Table C-5 Operation from Administration in navigation area on the left side of window

GUI operation			Audit Log Output	
GUI Name	**Tab**	**Operation**	**Function Name**	**Operation Name**
Firmware	-	Update	Maintenance	Update Firmware
Administration	-	UserAccount Information > Backup	Maintenance	UserAccount Backup
		UserAccount Information > Restore	Maintenance	UserAccount Restore
	User Group	Create User	Maintenance	Create User
	User	Create	Maintenance	Create User
		Edit	Maintenance	Edit User
		Delete	Maintenance	Delete Users
Alert Notifications	-	Set Up	Maintenance	Set Up Alert
Licenses	-	Install	Maintenance	License Key Install
		Enable	Maintenance	Enable Licenses
		Disable	Maintenance	Disable Licenses
		Remove	Maintenance	License Key Remove

GUI operation			Audit Log Output	
GUI Name	**Tab**	**Operation**	**Function Name**	**Operation Name**
Network Settings	-	Set Up Network Settings	Maintenance	Set Up Network Set
		Set Up Network Permissions	Maintenance	Set Up Network Perm
Date & Time	-	Set Up	Maintenance	Set Up Date & Time
Audit Log Settings	-	Set Up Syslog Server	AuditLog	Set Up Syslog Serv
		Export Audit Logs > GUM Export Audit Logs > DKC	Maintenance	Export Audit Logs
		Send Test Message to Syslog Server	AuditLog	Send Test Message

Table C-6 Operation from Menu in navigation area on the left side of window

GUI operation		Audit Log Output	
Selection Item		**Function Name**	**Operation Name**
Initial Setup Wizard	-	Maintenance	Set Up System Info Set Up Date & Time Set Up Network Set
Power Management	Power on Storage System	Maintenance	Power On Storage
	Power off Storage System	Maintenance	Power Off Storage
	Edit UPS Mode	Maintenance	Edit UPS Mode
System Management	Change Password	Maintenance	Edit User
	Edit Login Message	Maintenance	Edit Login Message
	Select Cipher Suite	Maintenance	Select Cipher Suite
	Update Certificate Files	Maintenance	Update Cert Files
	Select Login Window[1]	Maintenance	Select Login Window[2]
	Edit System Parameters	Maintenance	Edit System Param
	Force Release System Lock	Maintenance	Force Rls SysLock

GUI operation		Audit Log Output	
Selection Item		Function Name	Operation Name
	Reboot GUM	Maintenance	Reboot GUM
	Install NAS Unified Firmware[3]	Maintenance	Install NAS Unified Firmware
	Remove NAS Unified Firmware[3]	Maintenance	Remove NAS Unified Firmware
	Boot System Safe Mode	Maintenance	Boot System SafeMode

Notes:

1. This operation menu is displayed when you log in to Maintenance Utility by specifying the CTL IP address on the web browser if NAS modules are installed.
2. A login selection window is displayed by specifying the CTL IP address on the web browser if NAS modules are installed. This audit log is also output when you specify a window for default login on the login selection window.
3. This operation menu is displayed when NAS modules are installed.

Table C-7 Other GUI operation

GUI operation	Audit Log Output	
Description	Function Name	Operation Name
Clicking System Locked on the upper right of the window	Maintenance	Force Rls SysLock

Operation Lock

The windows opened by clicking ,  on the top of a window and corresponding audit logs output by the window operations are described.

GUI operations		Audit Log Output	
GUI Name	Operation	Function Name	Operation Name
Operation Lock Properties	Unlock All	BASE	Unlock Forcibly

When executing single sign-on from Hitachi Command Suite

GUI operations	Audit Log Output	
	Function Name	Operation Name
Issuing OneTimeKey from Hitachi Command Suite	BASE	HCSSO SetOneTimeKey
Launching Device Manager - Storage Navigator from Hitachi Command Suite		HCSSO Authentication

D

Audit log SVP operations

This topic describes SVP operations as well as function names and operation names that is output to audit logs.

- Logging in to or out from SVP
- Using Maintenance button
- Using Install button
- Using Information button
- Using Monitor button

Logging in to or out from SVP

Table D-1 Logging in to or out from SVP

SVP Operations	Audit Log Output		Note
	Function Name	Operation Name	
Login using the remote desktop access	BASE	Login	No parameters or detailed information
Logout using the remote desktop access	BASE	Logout	No parameters or detailed information
Rebooting SVP during the remote desktop access	BASE	Logout	No parameters or detailed information
Powering SVP off during the remote desktop access	BASE	Logout	No parameters or detailed information

Using Maintenance button

Table D-2 Using Maintenance button on SVP

SVP Operations		Audit Log Output	
Function	Operation	Function Name	Operation Name
Maintenance	Replace	Maintenance	Replace
Maintenance	Replace	Maintenance	Set Battery Life
Maintenance	Blockade	Maintenance	Blockade
Maintenance	Correction Copy	Maintenance	Correction Copy
Maintenance	Drive Interrupt	Maintenance	Drive Interrupt
Maintenance	Restore	Maintenance	Restore
Maintenance	Restore	Maintenance	MP Restore
Maintenance	Restore	Maintenance	PCB Restore
Maintenance	Restore	Maintenance	DMA Restore
Maintenance	Restore	Maintenance	DRR Restore
Maintenance	Restore Data	Maintenance	Restore Data
Maintenance	Size Change	Maintenance	Size Change
Maintenance	Format	Maintenance	Format
Maintenance	Format	Maintenance	Format Stop
Maintenance	Quick Format	Maintenance	Quick Format
Maintenance	Quick Format	Maintenance	Pre QuickFormat Stop
Maintenance	Verify	Maintenance	Verify

SVP Operations		Audit Log Output	
Function	**Operation**	**Function Name**	**Operation Name**
Maintenance	Verify	Maintenance	Verify Stop
Maintenance	Spare Disk	Maintenance	Spare Disk
Maintenance	SFP Maintenance	Maintenance	Type Change
Maintenance	Switch SVP	Maintenance	Switch SVP
Maintenance	Transfer Config	Maintenance	Transfer Config

Using Install button

Table D-3 Using Install button on SVP

SVP Operations		Audit Log Output	
Function	**Operation**	**Function Name**	**Operation Name**
Define Configuration and Install	Define Configuration and Install	Install	Define Config.
Logical Device Format	Logical Device Format	Install	Format
Logical Device Format	Logical Device Format	Install	Format Stop
Change Configuration	Installation	Install	Install
Change Configuration	Removal	Install	Remove
Change Configuration	System Option	Install	System Option
Change Configuration	DKU Emulation	Install	Dku Emulation
Change Configuration	System Tuning	Install	System Tuning
Change Configuration	LUN Configuration	Install	Set Fibre Address
Change Configuration	LUN Configuration	Install	Set Fibre Topology
Change Configuration	LUN Configuration	Install	Set Channel Speed
Change Configuration	LUN Configuration	Install	Set CommandDev

SVP Operations		Audit Log Output	
Function	**Operation**	**Function Name**	**Operation Name**
Change Configuration	LUN Configuration	Install	Set CommandDevSec
Change Configuration	LUN Configuration	Install	Add LU Path
Change Configuration	LUN Configuration	Install	Delete LU Path
Change Configuration	LUN Configuration	Install	Set DevGrpDef
Change Configuration	LUN Configuration	Install	Set Host Mode
Change Configuration	LUN Configuration	Install	Set Security Switch
Change Configuration	LUN Configuration	Install	Set UserAuth
Change Configuration	LUN Configuration	Install	Add WWN
Change Configuration	LUN Configuration	Install	Delete WWN
Change Configuration	LUN Configuration	Install	Change WWN
Change Configuration	LUN Configuration	Install	Add Host Group
Change Configuration	LUN Configuration	Install	Delete Host Group
Change Configuration	LUN Configuration	Install	Change Host Group
Change Configuration	LUN Configuration	Install	Delete DKC WWN
Change Configuration	LUN Configuration	Install	Force Reset
Change Configuration	DCR Configuration	Install	DCR Prestaging
Change Configuration	DCR Configuration	Install	M/F DCR
Change Configuration	DCR Configuration	Install	Open DCR
Change Configuration	CVS Configuration	Install	Install CV
Change Configuration	CVS Configuration	Install	Volume to Space

SVP Operations		Audit Log Output	
Function	**Operation**	**Function Name**	**Operation Name**
Change Configuration	CVS Configuration	Install	Make Volume
Copy Config Files	Configuration Update	Install	Update Config
Copy Config Files	All Configuration Files	Install	All Config
Copy Config Files	Create Configuration Backup	Install	Backup Config
Copy Config Files	Restore Configuration	Install	Restore Config
Micro Program Install	Micro Program	Install	Micro Program
Micro Program Install	MP Install	Install	MP Install
Micro Program Install	Embedded OSS	Install	Embedded OSS
Set Subsystem Time	TOD Change	Install	Set Subsystem Time
Set Subsystem Time	Synchronization Information	Install	Set Subsystem Time
Set Subsystem Time	Edit > Change time zone	Install	Set Subsystem Time
Set IP address	Set IP address	Install	Set IP address
Initialize ORM Value	Initialize ORM Value	Install	Initialize ORM Value
Setting Battery Life	Setting Battery Life	Install	Set Battery Life
Set Machine Install Date	Set Machine Install Date	Install	Machine Install Date
Set Flash Drive ORM Value	Set Flash Drive ORM Value	Install	FlashDrive ORM Value

Using Information button

Table D-4 Using Information button on SVP

SVP Operations		Audit Log Output	
Function	**Operation**	**Function Name**	**Operation Name**
Log	Complete	Information	SIM Complete
Log	Delete	Information	Delete Log

SVP Operations		Audit Log Output	
Function	**Operation**	**Function Name**	**Operation Name**
Log	SIM Reporting Options	Information	SIM Reporting Option
Threshold Value	• Alter • Reset	Information	Threshold Value
Online Read Margin	• Alter • Reset	Information	ORM Value

Using Monitor button

Table D-5 Using Monitor button on SVP

SVP Operations		Audit Log Output	
Function	**Operation**	**Function Name**	**Operation Name**
Threshold	Threshold	Monitor	Threshold

E

Audit log Maintenance PC operations

Maintenance PC operations and corresponding operation names output to audit logs are described.

- Logging in to or out from Maintenance PC
- Using Login button
- Using Maintenance button
- Using Install button
- Using Information button
- Using Monitor button

Logging in to or out from Maintenance PC

Maintenance PC Operations	Audit Log Output		Note
	Function Name	Operation Name	
Login	BASE	Login	No basic information parameters or detailed information
Logout	BASE	Logout	No parameters or detailed information
Rebooting Maintenance PC that is logged in	BASE	Logout	No parameters or detailed information
Powering off Maintenance PC that is logged in	BASE	Logout	No parameters or detailed information

Using Login button

MPC Operations		Audit Log Output	
Function	Operation	Function Name	Operation Name
-	Log into MPC	BASE	Start Maintenance

Using Maintenance button

MPC Operations		Audit Log Output	
Function	Operation	Function Name	Operation Name
Maintenance	Blockade	Maintenance	Blockade
Maintenance	Correction Copy	Maintenance	Correction Copy
Maintenance	Restore	Maintenance	Restore
Maintenance	Restore	Maintenance	MP Restore
Maintenance	Restore Data	Maintenance	Restore Data

Using Install button

MPC Operations		Audit Log Output	
Function	Operation	Function Name	Operation Name
NEW Installation	NEW Installation	Install	NEW Installation

MPC Operations		Audit Log Output	
Function	**Operation**	**Function Name**	**Operation Name**
Change Configuration	Removal Cache Capacity	Install	Remove
Change Configuration	System Option	Install	System Option
Change Configuration	System Tuning	Install	System Tuning
Copy Config Files	All Configuration Files	Install	All Config
Copy Config Files	Create Configuration Backup	Install	Backup Config
Initialize ORM Value	Initialize ORM Value	Install	Initialize ORM Value
Set Machine Install Date	Set Machine Install Date	Install	Machine Install Date
Set Flash Drive ORM Value	Set Flash Drive ORM Value	Install	FlashDrive ORM Value

Using Information button

MPC Operations		Audit Log Output	
Function	**Operation**	**Function Name**	**Operation Name**
Log	Delete	Information	Delete Log
Threshold Value	• Alter • Reset	Information	Threshold Value
Online Read Margin	• Alter • Reset	Information	ORM Value

Using Monitor button

MPC Operations		Audit Log Output	
Function	**Operation**	**Function Name**	**Operation Name**
Monitoring Switch	Monitoring Switch	Monitor	Monitoring Switch

Index

A

audit log data
  checking 1-17
  Common Component 1-20, 1-21
  Device Manager server 1-20
  Device Manager server (using CIM) 1-24
  environment settings file 1-14
  generating 1-2
  message details 1-32
  message portion 1-20, 1-32
  message text 1-20, 1-32
  related products 1-22
  syslog file 1-2
  Tiered Storage Manager 1-25
auditlog.conf 1-14
auditlog.conf file 1-14

C

Common Component
  audit log data 1-20, 1-21

D

Device Manager server
  audit log data 1-20
  audit log data using CIM 1-24

I

included information
  audit log 1-3

L

logs
  audit log data 1-17

M

message details
  audit log data 1-32
message text
  audit log data 1-20

R

related products
  audit log data 1-22

T

Tiered Storage Manager
  audit log data 1-25

Hitachi Data Systems

Corporate Headquarters
2845 Lafayette Street
Santa Clara, California 95050-2639
U.S.A.
www.hds.com

Regional Contact Information

Americas
+1 408 970 1000
info@hds.com

Europe, Middle East, and Africa
+44 (0)1753 618000
info.emea@hds.com

Asia Pacific
+852 3189 7900
hds.marketing.apac@hds.com

Hitachi Data Systems

MK-92HC213-11